

Assembly Instruction

INSTRUCTION DE MONTAGE MONTAGRANLEITUNG SAMLEVEJLEDNING

Code

SST8

Hardware

a. 60 mm Bolt x 4pcs



b. 30 mm Screw x4pcs

@::::::::::::::: Tool




Socket Wrench 4m/m Ht

Total Section

3 Section

MAKE SURE THE LETTERS MATCH BEFORE ASSEMBLING

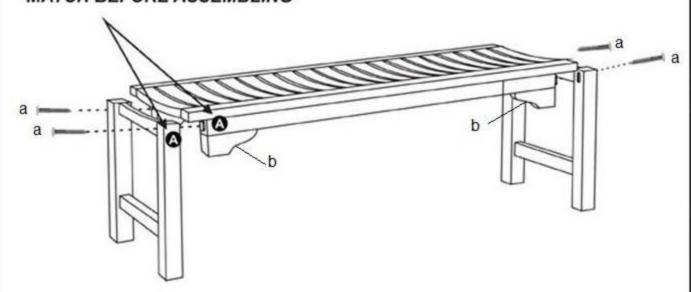

Make sure to use Gorilla Glue (Not Included) on all wood joints before assembly