
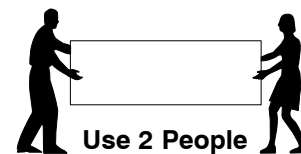


King Bed

Assembly Instructions


WII-0419

1 Assembled View

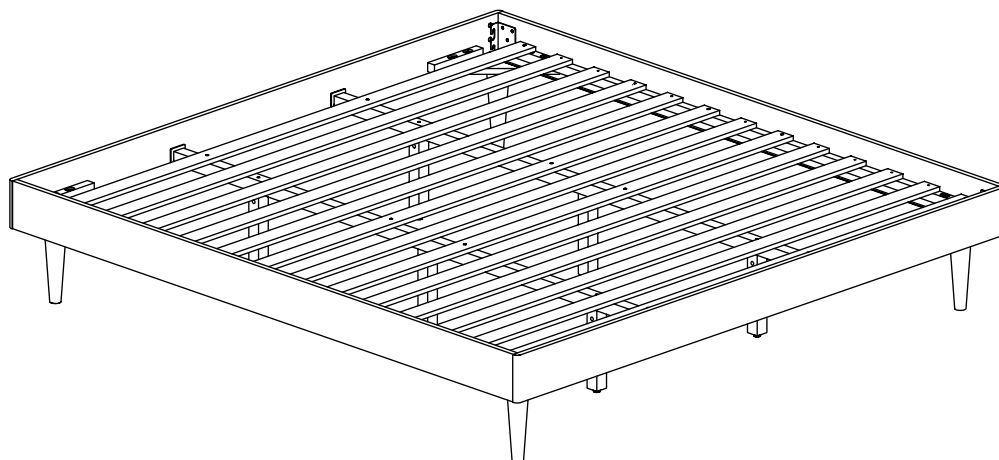

Note: Do not assemble using power tools. This can cause the bolts to be overtightened


2 Parts List

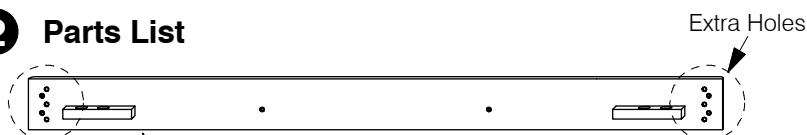


A Headboard Panel x 1




B Footboard Panel x 1



C Side Rail x 2



D Long Support x 2




E

Support Leg
x 6




F

Post
x 4



G

Support Panel
x 4

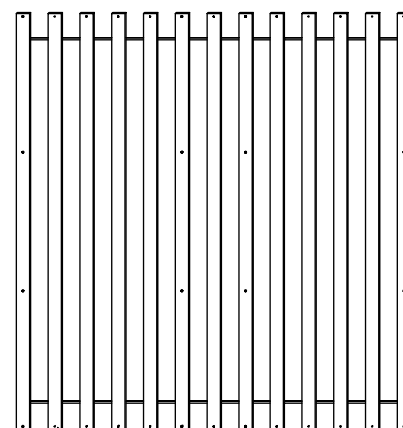

H Set of Bed Slats x 1


3 Hardware List




1 M4 Allen Key
x 1




2 M5 Allen Key
x 1



3 Center Rail
Bracket x 4



4 Adjustable
Foot x 6



5 Wood Screw
(M4 x 32mm) x 18



6 Barrel Nut
x 6



7 Spring Washer
x 30



8 Flat Washer
x 30



9 M6 x 15mm JCB
x 8




10 M8 x 50mm JCB
x 8



11 M6 x 20mm JCB
x 8



12 M6 x 40mm JCB
x 22



13 M6 x 50mm JCB
x 16




14 M6 x 90mm JCB
x 6

97151 King Bed


Assembly Instructions

WII-0419

4 Assembled the Support Leg (E) to the Long Support (D).

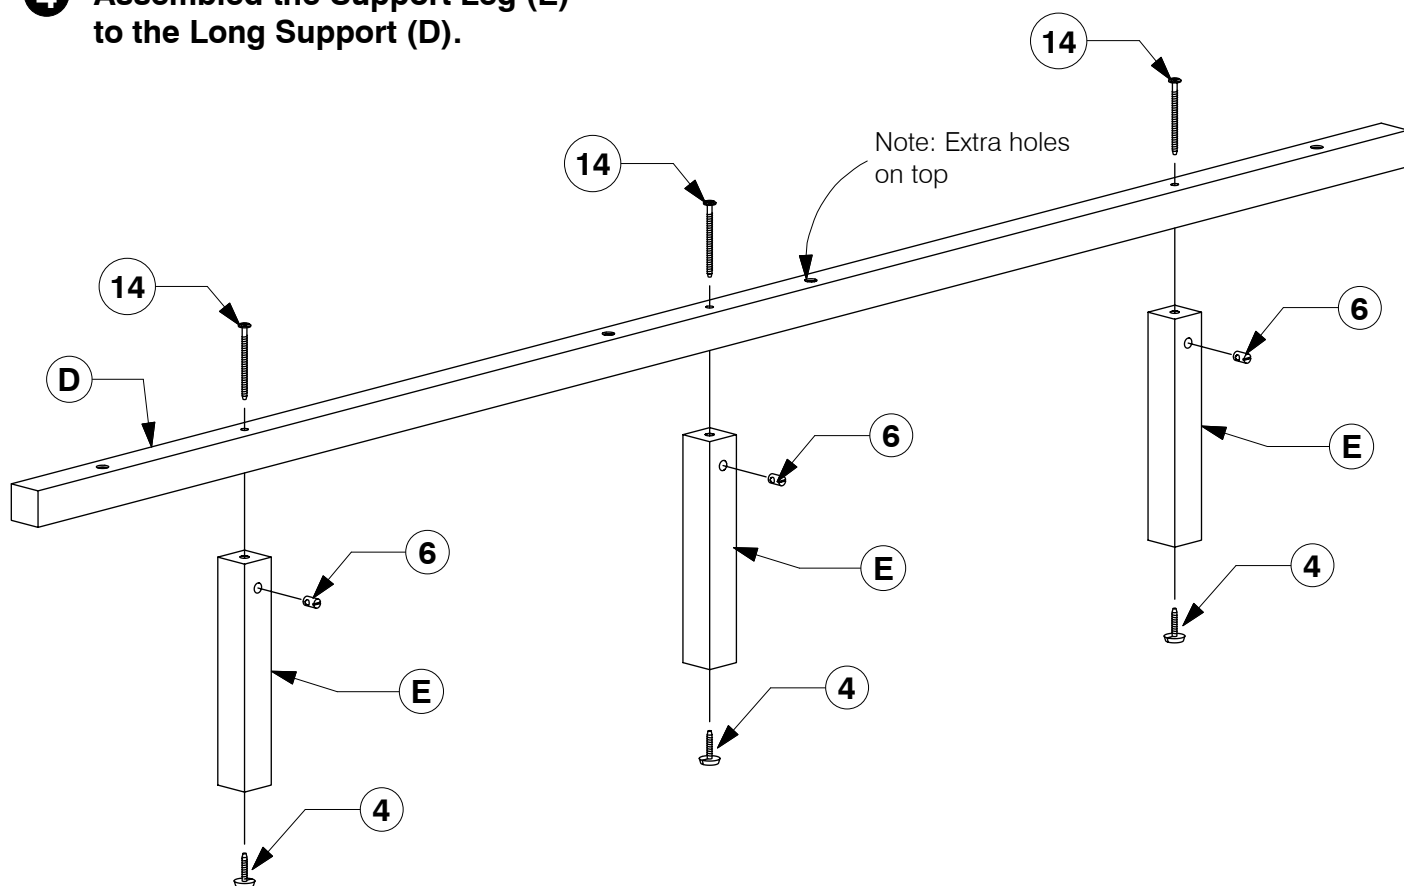

5 Fit the Post (F) to the Support Panel (G).

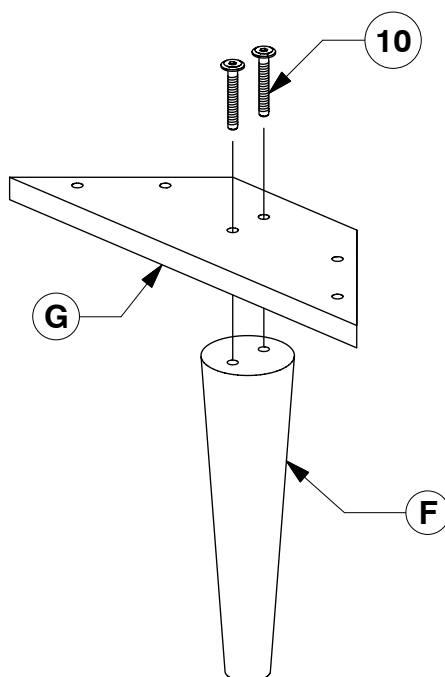

Assembly Instructions

6 Fit the Center Rail Bracket to the Headboard Panel (A).




97151 King Bed


Assembly Instructions

WII-0419

- 9 Assemble the Side Rail (C) to the Headboard and Footboard Panel (A & B).**

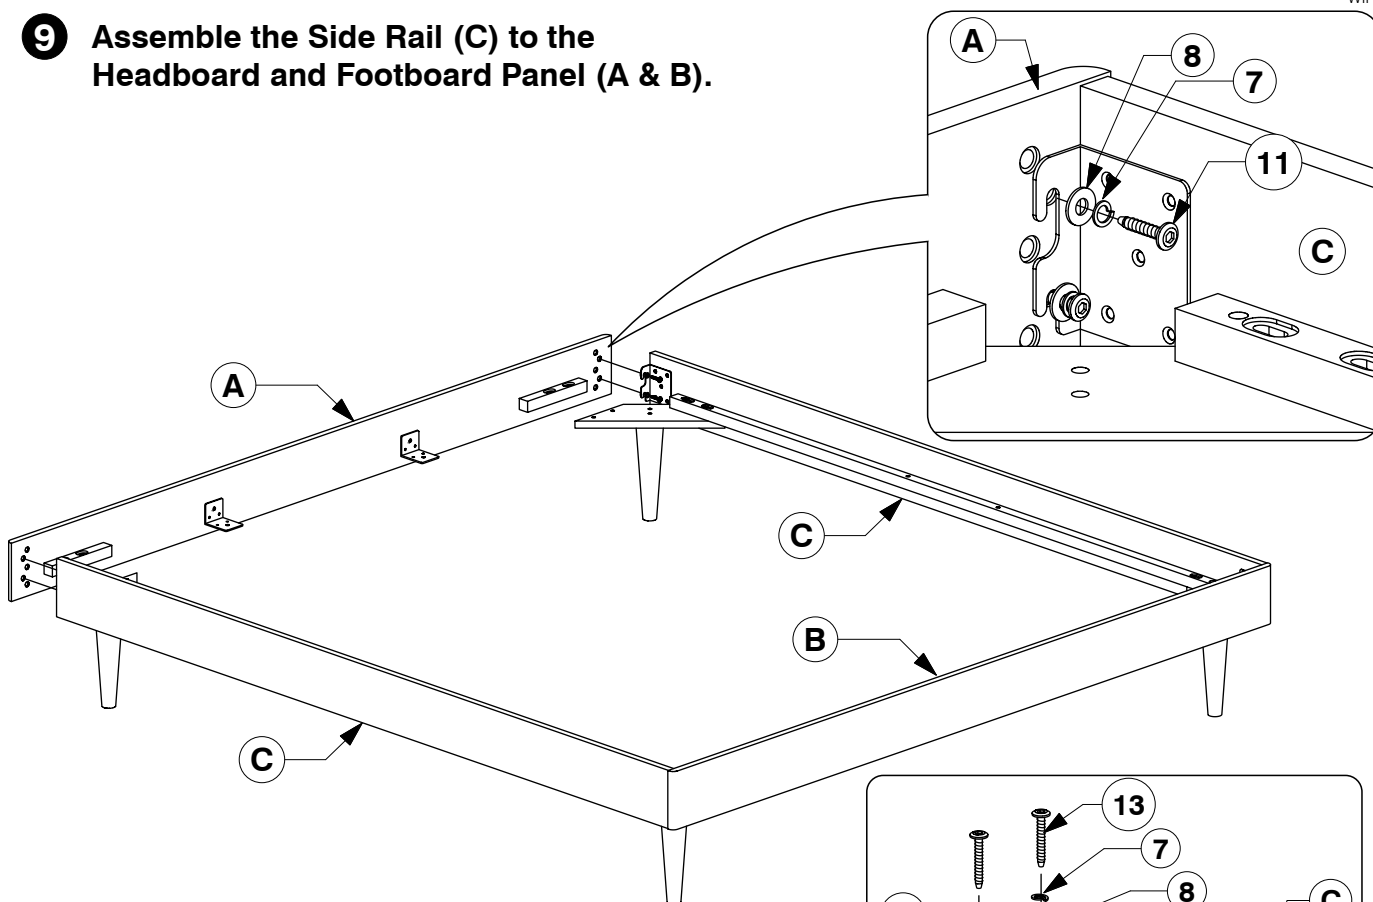

- 10 Bolt the assembled Support Panel (G) to the Headboard and Footboard Panel (A & B).**

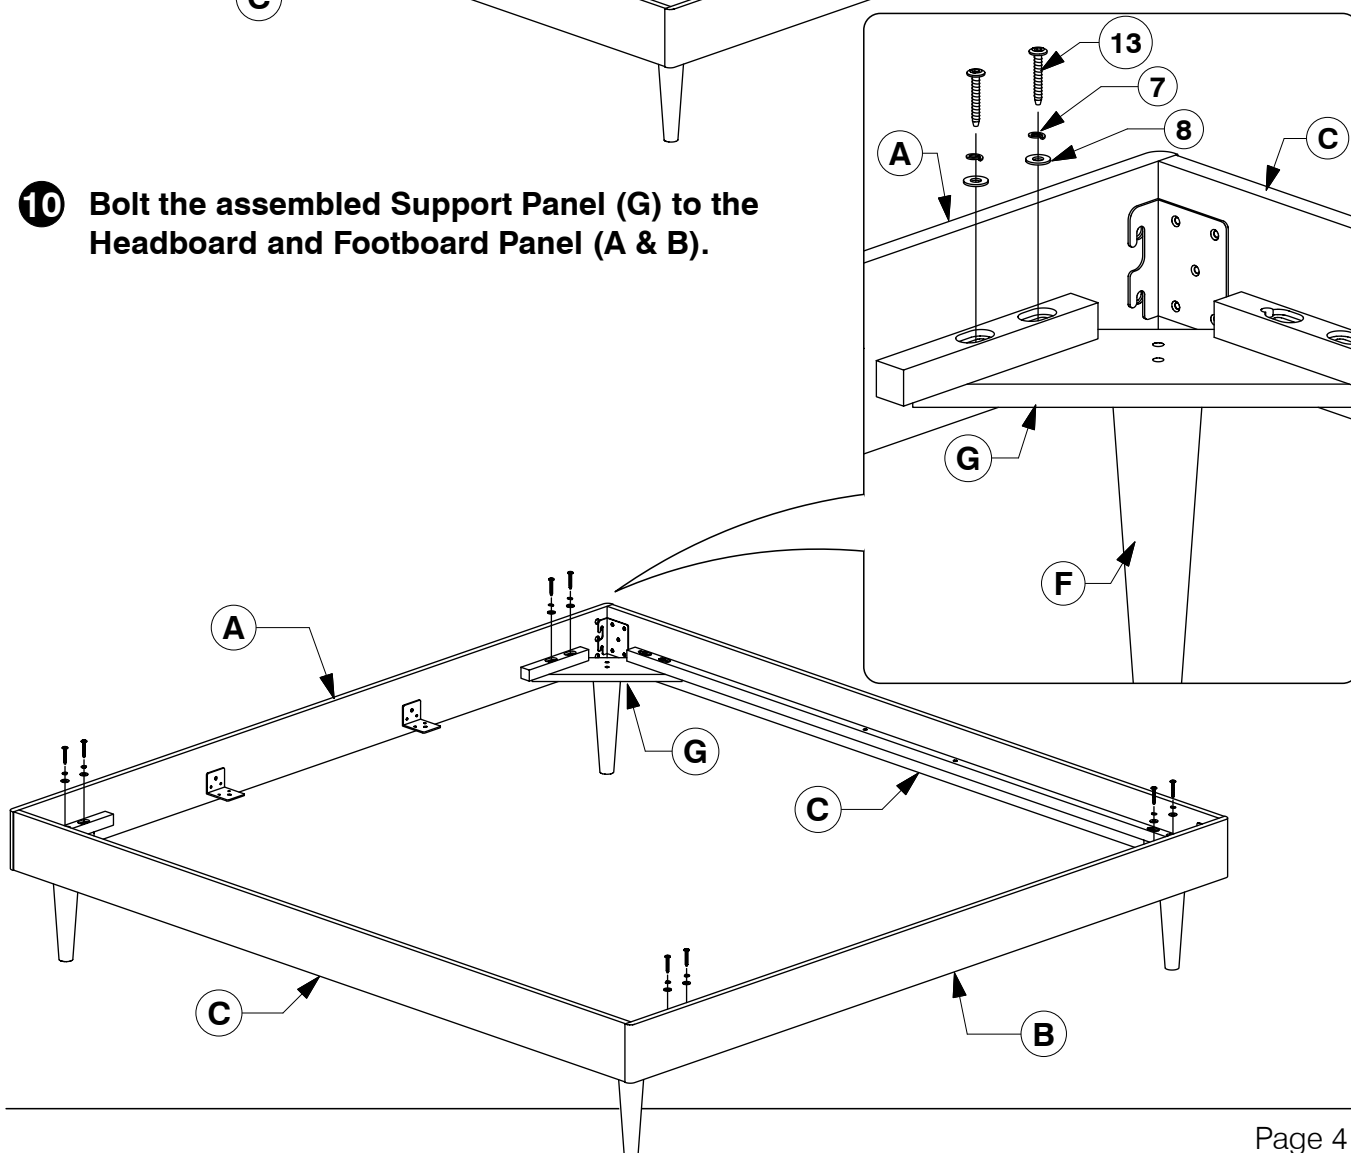


97151 King Bed


Assembly Instructions

WII-0419

- 11** Bolt the Long Support (D) to the Center Rail Brackets (3) on the Headboard and Footboard Panel (A & B).

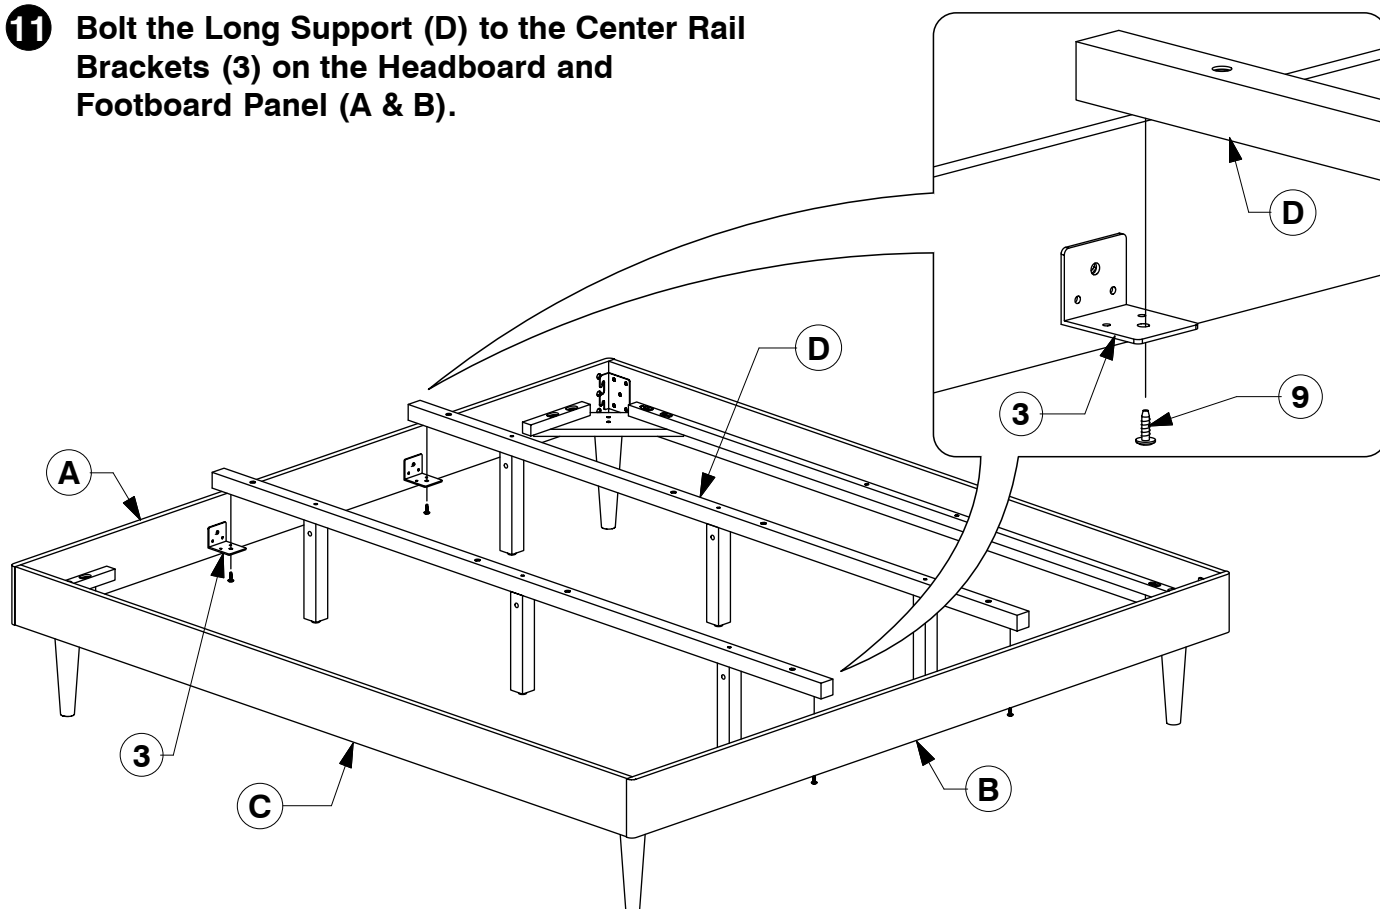

- 12** Bolt & screw the Bed Slats (H) to the Side Rail (C).

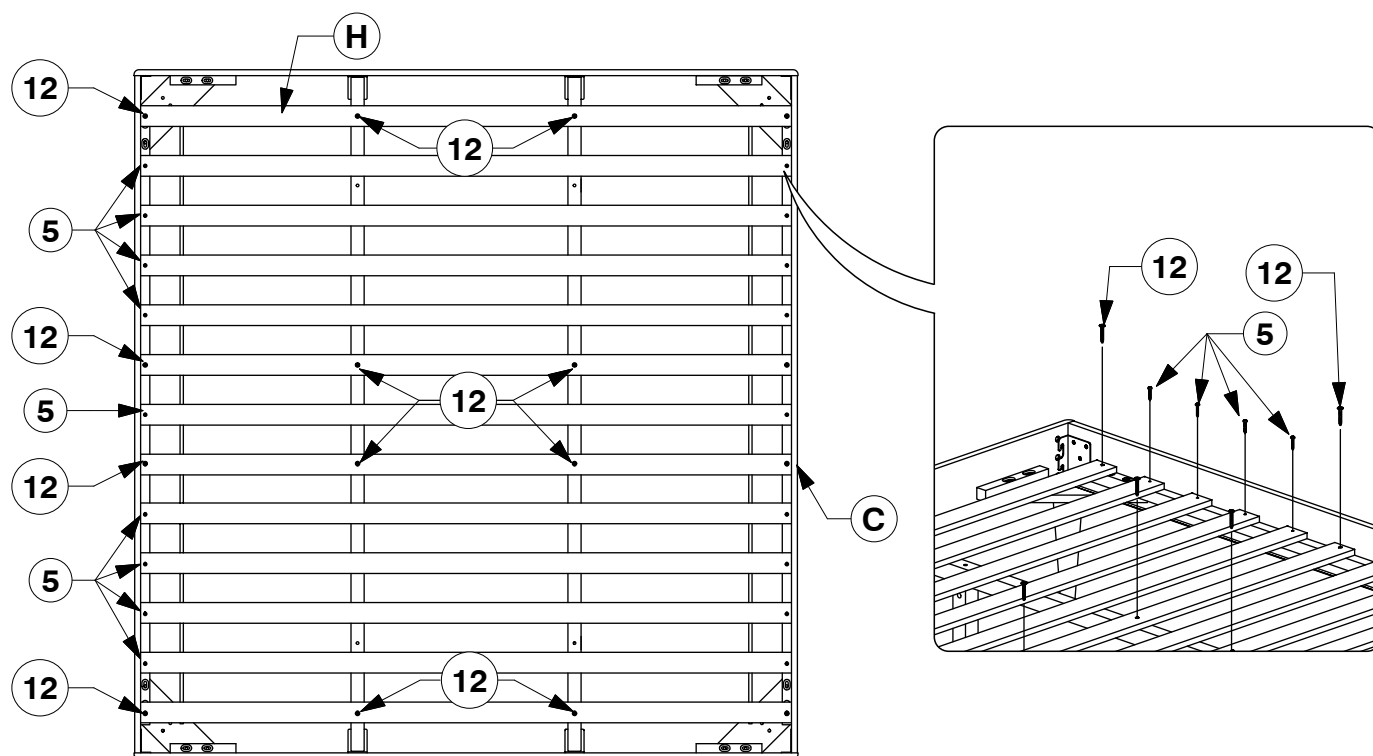


King Headboard


Assembly Instructions

WII-0419


1 Parts List

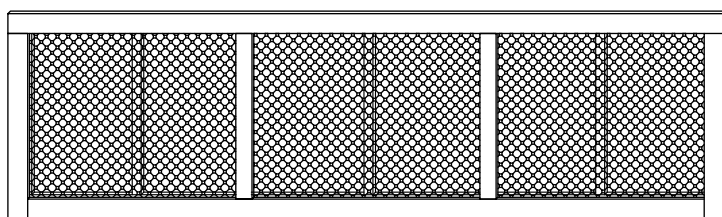


A Headboard Panel x 1




B Headboard Side Panel (Left hand) x 1



C Headboard Side Panel (Right hand) x 1



D Support Bar x 2

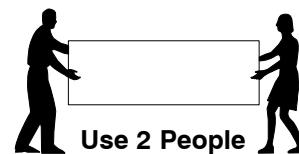

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Hardware List




1 M6 x 60mm JCB x 4



2 M6 x 35mm JCB x 4



3 Barrel Nut x 4



4 Wood Dowel (M10 x 40mm) x 4



5 Spring Washer x 4




6 Flat Washer x 4



7 M4 Allen Key x 1

3 Fit the Headboard Side Panel (B & C) to the Headboard Panel (A).

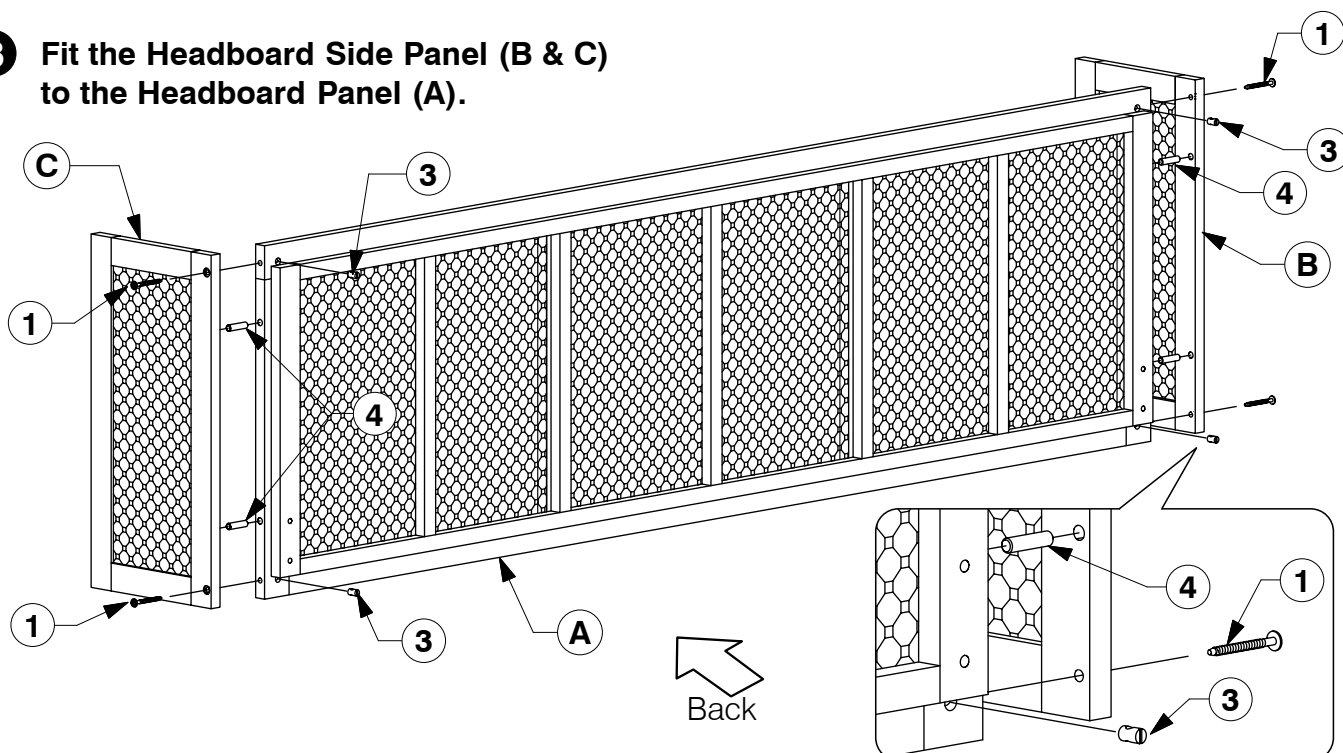

97151 King Headboard


Assembly Instructions

W11-0419


4 Assemble the Support Bars (D) to the Headboard Panel.

✓ Footboard, Rails & Slats are packed in separate Boxes with Bolts.

Note: Bolts & Washers from Footboard, Rails & Slats Box.

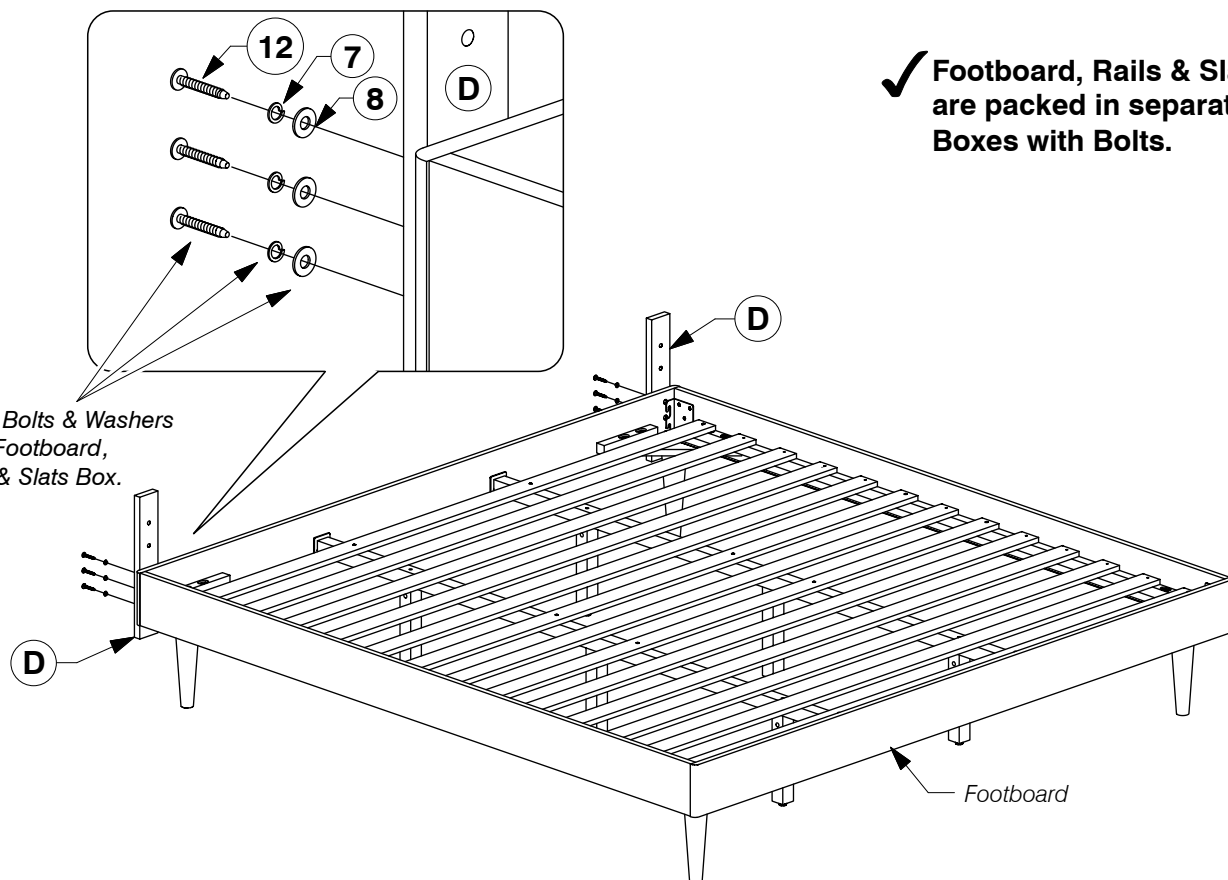



5 Assemble the Headboard Panel (A) to the Support Bars (D).

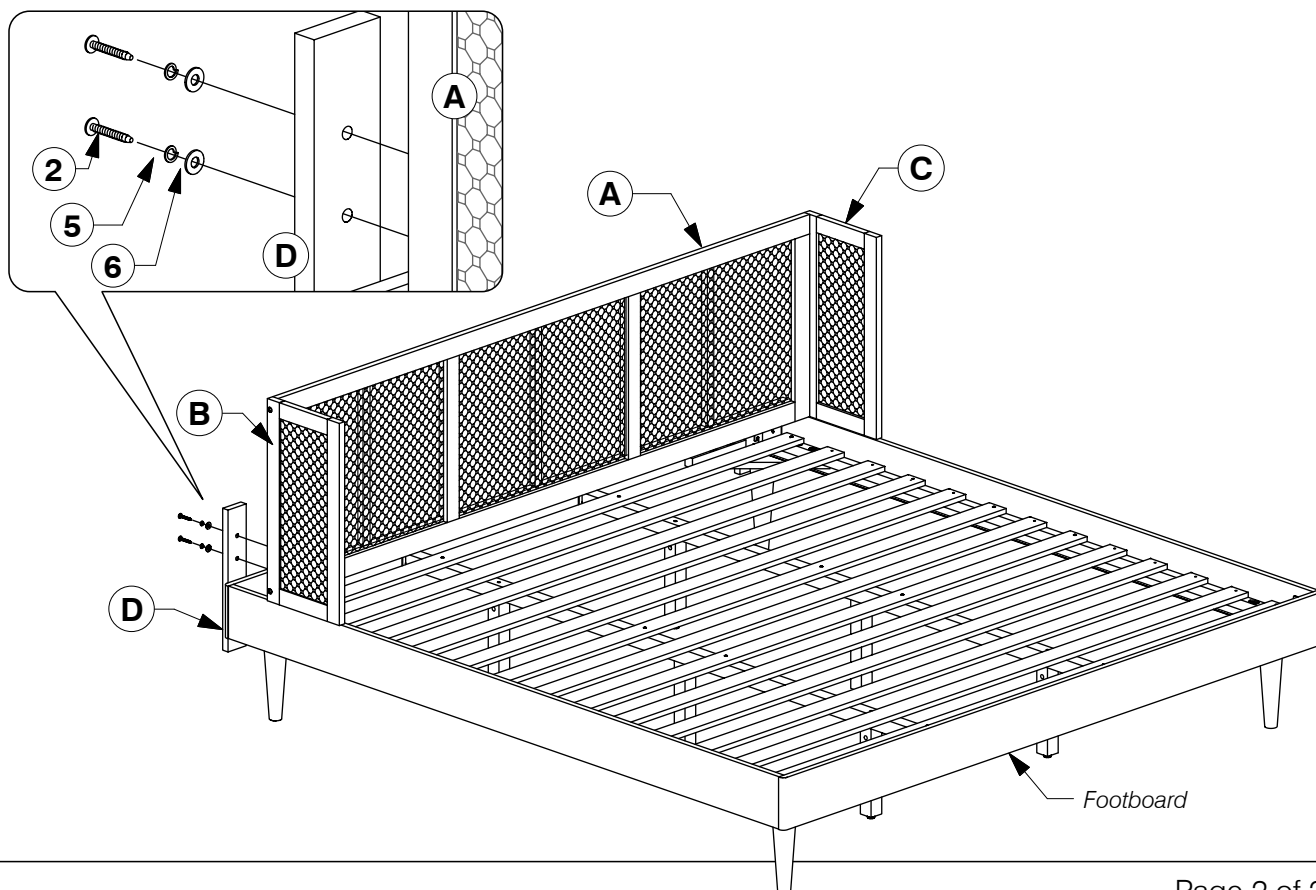

9001 2 Drawer Nightstand


Assembly Instructions

WI-1220

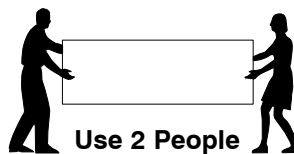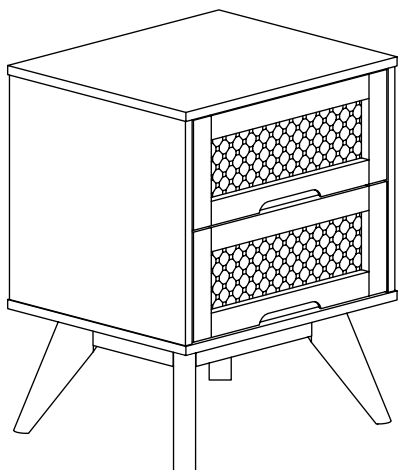


Note: Do not assemble using power tools. This can cause the bolts to be overtightened


1 Parts List

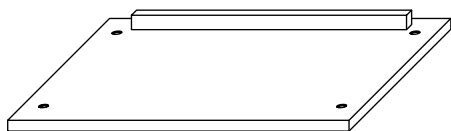


A Top Panel x 1




D Back Panel x 1

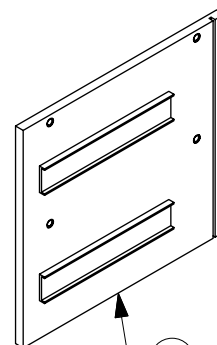


F Side Panel (Left Hand) x 1

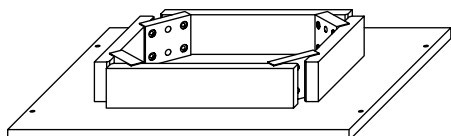


B Bottom Panel x 1




E Post x 4

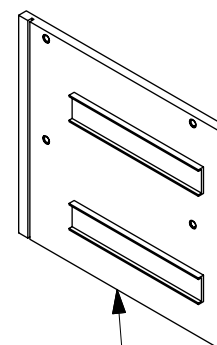


G Side Panel (Right Hand) x 1




C Support Bar x 2

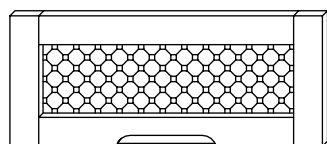


H Drawer Face x 2




J Drawer Back x 2



K Drawer Side (Left Hand) x 2



L Drawer Side (Right Hand) x 2













M Drawer Bottom x 2

9001 2 Drawer Nightstand

Assembly Instructions


WI-1220

2 Hardware List


- | | | | | |
|---|---|---|---|---|
|  |  |  |  |  |
| 1 M6 x 15mm JCB x 16 | 2 M6 x 60mm JCB x 8 | 3 M4 x 25mm Wood Screw x 16 | 4 M4 x 20mm Wood Screw x 4 | 5 M4 x 16mm Wood Screw x 6 |
|  |  |  |  |  |
| 6 CSK Cap Wood Screw (M6 x 50mm) x 4 | 7 Spring Washer x 8 | 8 Flat Washer x 8 | 9 'L' Bracket (5005-3) x 8 | 10 Allen Key x 1 |

3 Assemble the Drawer Sides (K & L) to the Drawer Face (H).


x2

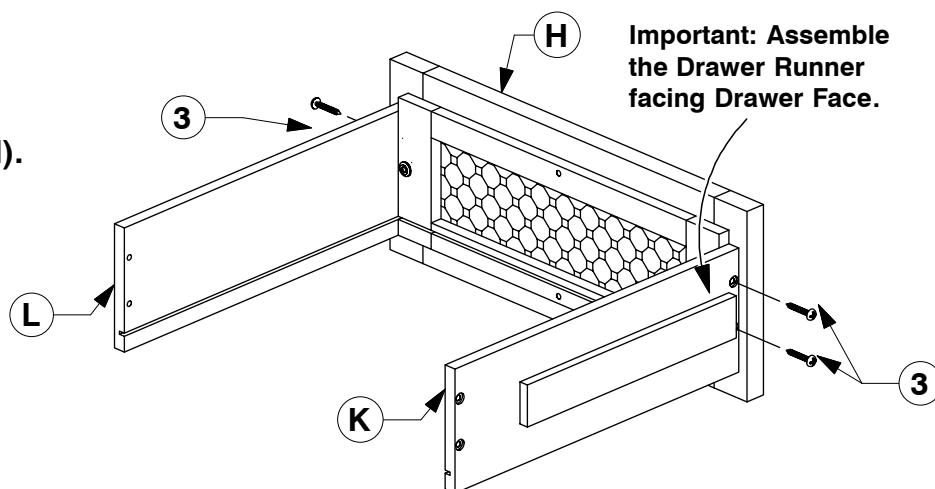

4 Slide the Drawer Bottom (M) into the groove on the Drawer Sides (K & L).

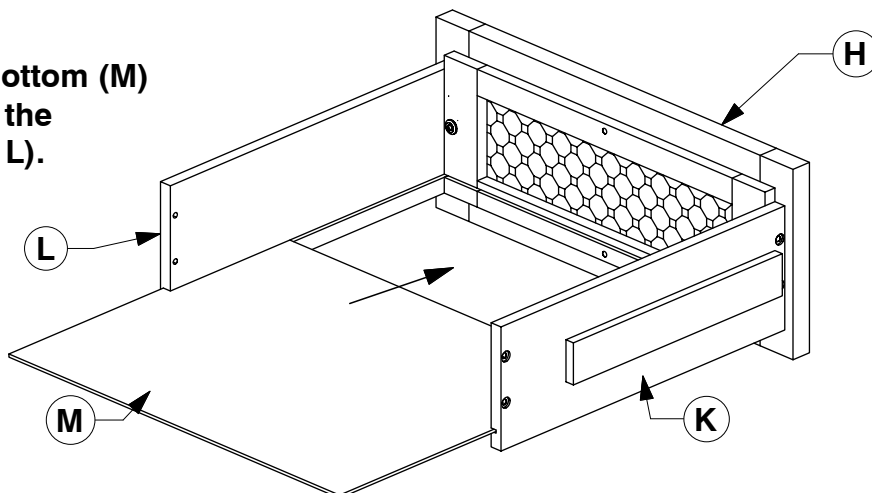

5 Assemble the Drawer Back (J) to the Drawer Sides (K & L).

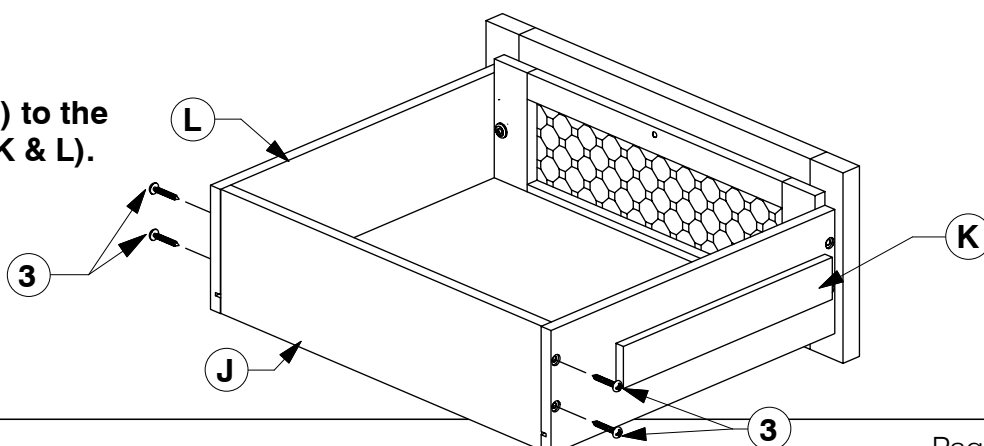


9001 2 Drawer Nightstand


Assembly Instructions

WI-1220

6 Fit the 'L' Bracket to the Side Panel (F & G).

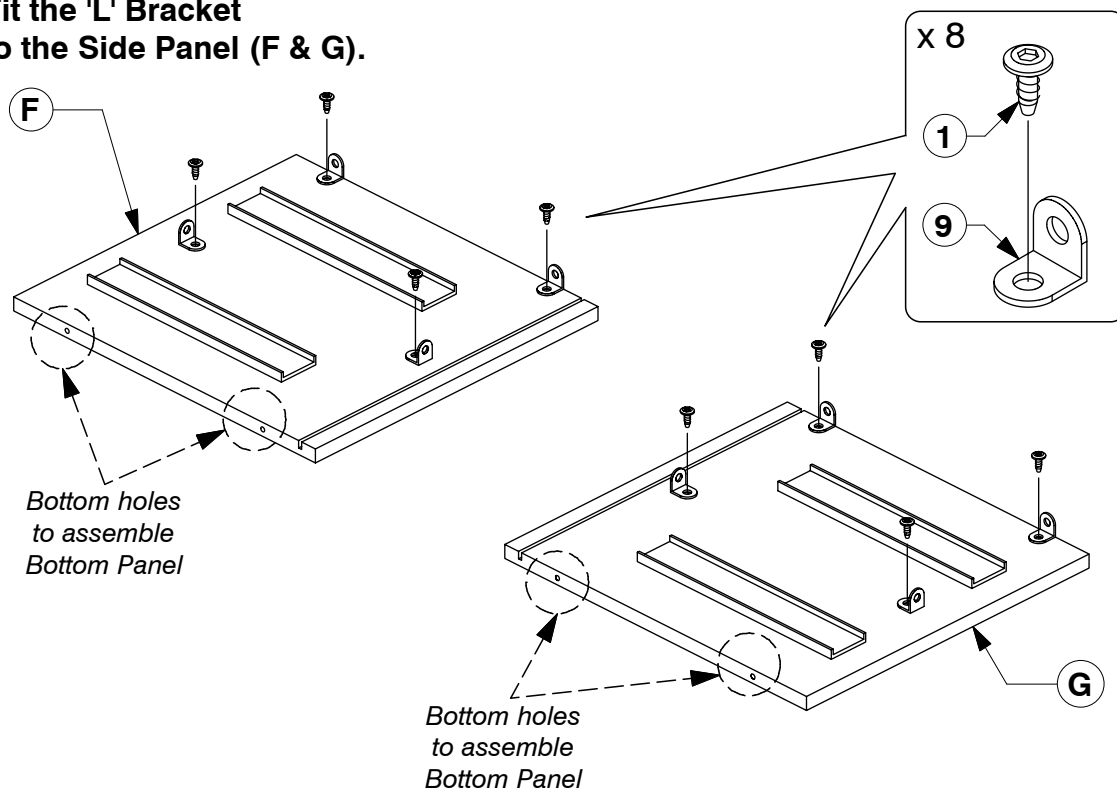

7 Assembled the Side Panel (F & G) to the Top Panel (A).

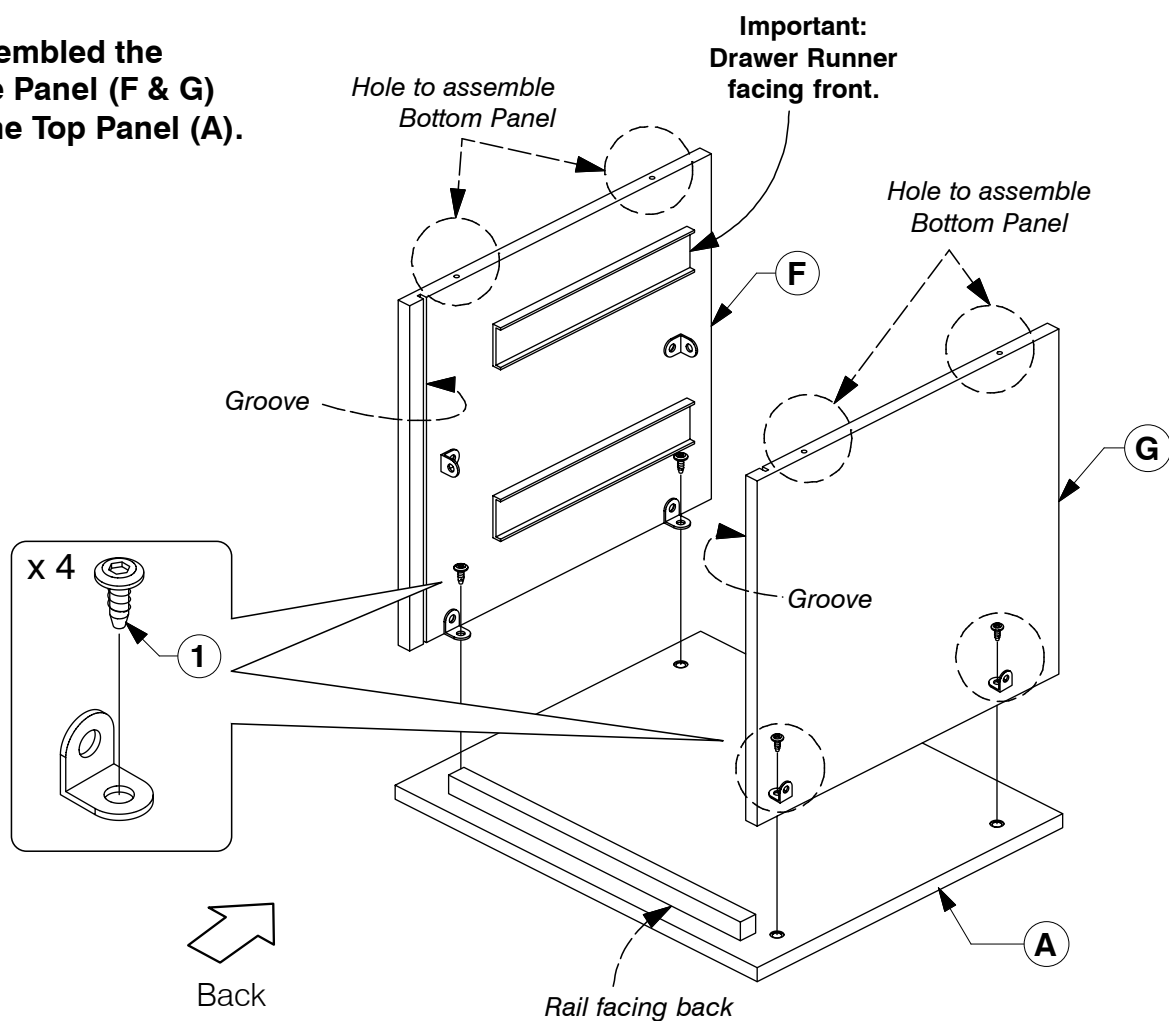


9001 2 Drawer Nightstand


Assembly Instructions

WI-1220

- 8** Fit the Support Bar (C) to the Side Panel (F & G).

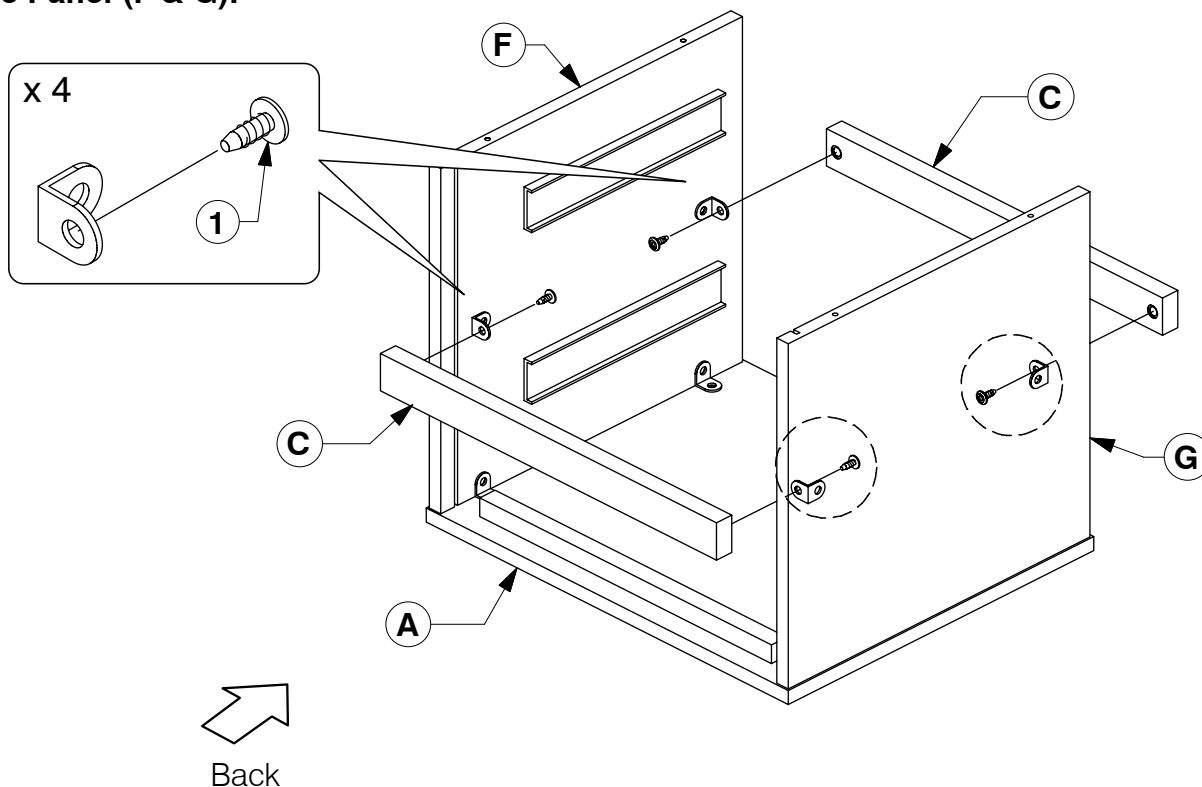

- 9** Slide the Back Panel (D) into the groove on the back of the Side Panel (F & G).

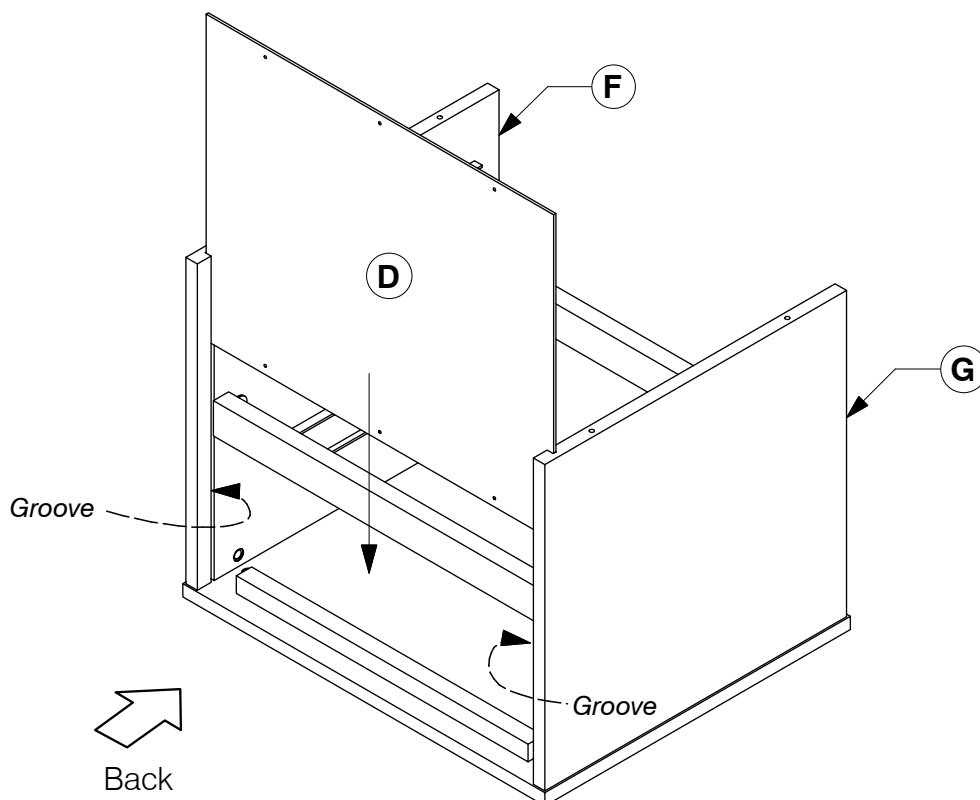


9001 2 Drawer Nightstand


Assembly Instructions

WI-1220

- 10** Fit the Bottom Panel (B) to the Bottom of the Side Panel (F & G).

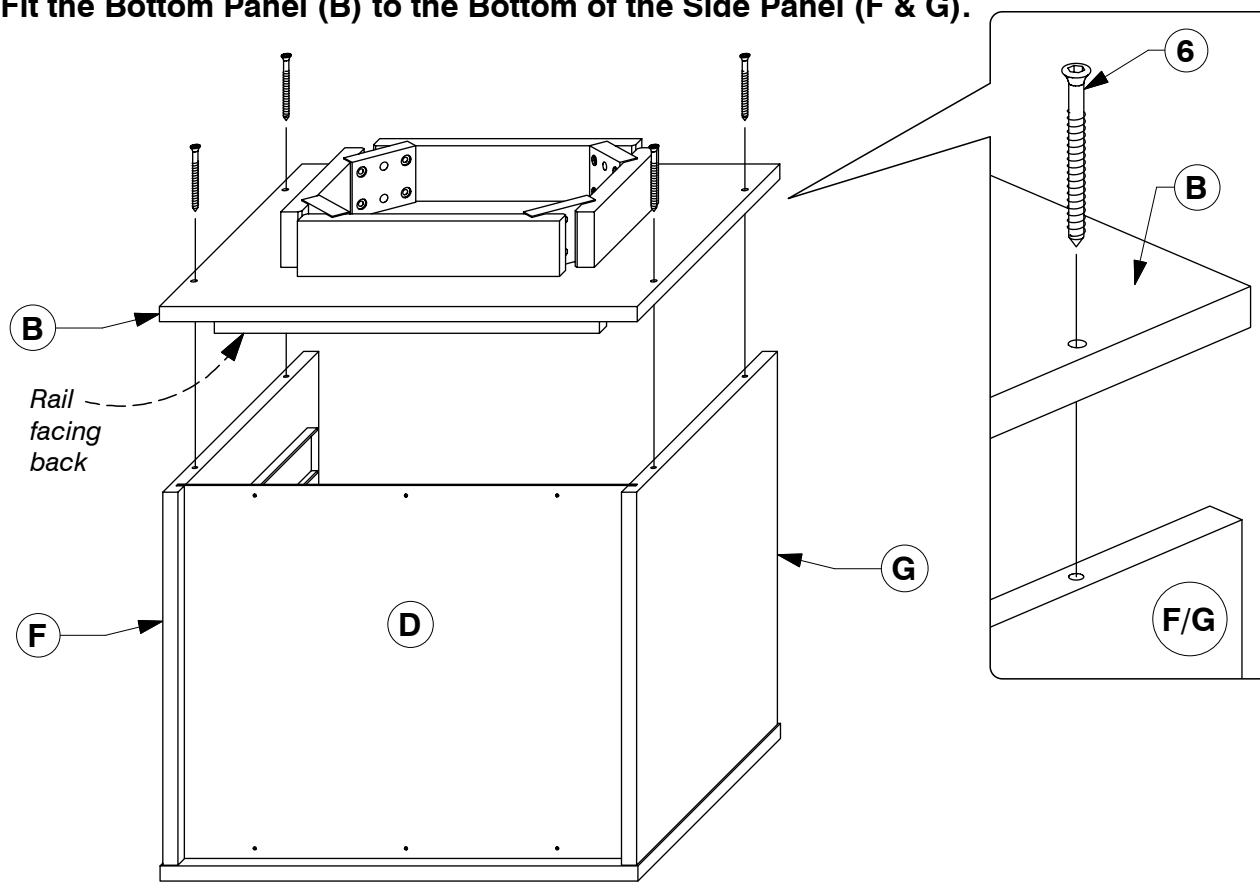

- 11** Use screws to tighten the Back Panel (D) to the back of the frame.

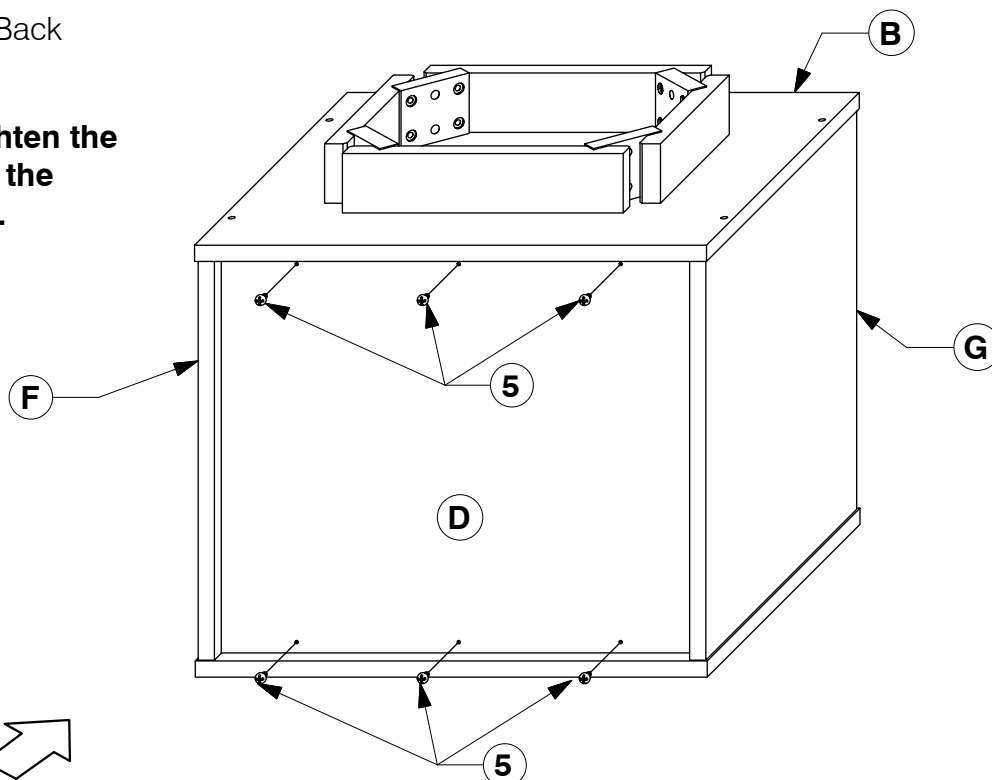


9001 2 Drawer Nightstand

Assembly Instructions


WI-1220

12 Fit the Post (E) to the Bottom Panel (B).

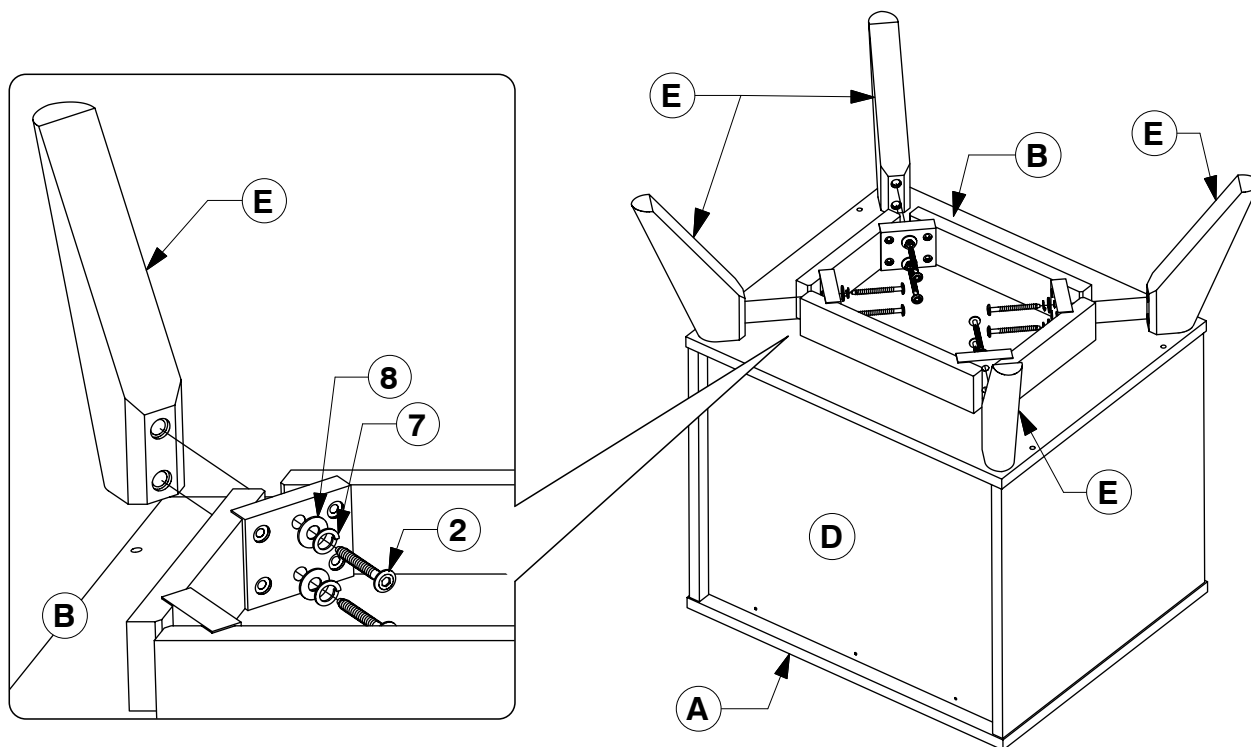

13 Fit and adjust the Drawer Face (H).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

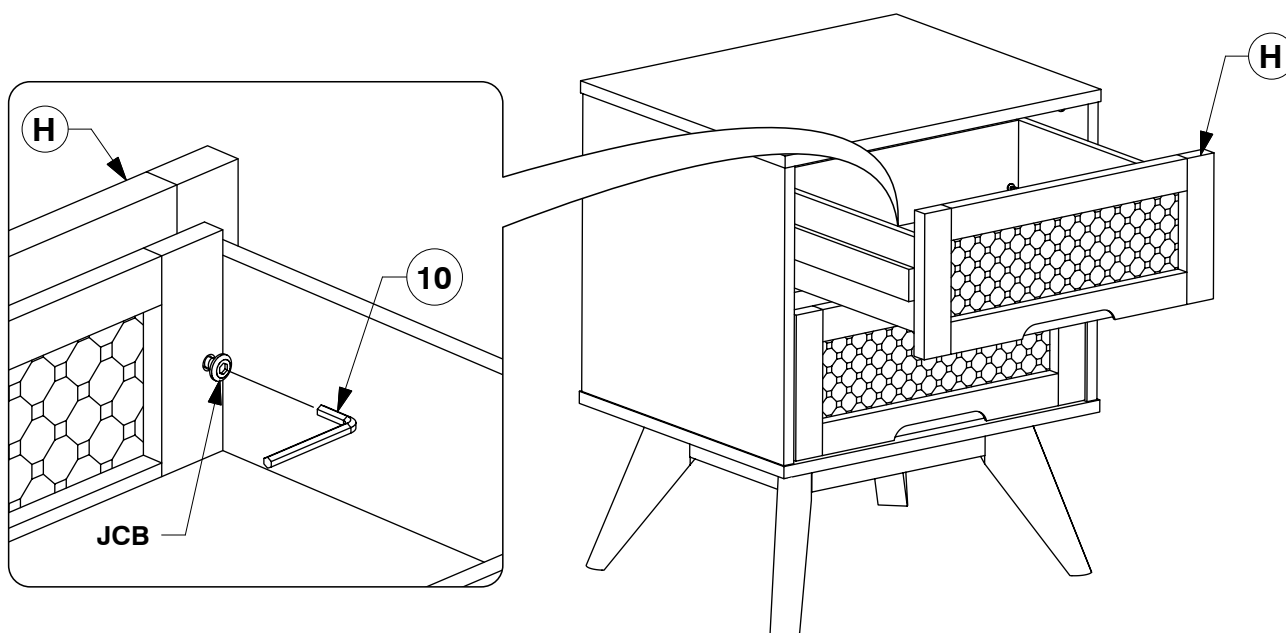


9001 2 Drawer Nightstand

Assembly Instructions

WI-1220



- 14** After the Drawer Faces (H) are aligned, secure with wood screws.

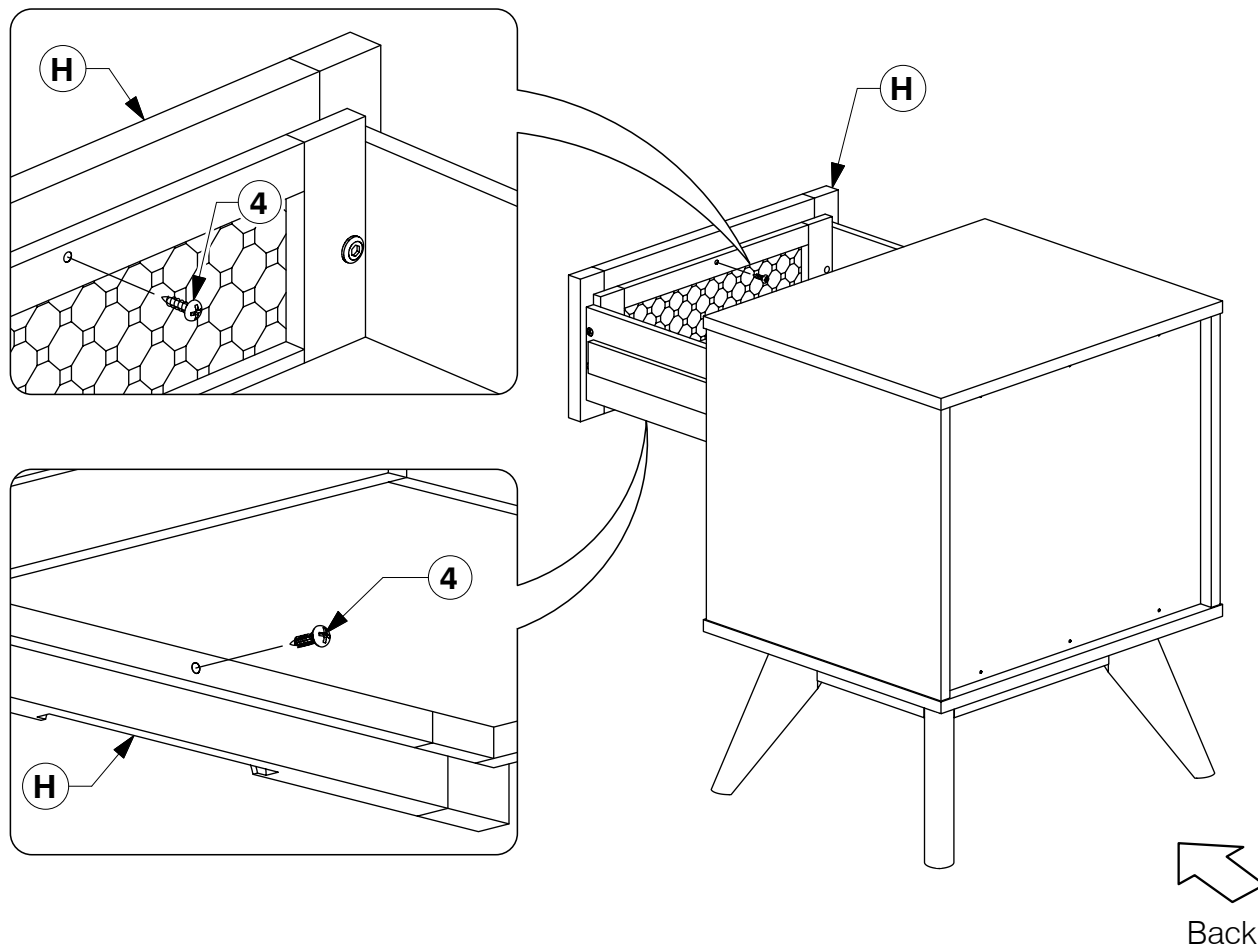

9001 6 Drawer Dresser

Assembly Instructions


WI-1220

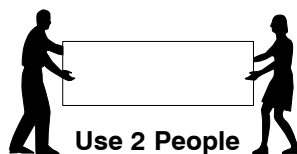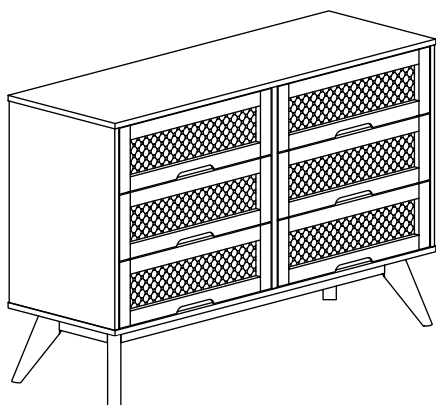


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List


Parts in Box A:




A Top Panel x 1




B Bottom Panel x 1




C Support Bar x 2

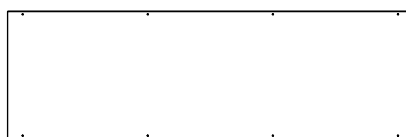


D Back Panel (Wider) x 1




E Back Panel (Narrow) x 1

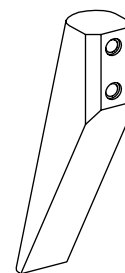


F Post x 4

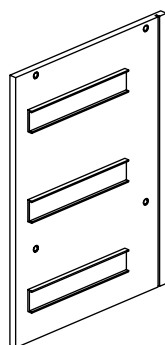

G Side Panel (Left Hand) x 1

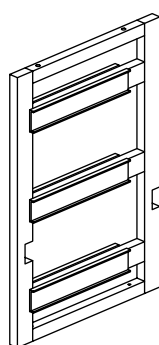

H Center Frame x 1

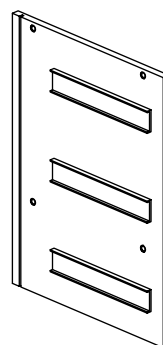


J Side Panel (Right Hand) x 1



K Drawer Bottom x 6


Parts in Box B:




L Drawer Face x 6




N Drawer Rail x 6

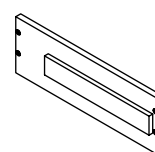

O Drawer Side (Left Hand) x 6

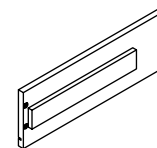

P Drawer Side (Right Hand) x 6















M Drawer Back x 6

9001 6 Drawer Dresser

Assembly Instructions


WI-1220

2 Hardware List


- | | | | |
|---|---|--|---|
|  |  |  |  |
| ① M6 x 15mm JCB
x 16 | ② M6 x 60mm JCB
x 8 | ③ M6 x 35mm JCB
x 4 | ④ Wood Screw (M4 x 16mm)
x 16 |
|  |  |  |  |
| ⑤ Wood Screw (M4 x 20mm)
x 24 | ⑥ Wood Screw (M4 x 25mm)
x 60 | ⑦ M6 x 25mm Wood Dowel
x 24 | ⑧ CSK Cap Wood Screw (M6 x 50mm) x 6 |
|  |  |  |  |
| ⑨ 'L' Bracket (5005-3) x 8 | ⑩ Spring Washer x 8 | ⑪ Flat Washer x 8 | ⑫ Allen Key x 1 |

3 Assemble the Drawer Sides (O & P) & Drawer Rail (N) to the Drawer Face (L).

x6

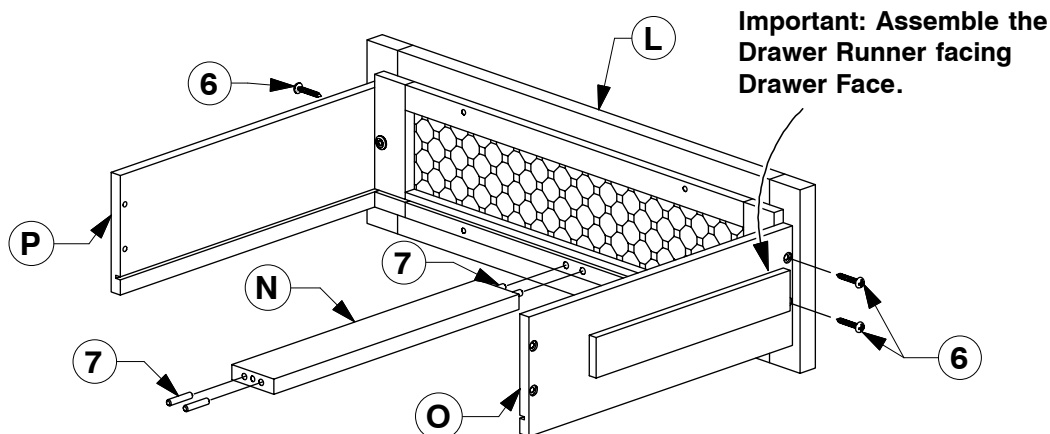

4 Slide the Drawer Bottom (K) into the groove on the Drawer Sides (O & P).

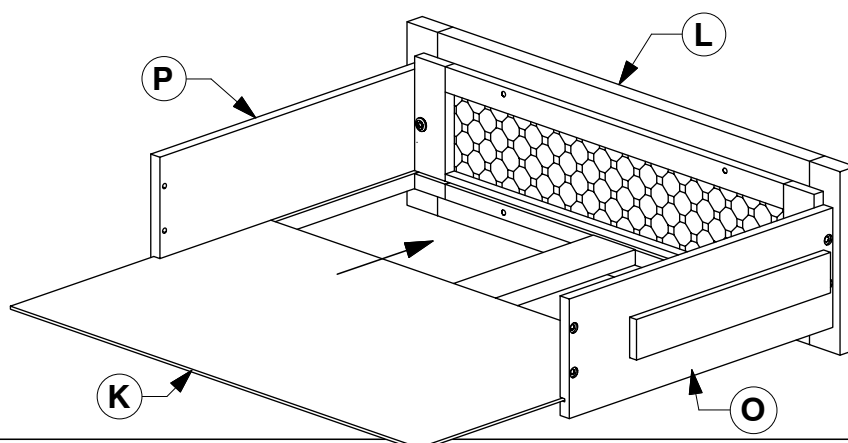


9001 6 Drawer Dresser

Assembly Instructions


WI-1220

- 5** Assemble the Drawer Back (M) to the Drawer Sides (O & P).


x6

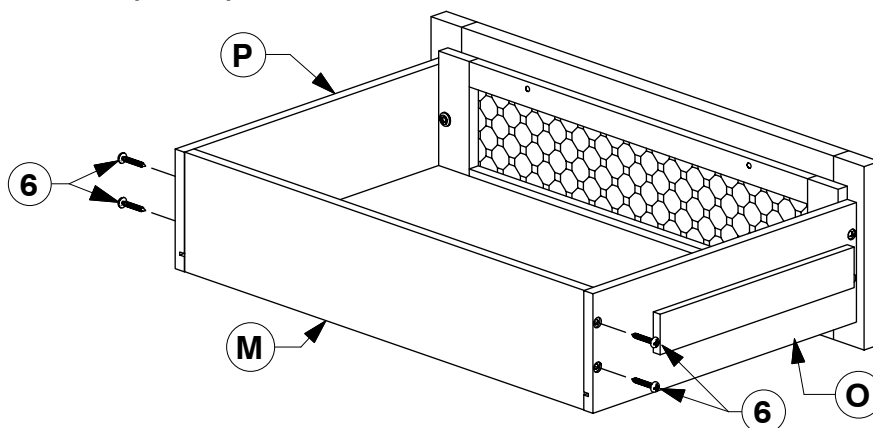

- 6** Turn the Drawer over to fit angled 25mm Wood screws (6) to the Drawer Rail (N).

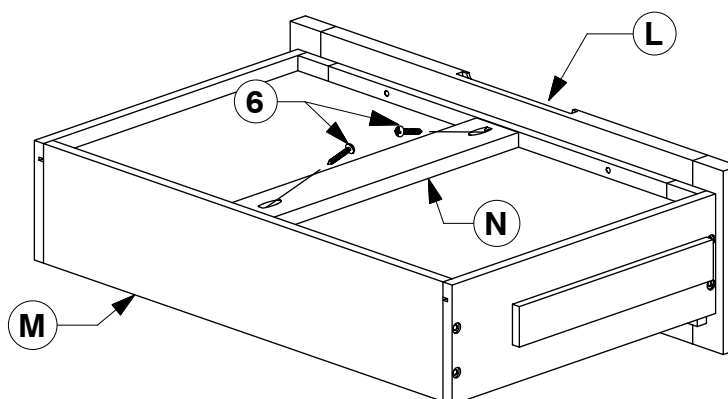

- 7** Fit the 'L' Bracket to the Side Panel (G & J).

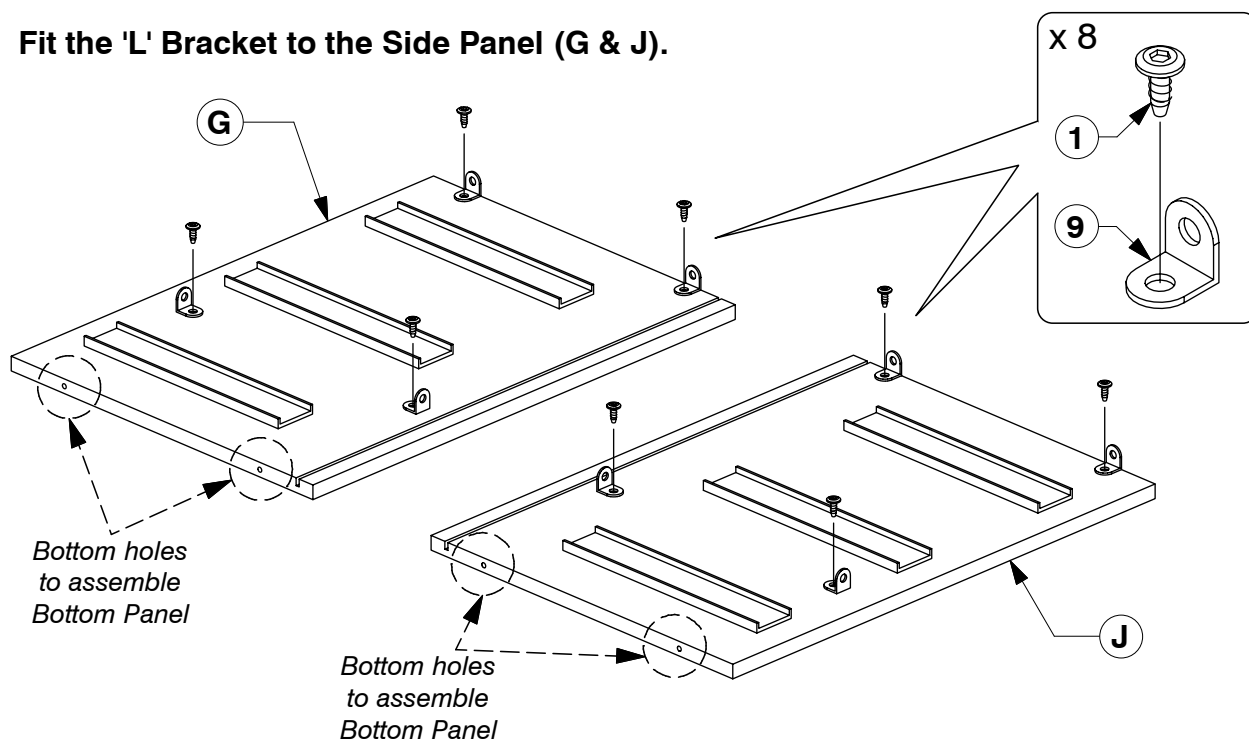


9001 6 Drawer Dresser


Assembly Instructions

WI-1220

- 8** Fit the Side Panel- Right Hand (J) & Center Frame (H) to the Top Panel (A).

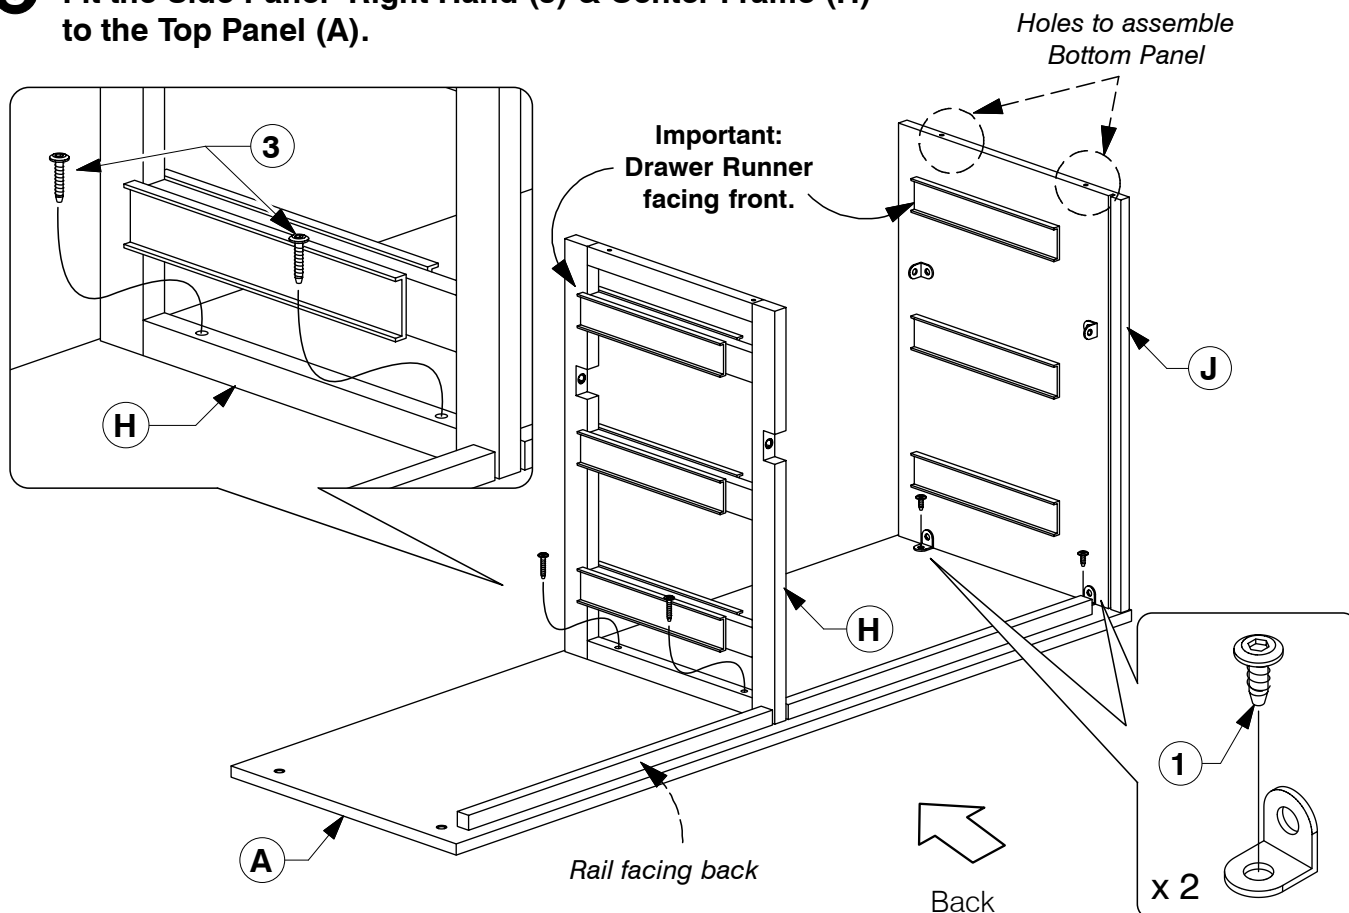

- 9** Fit the Support Bar (C) to the Side Panel- Right Hand (J) & Center Frame (H) as shown.

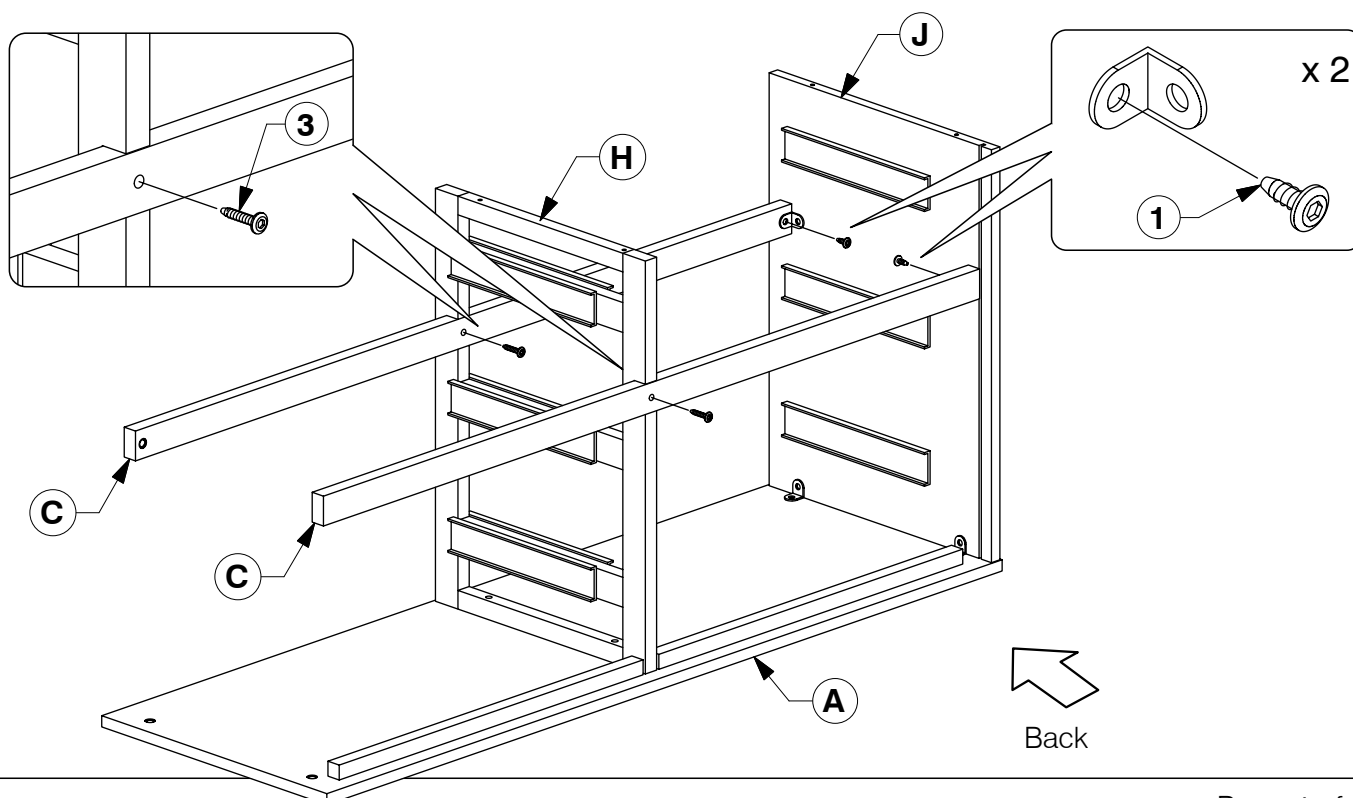


9001 6 Drawer Dresser


Assembly Instructions

WI-1220

- 10** Fit the other side of Side Panel- Left Hand (G) to the Top Panel (A) & Support Bar (C).

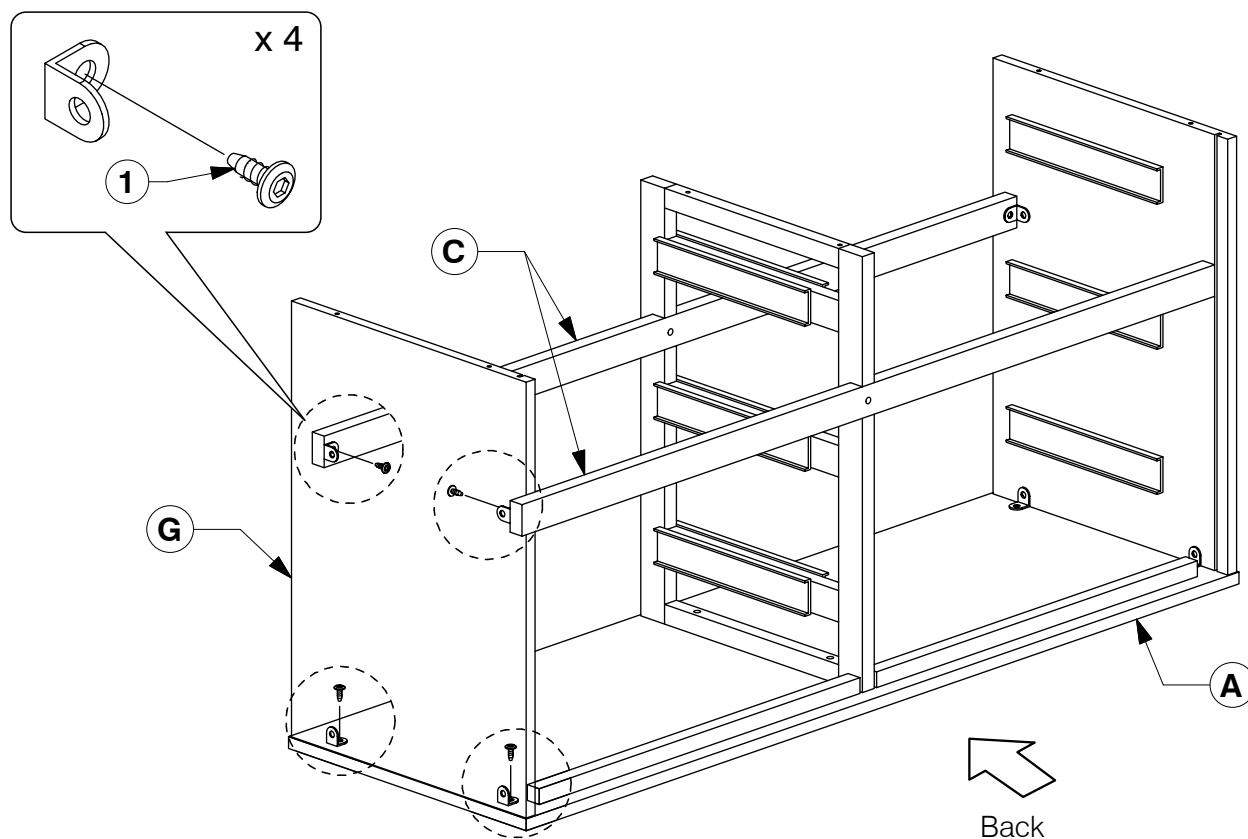

- 11** Slide the Back Panel- Wider (D) into the groove on the back of the Side Panel (G & J).

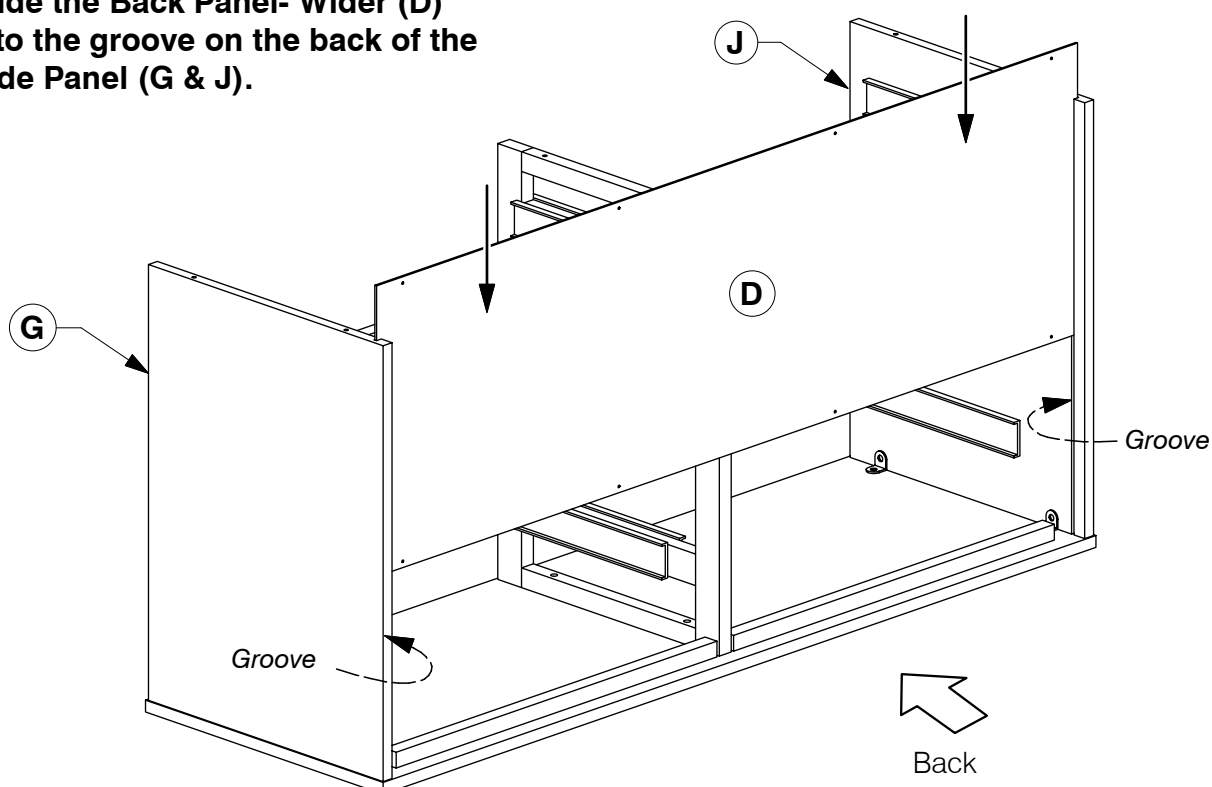


9001 6 Drawer Dresser


Assembly Instructions

WI-1220

- 12** Slide the Back Panel-Narrow (E) into the groove on the back.

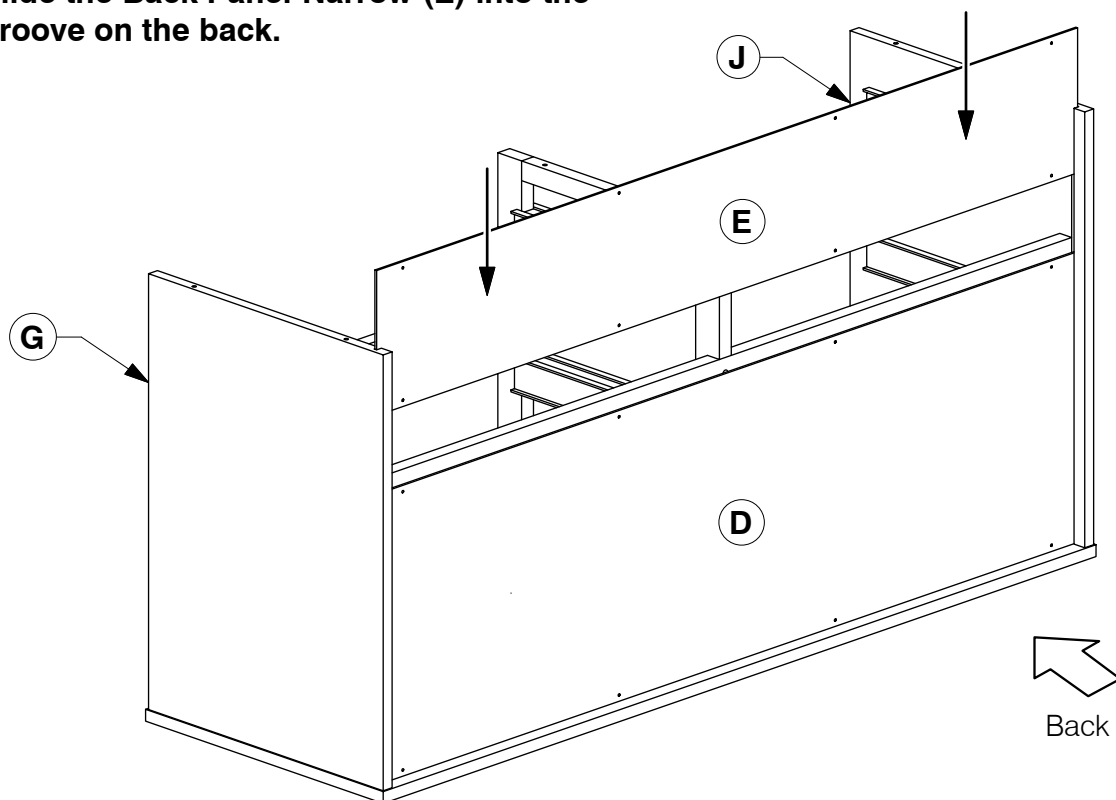

- 13** Use screws to tighten the Back Panel (D & E) to the back of the frame.

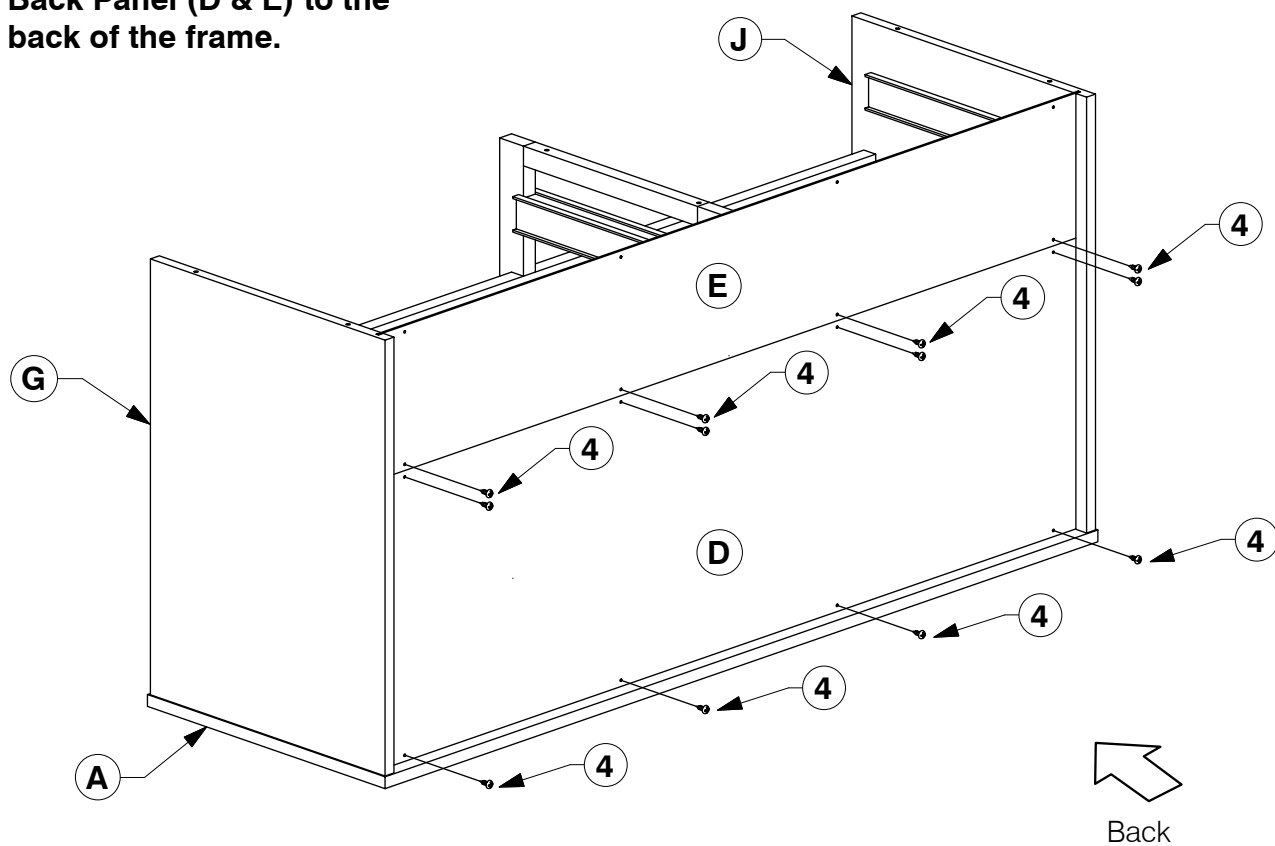


9001 6 Drawer Dresser


Assembly Instructions

WI-1220

- 14** Assembled the Bottom Panel (B) to the frame.

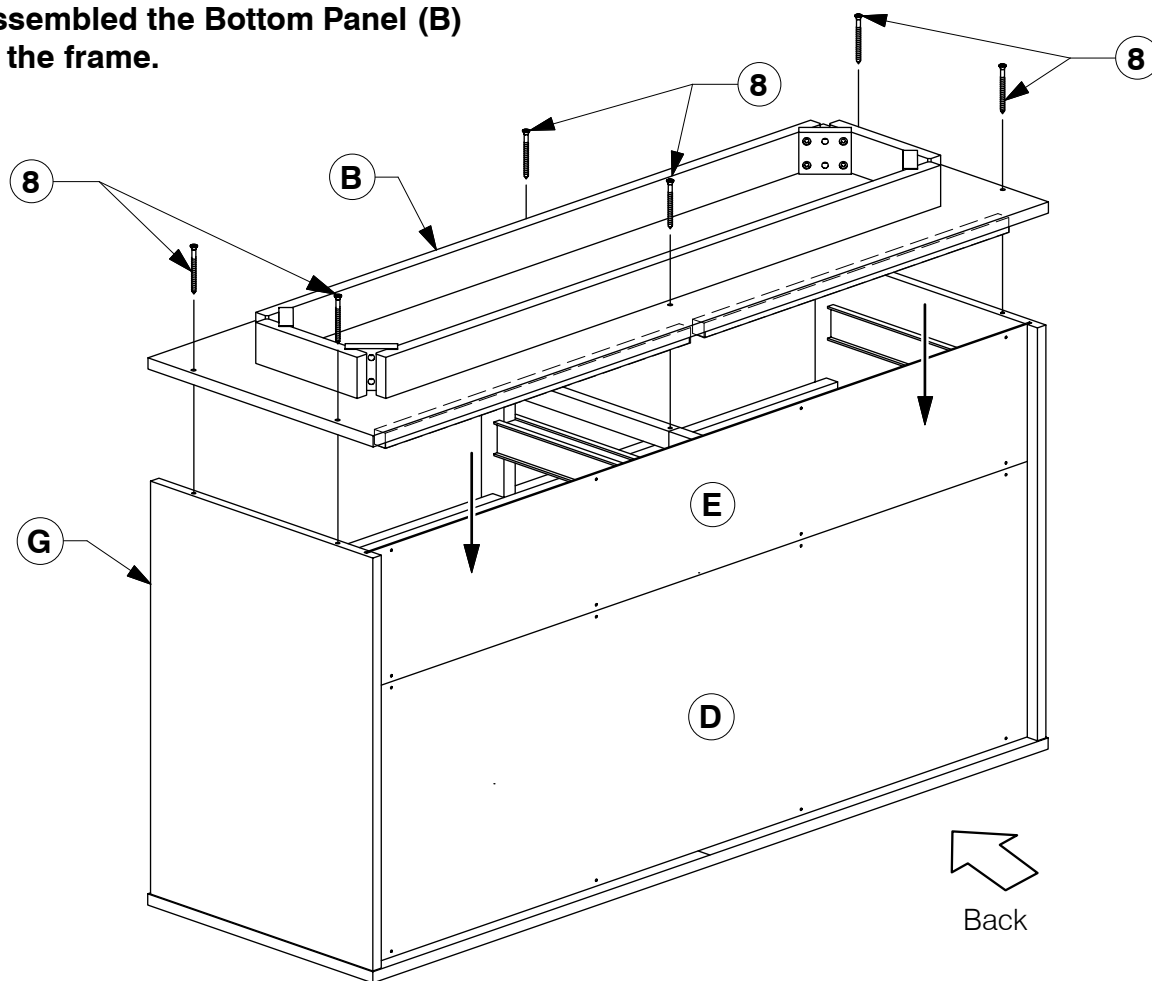

- 15** Tighten the Back Panel- Narrow (E) with screws.

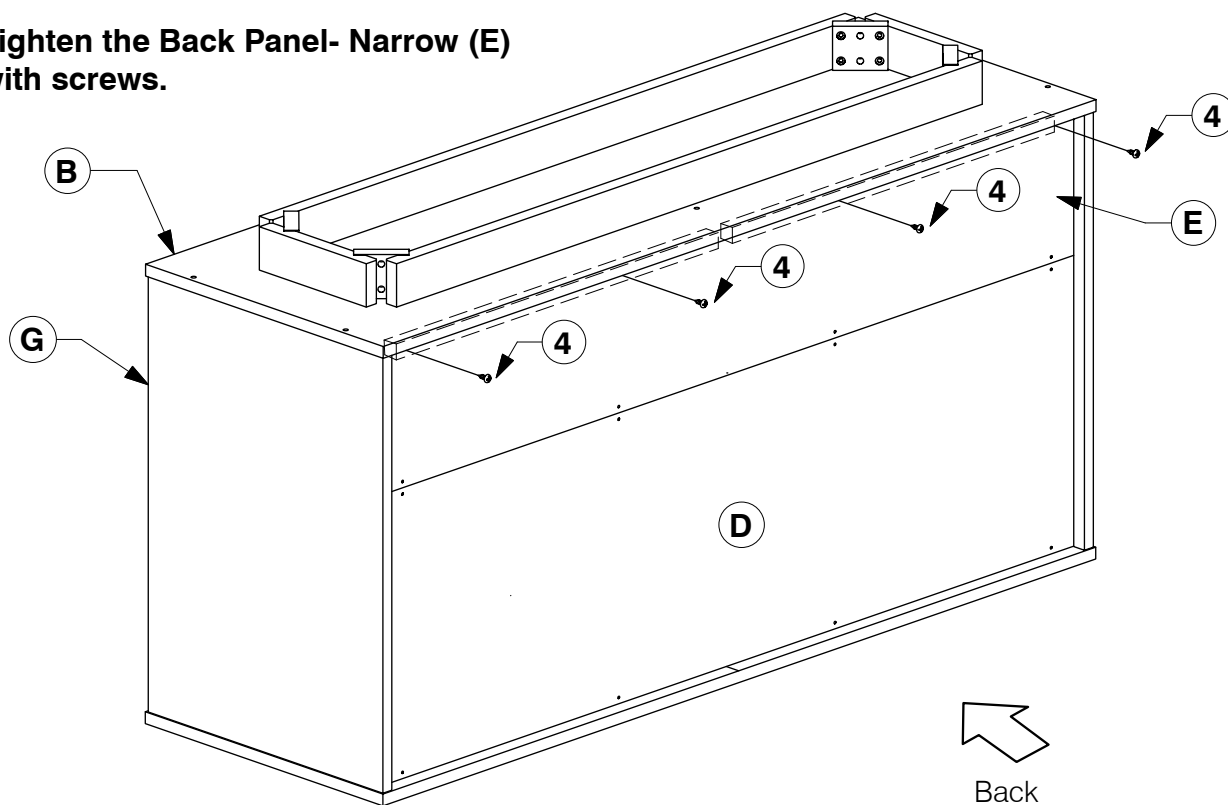


9001 6 Drawer Dresser

Assembly Instructions


WI-1220

- 16** Fit the Post (F) to the Bottom Panel (B) as shown below.

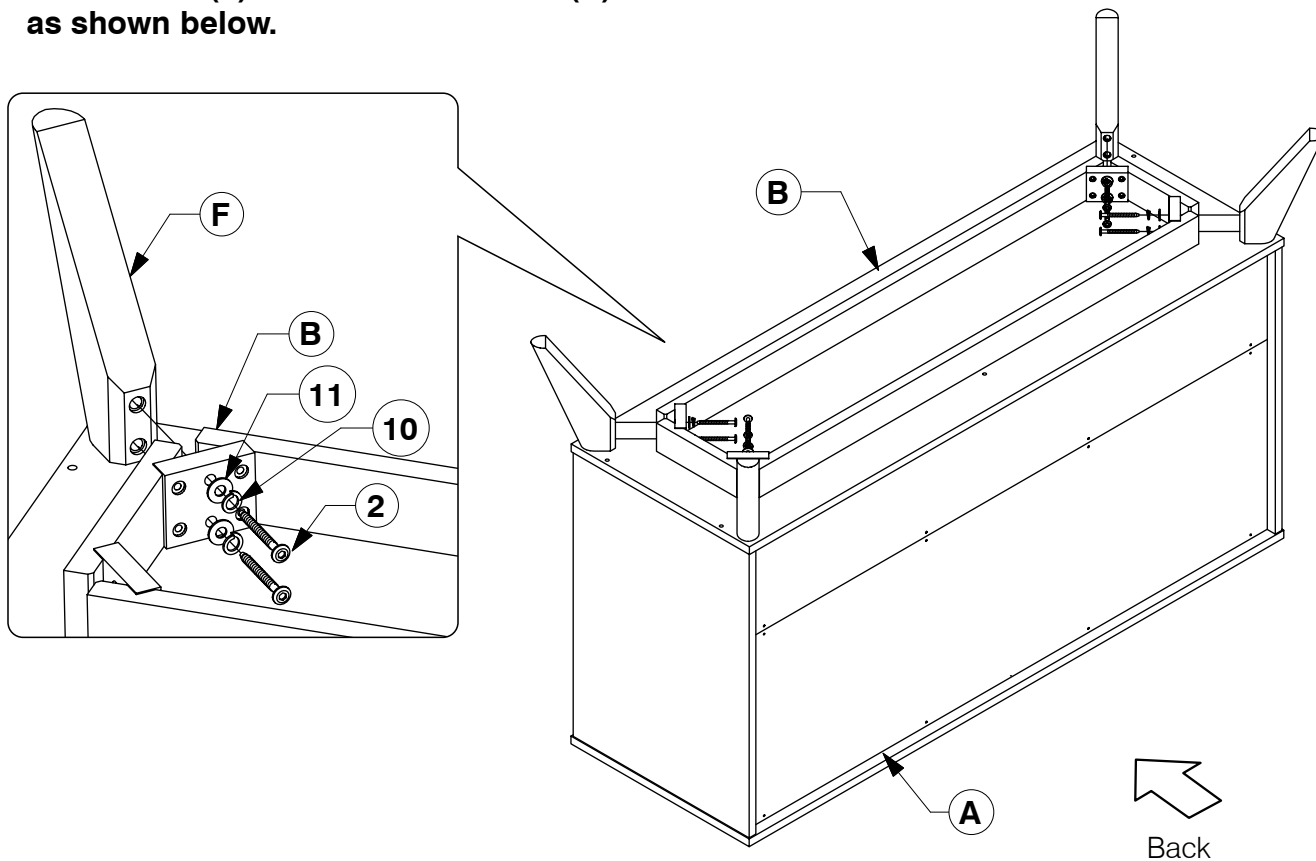

- 17** Fit and adjust the Drawer Face (L).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

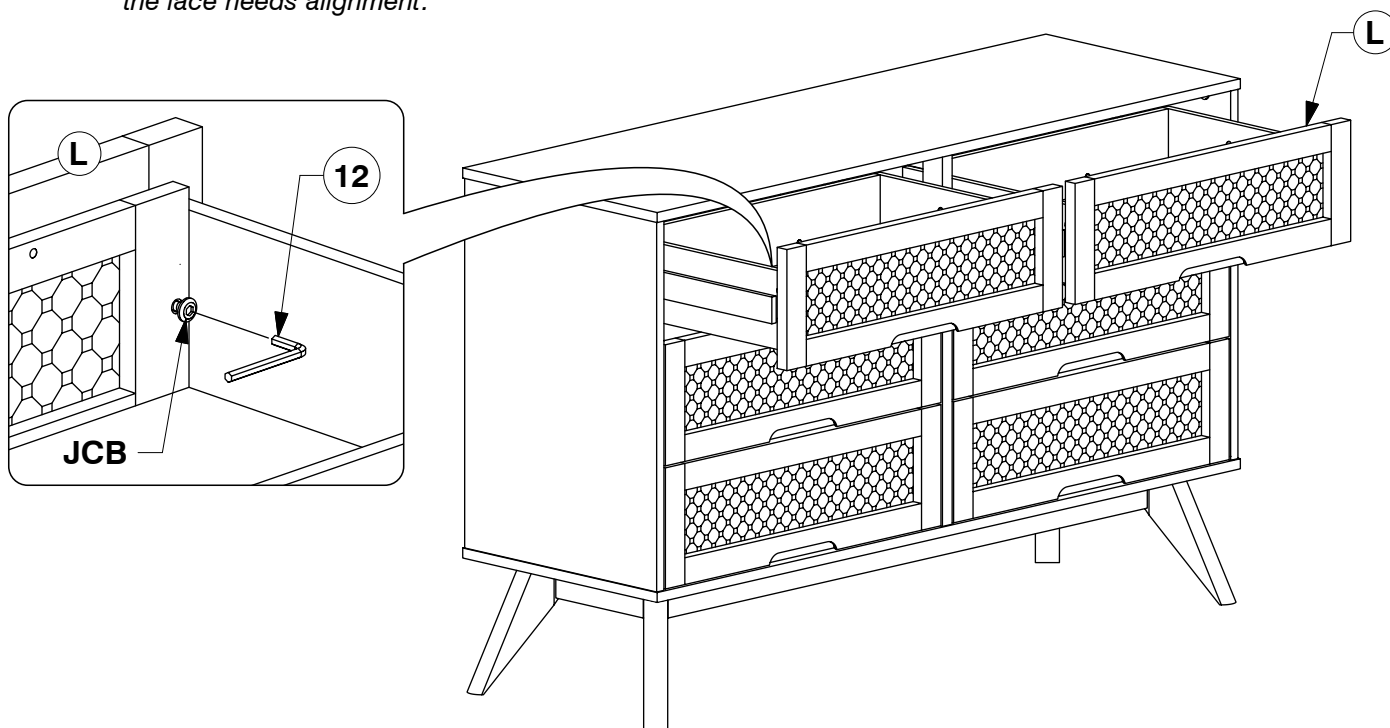


9001 6 Drawer Dresser

Assembly Instructions

WI-1220

- 18** After the Drawer Faces (L) are aligned, secure with wood screws.

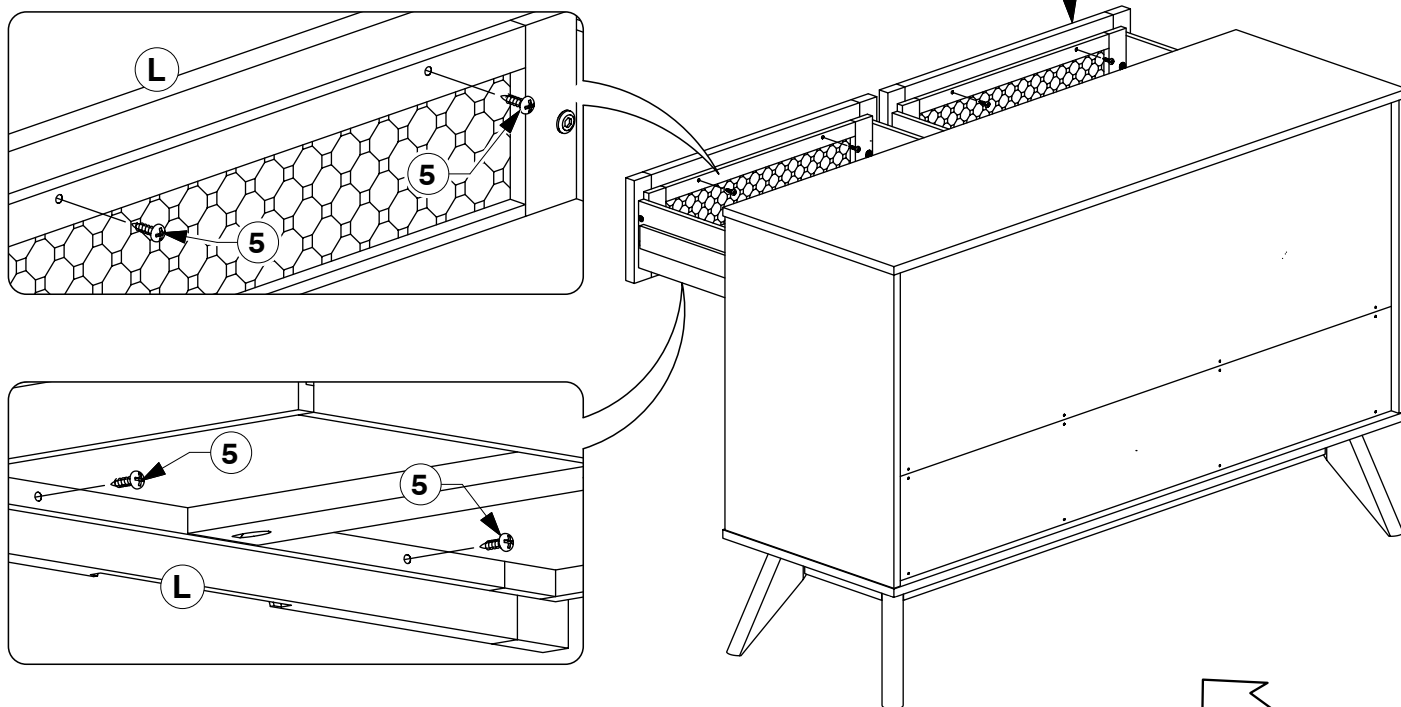

Back