



Helpers needed to assemble: 2

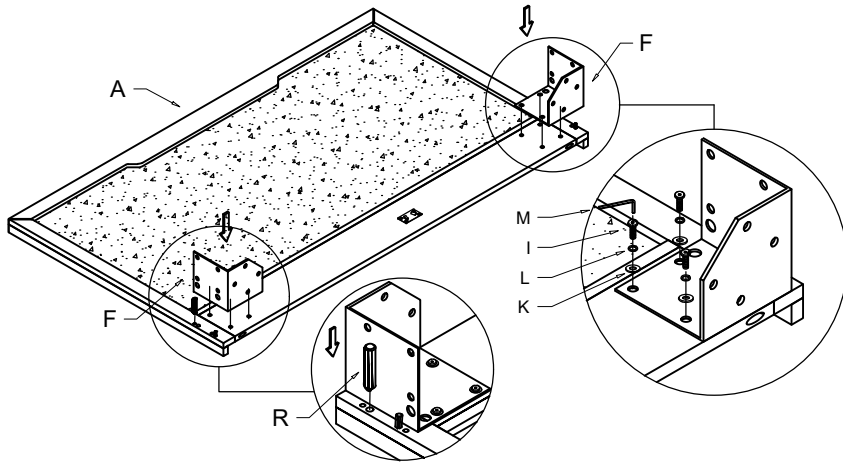







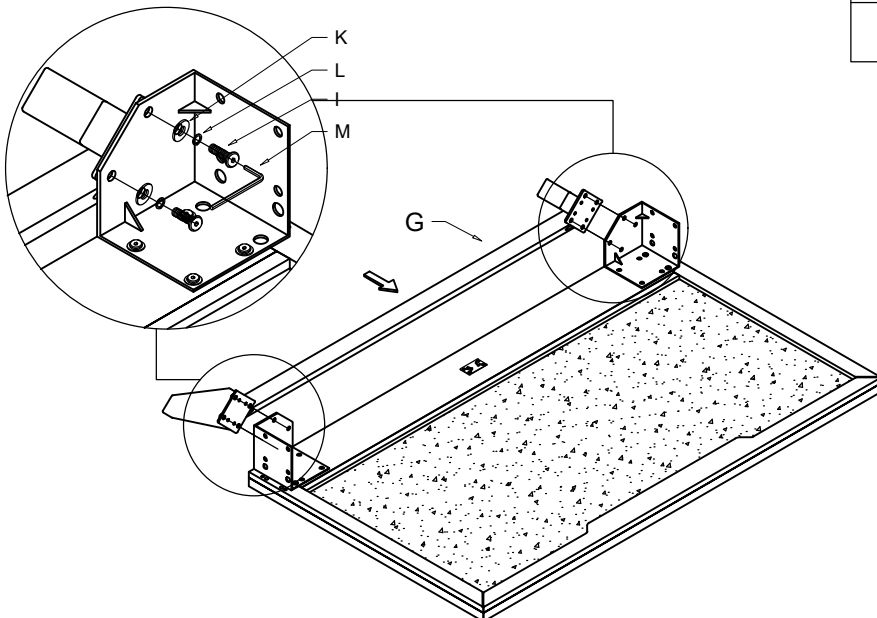










Estimate time frame to assemble: **1 Hour**

Tools Needed not Included: **Phillips Screwdriver**





- **Step 1:** Make sure it's on a safe surface where the bedframe cannot be scratched and or damaged and close enough to the location
- **Step 2:** Locate the headboard and the two frame brackets, as these will be the first to be attached.
- **Step 3:** Using the Allen Key you will screw in the headboard and the frame brackets using (4 Bolt - M8 x 20mm; 4 Lock Washer - Ø12mm; 4 Washer - Ø19mm) for each bracket. First place the two washers and bolt on the interior of the frame using the Allen Key.
 - i. Repeat for each bracket and make sure it's firmly attached to the headboard.
 - ii. Locate the dowel, and place 1 on each bracket on the outside of the bracket.




#	Picture	Description	Quannity
A		Headboard	1
B		Siderail	2
C		Footboard	1
D		Middle Support Bar	1
E		Slat	16
F		Frame Bracket	4
G		Leg Set	2
H		Middle Leg	2
I		Bolt - M8 x 20	48
K		Washer - Ø19 mm	48
L		Lock Washer - Ø12 mm	48
M		Allen key Wrench V4	1
N		Bolt - M8 x 40 mm	2
O		Bolt - M6 x 90 mm	4
P		Insert Nut - M6-thread	4
Q		Srew - M4 x 30	8
R		Dowel - Ø10 x 30	8
S		Washer - Ø16	4
T		Lock Washer - Ø12	4

- **Step 4:** Locate the leg set as this will be assembled onto the preassembled heard board and rails.
- **Step 5:** Using the Allen Key you will screw in the headboard and the one set of leg using (4 Bolt - M8 x 20mm; 4 Lock Washer - Ø12mm; 4 Washer - Ø19mm) for each bracket. First place the two washers and bolt on the interior of the frame using the Allen Key.

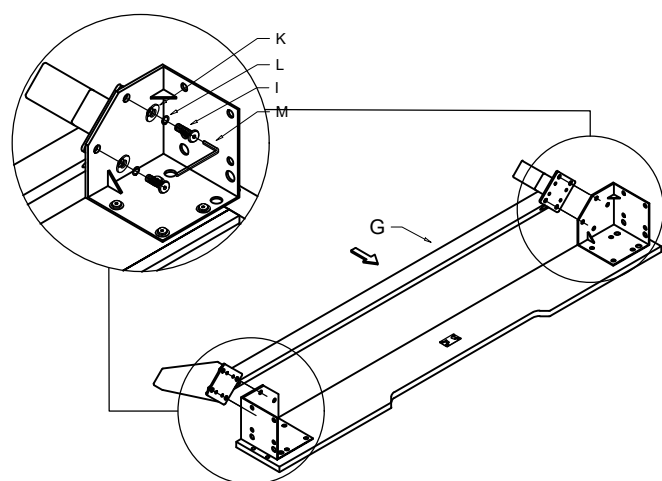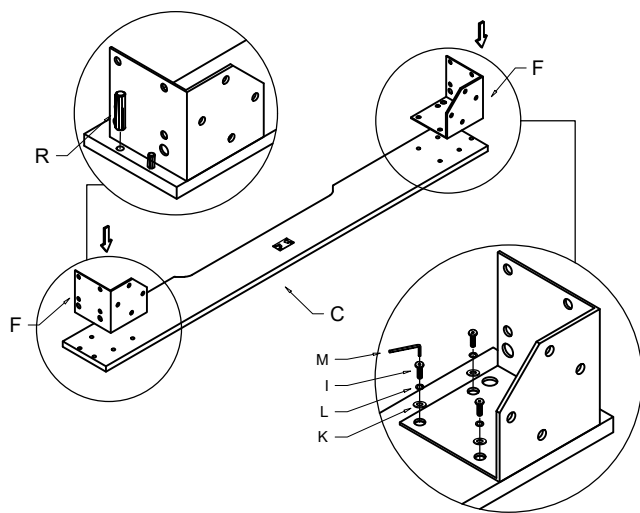


- **Step 6:** Proceed to locate the end and the two brackets.
- **Step 7:** Using the Allen Key you will screw in the end and the frame brackets using (4 Bolt - M8 x 20mm; 4 Lock Washer -Ø12mm; 4 Washer - Ø19mm) for each bracket. First place the two washers and bolt on the interior of the frame using the Allen Key.
- **Step 8:** Locate the dowel, and place 1 on each bracket on the outside of the bracket.


- **Step 9:** Locate the leg set as this will be assembled onto the preassembled footboard.
- **Step 10:** Using the Allen Key you will screw in the footboard and the one set of leg using (4 Bolt - M8 x 20mm; 4 Lock Washer -Ø12mm; 4 Washer - Ø19mm) for each bracket. First place the two washers and bolt on the interior of the frame using the Allen Key.

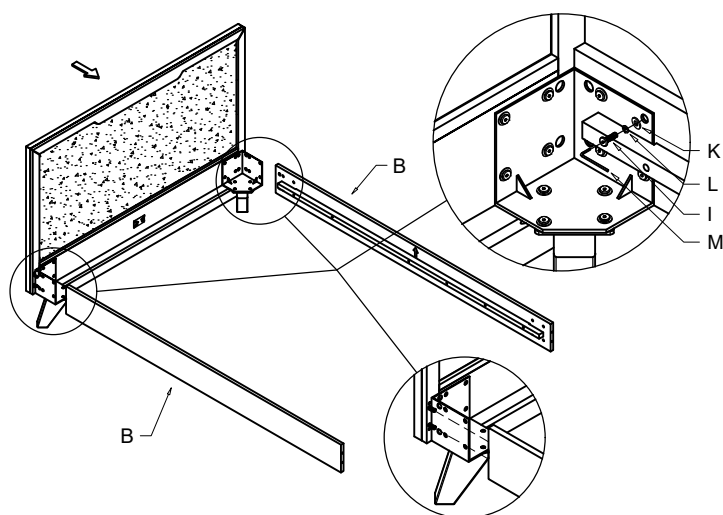


- **Step 11:** Now that we've preassembled parts, we will connect the headboard and the siderails.
- **Step 12:** Locate the 2 siderails as this will be assembled onto the preassembled footboard and headboard.
- **Step 13:** Using the Allen Key you will screw in the headboard and the one side rail (4 Bolt - M8 x 20mm; 4 Lock Washer -Ø12mm; 4 Washer - Ø19mm) for each bracket. First place the two washers and bolt on the interior of the sideboard frame using the Allen Key.

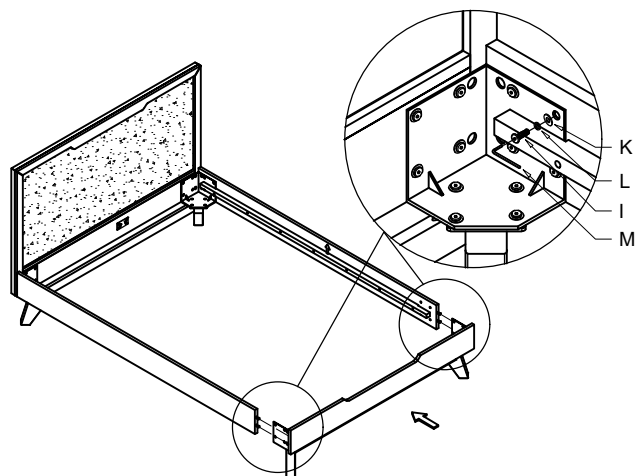


- **Step 14:** Now that we've preassembled parts, we will connect the footboard and the siderails.
- **Step 15:** Using the Allen Key you will screw in the footboard and the one side rail (4 Bolt - M8 x 20mm; 4 Lock Washer -Ø12mm; 4 Washer - Ø19mm) for each bracket. First place the two washers and bolt on the interior of the sideboard frame using the Allen Key.

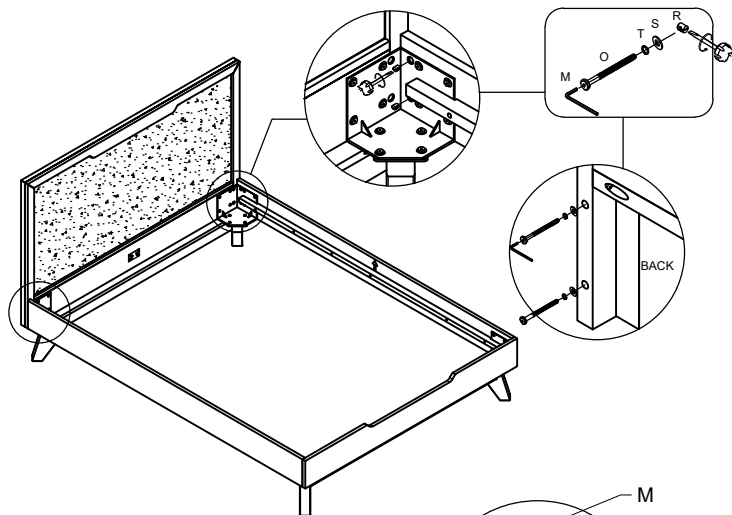


- **Step 16:** Now that we've connected the headboard and footboard with the side rails, we will proceed to reinforce.
- **Step 17:** Using the Allen Key you will screw in the siderail from the inside and outside of the frame using (2 Bolt - M6 x 90mm; 2 Lock Washer - Ø10mm; 2 Washer - Ø16mm) for each bracket. At the same time, you need to place a (Insert Nut - M6 thread) on the inside of the frame where the bolt will lock into. And repeat for another side.
 - i. Repeat Step 16-17 for each bracket connecting on the headboard and side rails frame.

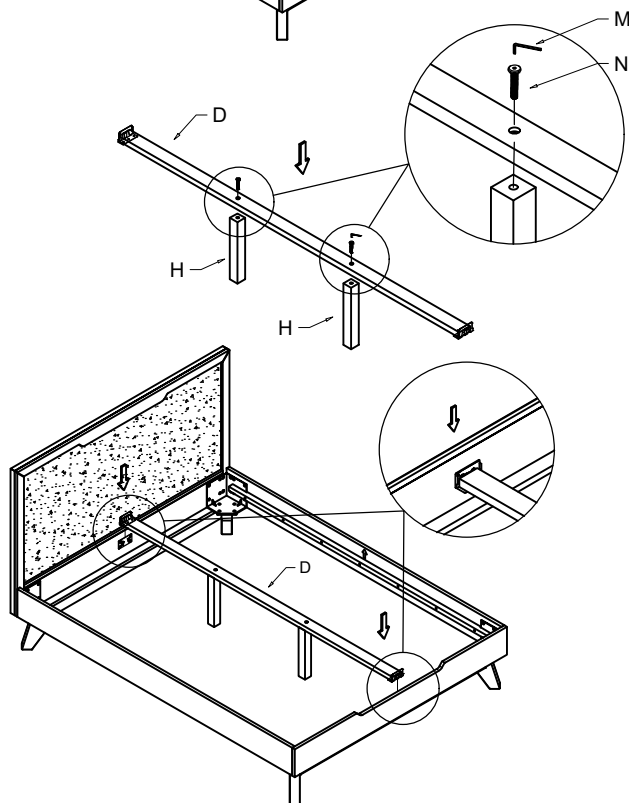

- **Step 18:** Now that we've connected the headboard and footboard and reinforced the frame, we will start to insert the middle support bars.
- **Step 19:** Locate the middle supports bar and 2 middle legs as this will be assembled onto the preassembled frame.
- **Step 20:** Using the Allen Key you will screw in the leg down onto the middle support bar (Bolt - M8 x 40mm) for each leg.
 - i. Repeat Steps 19-20 for each leg.
- **Step 20:** Once assembled, place the preassembled middle support bar on the frame to set evenly equal on both the headboard and footboard.

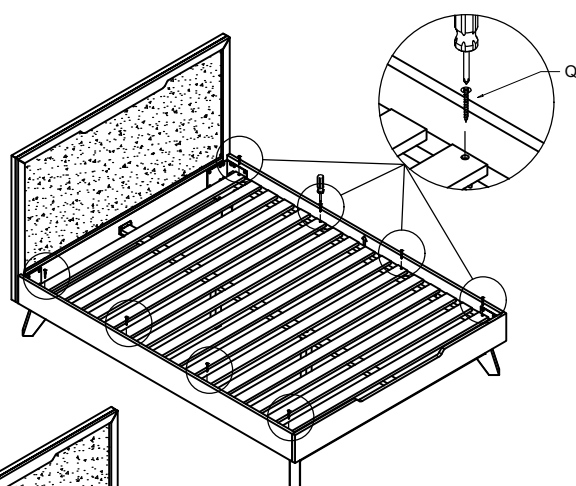

- **Step 21:** Locate the slats as they will be assembled onto the preassembled frame.
- **Step 22:** Using a Phillips Screwdriver you will screw down the slats down onto the side rails (Screw - M4 x 30mm) for every 4 slats.

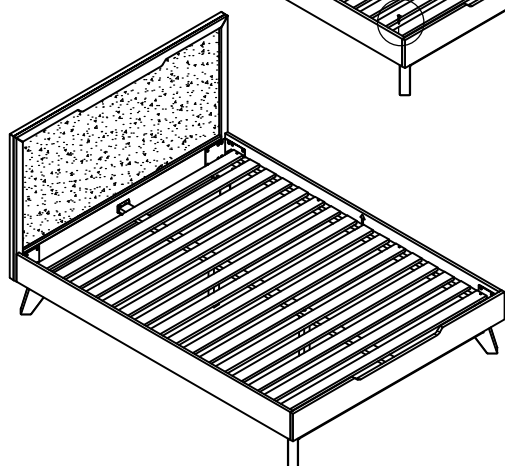

- **Step 23:** Test that the bedframe is firmly on the ground and the bedframe does not wiggle.
- **Step 24:** Enjoy your new bedframe.