

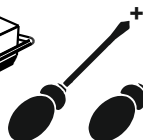
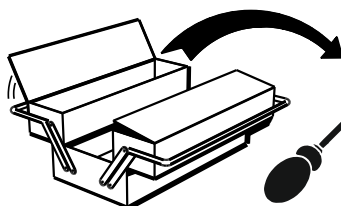
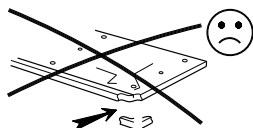
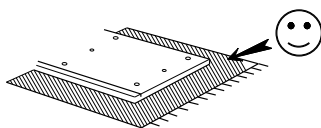
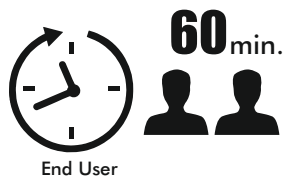


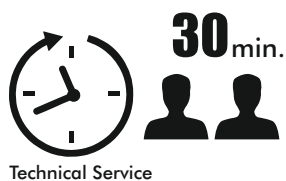

# MULTIMO



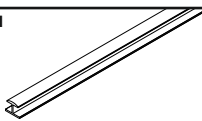














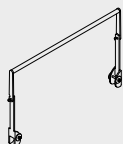



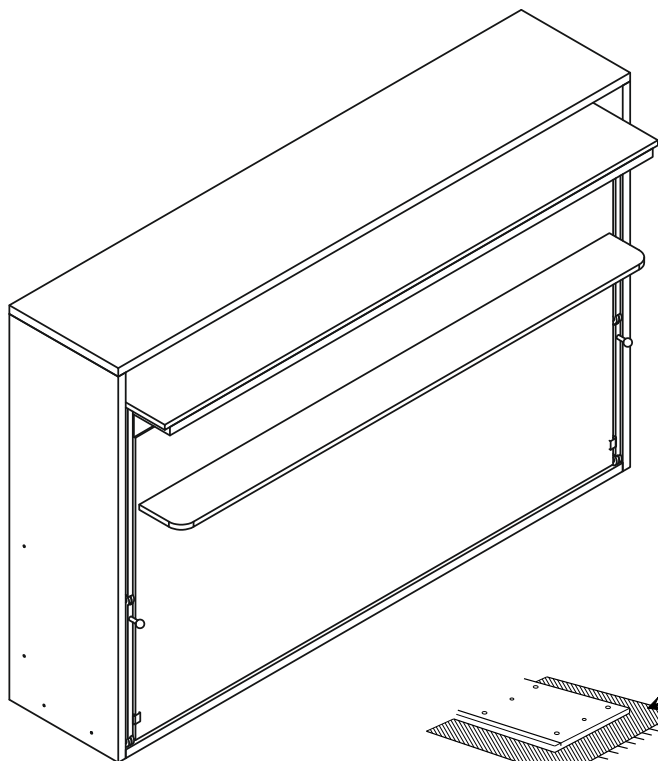


## A 200 GENIO T




Assembly Instructions

Track Title	Piece	(inch)				(mm)			
		Thickness	Length	Width		Piece	Thick	Height	Most
<b>A</b>	1	1,18	81,50	17,32		1	30	2070	440
<b>B</b>	2	1,18	53,15	17,32		2	30	1350	440
<b>C</b>	4	0,31	52,68	19,88		4	8	1338	505
<b>D</b>	1	1,18	79,06	17,32		1	30	2008	440
<b>E</b>	1	0,71	78,43	19,69		1	18	1992	500
<b>F</b>	1	0,71	41,65	76,38		1	18	1058	1940
<b>G</b>	1	0,71	76,97	3,15		1	18	1955	80
<b>H</b>	1	0,71	74,80	6,69		1	18	1900	170

## Accessories List

<b>MNX 02</b>  <b>8/ piece</b> <b>PL - 01 (6x19x2) mm</b>	<b>MNG - 01</b>  <b>8/ piece</b> <b>DSE - 02</b>	<b>H 01</b>  <b>3/ piece</b> <b>VD - 03 ( 3,5x18 ) mm</b>	<b>DD - 01 ( R10 )</b>  <b>3 / piece</b> <b>VD - 01(6X70) mm</b>
 <b>3 / piece</b> <b>KP - 01 ( 224 ) mm</b>	 <b>3 / piece</b> <b>VTB - 01 (4,8x16) mm</b>	 <b>14 / piece</b> <b>VKP - 01 (22) mm</b>	 <b>3 / piece</b> <b>IM - 02 (6x20) mm</b>
 <b>1 / piece</b> <b>IM - 03 (6x40) mm</b>	 <b>10/ piece</b> <b>CT - 03 ( 6x50 ) mm</b>	 <b>2 / piece</b> <b>TTC 01</b>	 <b>4 / piece</b> <b>VDA - 01 ( 6,5x50 ) mm</b>
 <b>4 / piece</b> <b>VD - 02 (3,5x25) mm</b>	 <b>8 / piece</b> <b>KOR 01</b>	 <b>4 / piece</b> <b>KLF 01 (fabric cover)</b>	 <b>6 / piece</b> <b>KVL 01</b>
 <b>8 / piece</b> <b>AL - 02</b>	 <b>1 / piece</b> <b>AL - 01</b>	 <b>1 / piece</b> <b>TAP - 01</b>	 <b>8/ piece</b> <b>ADP - 01</b>
 <b>5</b>	 <b>4</b>	 <b>8 / piece</b>	 <b>1 / piece</b>

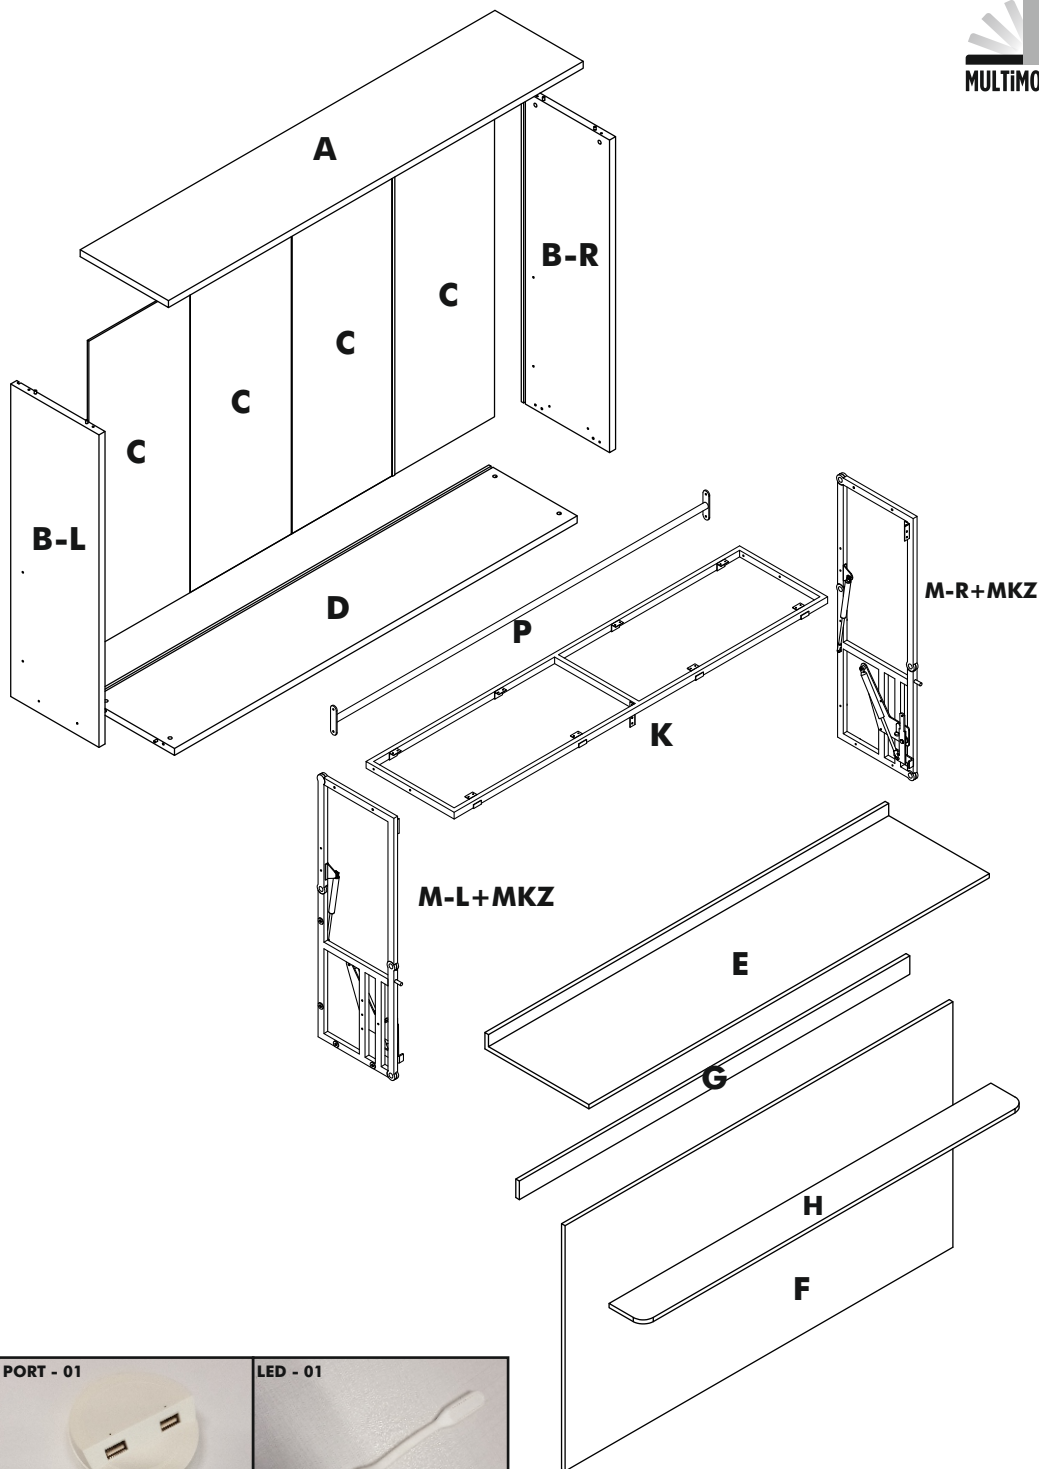

**PORT - 01**



1 / piece

**LED - 01**




1 / piece


## STEP 1




MNX - 02




KVL 01

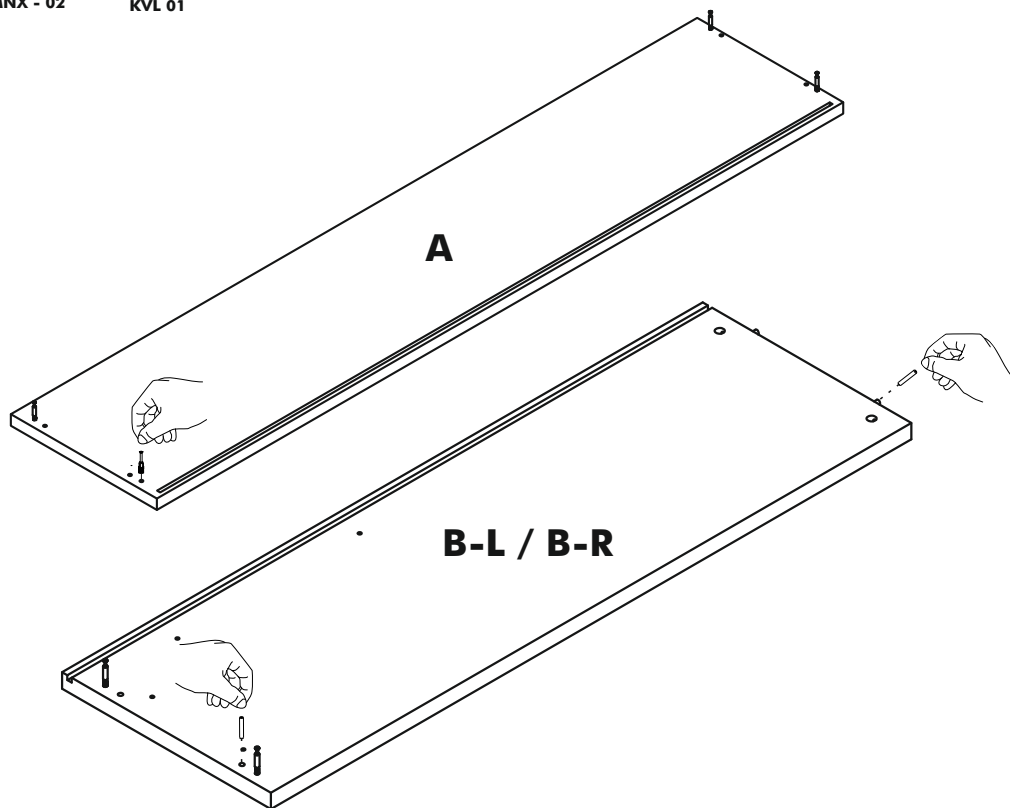


## STEP 2

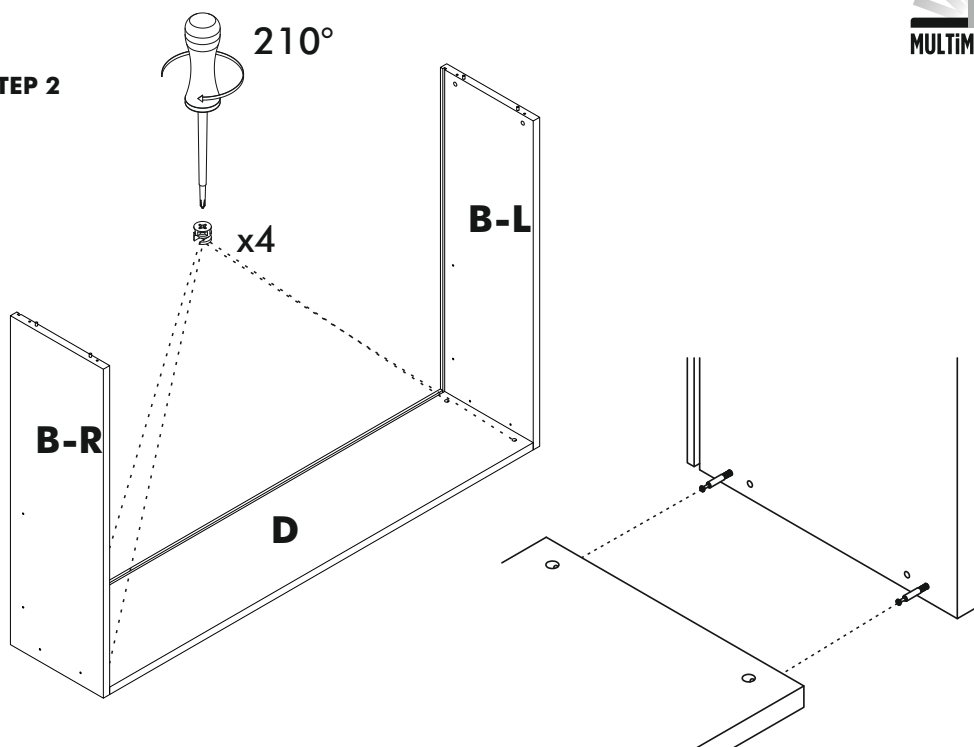


## STEP 3

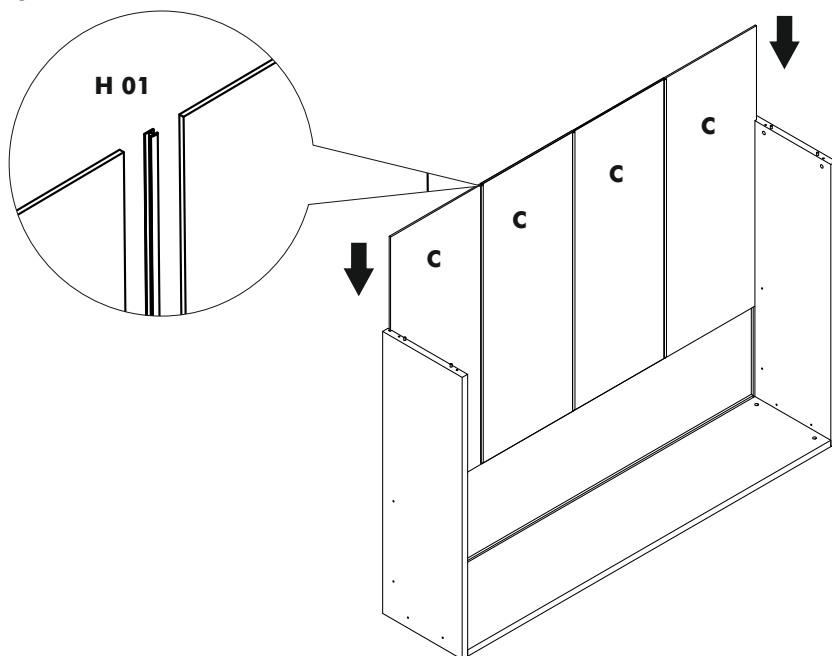


**STEP 4**

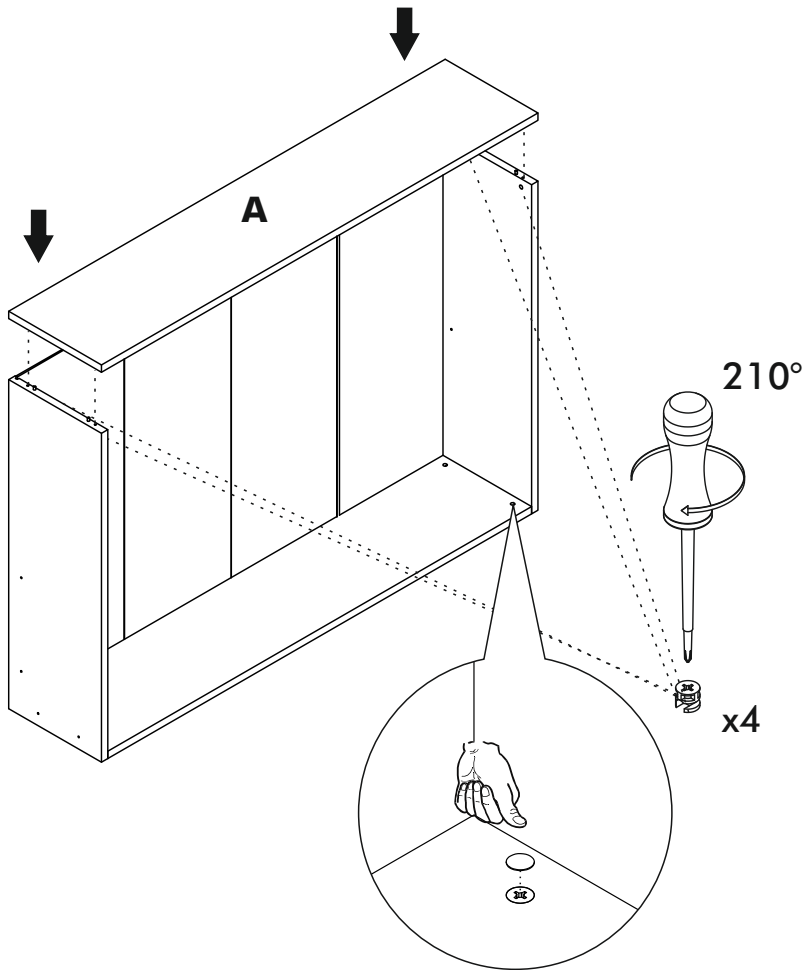


# STEP 5

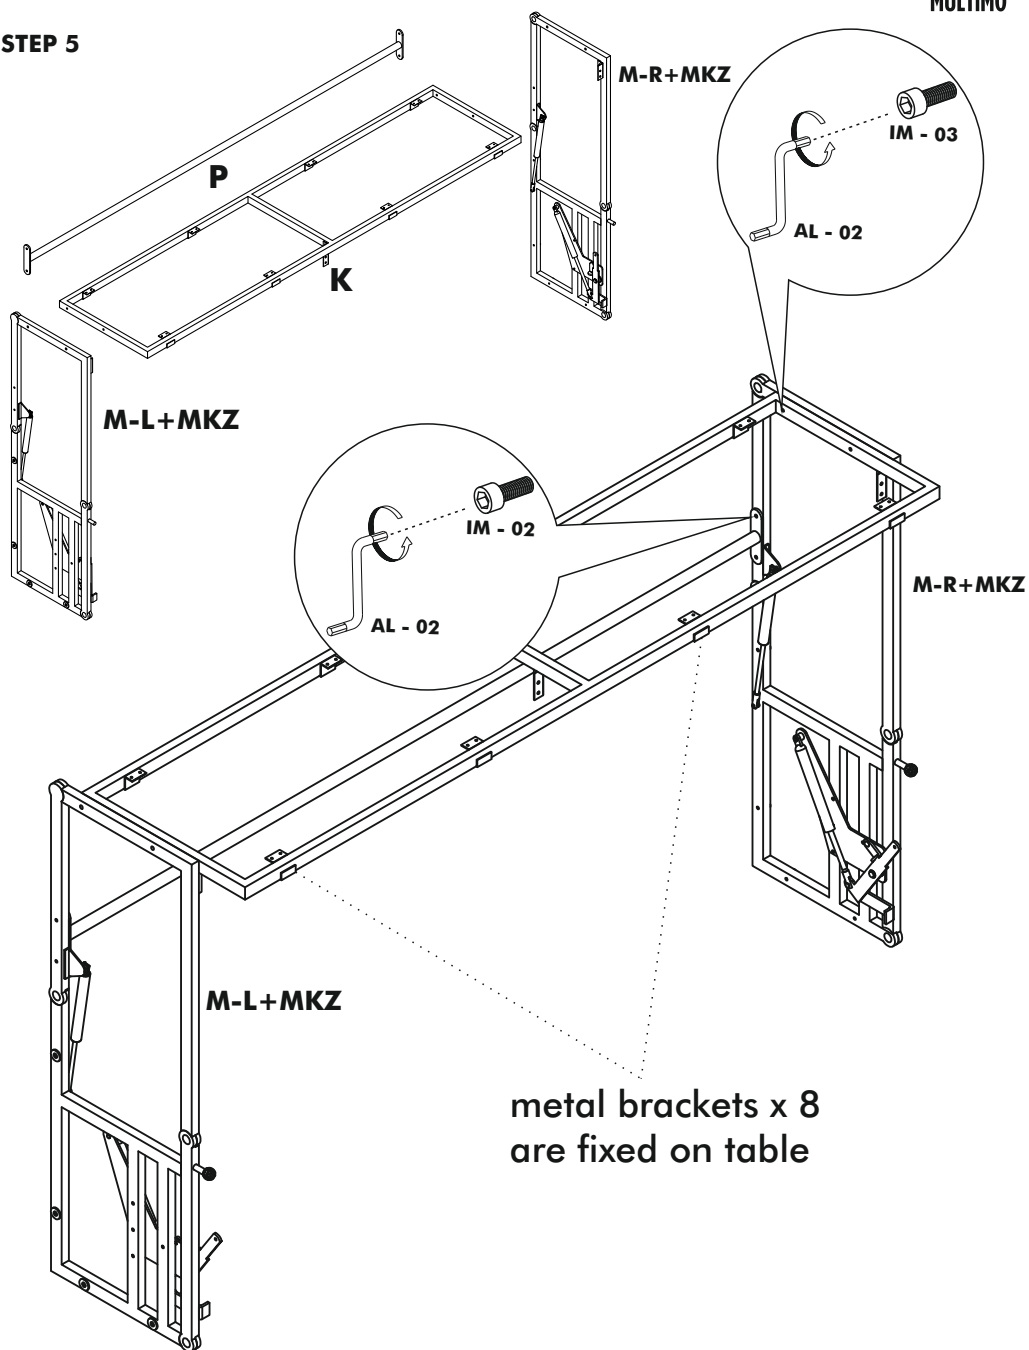

## STEP 6


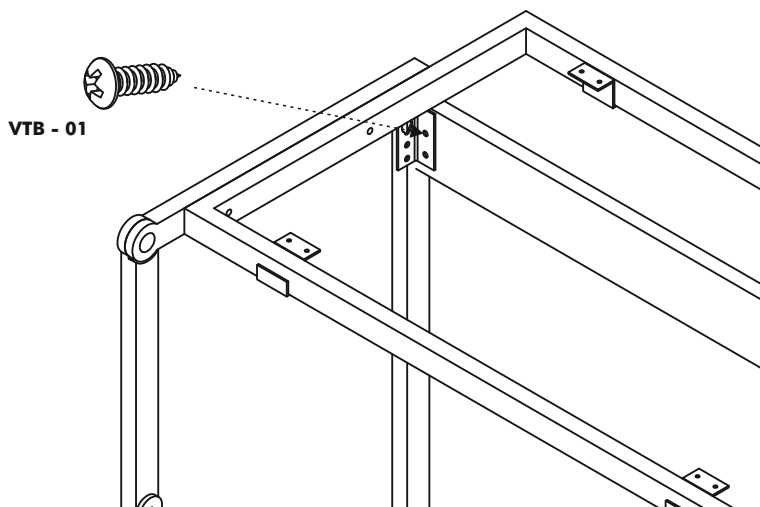


## STEP 7

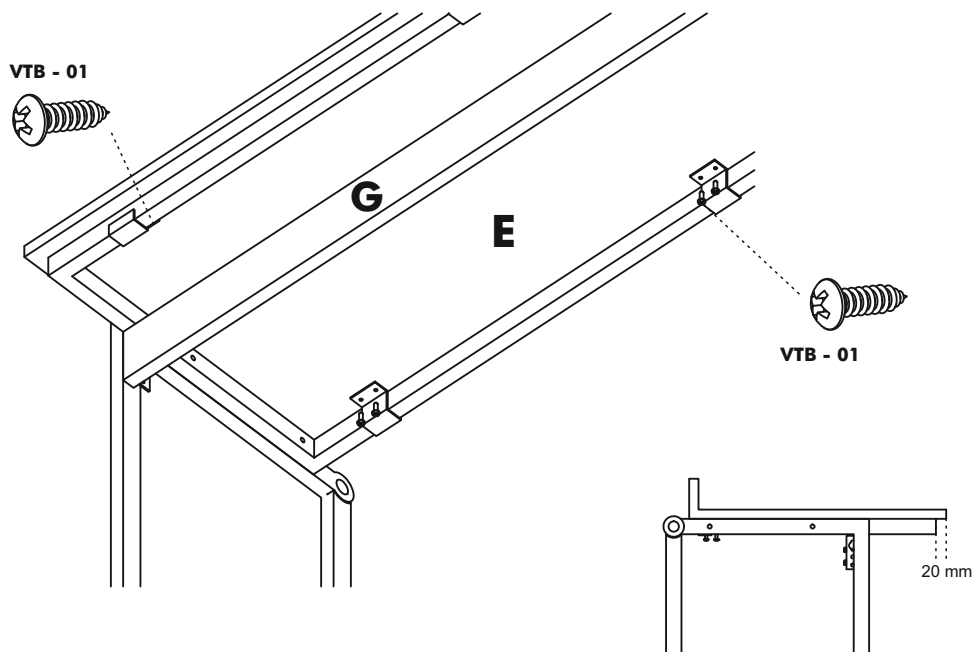




## STEP 8

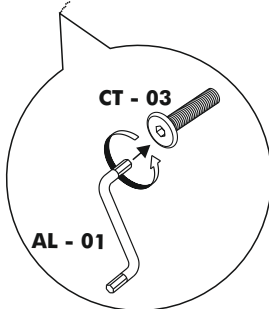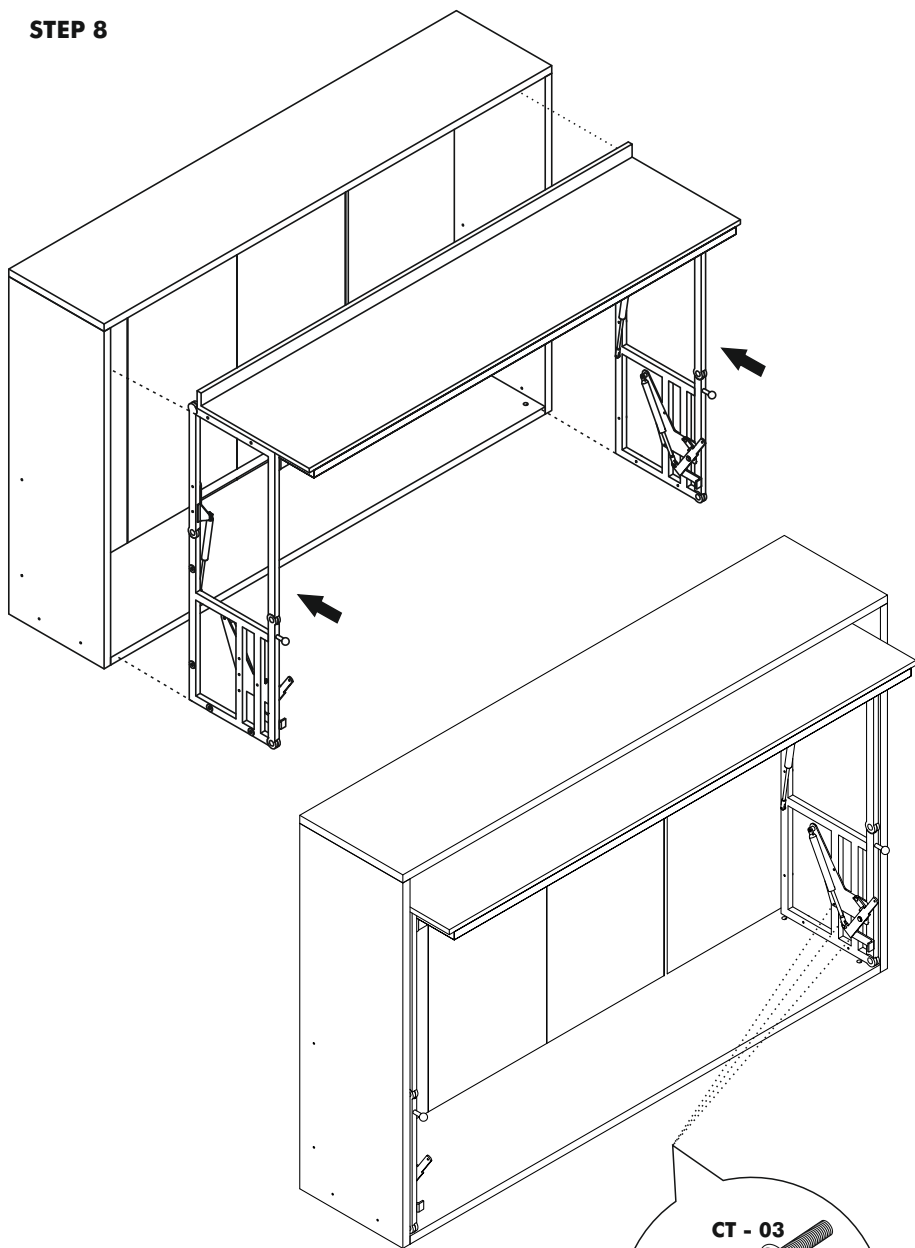


# STEP 9

DD - 01


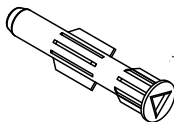


Ø 10 mm / 0,254 inch

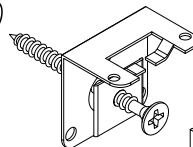


VD - 01


DSE - 02

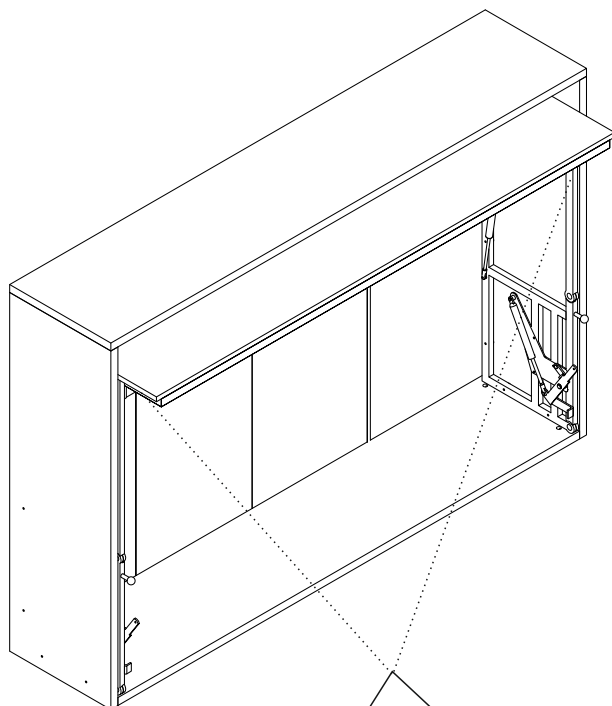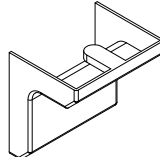


VD - 03

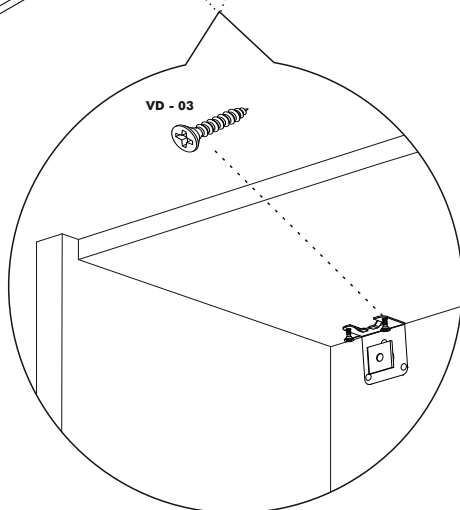


## STEP 9-2

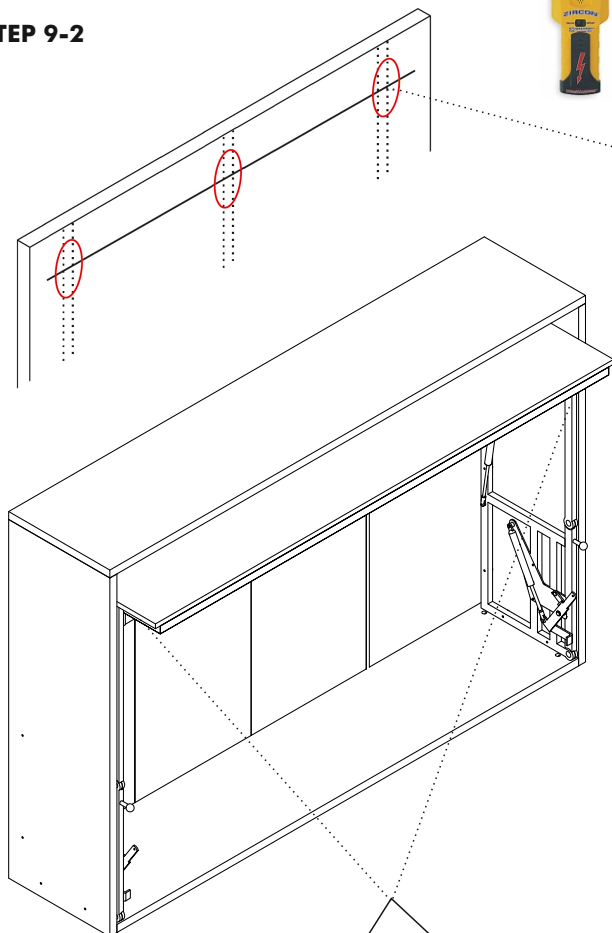

Ø 10 mm / 0,254 inch

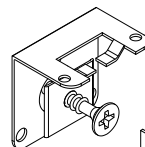


VD - 01

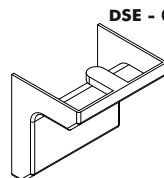

DSE - 02

FIRST LOCATE THE STUDS BY USING "STUD FINDER" IN THE WALL AND DRILL IT ACCORDING TO THE HEIGHT MEASUREMENTS GIVEN ON THE SIDE.

UPPER HOLES SHOULD BE DRILLED FOR ATTACHING BED AT NEXT STEP.

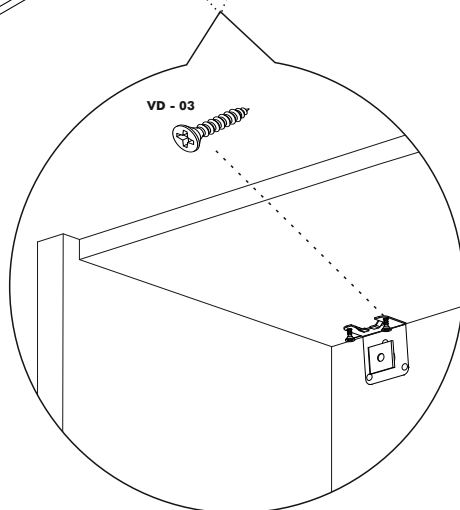


VD - 03



SUPPLY DRYWALL FASTENERS APPROPRIATE TO YOUR WALL TYPE. WE RECOMMEND USING STEEL TOGGLE BOLT ANCHOR THAT SHOWN BELOW




STEP 10

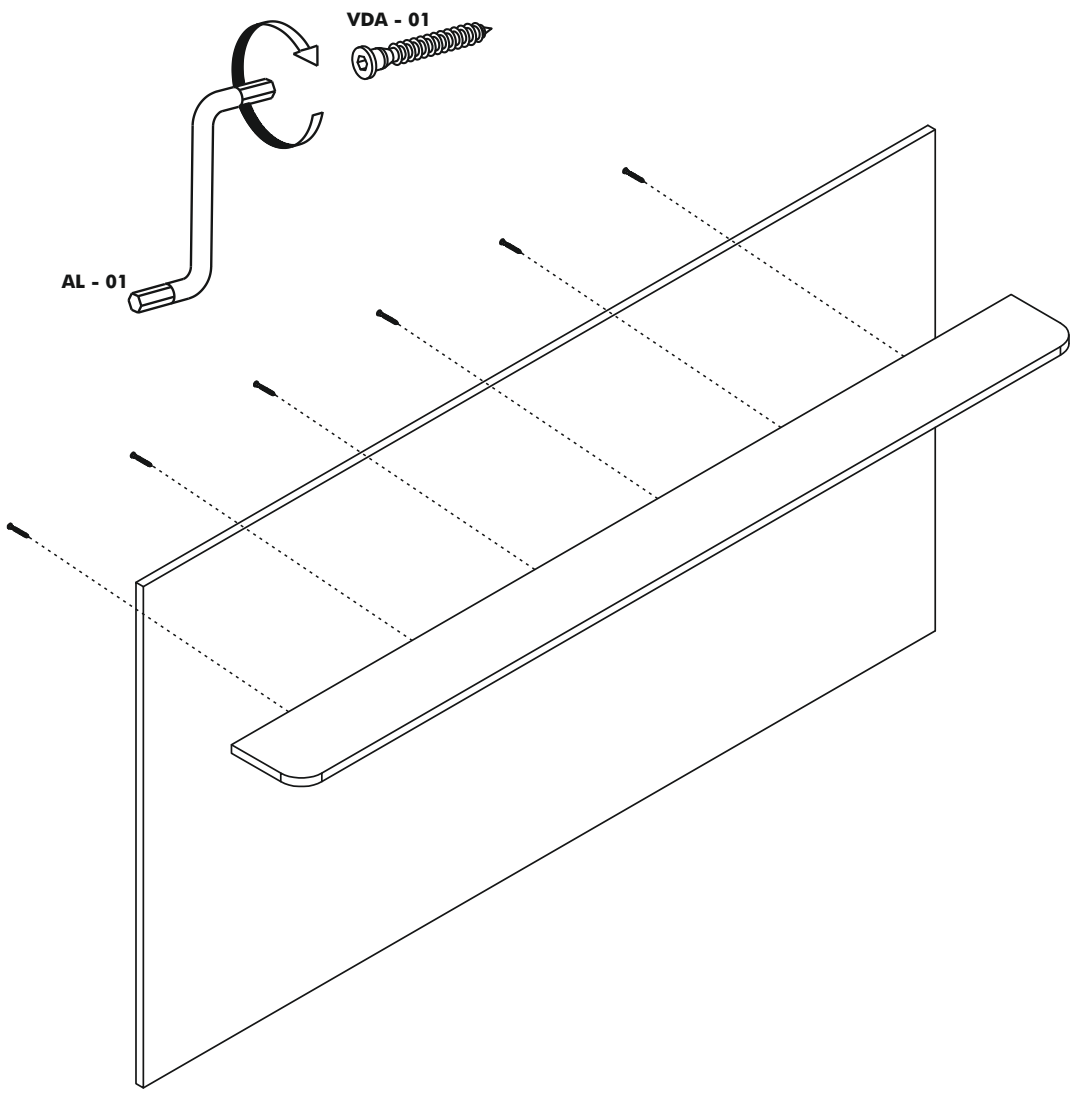




## STEP 11

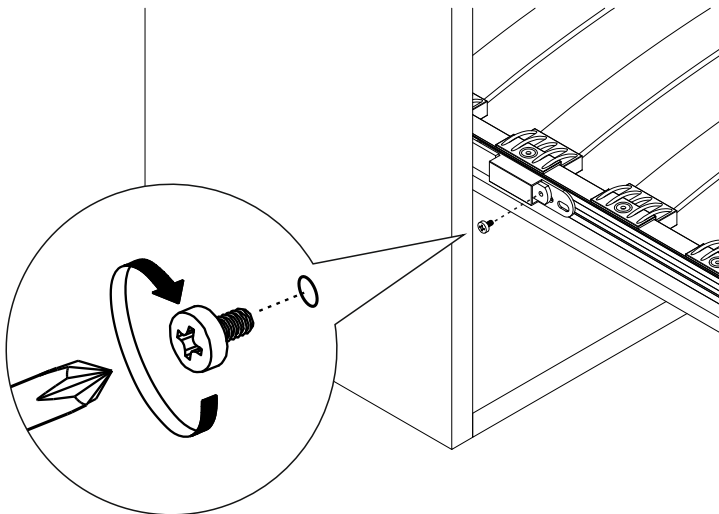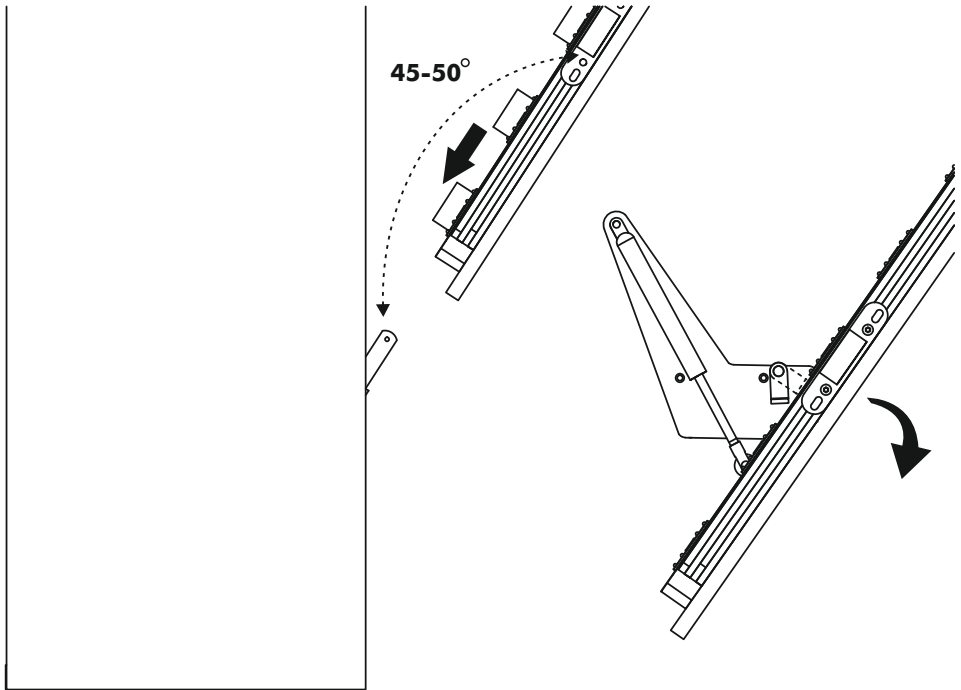



**STEP 12**

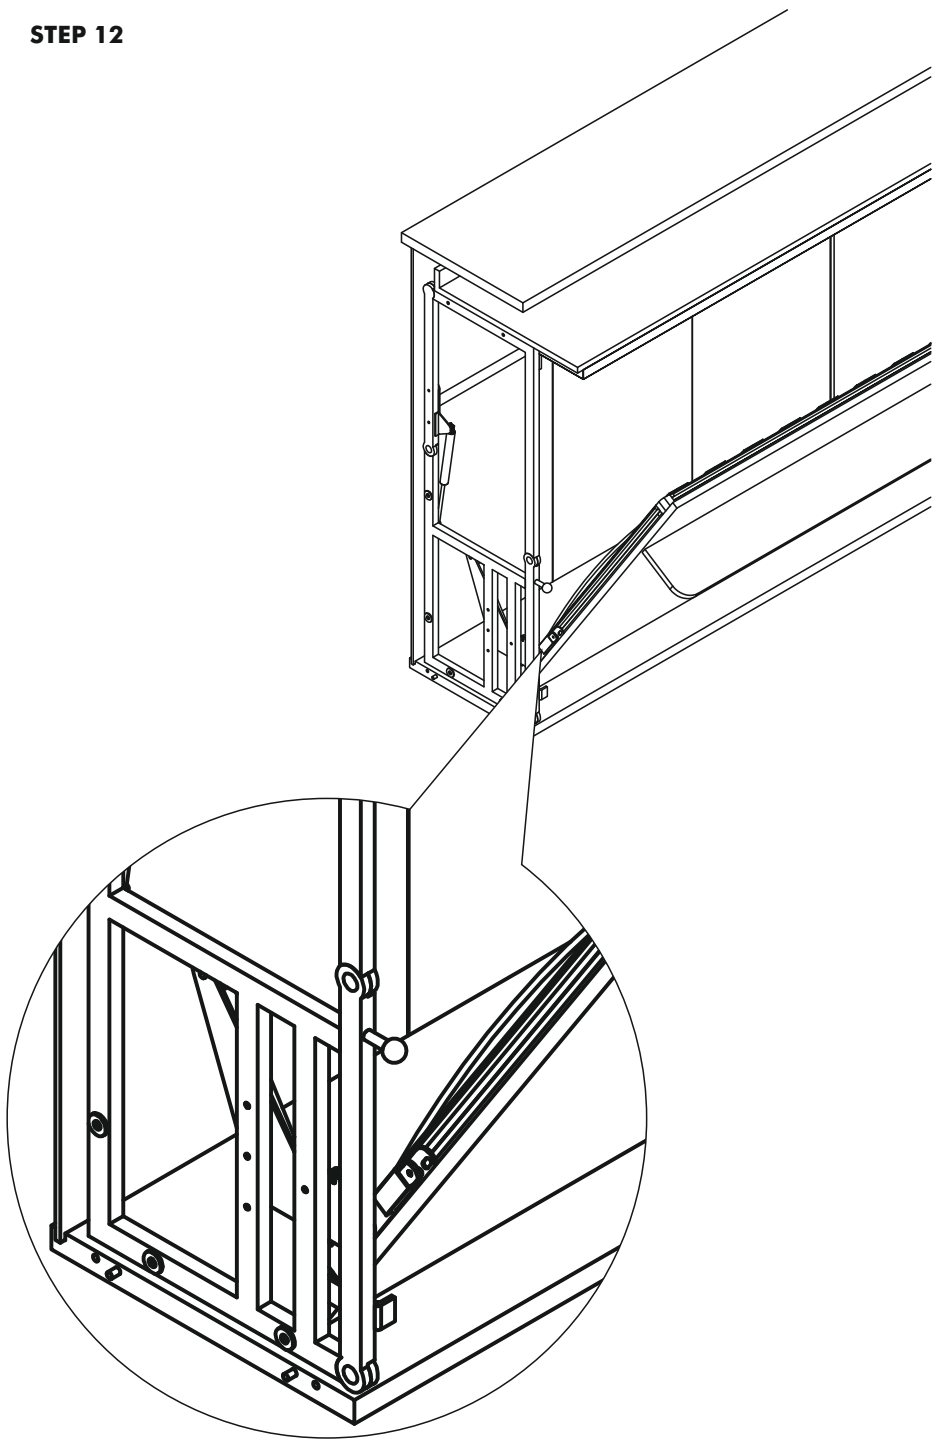

## STEP 13

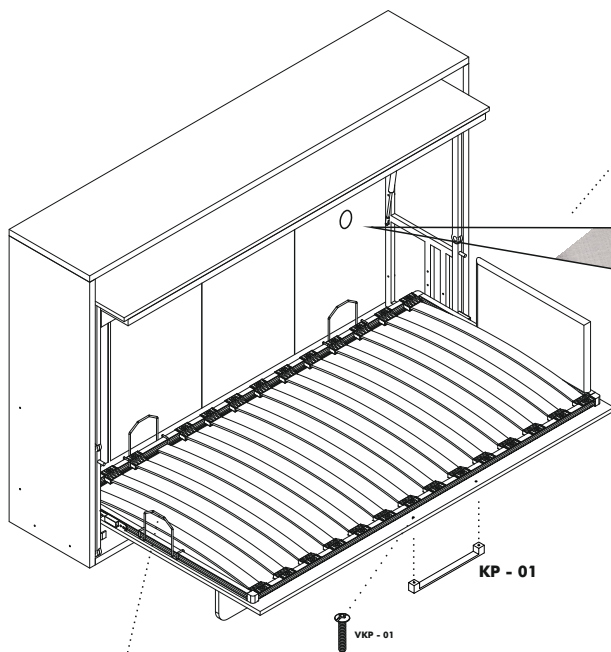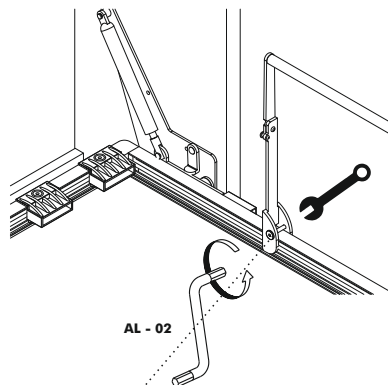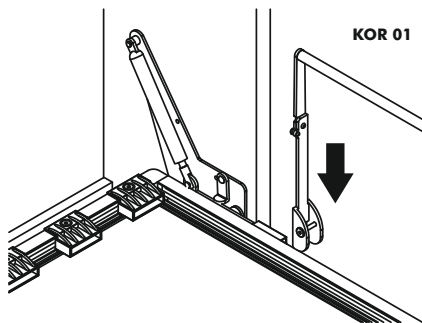

**CAUTION**  
BE SURE THE HEADBOARD IS IN  
CLOSED POSITION  
WHEN BED BOX IS CLOSED

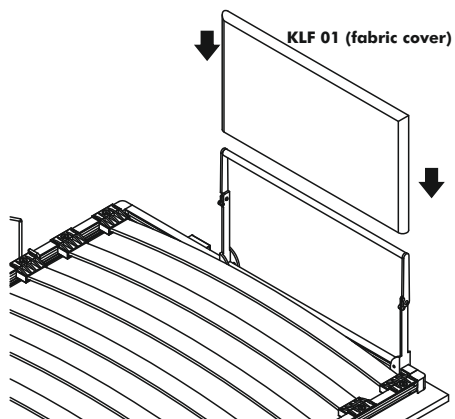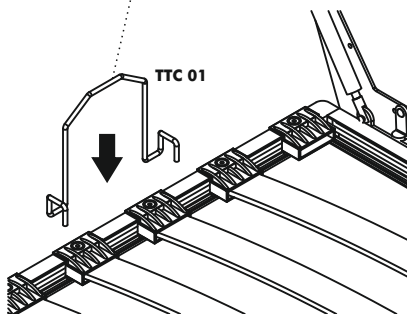

## ATTENTION / HOW TO / READ ME / OWNER'S GUIDE

1. When mounting on a regular drywall, furniture must be fastened to wood or metal studs. Solid walls made of brick, concrete or similar strong material are also acceptable. Do not mount furniture to paper-mache or sheet rock like material without properly attaching to stud.
2. For safety and product longevity you must periodically inspect the mounting and mechanical connections for integrity and tightness. Confirm hardware remains properly affixed and connections snug.
3. Wall Bed mattress thickness may not exceed 8 inch. Take care to remove pillows and excess blankets before closing. Doing so keeps mechanism free of obstruction and unnecessary stress.
4. Do not lean or rest heavy objects on side or top of furniture. This may cause balance issues and compromise the integrity of your mounting connections.
5. Please use the furniture's beds, desks and shelving as intended. Not designed to be sat, stood, leaned, jumped (etc) on. Improper use may cause personal injury and damage to property.
6. With seasonal humidity change you must inspect interior and exterior of furniture.
7. Single, Twin, Twin XL beds accommodate the weight of one person. Improperly sleeping more than one person risks injury to person and damage to property.
8. Before any un-mounting or disassembly please contact Multimo for technical support and instruction. Failure to properly detach risks injury to person and damage to property.
9. For Bunk Beds:
  - a. Always use provided ladder when accessing top bunk.
  - b. Be slow, careful and aware of surroundings when opening top bunk.
  - c. Do not horseplay. Beds are to be slept on only.
  - d. Some have legs that fully extend when open- be aware of where the leg is and will be.





**MULTiMO**

[www.multimobeds.com](http://www.multimobeds.com)