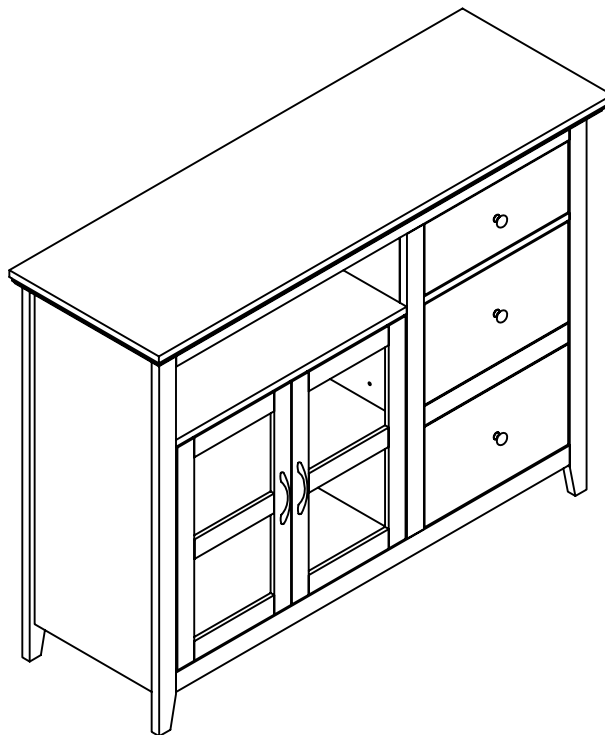


CONVENIENCE CONCEPTS

Highlander TV Stand

Item No. 8063080ES



ASSEMBLY INSTRUCTIONS

We have designed our furniture with you, the customer in mind . Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.



Please do not return to the store

Broken or Missing Parts?


















Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at














parts@convenience-concepts.com

Special Note: We recommend the use of hand held screwdriver to avoid the stripping of screw heads.






HARDWARE LIST

CODE	NAME	FIGURE	Q'TY
A	CAM LOCK		20PCS
B	CAM BOLT		20PCS
C	WOOD DOWEL		24PCS
D	THIN WOOD DOWEL		8PCS
E	KNOB		3PCS
F	HANDLE		2PCS
G	KNOB SCREW		7PCS
H	WOOD SCREW		8PCS
I	HINGE		6PCS
J	FLAT HEAD SCREW		24PCS
K	WIRE CAP		1PC
L	DRAWER SCREW		2PCS
M	ROUND HEAD SCREW		20PCS
N	SHELF PIN		4PCS
O	WOOD GLUE		1PC
P	ALLEN WRENCH		1PC
Q	COLOR STICK		1PC

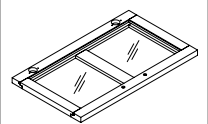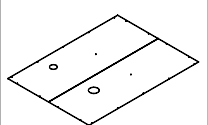
PARTS LIST

CODE	NAME	FIGURE	Q'TY
⑥	MIDDLE DIVIDER PANEL		1PC
⑦	SHELF		1PC
⑧	FRONT CROSSBAR		1PC
⑨	CROSS BRACE		1PC
⑩	FRONT DRAWER PANEL		1PC
⑪	LEFT DRAWER PANEL		1PC
⑫	RIGHT DRAWER PANEL		1PC
⑬	BACK DRAWER PANEL		1PC
⑭	BOTTOM DRAWER PANEL		1PC
⑮	RIGHT SIDE DOOR		1PC
⑯	LEFT SIDE DOOR		2PCS
⑰	BACK PANEL		1PC
⑱	FOOT		1PC

PARTS LIST

CODE	NAME	FIGURE	Q'TY
①	TOP PANEL		1PC
②	BOTTOM PANEL		1PC
③	LEFT SIDE PANEL		1PC
④	RIGHT SIDE PANEL		1PC
⑤	HORIZONTAL DIVIDER PANEL		1PC

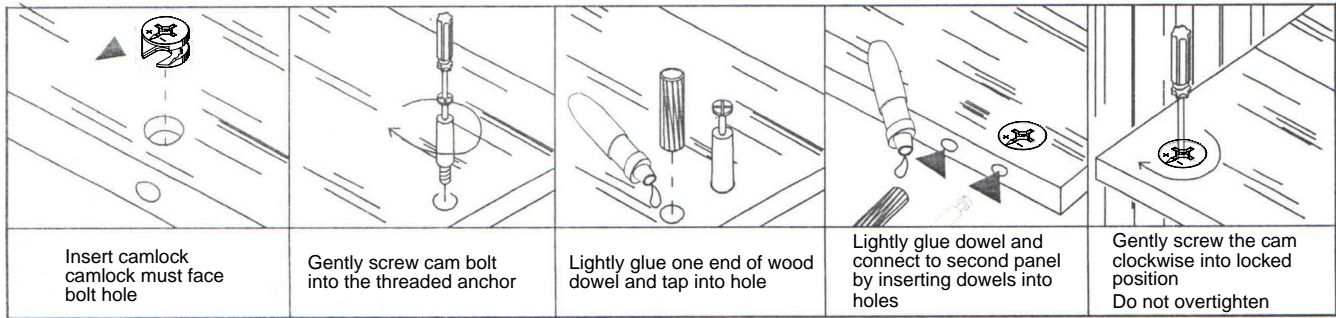Assembling the unit with camlocks and wood dowels.




STEP 1

A x 2PCS

B x 2PCS

C x 2PCS

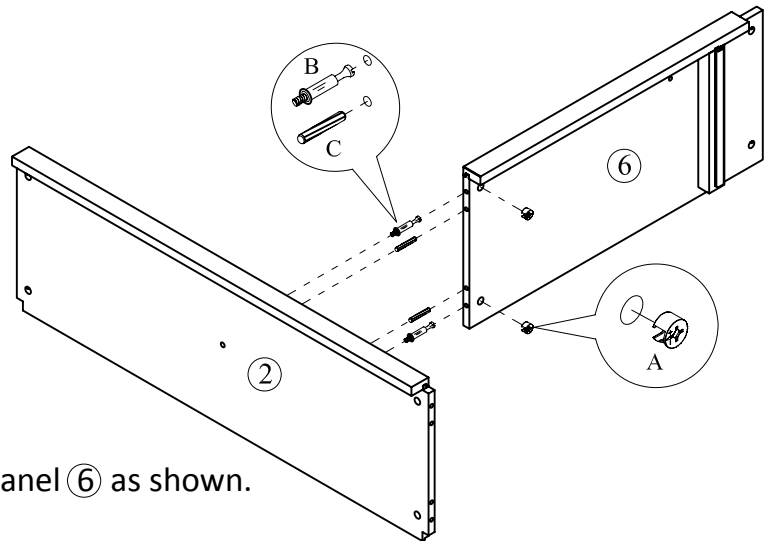1. Screw Cam bolts (B) and insert Dowels (C) into Bottom Panel ②.
2. Insert Cam locks (A) into Vertical divider panel ⑥.
3. Connect Bottom Panel ② to Middle divider panel ⑥ as shown.
Gently tighten Cam locks.




STEP 2

A x 7PCS

B x 7PCS


C x 8PCS

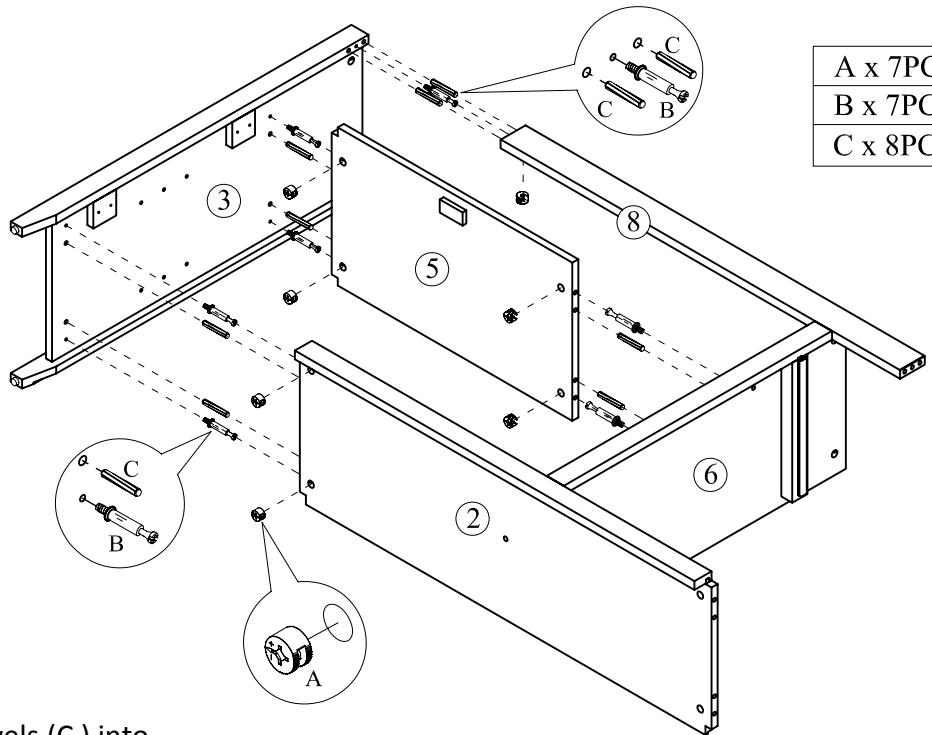1. Screw Cam bolts (B) and insert Dowels (C) into Middle divider Panel ⑥.
2. Insert Cam Locks (A) into Horizontal divider Panel ⑤ and Bottom Panel ②.
3. Connect Horizontal divider panel ⑤ to assembly as shown and gently tighten Cam locks (A).
4. Screw Cam Bolts (B) and insert Dowels (C) into Left side Panel ③ as shown.
5. Connect Left Side Panel ③ to assembly and gently tighten Cam locks (A).
6. Insert Cam locks (A) into Front crossbar ⑧ and connect to assembly. Gently tighten Cam locks (A).



STEP 3

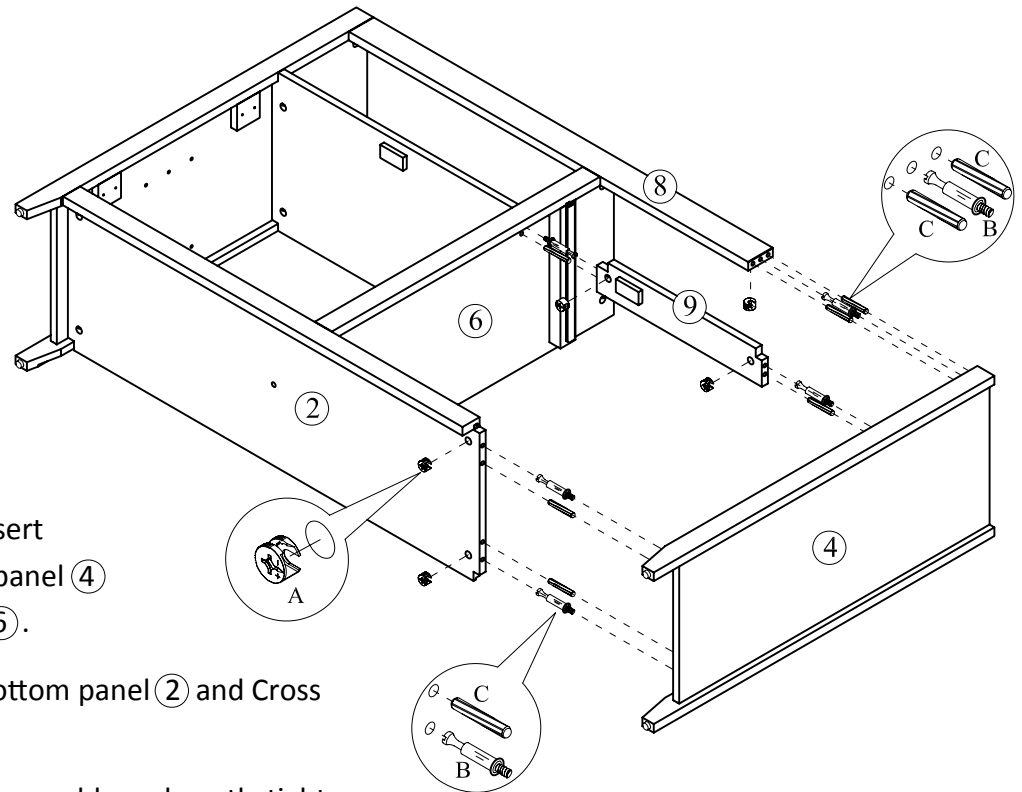
A x 5PCS
B x 5PCS
C x 6PCS



1. Screw Cam bolts (B) and insert Dowels (C) into Right side panel (4) and Middle divider panel (6).
2. Insert Cam locks (A) into Bottom panel (2) and Cross brace (9).
3. Connect Cross brace (9) to assembly and gently tighten cam locks.
4. Insert Cam lock (A) into Front crossbar (8). Connect Right side panel (4) to assembly and gently tighten Cam Locks (A).

STEP 4

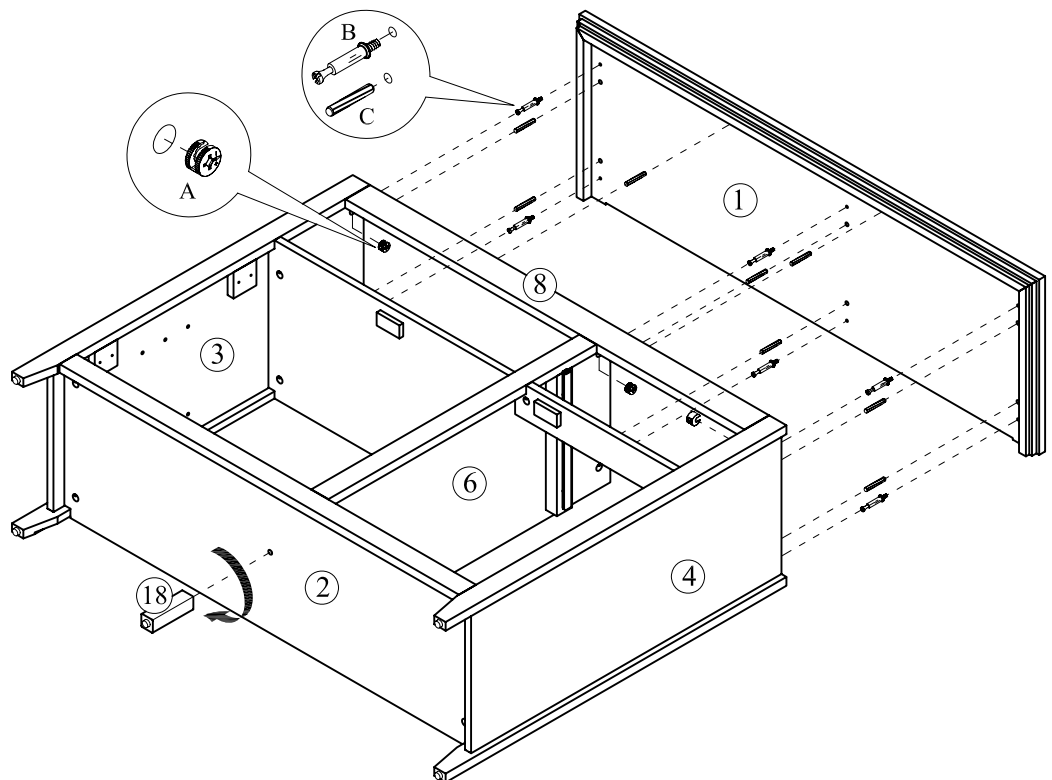
A x 6PCS
B x 6PCS
C x 8PCS



1. Screw Cam bolts (B) and insert Dowels (C) into Top panel (1).
2. Insert Cam locks (A) into assembly as shown.
3. Connect Top panel (1) to assembly and gently tighten Cam Locks (A).
4. Screw Foot (18) into Bottom Panel (2).

STEP 5

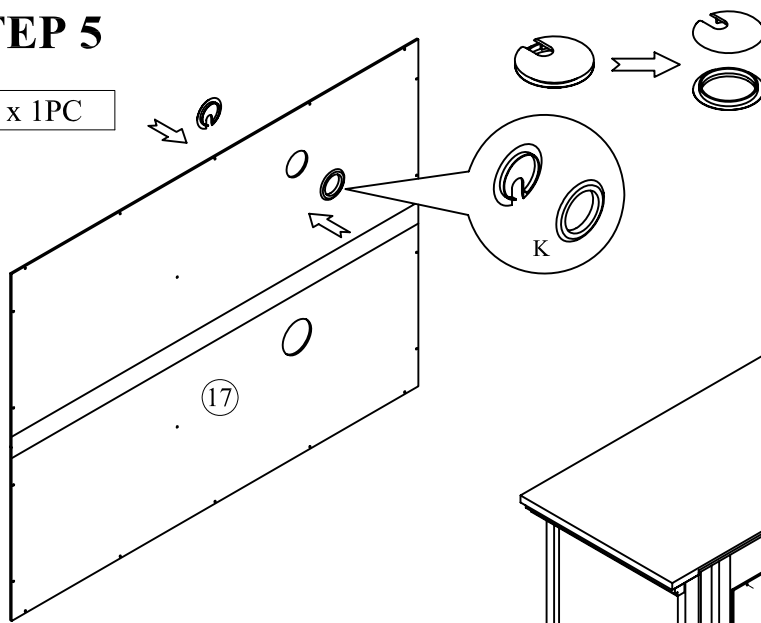
K x 1PC



1. Connect Wire Cap (K) to Back Panel (17) .

STEP 6

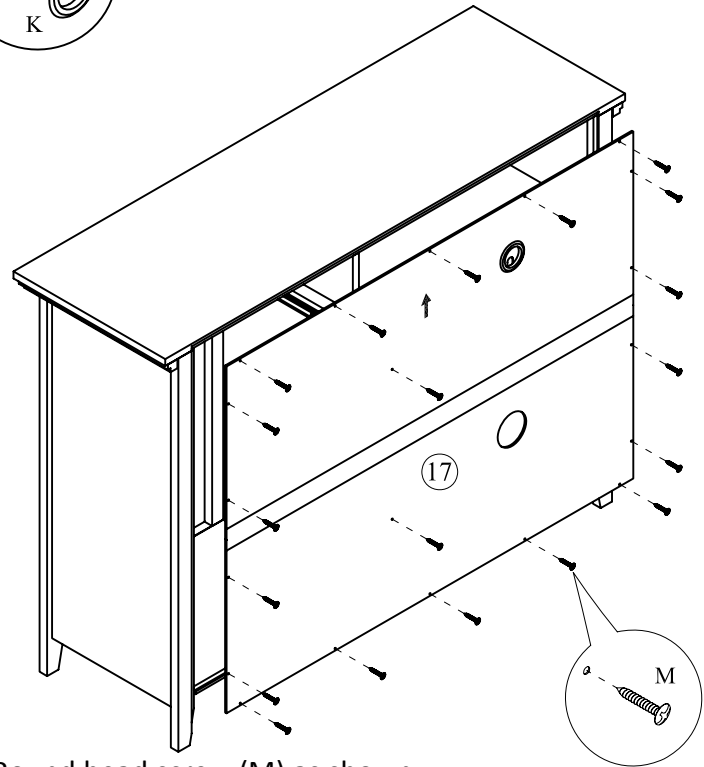M x 20PCS




1. Attach Back panel (17) to assembly using Round head screw (M) as shown.


STEP 7

I x 6PCS

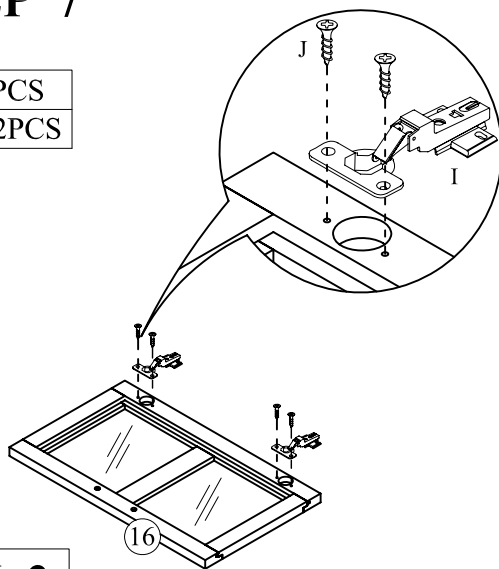J x 12PCS




X 2

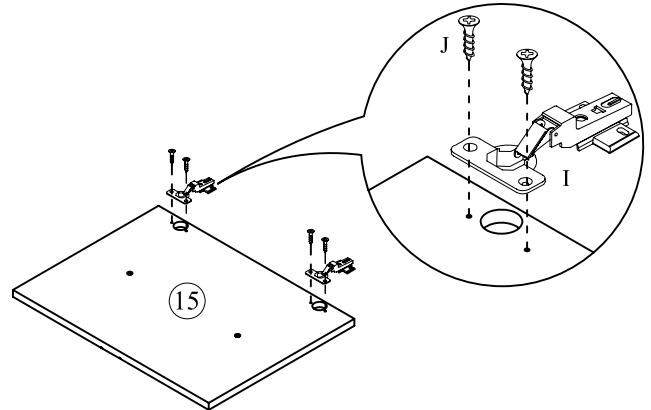

1. Attach Hinges (I) to Right side door (15) and both Left side doors (16) using Flathead screws (J) as shown.

STEP 8

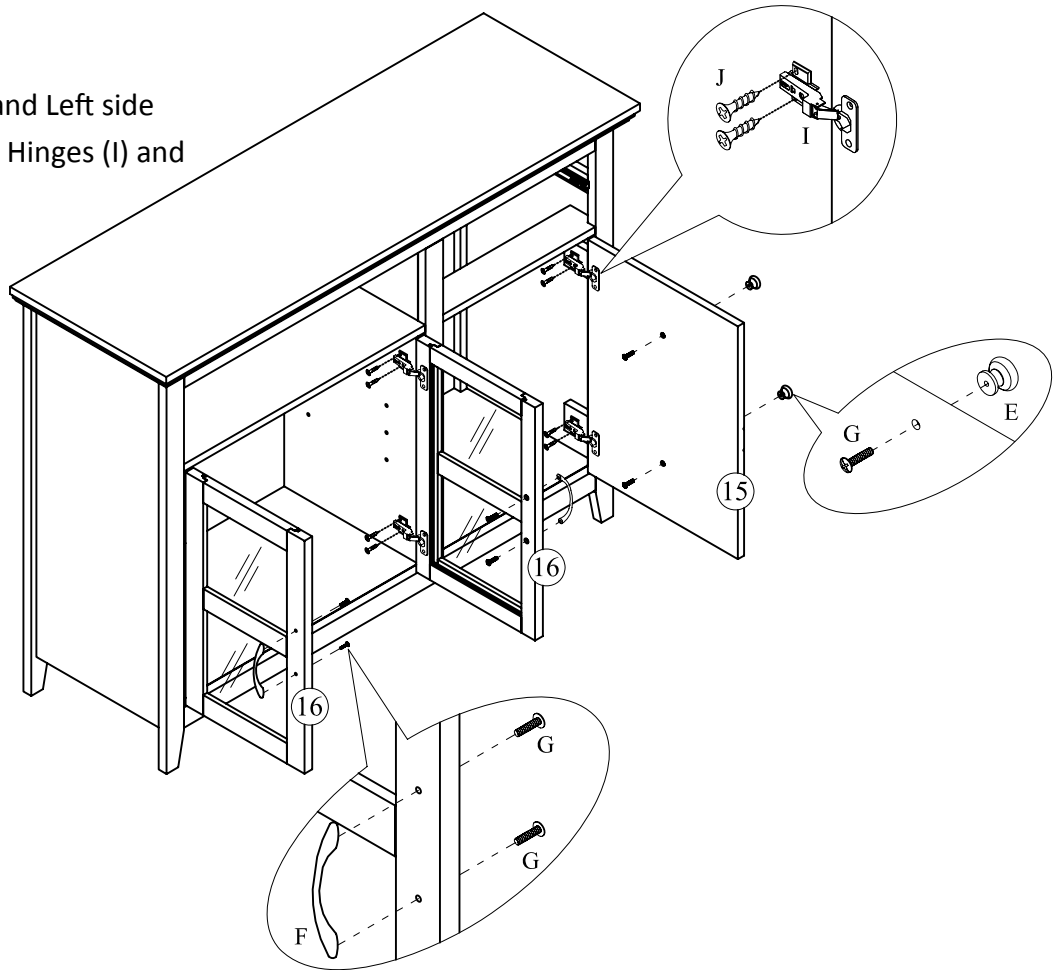1. Attach Right side Door (15) and Left side doors (16) to assembly using Hinges (I) and Flathead screws (J).
2. Attach Handles (F) to both Left side doors (16) using Knob screw (G)
3. Attach Knobs (E) to Right side door (15) using Knob screw (G).




E x 2PCS
F x 2PCS
G x 6PCS
J x 12PCS


STEP 9

N x 4PCS

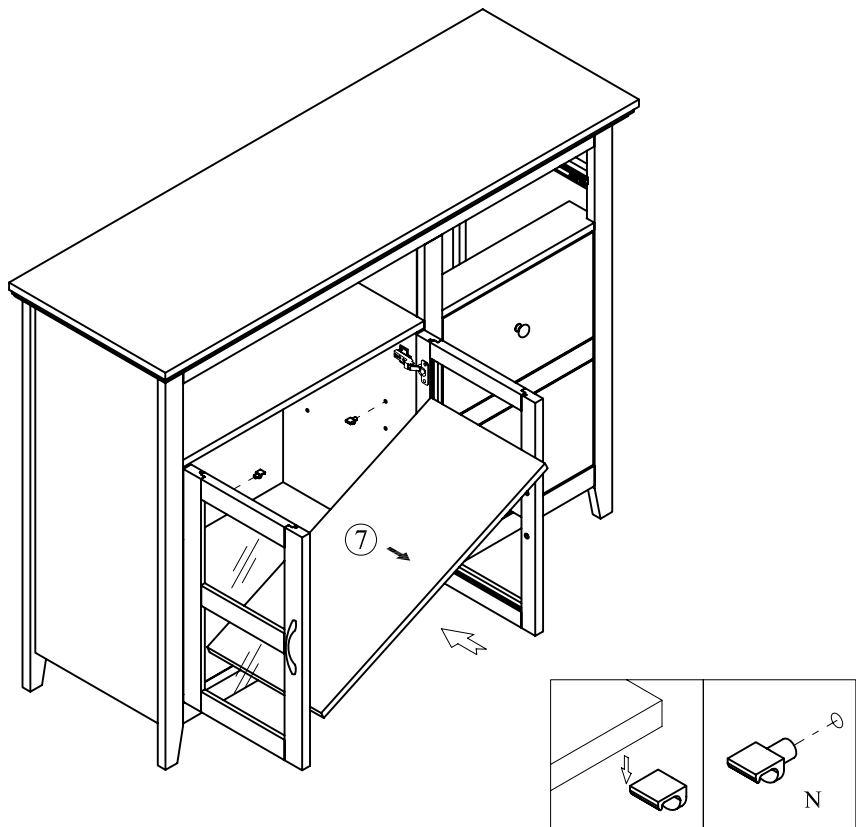1. Insert Shelf pins (N) into desired position in unit.
2. Using a slight angle, carefully place Shelf (7) onto pins as shown.



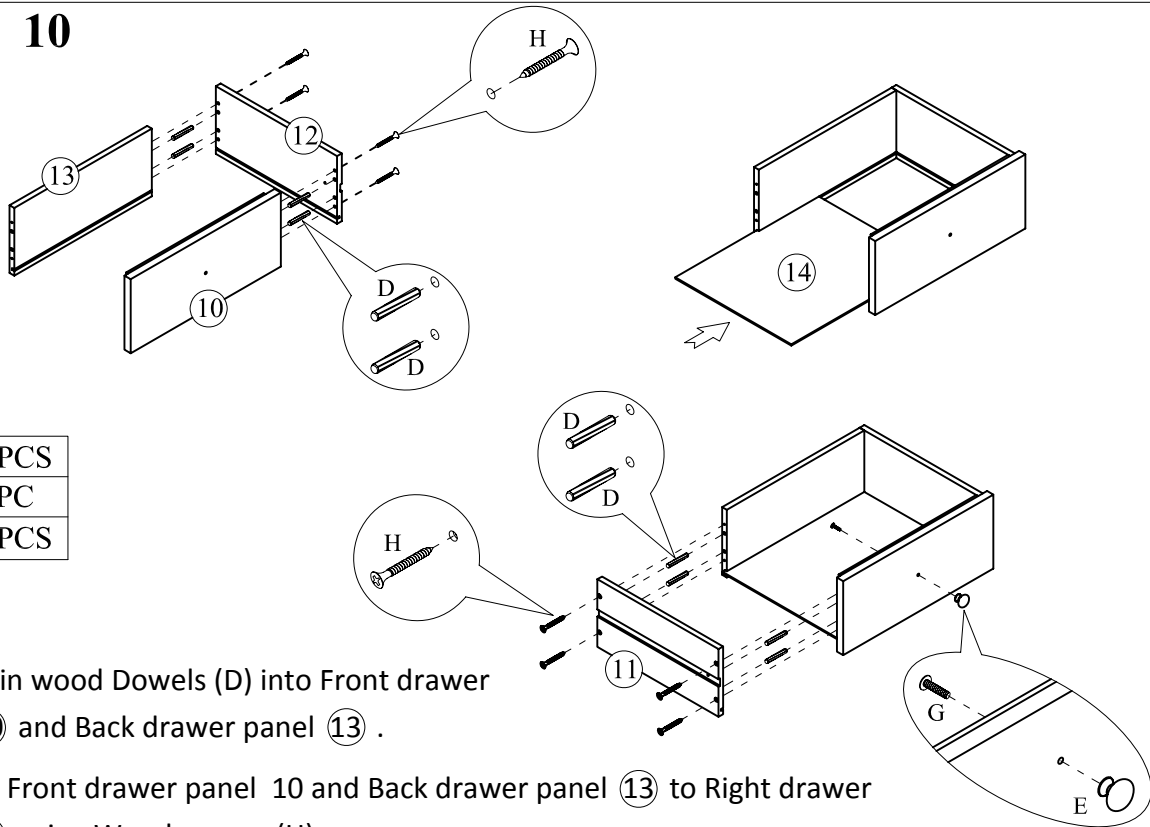STEP 10



1. Insert Thin wood Dowels (D) into Front drawer panel ⑩ and Back drawer panel ⑬ .
2. Connect Front drawer panel 10 and Back drawer panel ⑬ to Right drawer panel ⑫ using Wood screws (H).
3. Insert Bottom drawer panel ⑭ into grooves of panels ⑩ , ⑫ , and ⑬ .
4. Insert Thin wood dowels (D) into Left drawer panel 11 and attach to drawer assembly using Wood screws (H). Attach Knob (E) to Drawer front panel ⑩ using Knob screw (G).

STEP 11

L x 2PCS

1. Screw in Drawer screws (L) into inside of drawer.
2. Insert drawer into unit.
3. Enjoy.

