



ASSEMBLY INSTRUCTIONS

ITEM CODE: WF310132

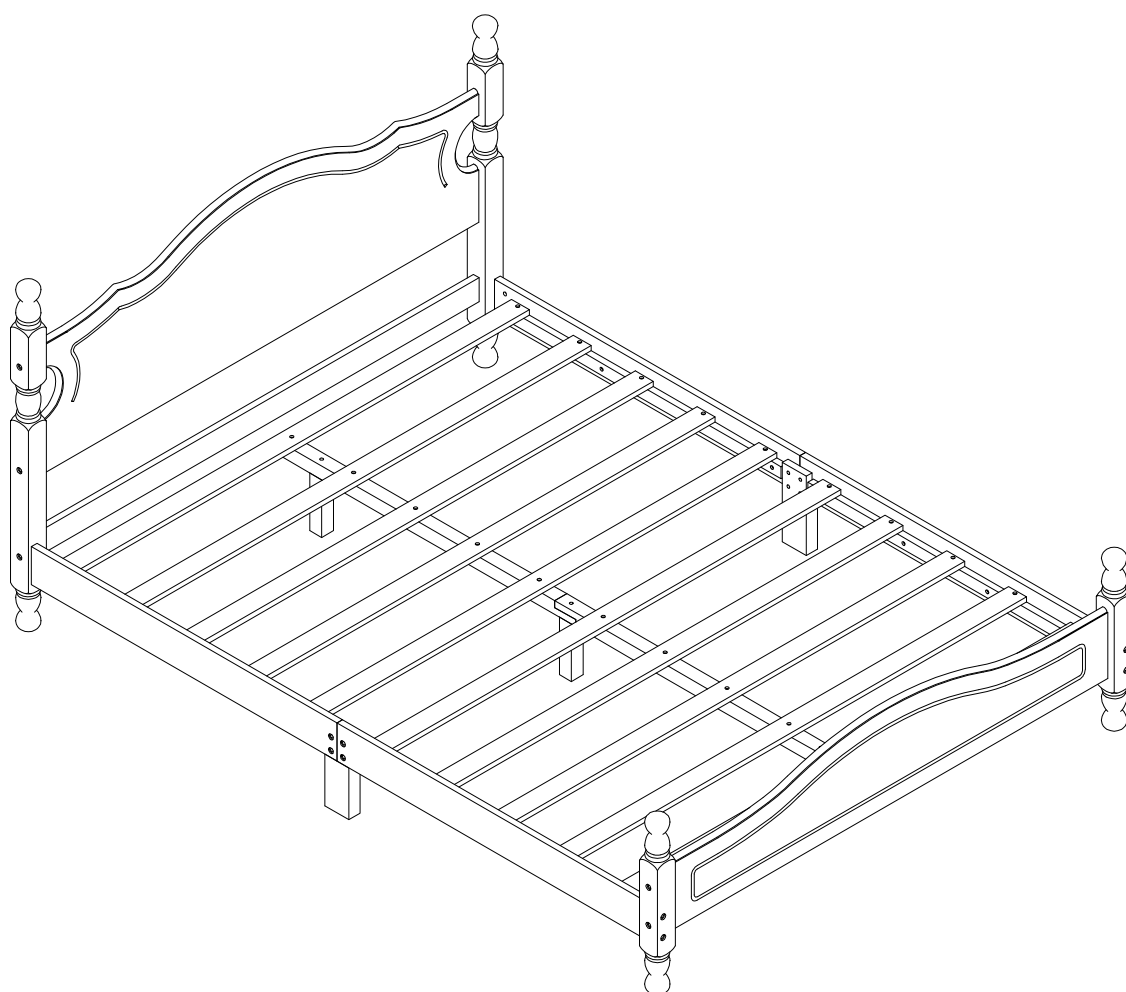

DETAIL VIEW

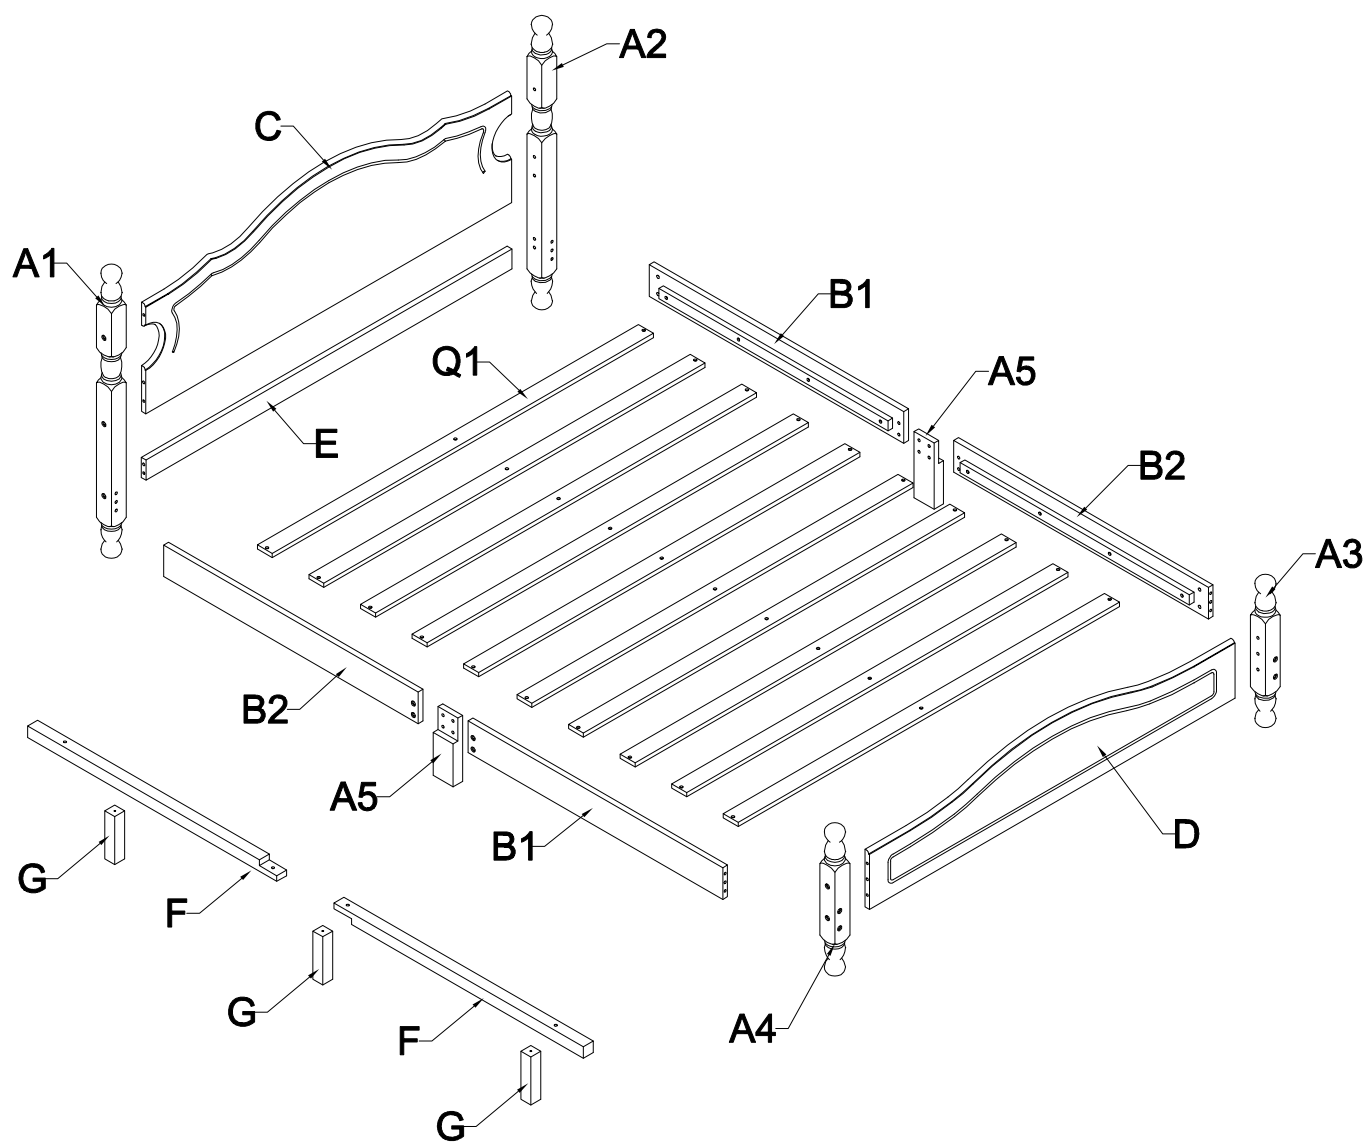

BOX 1: WF310132

A1




Front leg - left (1pc)

A2



Back leg - left (1pc)

A3



Back leg - right (1pc)

A4




Front leg - right (1pc)

A5




Middle leg (2pcs)

B1

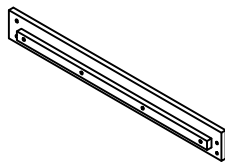


Side rail - left (2pcs)

B2

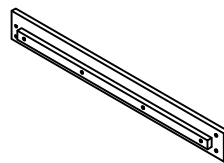


Side rail - right (2pcs)

C

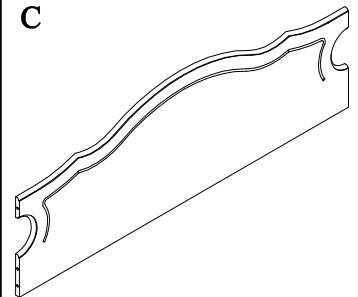


Headboard panel (1pc)

D

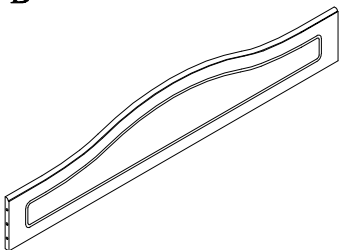


Footboard panel (1pc)

E

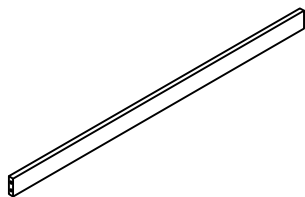

Horizontal rail (1pc)

F

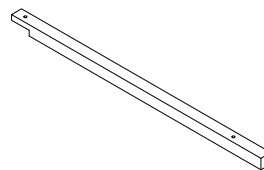


Support slats (2pcs)

G








Extra leg (3pcs)


Q1

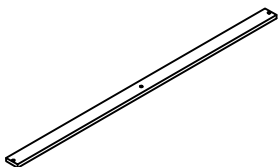

Slats (10pcs)


HARDWARE LIST: WF310132

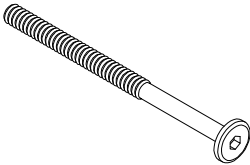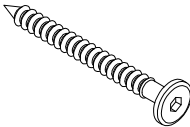
1  Hex - Head bolts Ø1/4" * 110- 18pcs	2  Hex - Head bolts Ø1/4" * 30- 8pcs	3  Hexagonal bolts catch wood Ø6 * 70 - 3pcs	4  Horizontal - Hold bolts Ø1/4" - 18pcs
5  Canopy head though Ø1/4" - 8pcs	6  Wood dowel Ø8 * 30 - 10pcs	7  Allen key K4 - 2pcs	8  Wood crews M4 * 30 - 30pcs

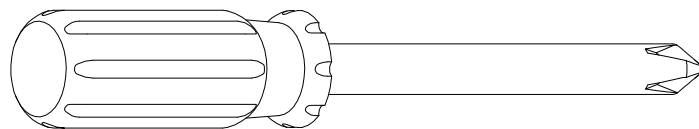


Assembly Tools Required (Not Included)


STEP 1

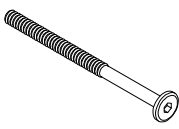1	4	6
		
Hex - Head bolts Ø1/4" * 110- 6pcs	Horizontal - Hold bolts Ø1/4" - 6pcs	Wood dowel Ø8 * 30 - 4pcs

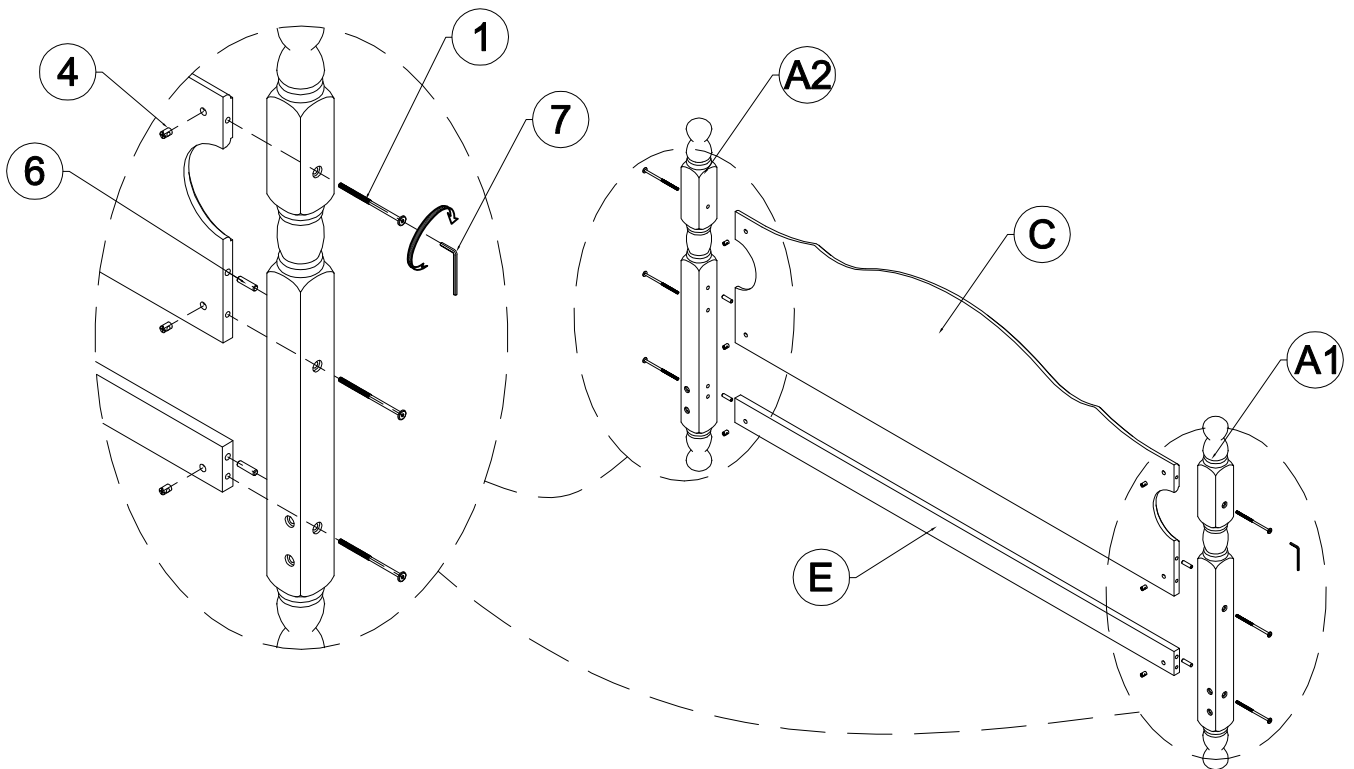

STEP 2

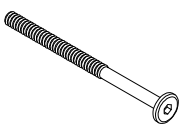1	4	6
		
Hex - Head bolts Ø1/4" * 110- 4pcs	Horizontal - Hold bolts Ø1/4" - 4pcs	Wood dowel Ø8 * 30 - 2pcs

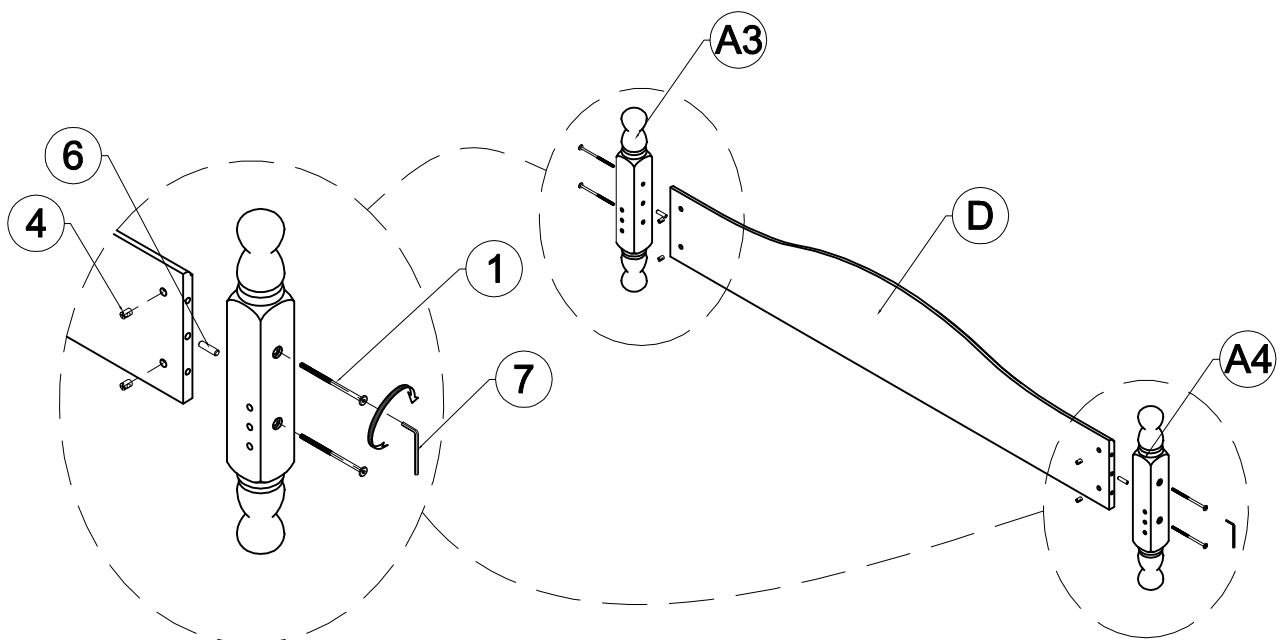

STEP 3

2




Hex - Head bolts
Ø1/4" * 30- 8pcs

5



Canopy head through
Ø1/4" - 8pcs

X 2

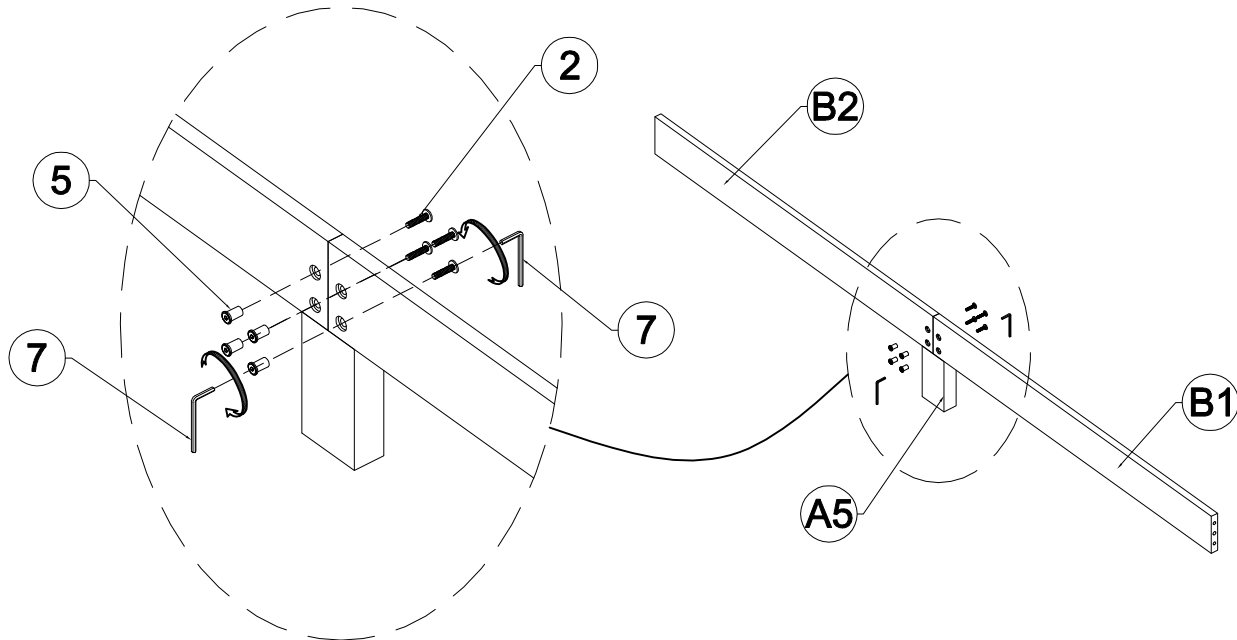


STEP 4





3



Hexagonal bolts catch wood
Ø6 * 70 - 3pcs


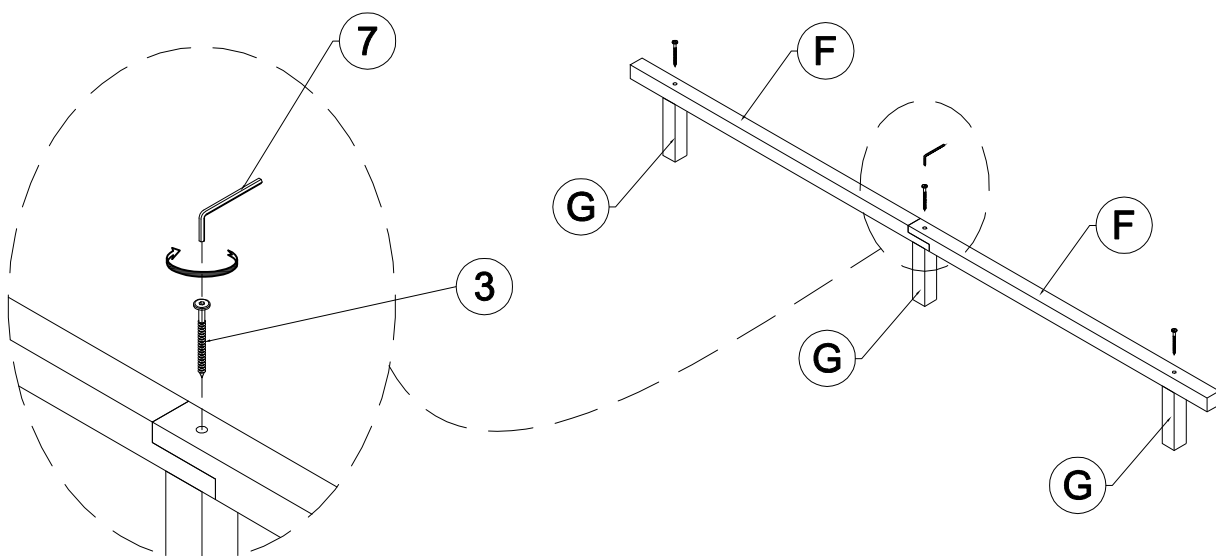


STEP 5

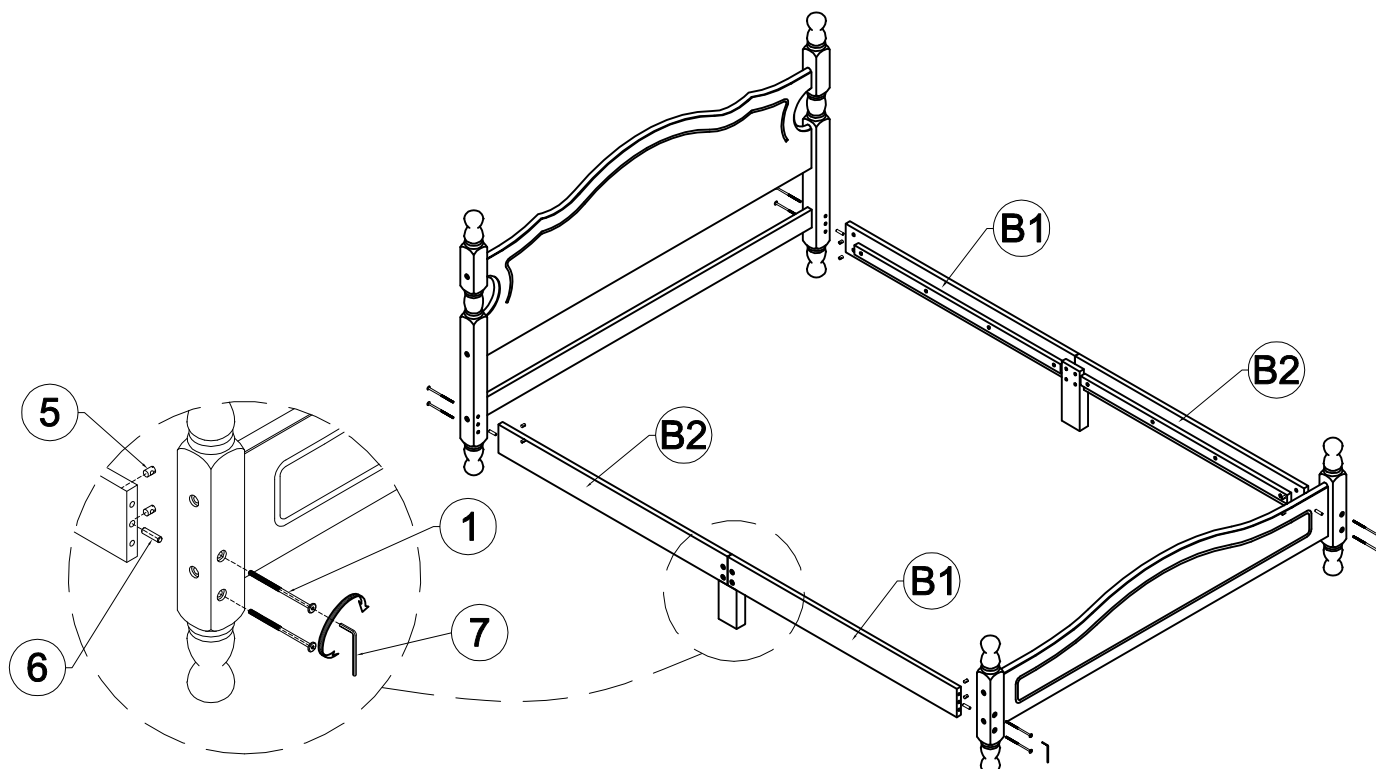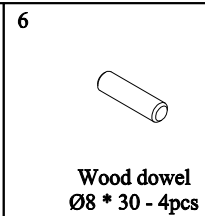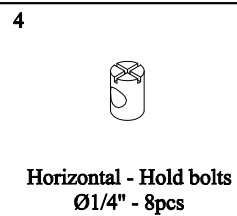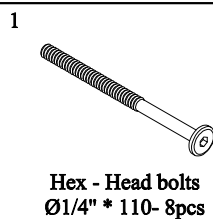

STEP 6

The distance between the slats is 5 - 3/4 inch

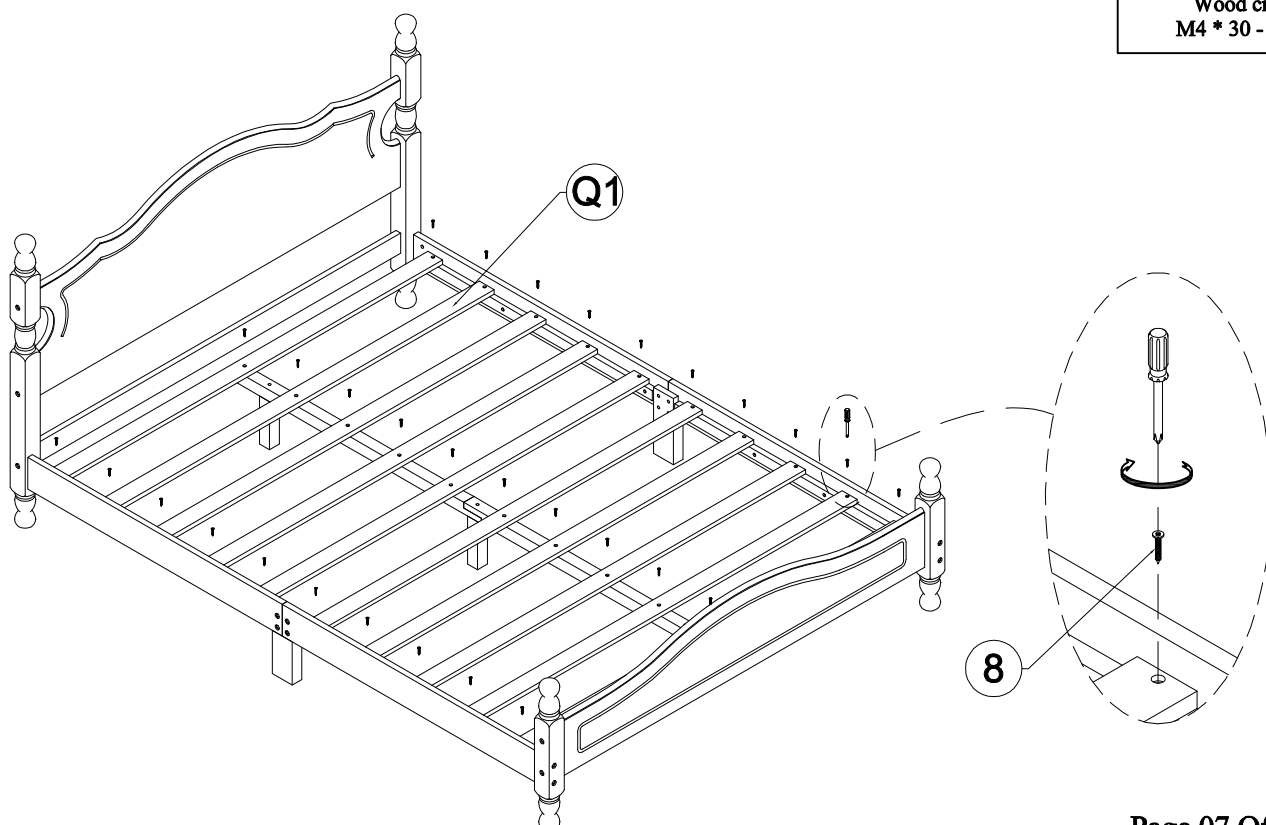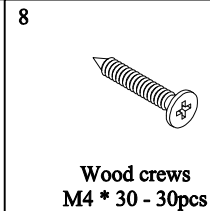

COMPLETED

