

ASSEMBLY INSTRUCTIONS


CAUTION:

THIS ITEM IS MADE OF LAMINATED PARTICLE BOARD AND MEDIUM DENSITY FIBRE BOARD TO BE ASSEMBLED ON A DRY,SOFT,SMOOTH AND CLEAN SURFACE. DO NOT USE DETERGENT OR CHEMICAL. AVOID DAMP AND DIRECT SUNLIGHT.

STEP 1 CHECK YOUR HARDWARE		
	SCREW M3 X 20	4 PCS
	CORNER BLOCK	4 PCS
	SCREW #9 X 1 1/2"	8 PCS
	WOOD DOWEL M6 X 25	8 PCS
	ADJUSTABLE SHELF STUD	4 PCS
	RETRACTABLE DOOR STUD WITH SPRING	4 PCS
	MAGNET WITH LEG	2 PCS
	MAGNET PLATE	2 PCS
	SCREW M3.5 X 12	4 PCS
	PAN HEAD SCREW #6 X 20	2 PCS
	KNOB	2 PCS
	STICKER	8 PCS

TOOLS REQUIRED:	
	HAMMER
	SCREW DRIVER


STEP 2

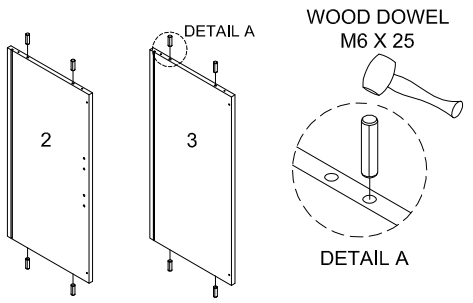

WOOD DOWEL M6 X 25

DETAIL A


STEP 3

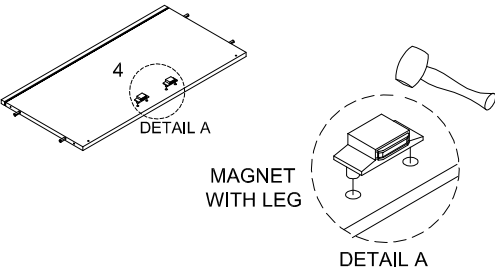

MAGNET WITH LEG

DETAIL A

STEP 4

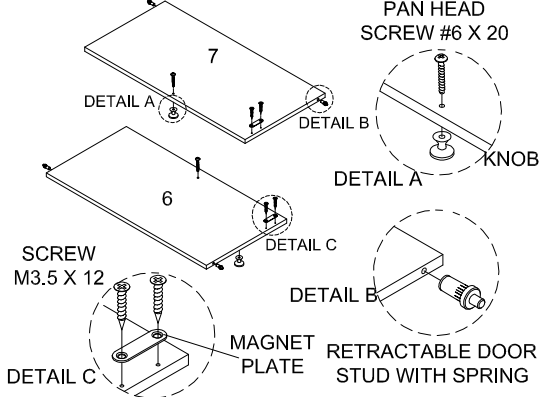

PAN HEAD SCREW #6 X 20

DETAIL A

DETAIL B

DETAIL C


KNOB

MAGNET PLATE

RETRACTABLE DOOR STUD WITH SPRING

SCREW M3.5 X 12


STEP 5

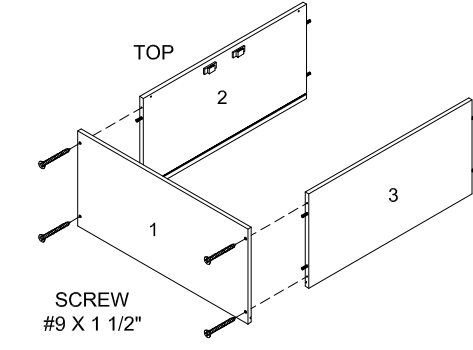

TOP


SCREW #9 X 1 1/2"

STEP 6

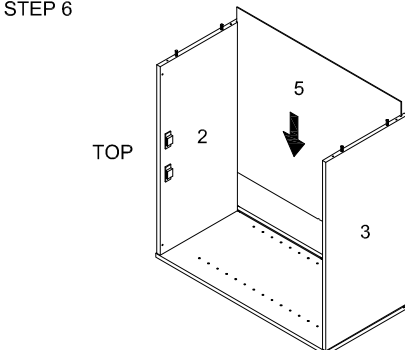

TOP


STEP 7

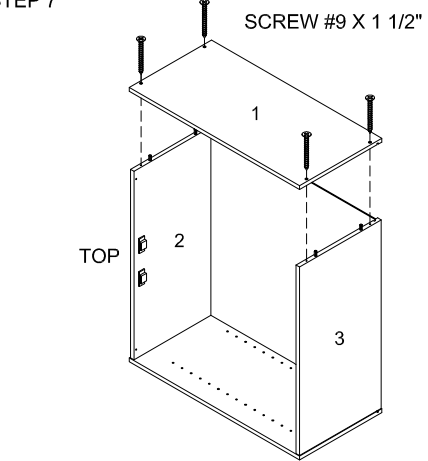

SCREW #9 X 1 1/2"

TOP

STEP 8

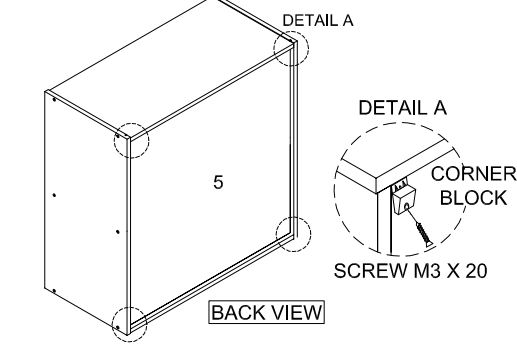

DETAIL A


DETAIL A

CORNER BLOCK

SCREW M3 X 20

BACK VIEW


STEP 9

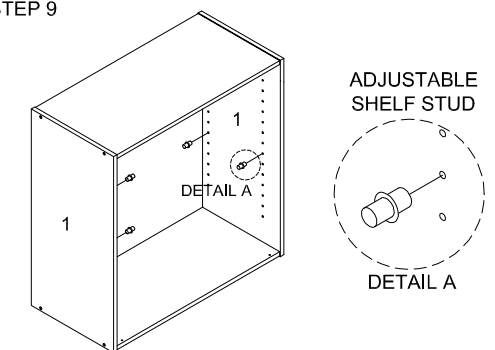


ADJUSTABLE SHELF STUD

DETAIL A

STEP 10

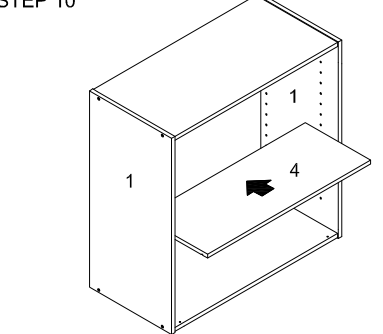

STEP 11

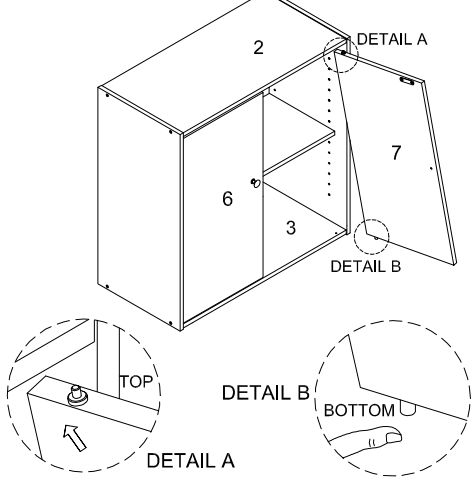

DETAIL A

DETAIL B


TOP

DETAIL A

DETAIL B

BOTTOM

STEP 12

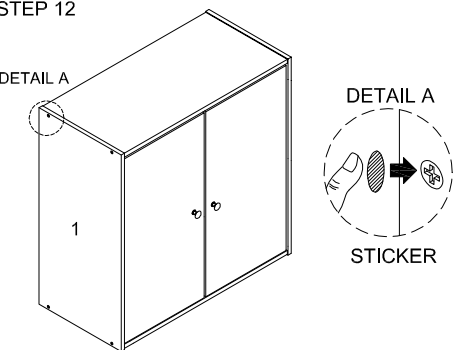

DETAIL A

DETAIL A

STICKER