




ST. TROPEZ


By: C.R. Plastic Products Inc.

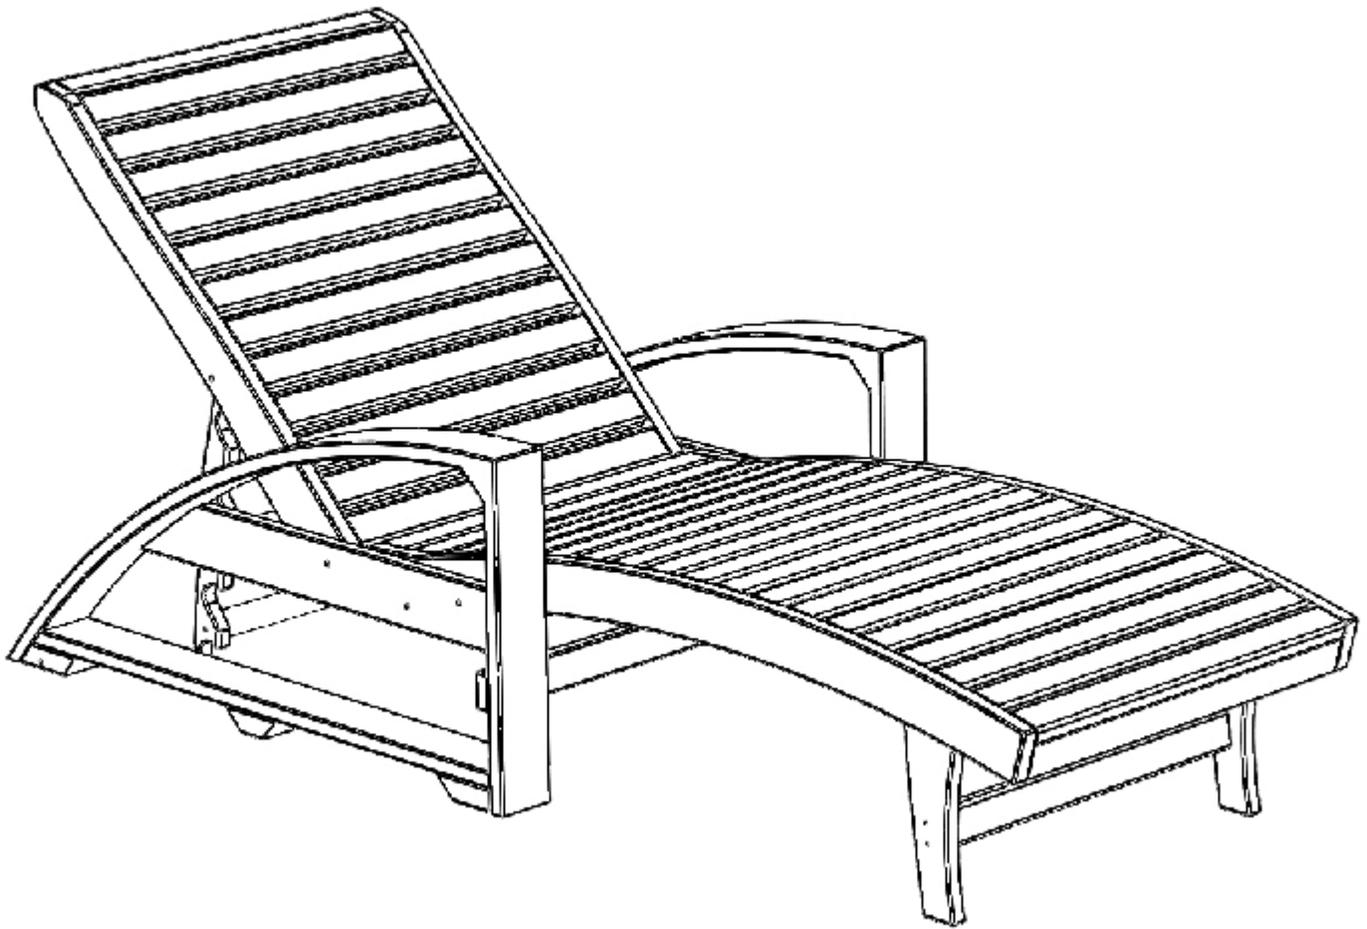


## L38 St. Tropez Chaise Lounge

C.R. Plastic Products Inc.  
1-533 Romeo Street South  
Stratford Ontario, N5A 4V3  
Toll Free: 800-490-1283  
Fax: 519-271-8544  
[www.crpproducts.com](http://www.crpproducts.com)


A. Left Arm, Qty:1

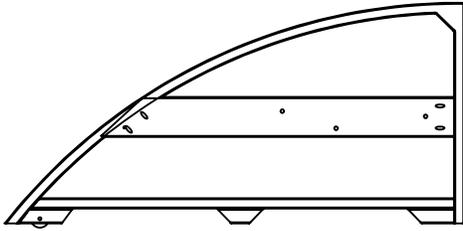

B. Right Arm, Qty:1

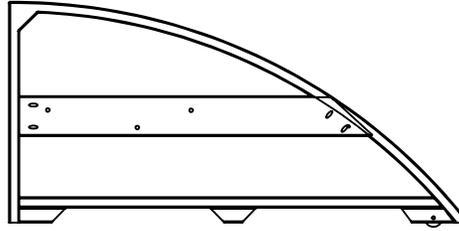


C. Rear Stringer, Qty:1

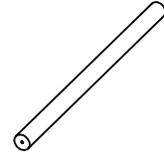


D. Front Stringer, Qty:1




E. Back, Qty:1

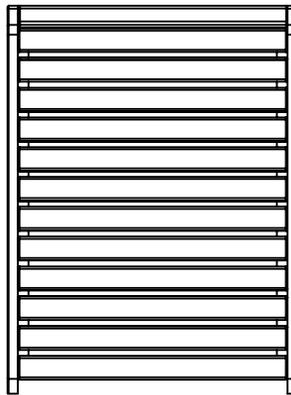


F. Back Support, Qty:1

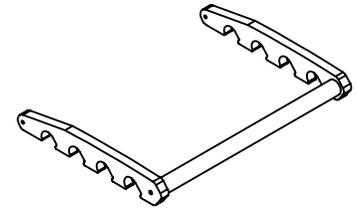

G. Seat, Qty:1

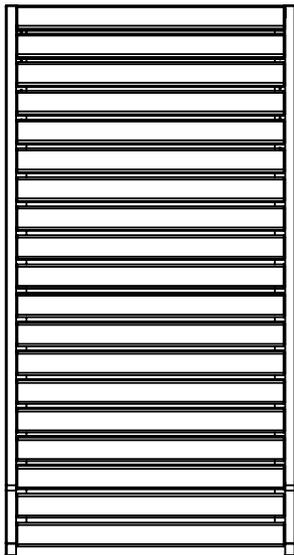

H. Seat, Qty:1

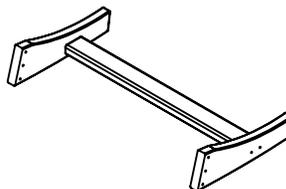

**PARTS LIST:**

- A Left Leg
- B Right Leg
- C Rear Stringer
- E Back
- F Back Support
- G Seat
- H Front Legs

**HARDWARE LIST:**

- 12 Screws 1-1/2"
- 8 Bolts
- 8 Nylock Nuts
- 2 Screws 2 1/2"

**Note:**

Read these instructions carefully before assembling.

Tools required: #2 Phillips or #2 Robertson bit, a power drill and two 7/16" wrenches

Find a clean, smooth area on which to work, such as a carpet, in order to avoid scratching the plastic surfaces.

Two people might be required for assembly.



**Caution! Do not over tighten screws**

**Step 1:** Set the Left arm (A) on its side as shown and attached Rear Stringer (C) with one 2 1/2" screw. (Detail A)

**Step 2:** Stand assy on end and secure Right Arm (B) with one 2 1/2" screw.


**Step 3:** Set assy. down flat and attach Front Stringer (D) with six 1-1/2" screws. (Detail B)

**Step 1**

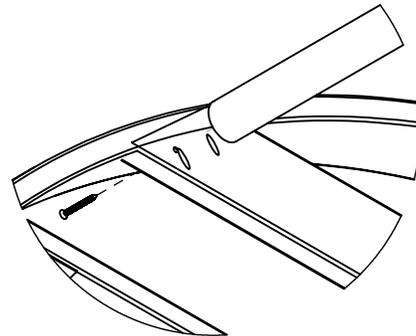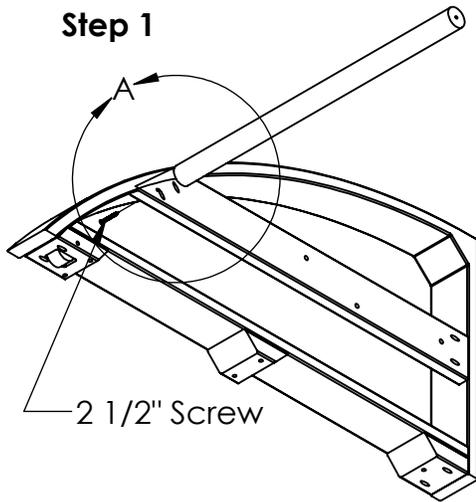



DETAIL A

**Step 2**

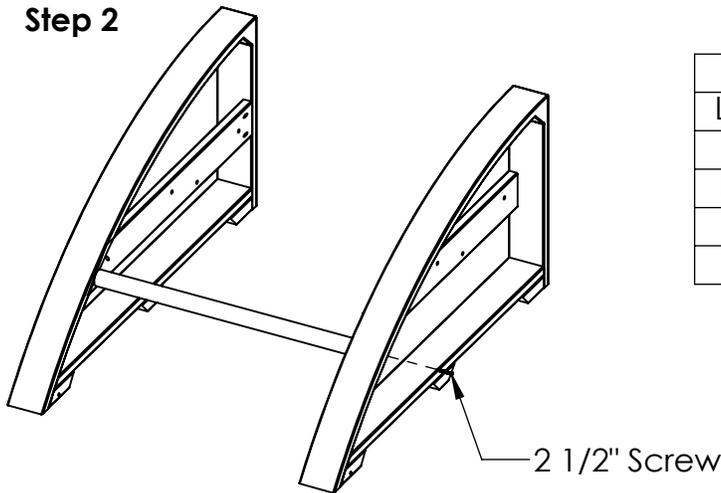

Required	Qty
Left Arm Assy. (A)	1
Rear Stringer (C)	1
Front Stringer (D)	1
1-1/2" Screws	6
2 1/2" Screws	2

**Step 3**

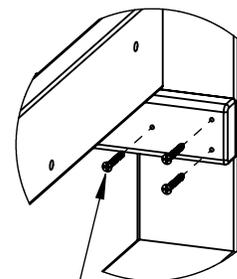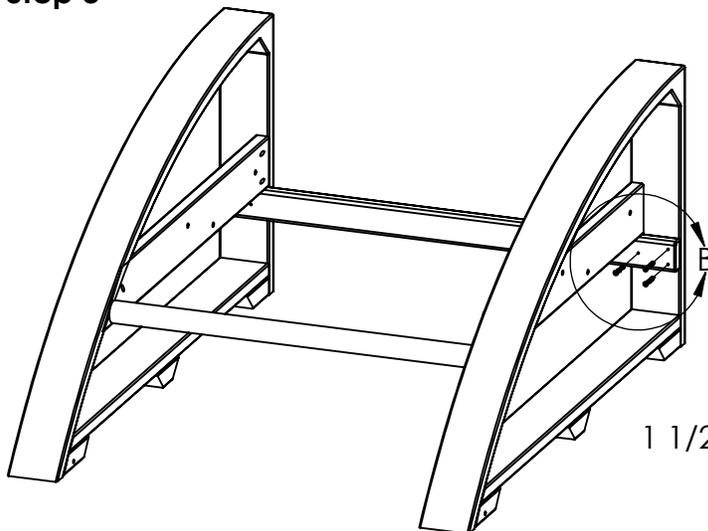


1 1/2" Screws


DETAIL B

- Step 4:** Attach Back Support (F) to back (E) using two 2" bolts and nylock nuts. (Detail C)
- Step 5:** Attach back to leg assy. using two 2" bolts and nylock nuts.
- Step 6:** Attach Front leg assy. (H) to Seat (G) using six 1 1/2" screws. (Detail D)
- Step 7:** Attach Seat to complete leg and back assy. using four 2" bolts and nylock nuts. (Detail E)


**Step 4**

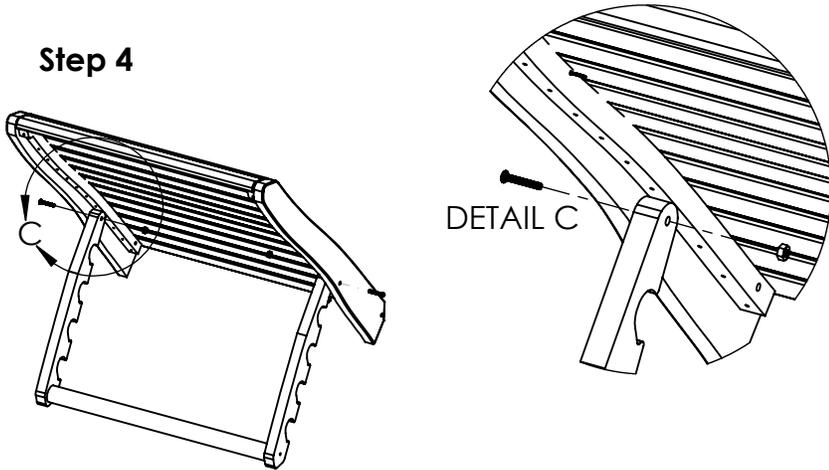


Required	Qty
Back Assy. (E)	1
Back Support (F)	1
Seat (G)	1
Front Legs (H)	1
1-1/2" Screws	6
2" Bolt	8
Nylock Nut	8

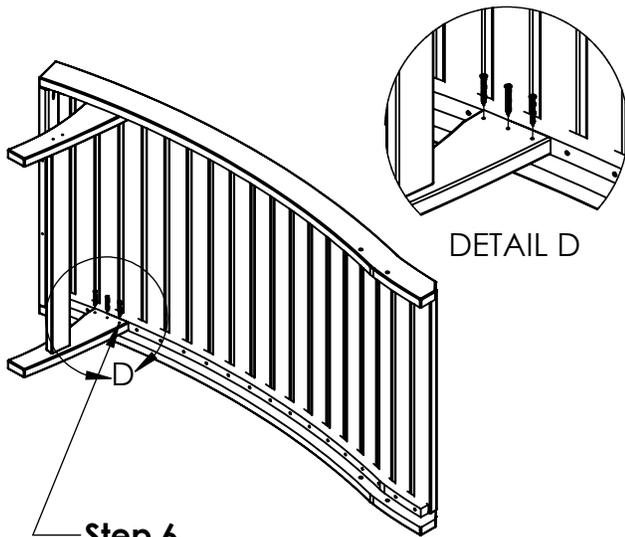

**Step 6**  
Use 1-1/2" Screws and align with back of 3rd slat.

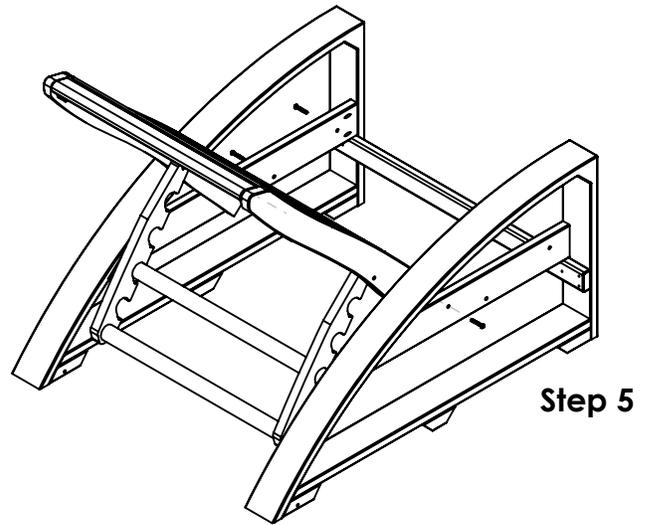

**Step 5**

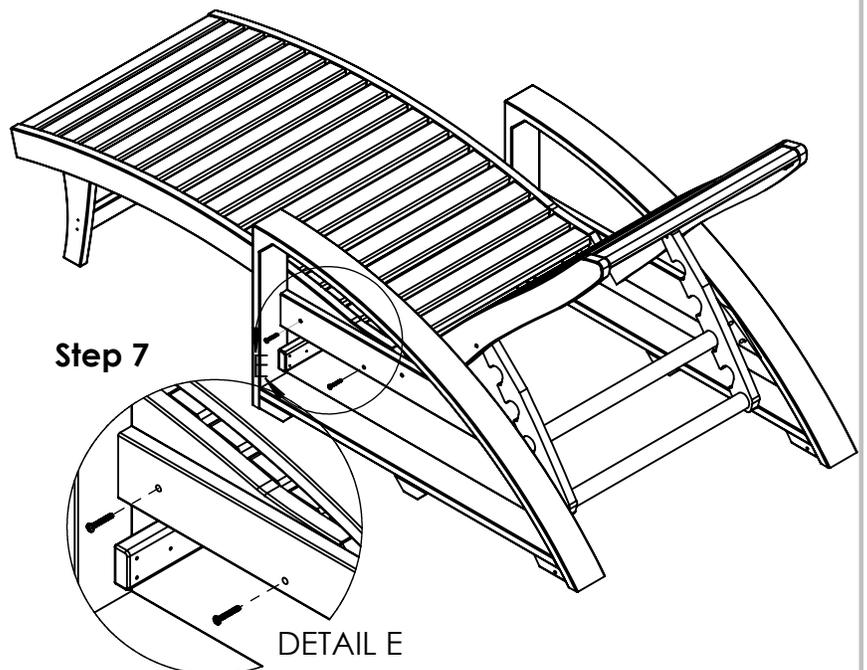

**Step 7**

DETAIL E