







CONVENIENCE CONCEPTS





CAPE COD CONSOLE TABLE ITEM NO. 510099

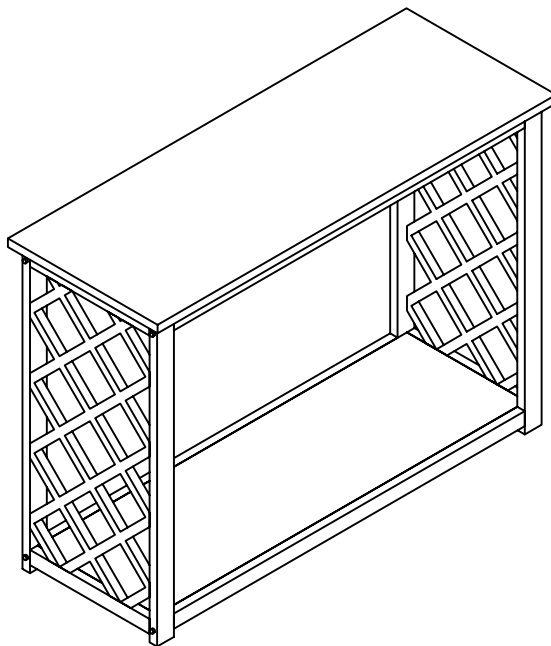

HARDWARE LIST

CODE	NAME	FIGURE	Q'TY
A	WOOD DOWEL (Ø6*30mm)		12PCS
B	WOOD SCREW (Ø7*25mm)		16PCS
C	HEX BOLT (Ø11*50mm)		8PCS
D	WOOD PLUG (Ø13*9mm)		8PCS
E	ALLEN WRENCH (M4*21*57mm)		1PC

PARTS LIST

CODE	NAME	FIGURE	Q'TY
①	TOP PANEL		1PC
②	SIDE PANEL		2PCS
③	BOTTOM PANEL		1PC
④	CROSS BAR		2PC




Please do not return to the store

If you have any questions just call 1-800-468-6447 or email us at

parts@convenience-concepts.com

STEP 1


A x 4PCS
B x 2PCS
C x 4PCS
E x 1PC

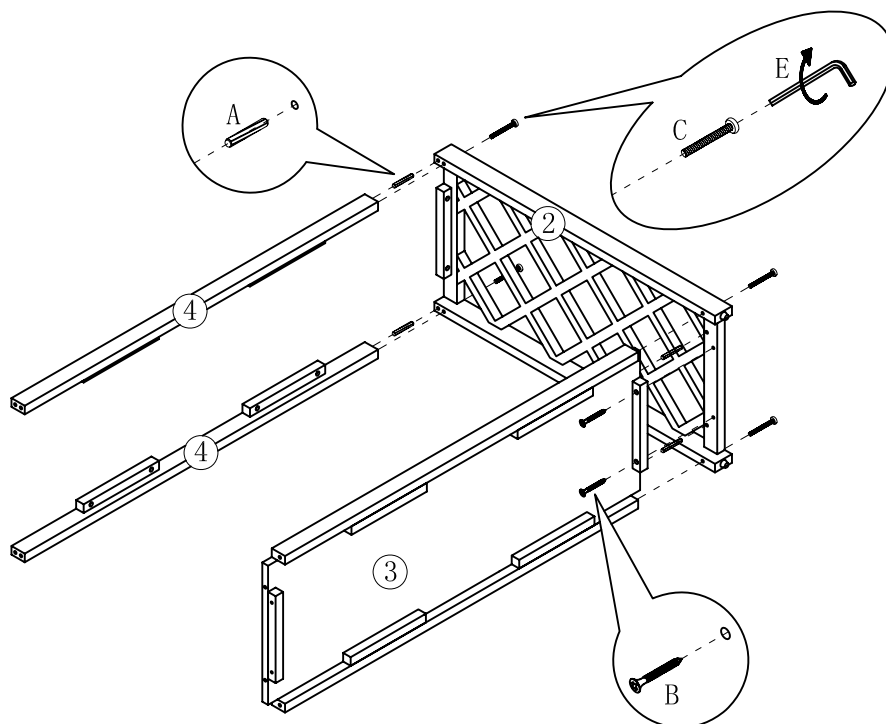

1. ATTACH CROSSBAR (4) AND BOTTOM PANEL (3) TO SIDE PANEL (2) BY USING WOOD DOWELS (A) , WOOD SCREWS (B) AND HEX BOLTS (C).
2. BE VERY CAREFUL NOT TO BREAK CROSSBAR (4) WHILE IT IS SUSPENDED AND WAITING STEP 2, TIGHTEN HEX BOLTS (C) WITH ALLEN WRENCH (E) AS SHOWN.

STEP 2


A x 4PCS
B x 2PCS
C x 4PCS
E x 1PC

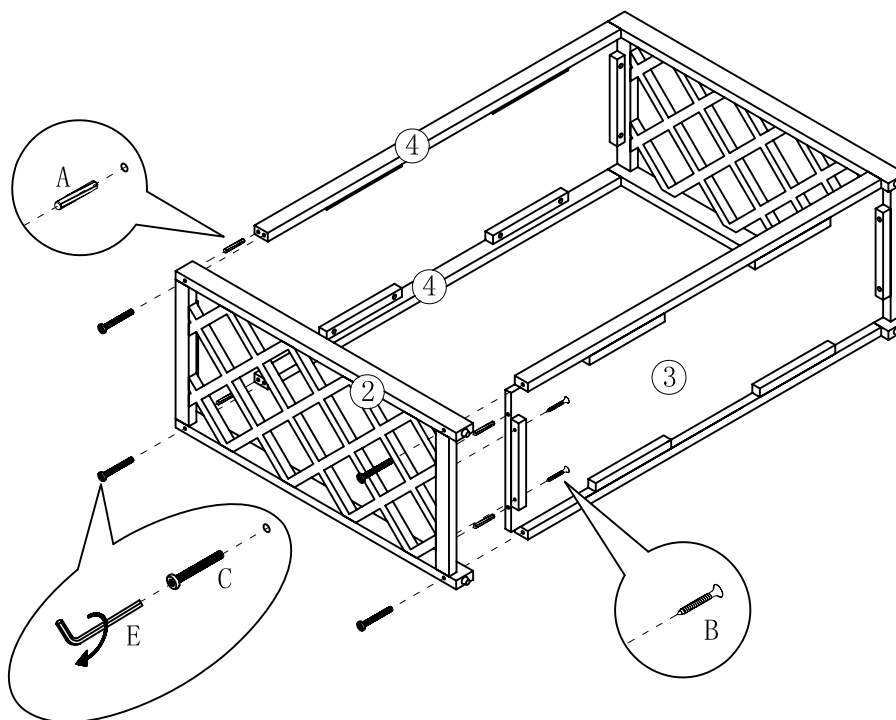

1. ATTACH SIDE PANEL (2) TO THE ASSEMBLY BY USING WOOD DOWELS (A) , WOOD SCREWS (B) AND HEX BOLTS (C).
2. TIGHTEN HEX BOLTS (C) WITH ALLEN WRENCH (E) AS SHOWN.

STEP 3


A x 4PCS
B x 12PCS

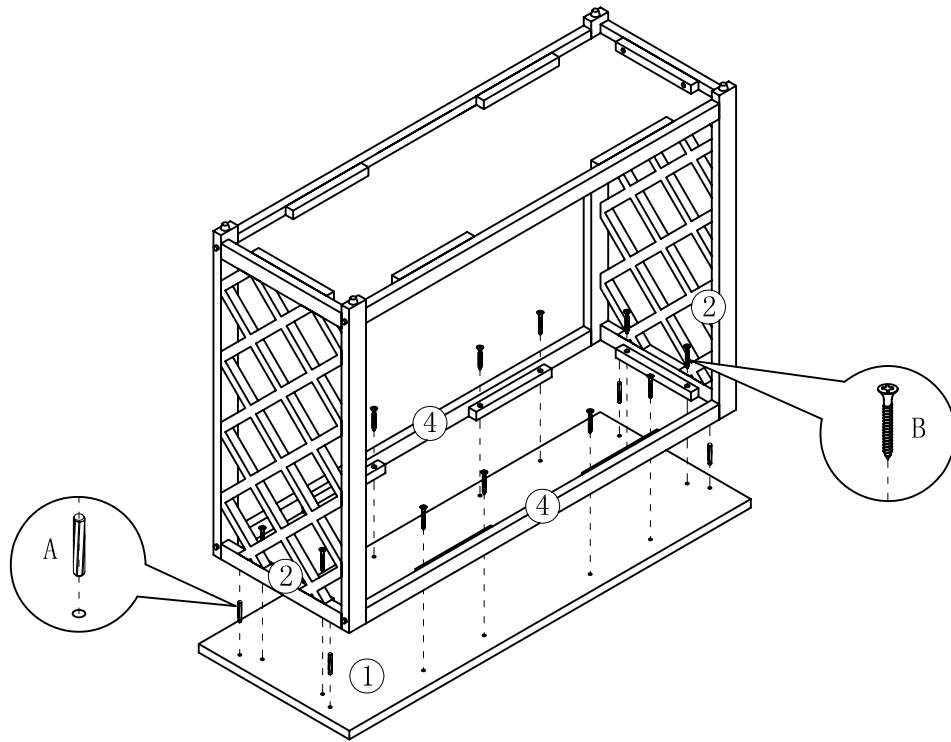

1. PLACE TOP PANEL (1) UPSIDE DOWN ON CARPET OR OTHER SOFT SURFACE.
2. ATTACH TOP PANEL (1) TO THE ASSEMBLY BY USING WOOD DOWELS (A) AND WOOD SCREWS (B), TIGHTEN WOOD SCREWS (B) AS SHOWN.

STEP 4

D x 8PCS

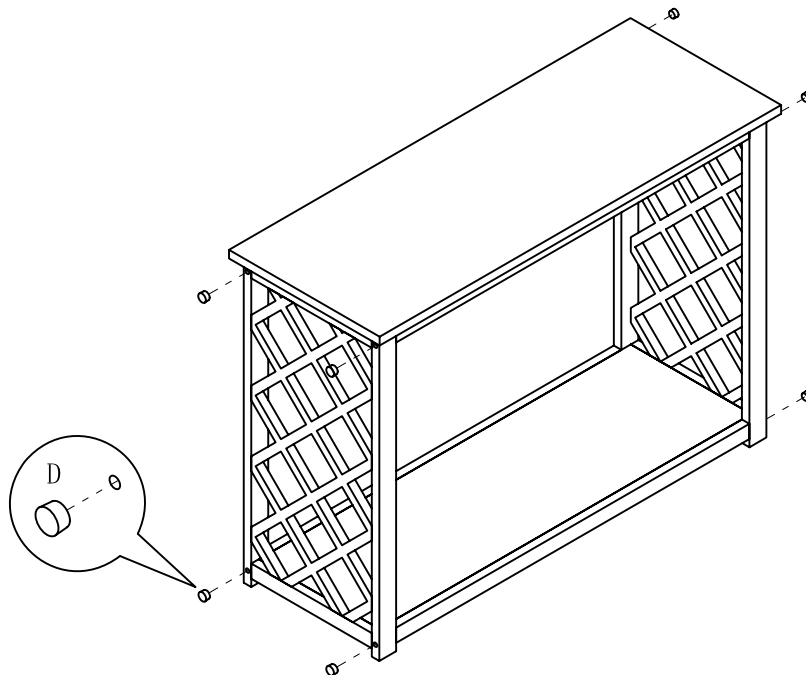

1. COVER HEX BOLT HOLE WITH WOOD PLUGS (D) AS SHOWN.