



# ASSEMBLY INSTRUCTION




① x8  
(Bolt M6x75)




② x16  
(Bolt M6x45)



③ x4  
(Bolt M6x30)



④ x4  
(Bolt M6x10)




⑤ x24  
Washer 6 (16x6x1)



⑥ x8  
Washer 6 (12x6x1)




⑦ x2  
(Allen key M4)

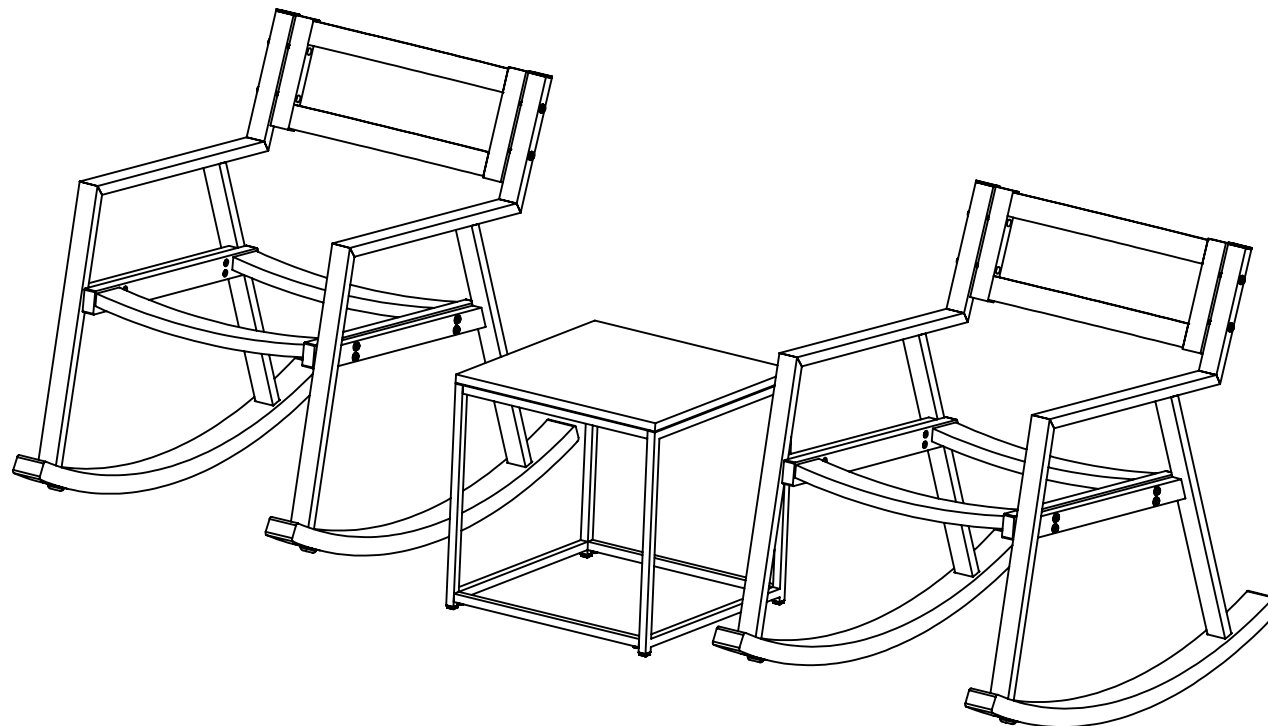

**M4**  
MADE4HOME


# ***PARTS LIST***

Right

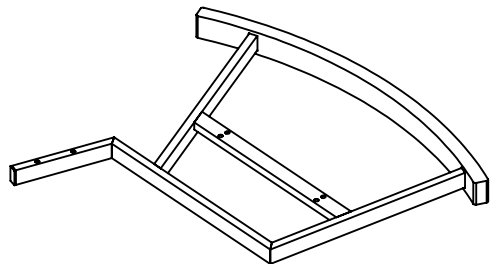


Ⓐ x2


Left

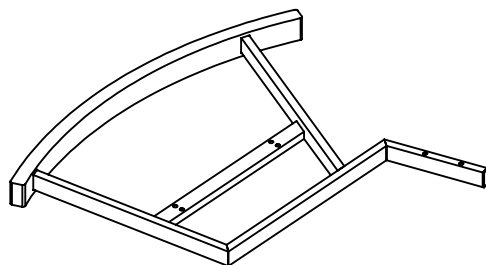


Ⓑ x2

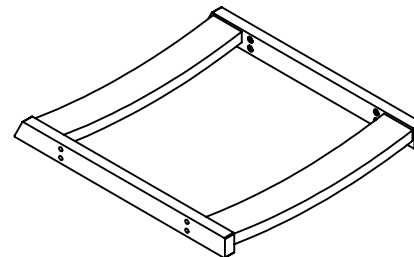


Ⓒ x2

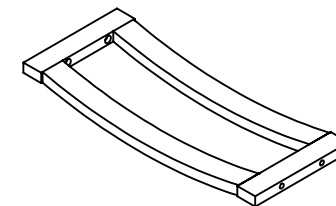


Ⓓ x2

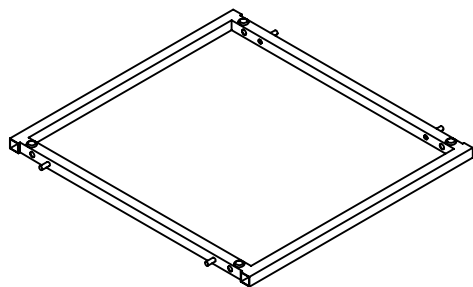


Ⓔ x1

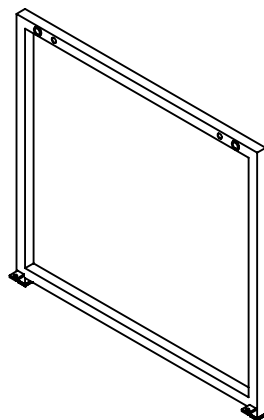

Ⓕ x2

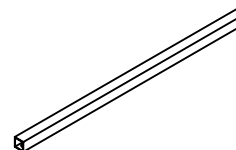



Ⓖ x2

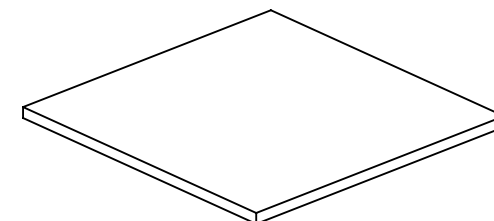



Ⓕ x1

# ASSEMBLY INSTRUCTION

## Step 1

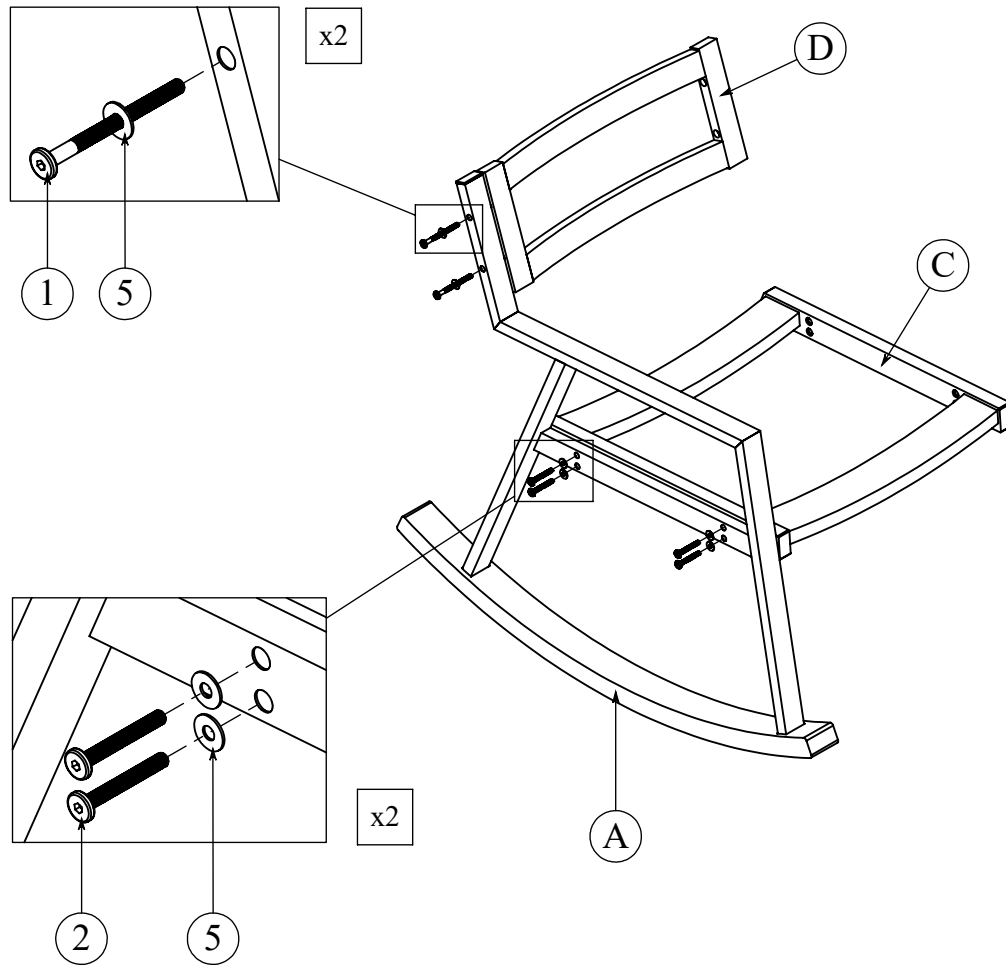
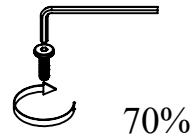


## Step 2

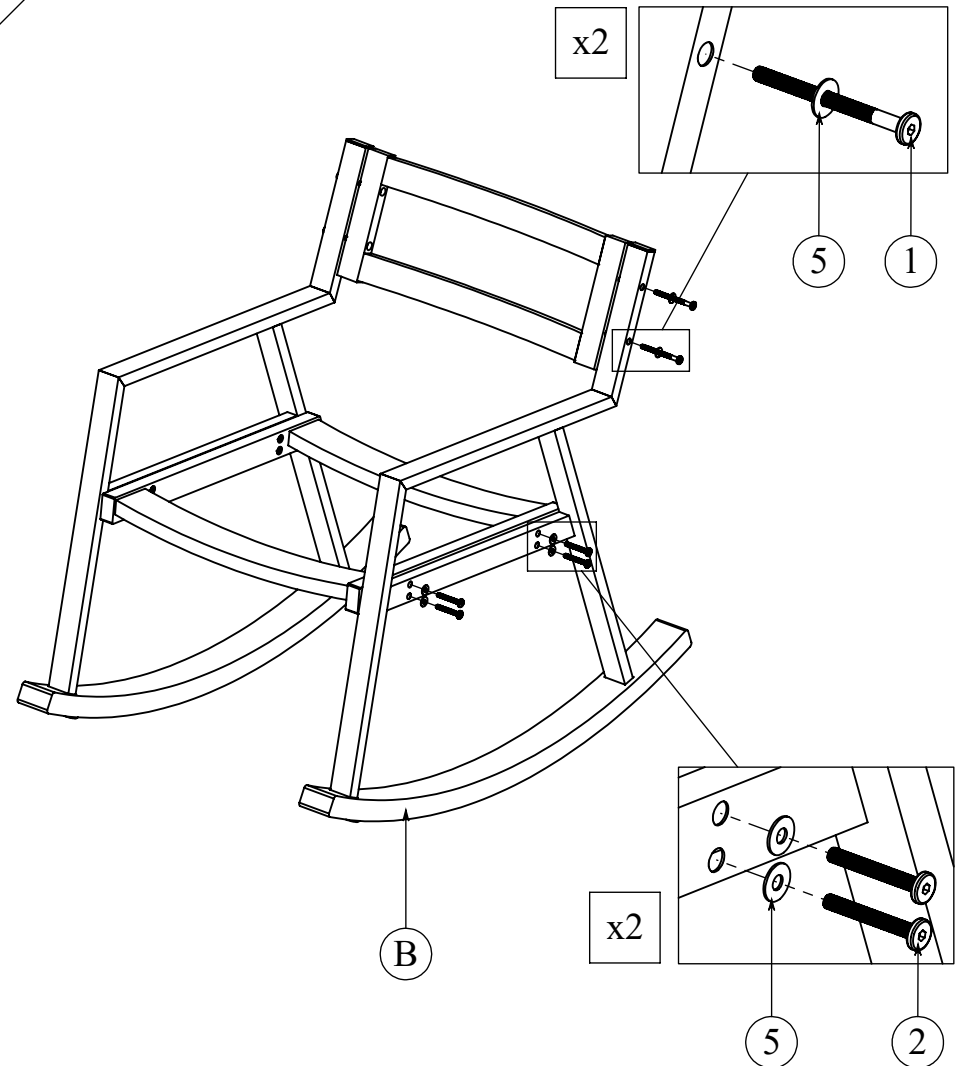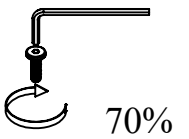


# ASSEMBLY INSTRUCTION

## Step 3

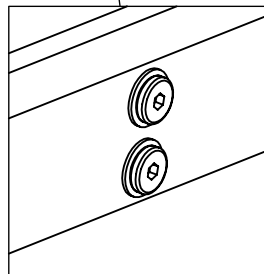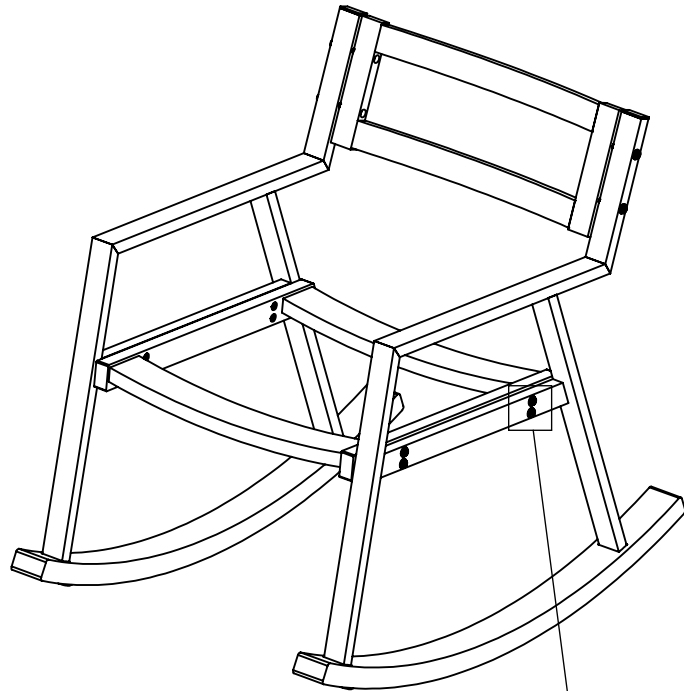


**Full**

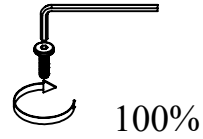


100%

## Step 4

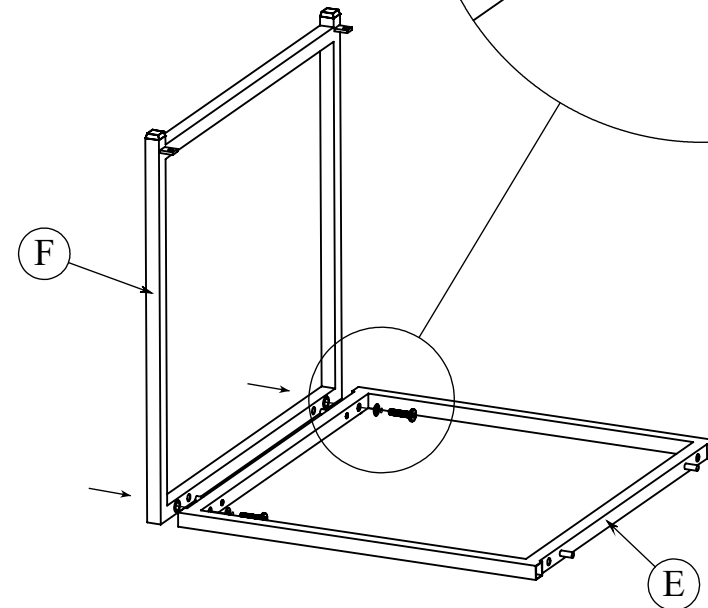


x2

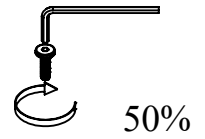



50%

# ASSEMBLY INSTRUCTION

## Step 5

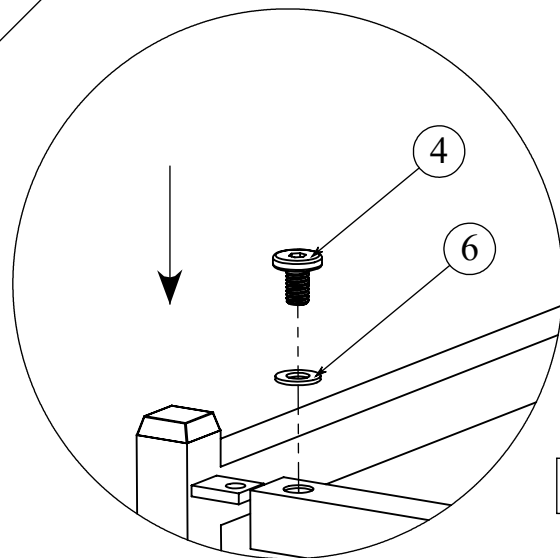


x2

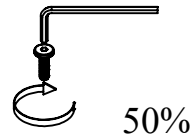
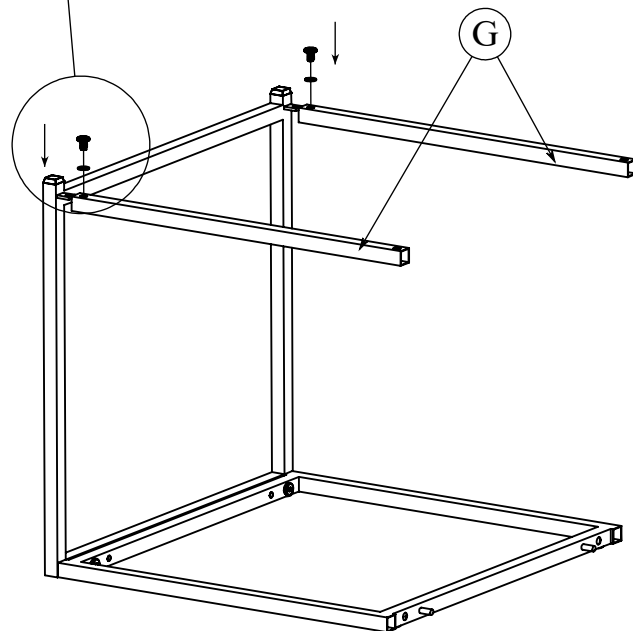


50%

## Step 6

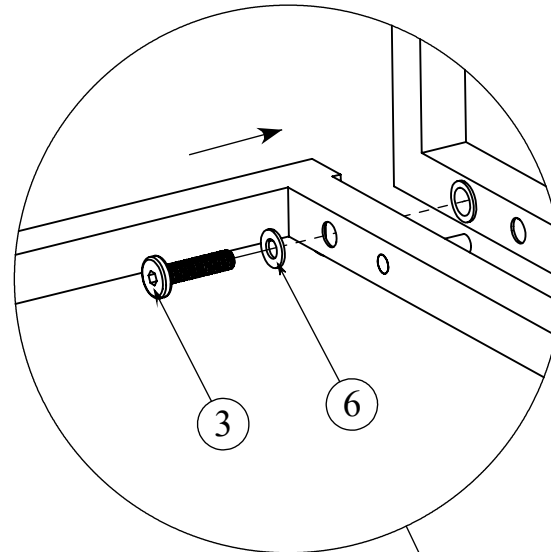



x2

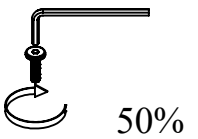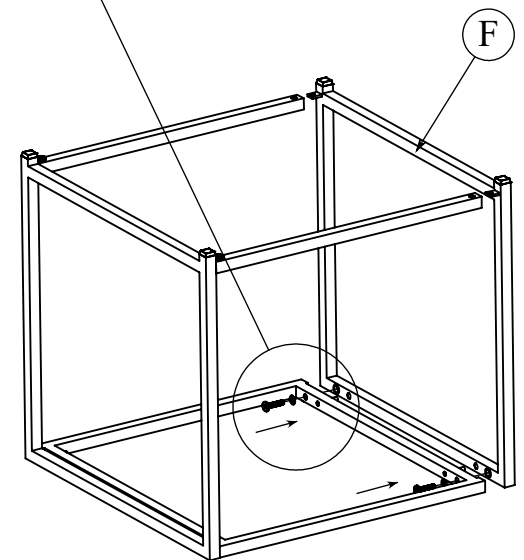

50%

# ASSEMBLY INSTRUCTION

## Step 7

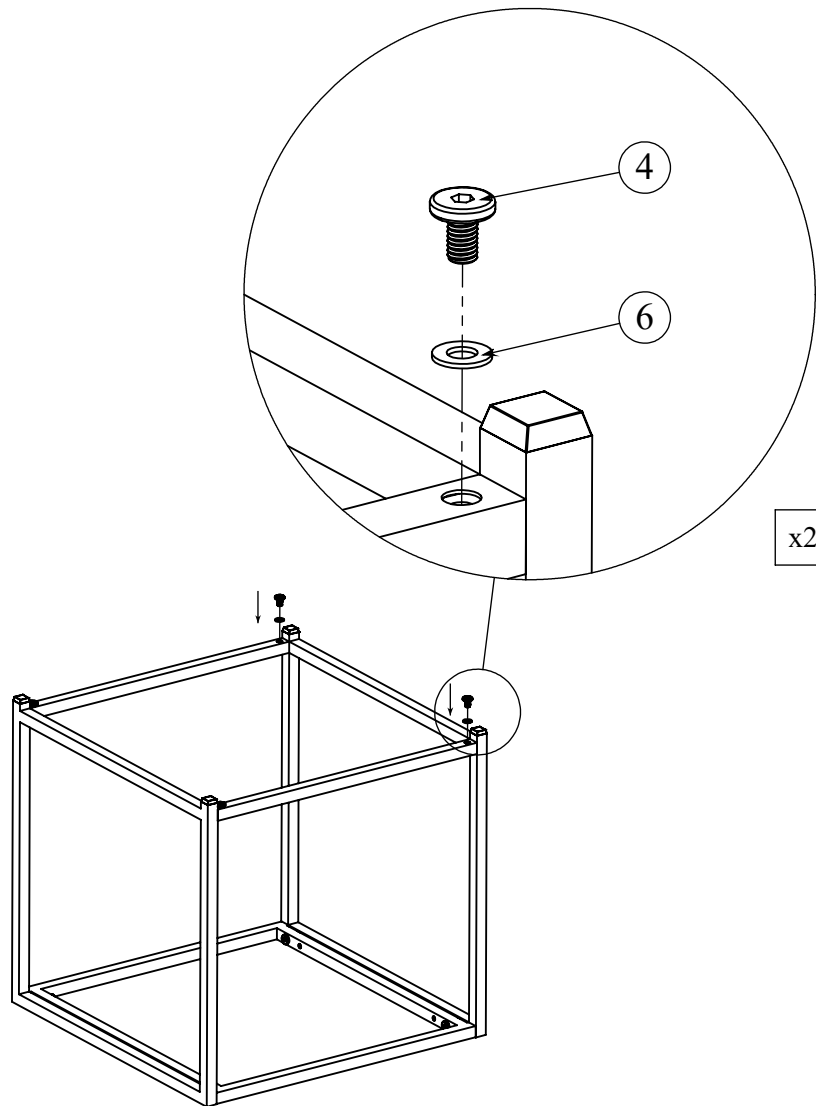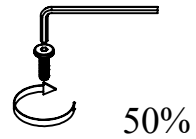

## Step 8

