


ASSEMBLY INSTRUCTION






RATTAN SOFA SET

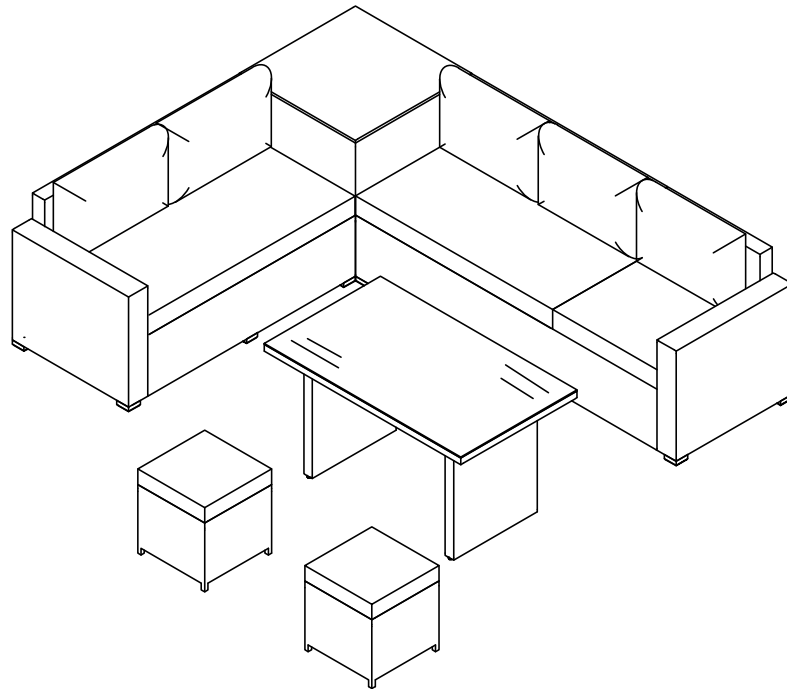


WF300006; WF300007; WF300008; WF300009

Notice

- 1. 50% Tighten before fixings all screws, Allen wrench is recommended instead of an electric drill.**
- 2. Place the item on a flat ground to adjust and make sure it remains stable.**
- 3. Tighten up all screws with tools gradually.**
- 4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.**
- 5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.**
- 6. Note: If one or more screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.**

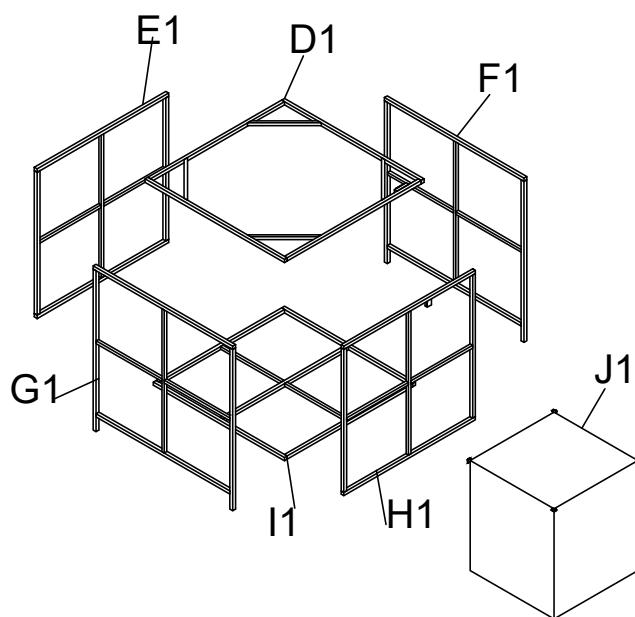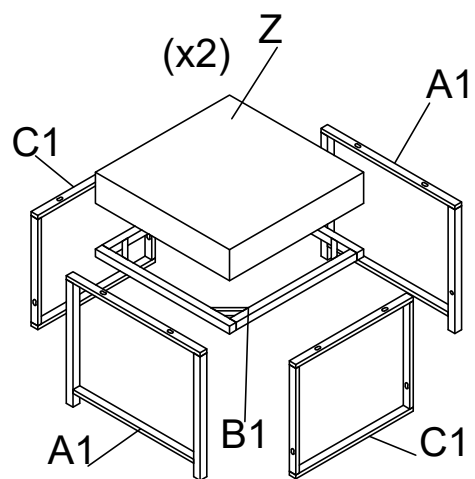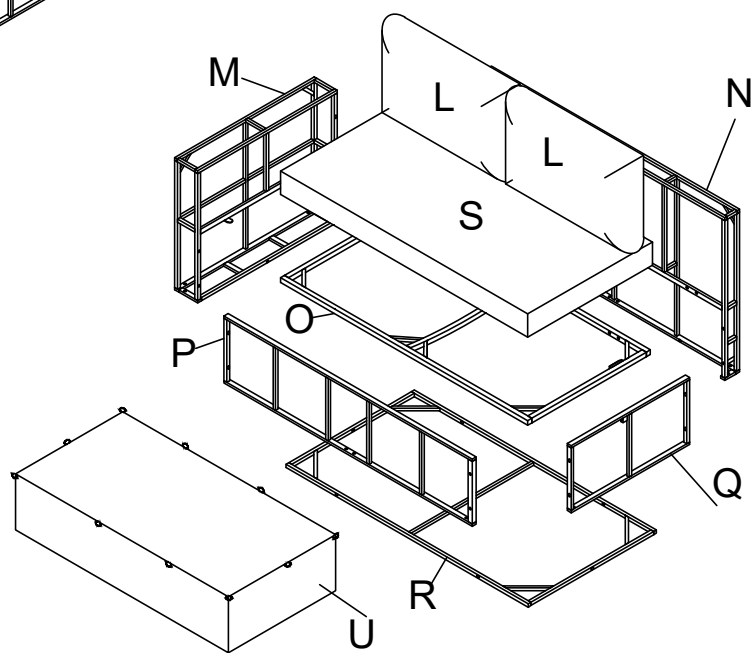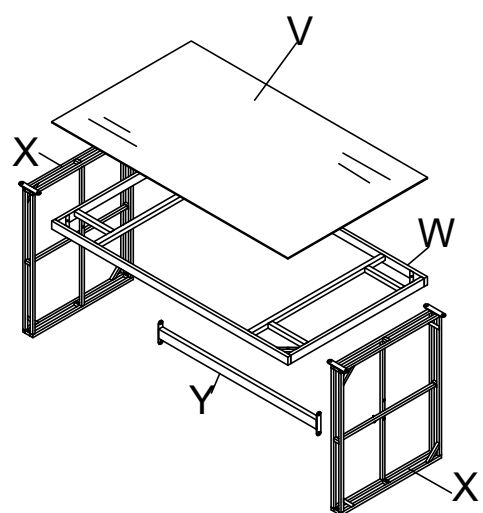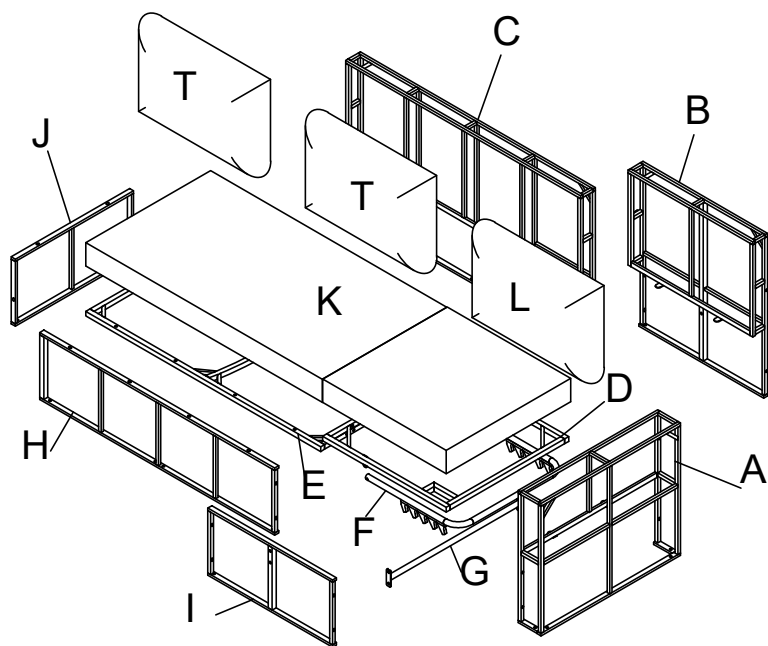


A

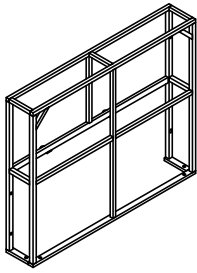


1 pc

B

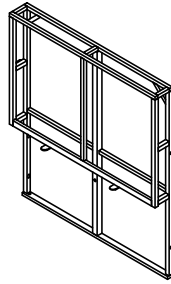


1 pc

C

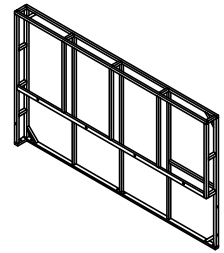


1 pc

D

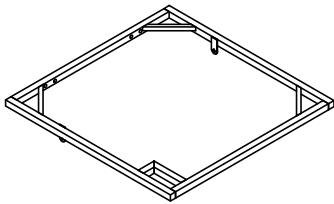


1 pc

E

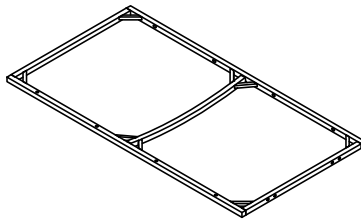


1 pc

F

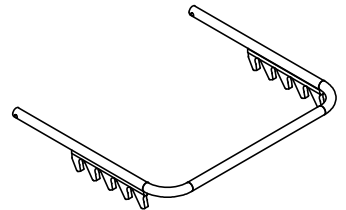


1 pc

G

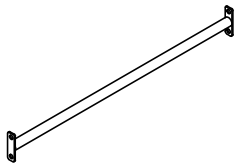


1 pc

H

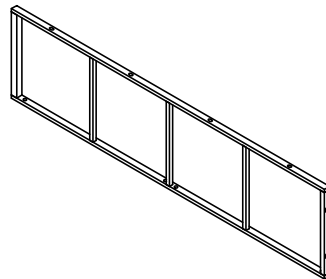


1 pc

I

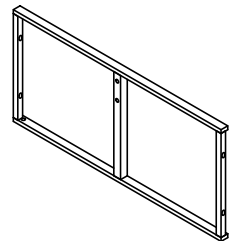


1 pc

J

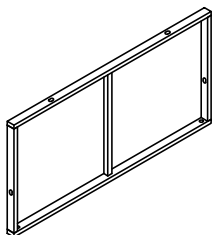


1 pc

K

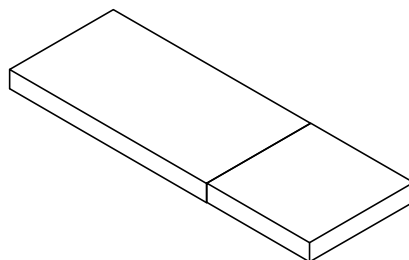


1 pc

L

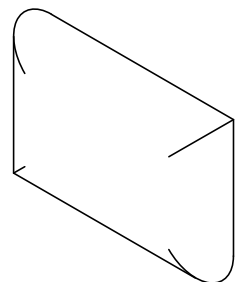


3 pc

M

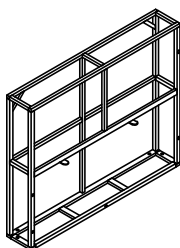


1 pc

N

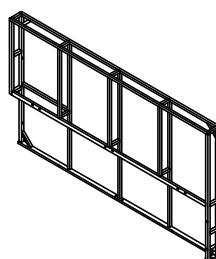


1 pc

O

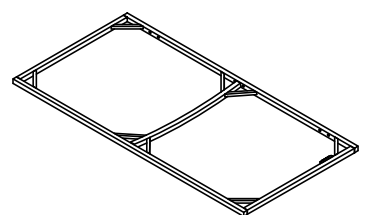


1 pc

P

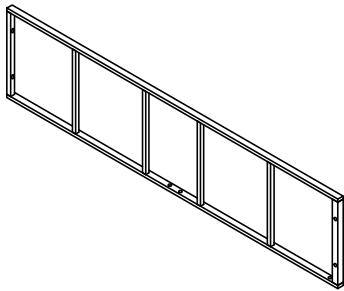


1 pc

Q

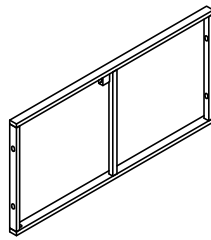


1 pc

R

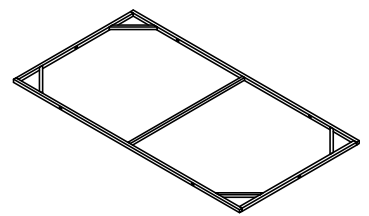


1 pc

S

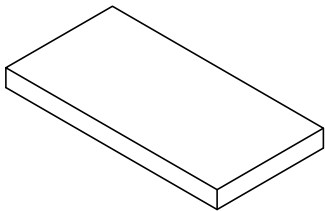


1 pc

T

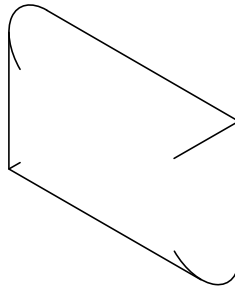


2 pcs

U

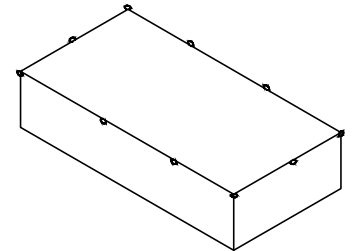


1 pc

V

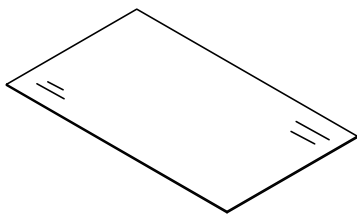


1 pc

W

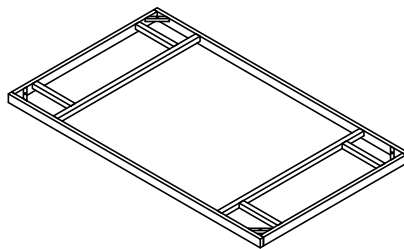


1 pc

X

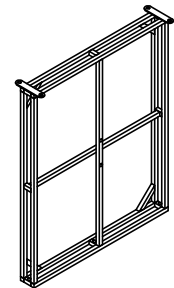


2 pcs

Y

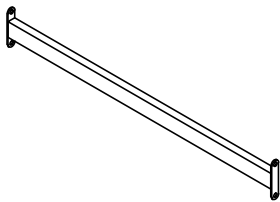


1 pc

Z

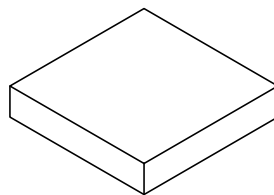


2 pcs

A1

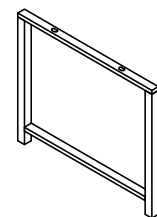


4 pcs

B1

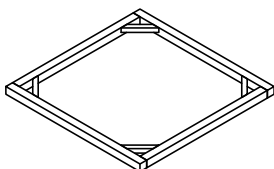


2 pcs

C1










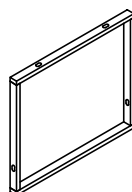










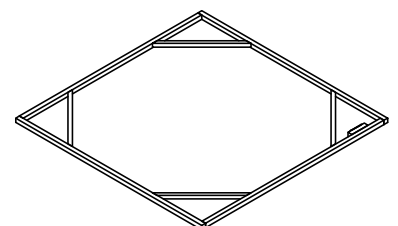



4 pcs


D1

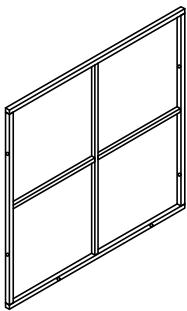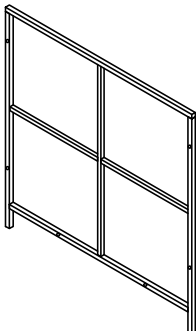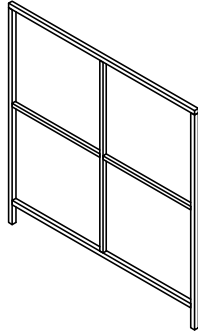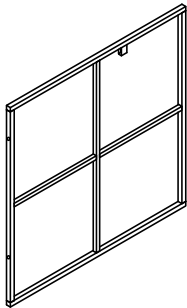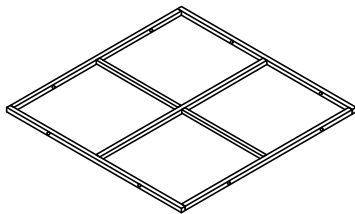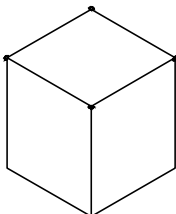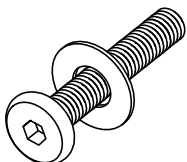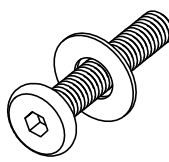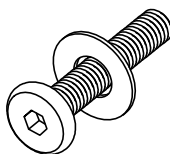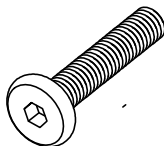


1 pc
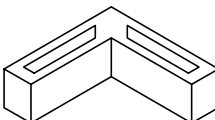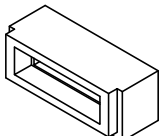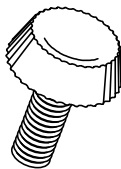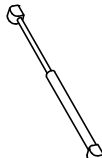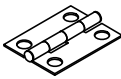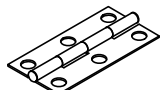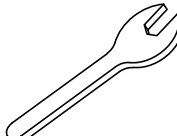
<div>E1</div> <div></div> <div>1 pc</div>	<div>F1</div> <div></div> <div>1 pc</div>	<div>G1</div> <div></div> <div>1 pc</div>			
<div>H1</div> <div></div> <div>1 pc</div>	<div>I1</div> <div></div> <div>1 pc</div>	<div>J1</div> <div></div> <div>1 pc</div>			
<div>1</div> <div></div> <div>Bolt M6x50 mm (2 pcs)+extra 1 pc</div>	<div>2</div> <div></div> <div>Bolt M6x40 mm (4 pcs)+extra 1 pc</div>	<div>3</div> <div></div> <div>Bolt M6x30 mm (70 pcs)+extra 3 pcs</div>	<div>4</div> <div></div> <div>Bolt M6x30 mm (28 pcs)+extra 2 pcs</div>	<div>5</div> <div></div> <div>Bolt M6x15mm (16 pcs)+extra 2 pcs</div>	
<div>6</div> <div></div> <div>Bolt M6x15 mm (34 pcs)+extra 3 pcs</div>	<div>7</div> <div></div> <div>Plastic washer (2 pcs)+extra 1 pc</div>	<div>8</div> <div></div> <div>Nut M6 (2 pcs)+extra 1 pc</div>	<div>9</div> <div></div> <div>Plastic feet 1 (8 pcs)</div>	<div>10</div> <div></div> <div>Plastic feet 1 (6 pcs)</div>	
<div>11</div> <div></div> <div>Plastic feet (4 pcs)</div>	<div>12</div> <div></div> <div>Gas spring (2 pcs)</div>	<div>13</div> <div></div> <div>Hinge 1 (4 pcs)</div>	<div>14</div> <div></div> <div>Hinge 2 (3 pcs)</div>	<div>15</div> <div></div> <div>Spanner (1 pc)</div>	<div>16</div> <div></div> <div>Allen key M4 (2 pcs)</div>


WF 300006

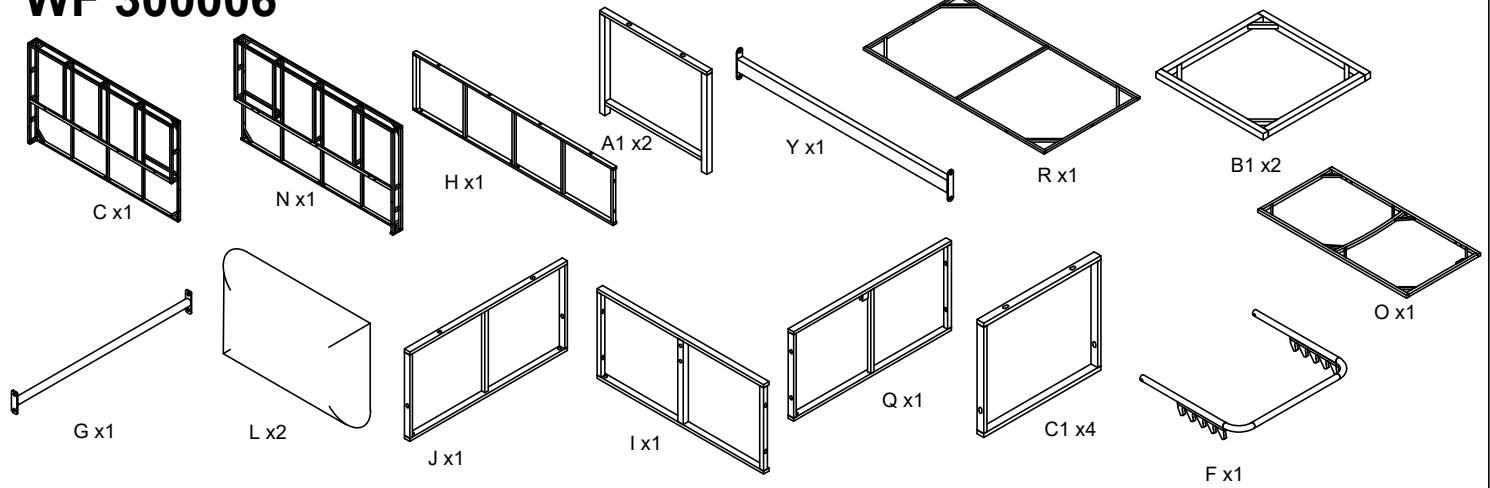


WF 300007

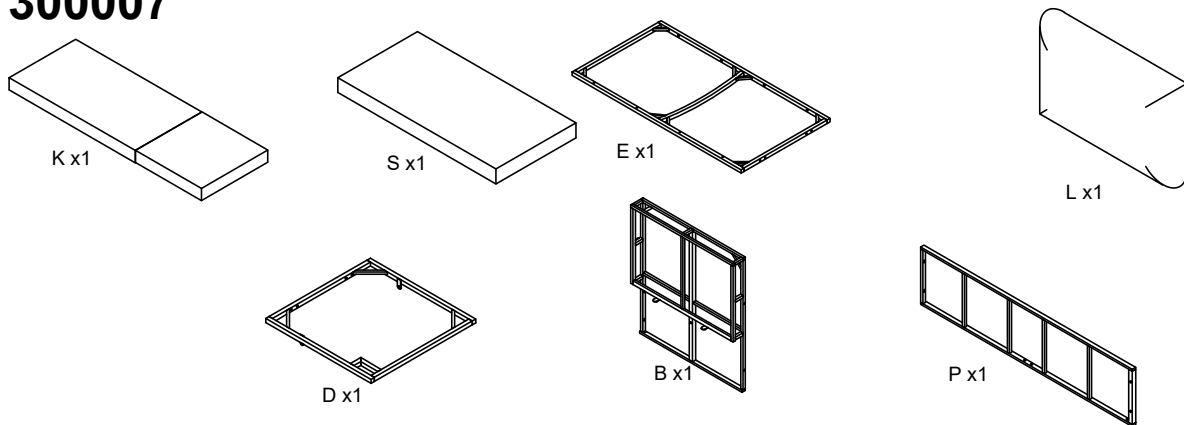

WF 300008

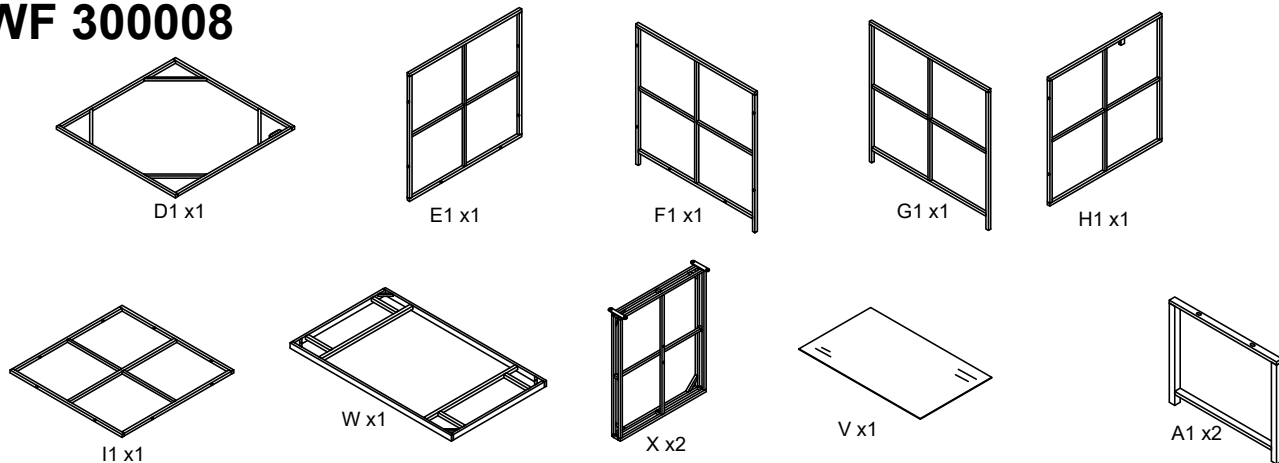


WF 300009

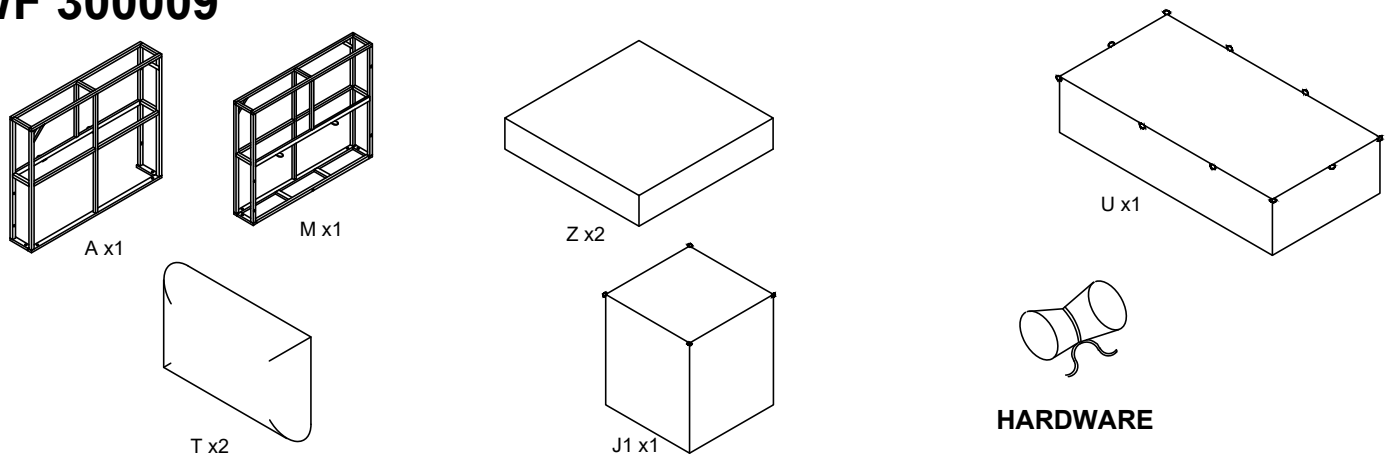


HARDWARE

Step 1

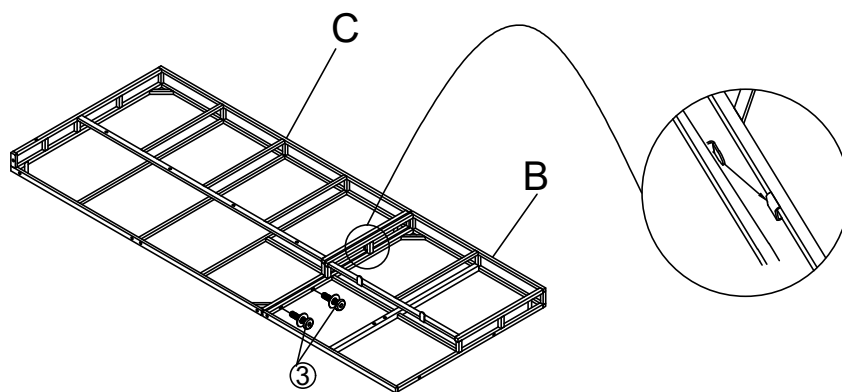


③ x2

Step 2

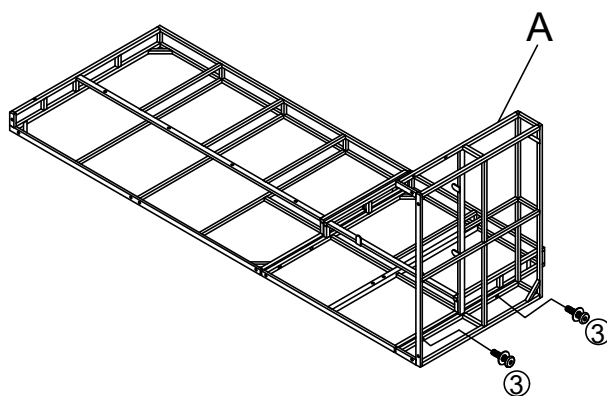


③ x2

Step 3

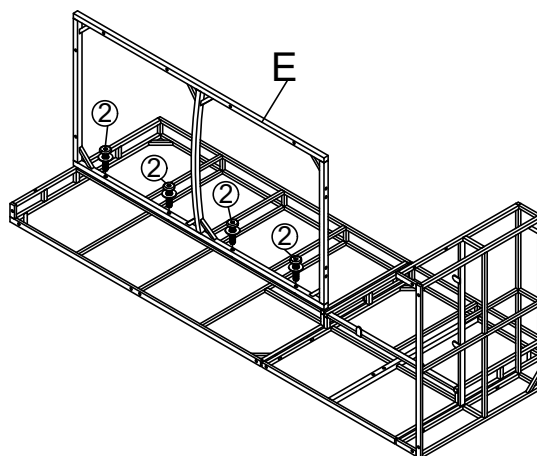


② x4

Step 4

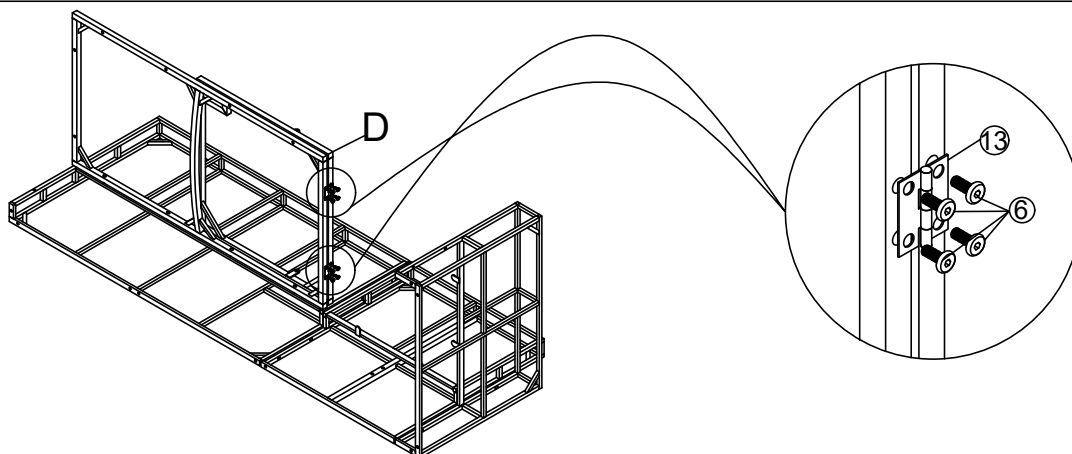


⑥ x8 ⑬ x2

Step 5

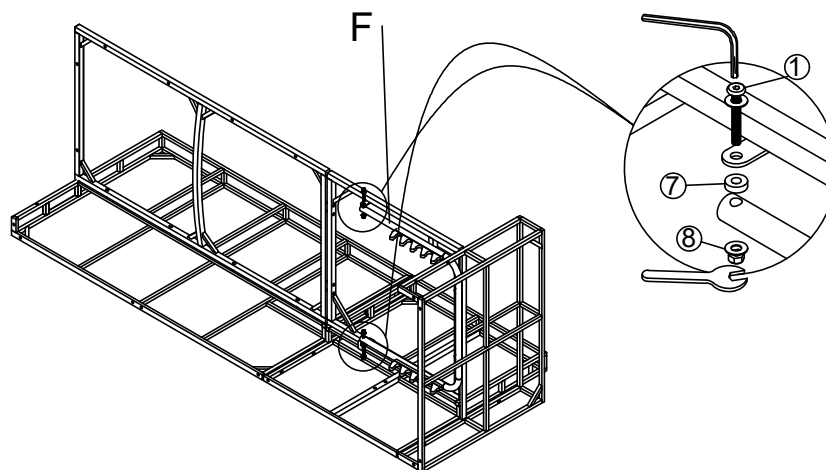


① x2 ⑦ x2 ⑧ x2

Step 6

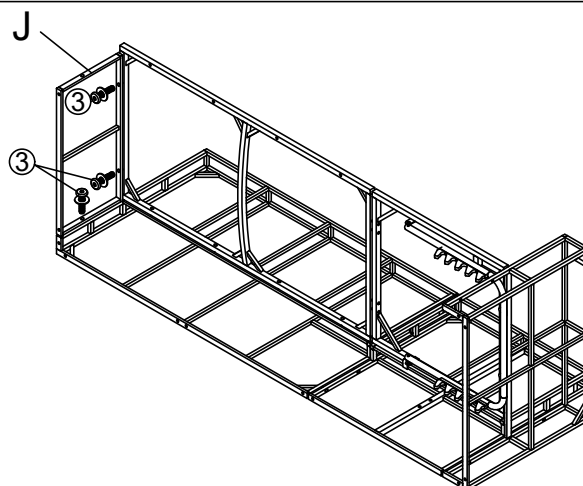


③ x3

Step 7

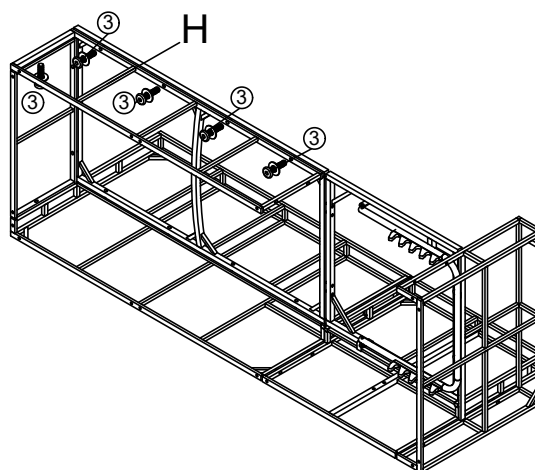


③ x5

Step 8

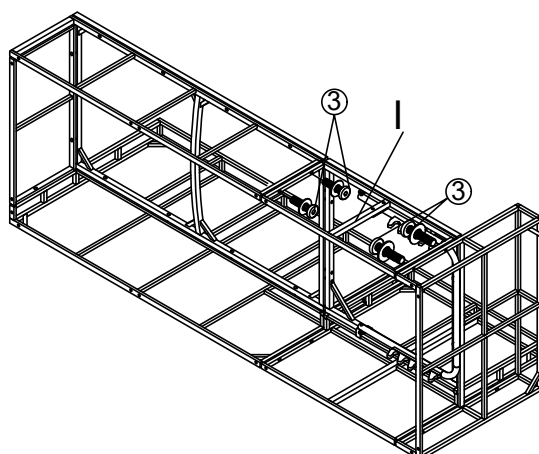


③ x4

Step 9

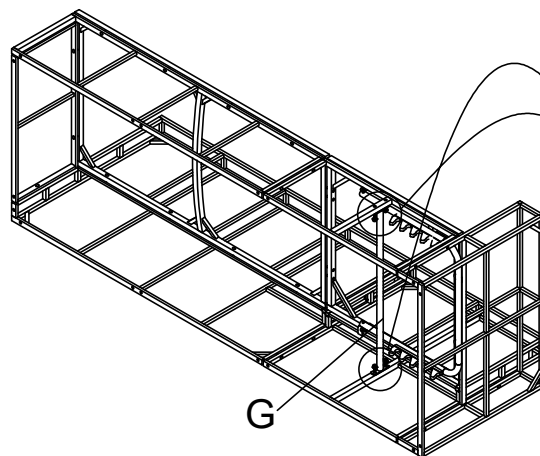



⑤ x4

Step 10

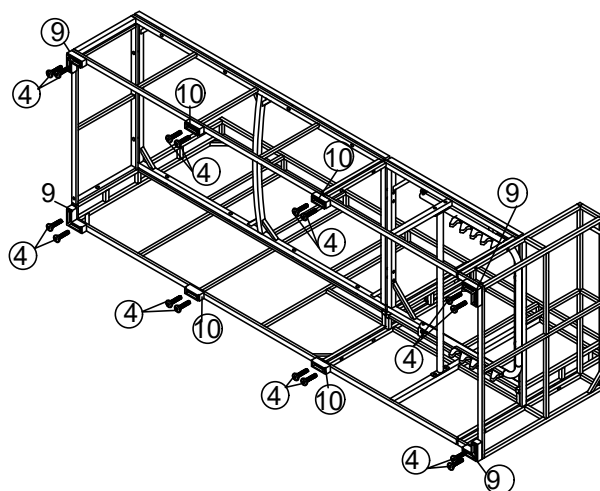


④ x16 ⑨ x4 ⑩ x4

Step 11

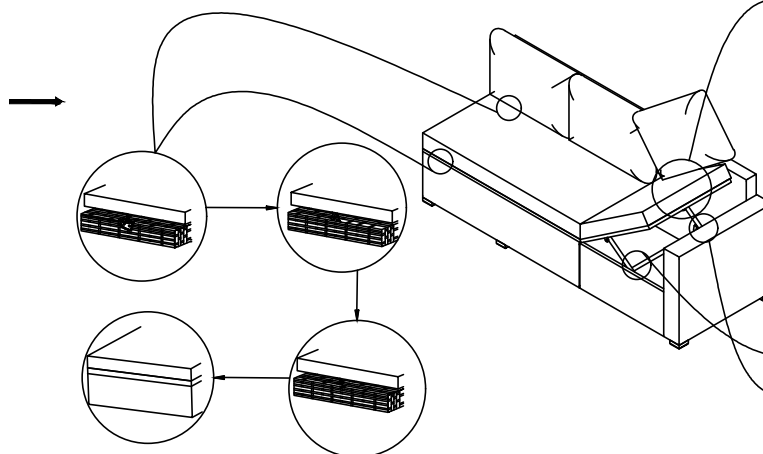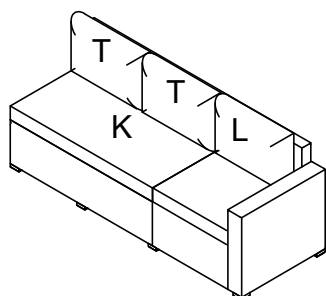


Step 12

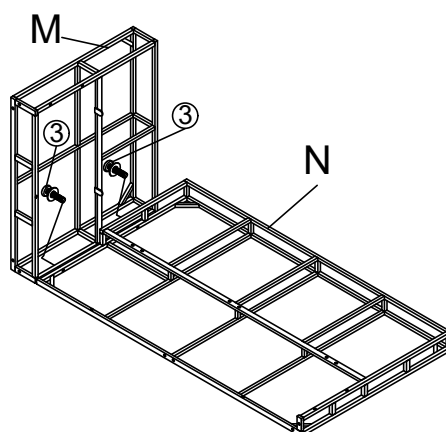


③ x2

Step 13

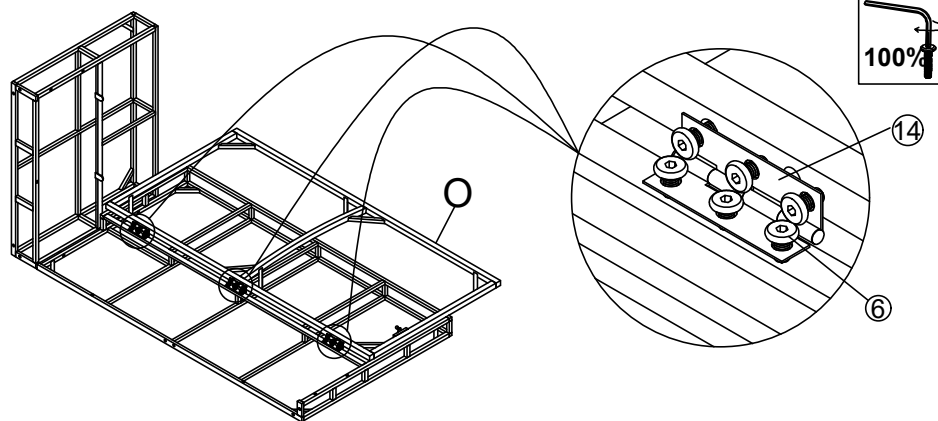


⑥ x18 ⑭ x3

Step 14

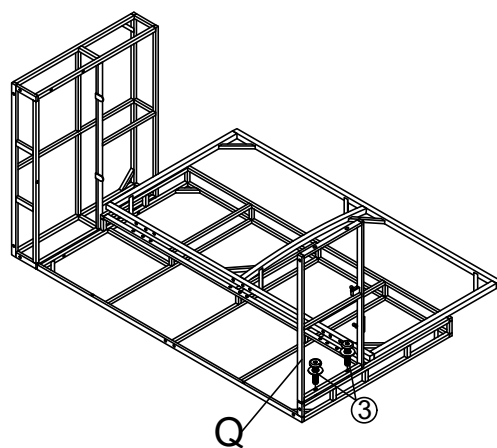


③ x2

Step 15

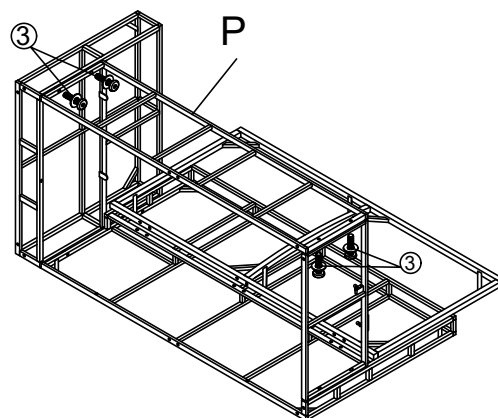


③ x4

Step 16

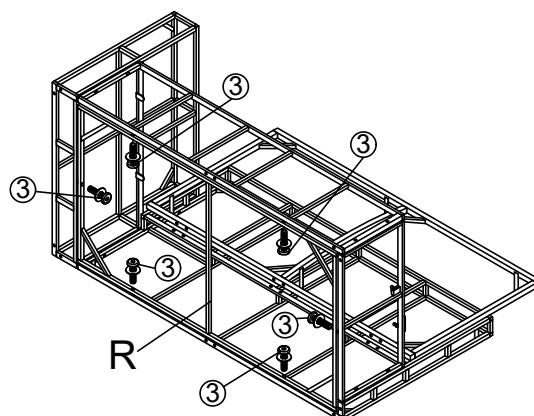

③ x6



Step 17

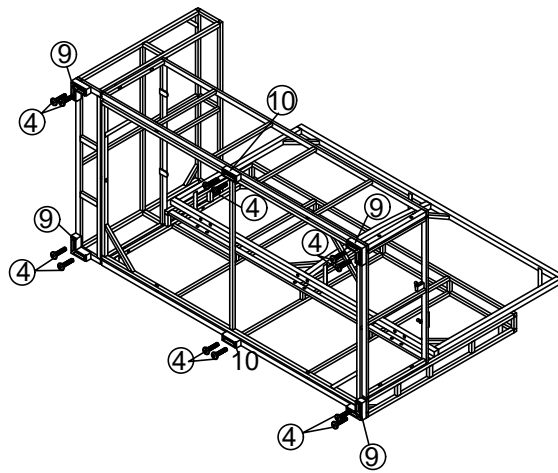

④ x12 ⑨ x4 ⑩ x2


Step 18

Always keep part O sheet upward like T not ⊥ and click gas spring with sheet

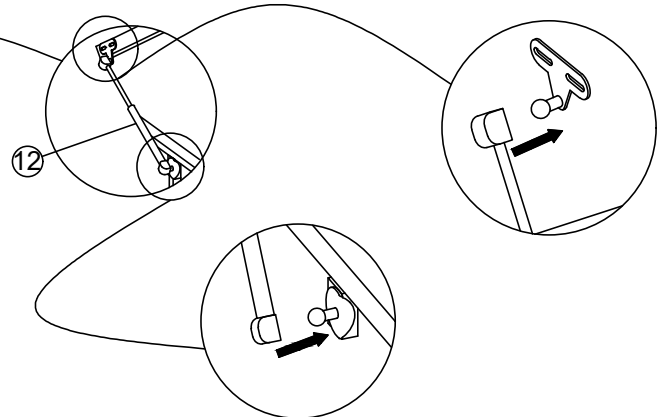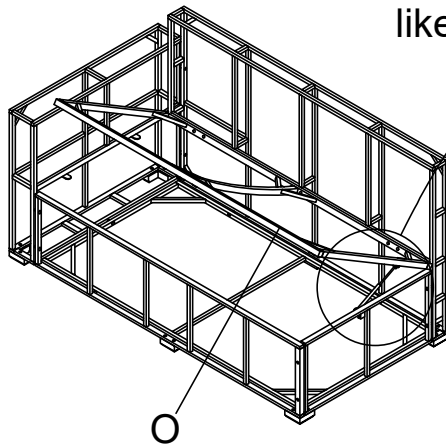


⑫ x1


Step 19

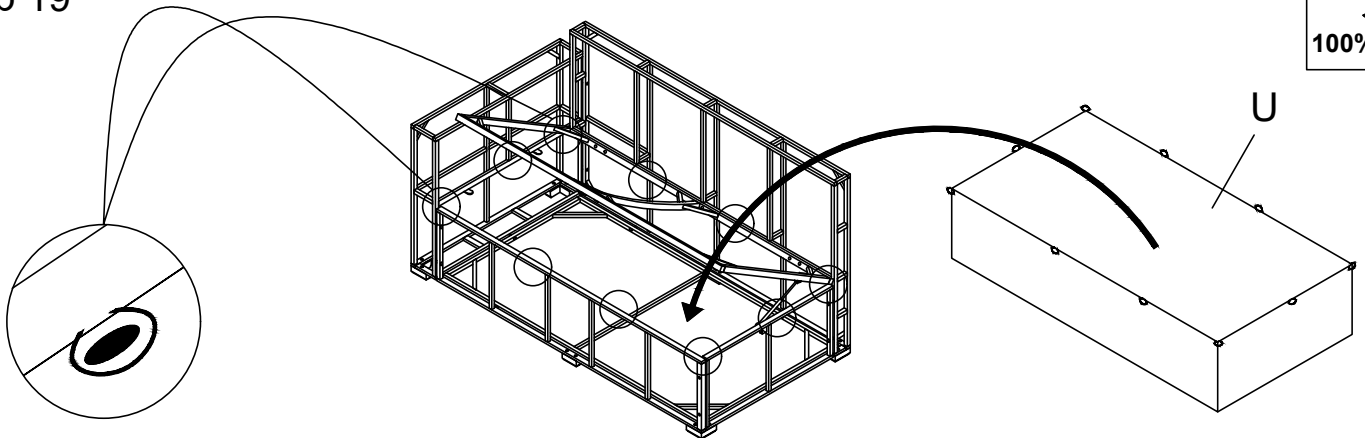

Step 20

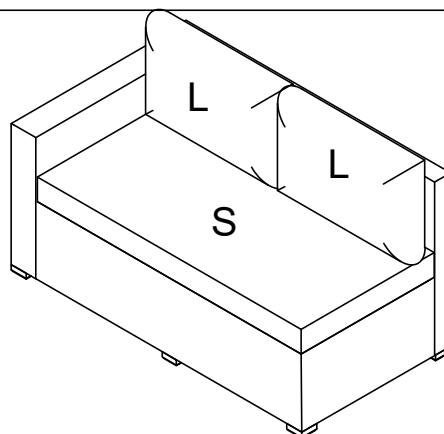


Step 21 x2

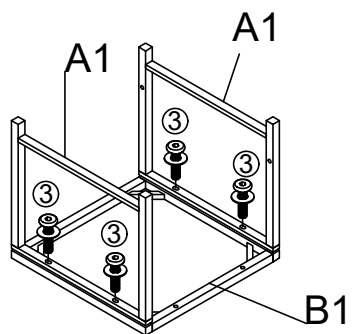


③ x4

Step 22 x2

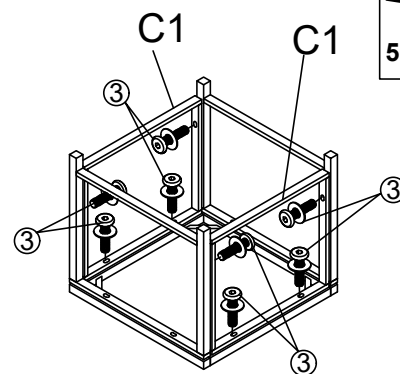


③ x8

Step 23 x2

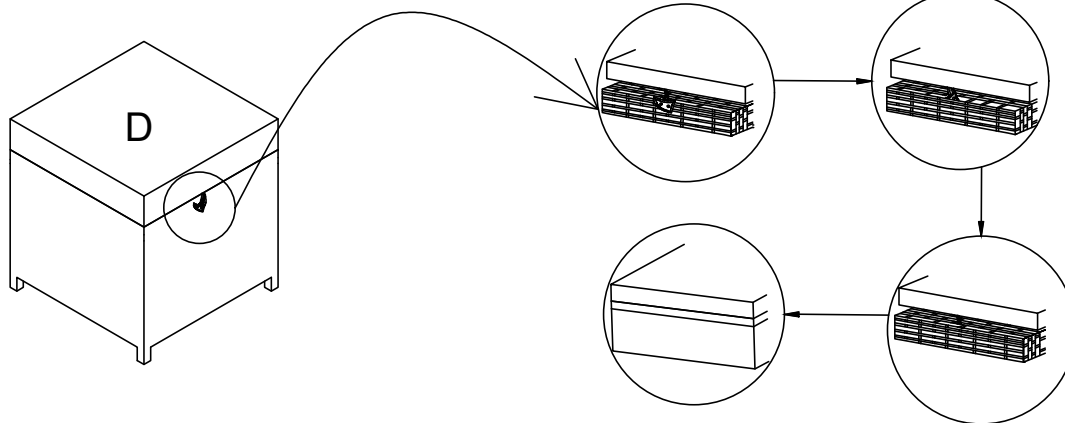


Step 24

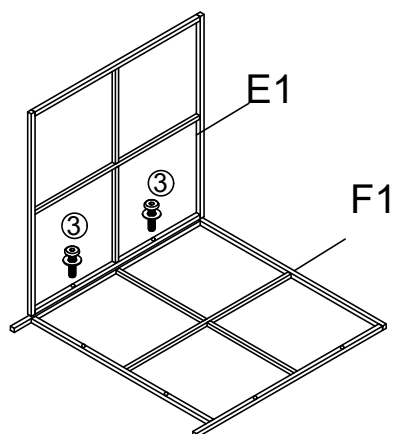


③ x2

Step 25

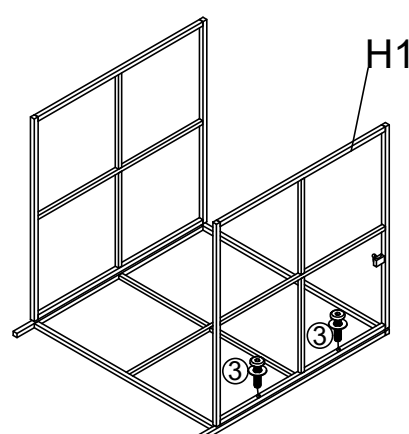


③ x2

Step 26

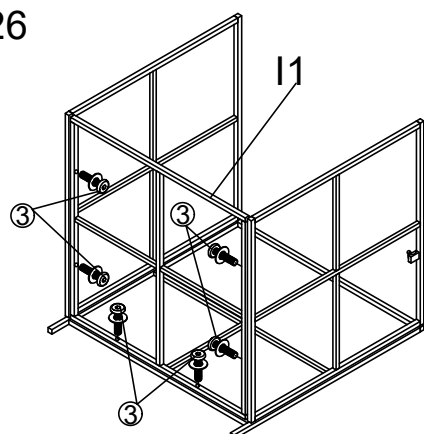


③ x6

Step 27

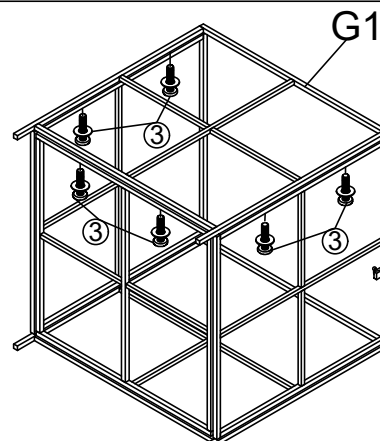

③ x6


Step 28

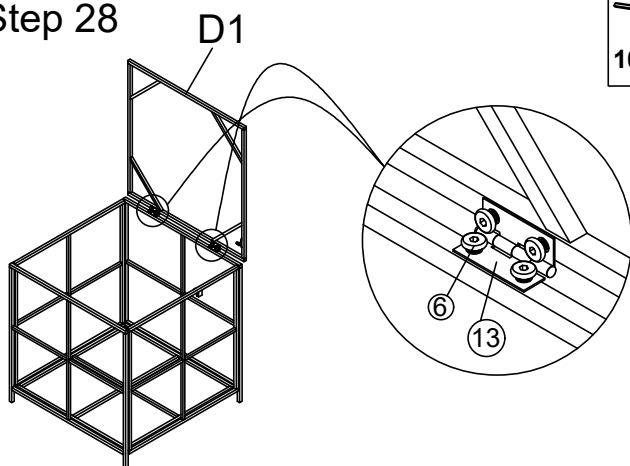

⑥ x8 ⑬ x2


Step 29

Always keep part D1 sheet upward like T not **L** and click gas spring with sheet

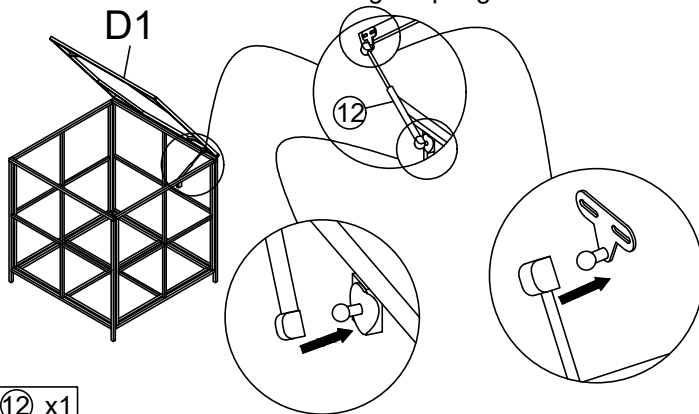


⑫ x1


Step 30

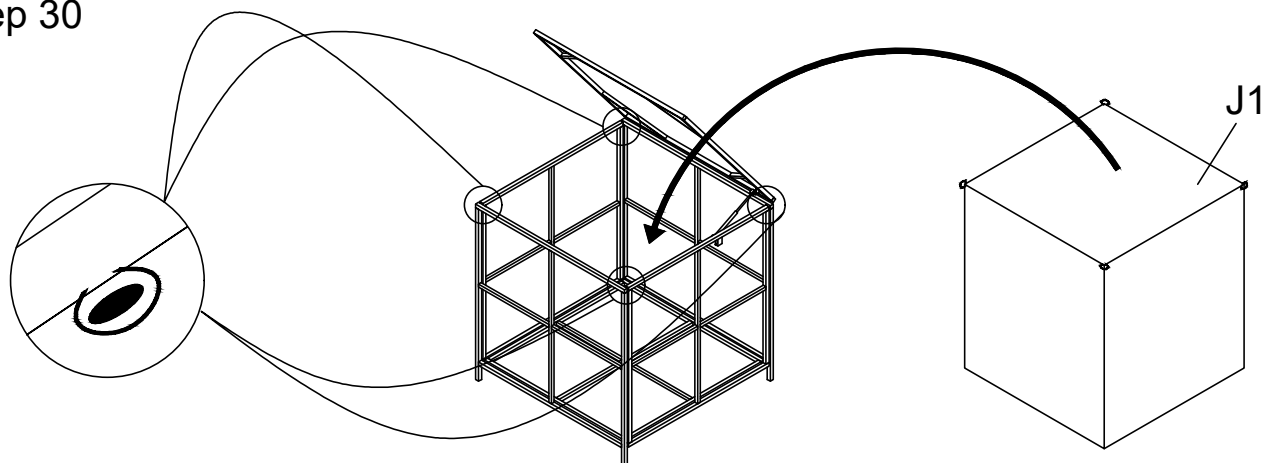

Step 31

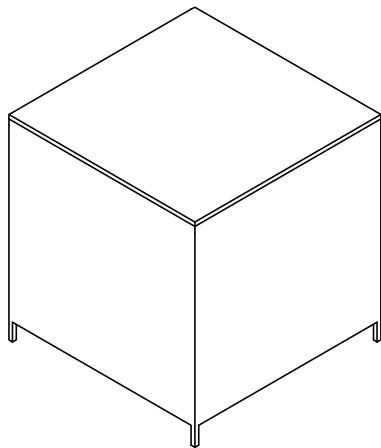


Step 32

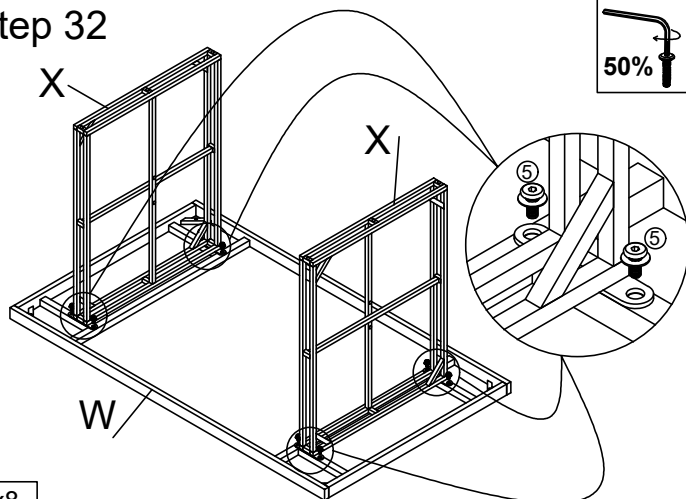


⑤ x8

Step 33

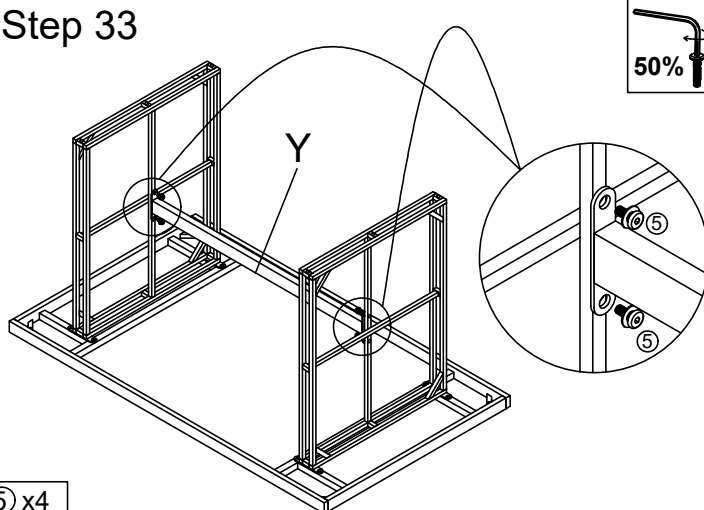


⑤ x4

Step 34

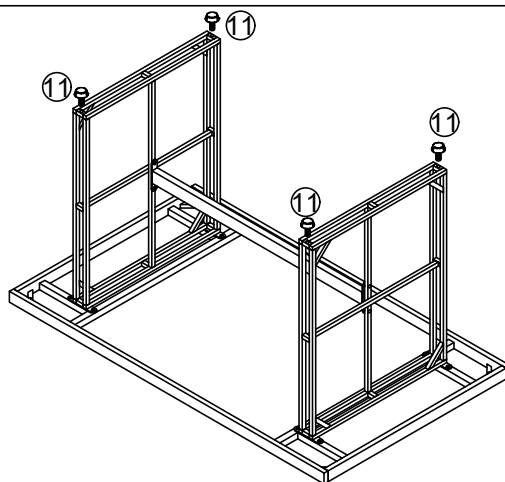

11 x 4

Step 35

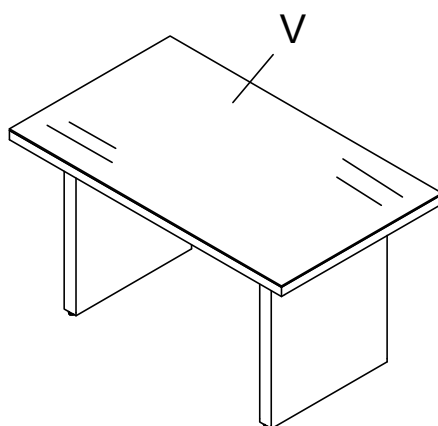

Step 36

