


6023-7664 18-Pair Over The Door Shoe Rack



A 2 ea
Curved Top Tubes



D 6 ea
Shoe Support Bars



F 4 ea
Wall Screws



H 4 ea
Wall Anchors

NOTE: Parts (F) and (H) are for optional mounting of frame.

Part	Reference
A	F8601
B	F8604
C	F8603
D	F8602
E	F5822
F	F5823
G	F5824
H	F5825
I	F11430



B 2 ea
Straight Side Tubes



E 2 ea
Mounts



C 2 ea
Curved Bottom Tubes



G 4 ea
Vinyl Caps




I 12 ea
Mounting Clips




VIDEO TUTORIAL:

A step-by-step video tutorial is available for this product:
www.whitmor.com/product-assembly-assistance/


Tools Needed: No tools required if hanging over the door. Phillips screwdriver and drill needed if wall-mounting.

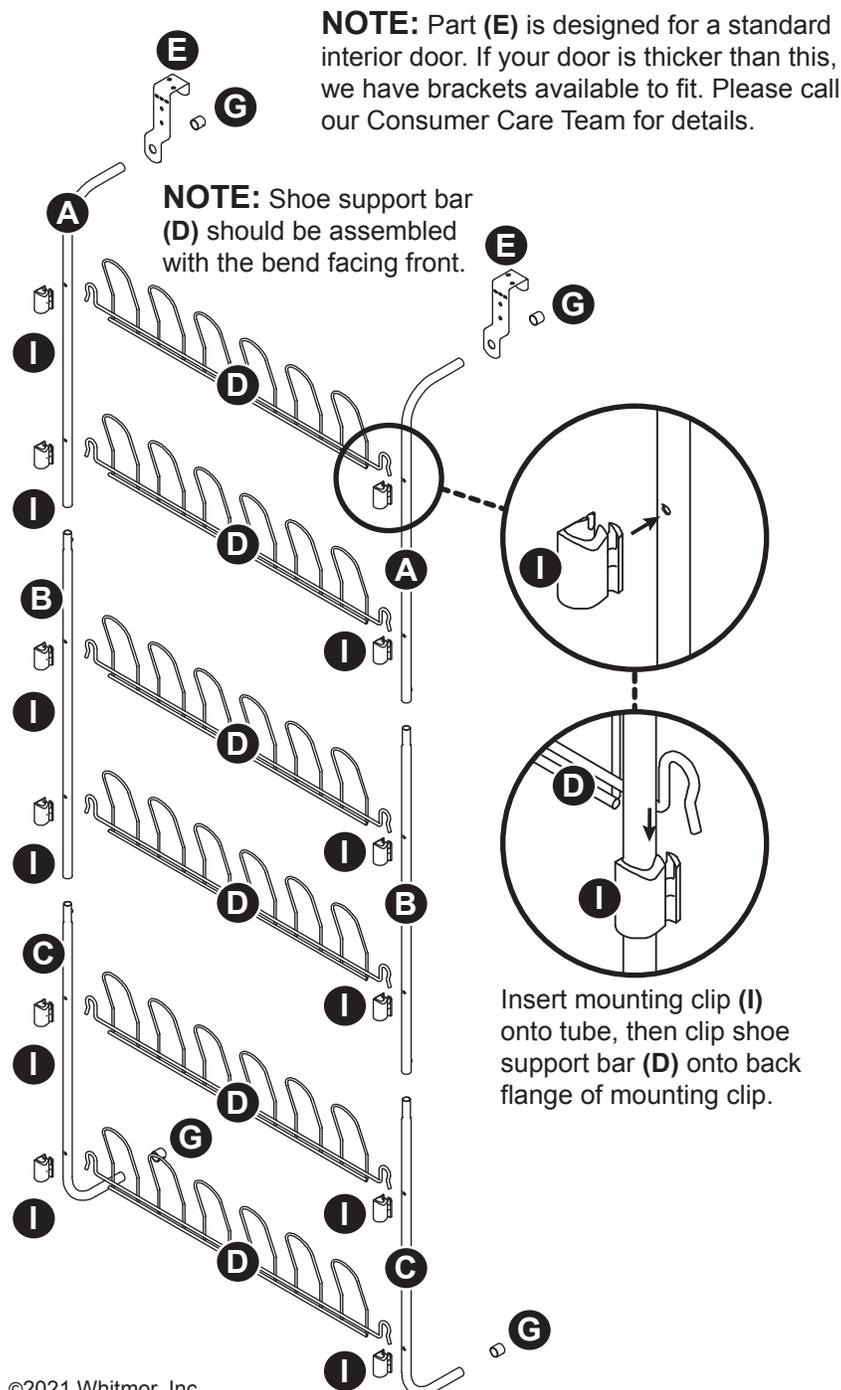

Instructions for wall-mounting.

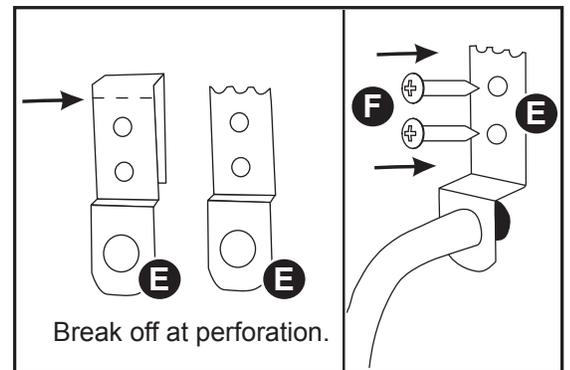

Use a drill (not included) to pre-drill holes if you are installing this shoe rack onto drywall or soft wall. Insert wall anchors (H). Use a Phillips screwdriver (not included) to tighten screws (F) into wall.

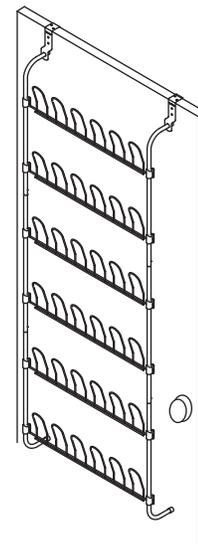

8680 Swinnea Road • Suite 103 • Southaven, MS • 38671

NEED HELP? For help with assembly, or if you are missing a part, please call Whitmor's Consumer Care Team, 1-888-944-8667 between 8 a.m. and 4:30 p.m. (Central Standard Time) Monday through Friday. Or email: help@whitmor.com. Visit us online at www.whitmor.com