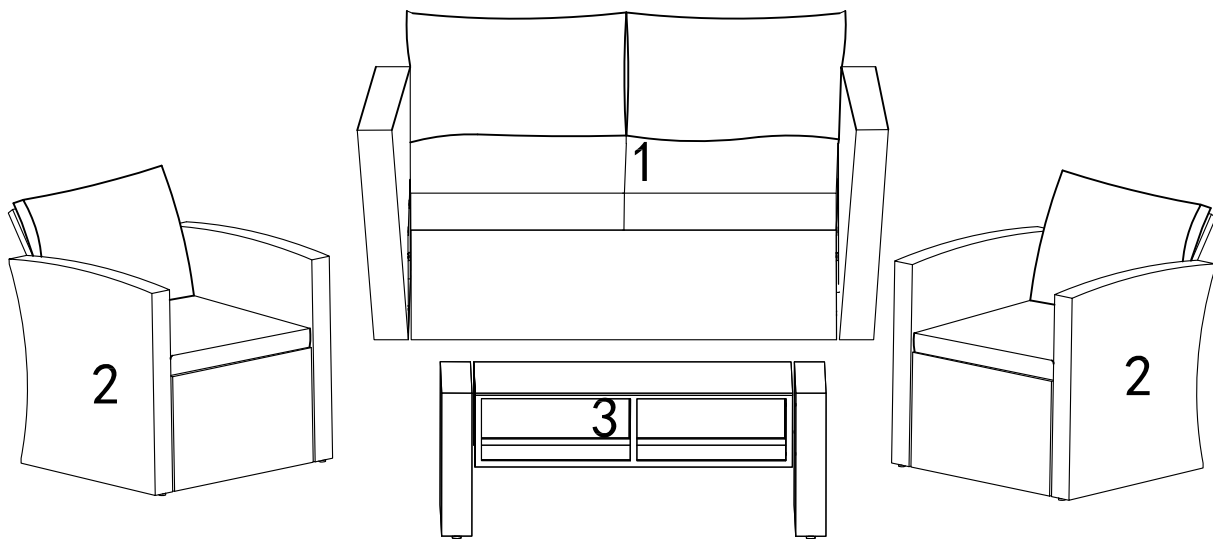


ITEM NO: BAS2236DBBG


BATCH NO: BSRJ-BY

SOFA SET PACKING LIST



CARTON NO.	CODE	DESCRIPTION	ACCESSORIES
CTN 1/1	1	LOVESEAT (K/D)	PART:Ax1+Bx1+Cx1+Dx1+Ex1+Fx15+Gx30+Hx15+Ix1+2 BACK CUSHIONS +2 SEAT CUSHIONS
	2	CHAIR (K/D)	PART:Ax1+Bx1+Cx1+Dx1+Ex1+Fx14+Gx28+Hx14+Ix1+1 BACK CUSHION +1 SEAT CUSHION
	3	COFFEE TABLE (K/D)	PART:Ax2+Bx2+Cx1+Dx1+Ex8+Fx8

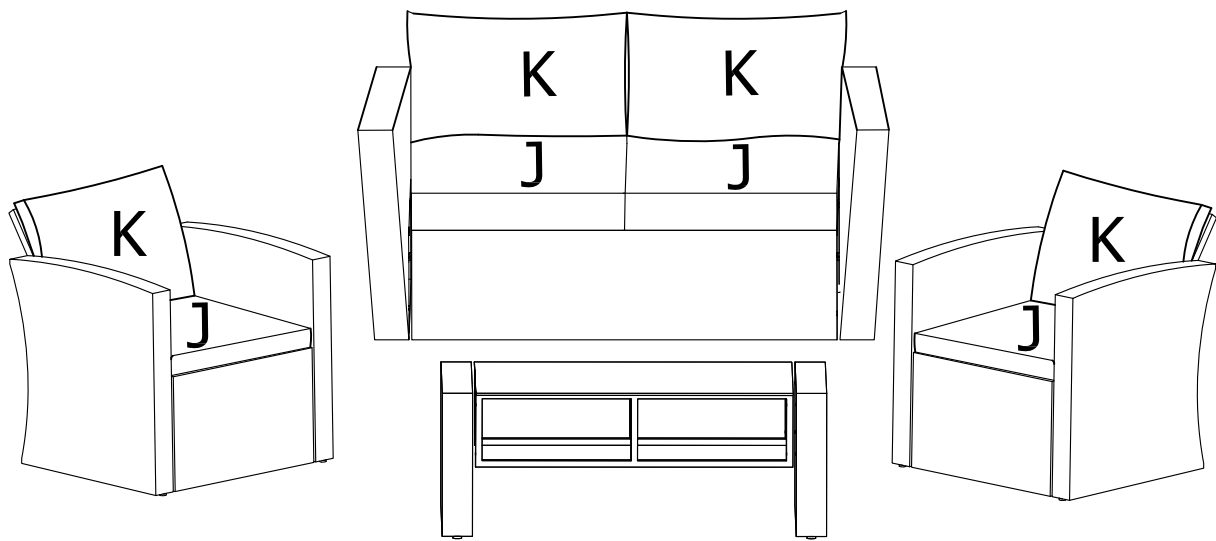*CUSHIONS DETAIL AS FOLLOW:



CARTON NO.	DESCRIPTION	ACCESSORIES
CTN 1/1	4 BACK CUSHIONS +4 SEAT CUSHIONS	PART:Jx4+Kx4




NOTE: YOU MAY FIND CUSHIONS PLACED UNDERNEATH THE TABLE OR BETWEEN FRAMES!

ITEM NO: BAS2236DBBG


BATCH NO: BSRJ-BY

1. LOVESEAT ASSEMBLY INSTRUCTION


PART LIST

A		LOVESEAT SEAT	1PC	B		LOVESEAT BACKREST	1PC
C		RIGHT ARMREST	1PC	D		LEFT ARMREST	1PC
E		ALLEN WRENCH	1PC	F		BOLT (M6*25 mm)	15PCS
G		WASHER	30PCS	H		NUT	15PCS
I		WRENCH	1PC				

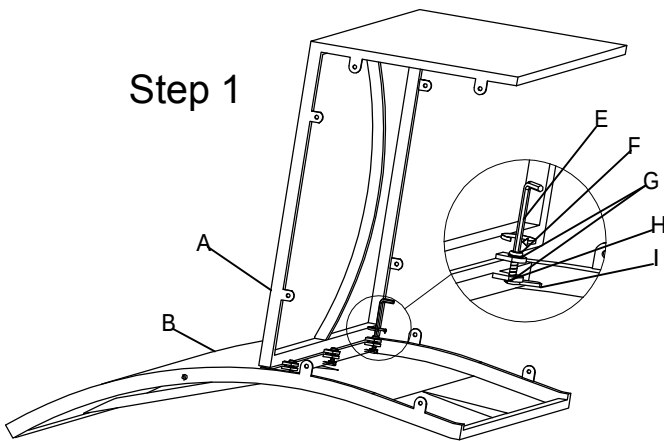
Step 1



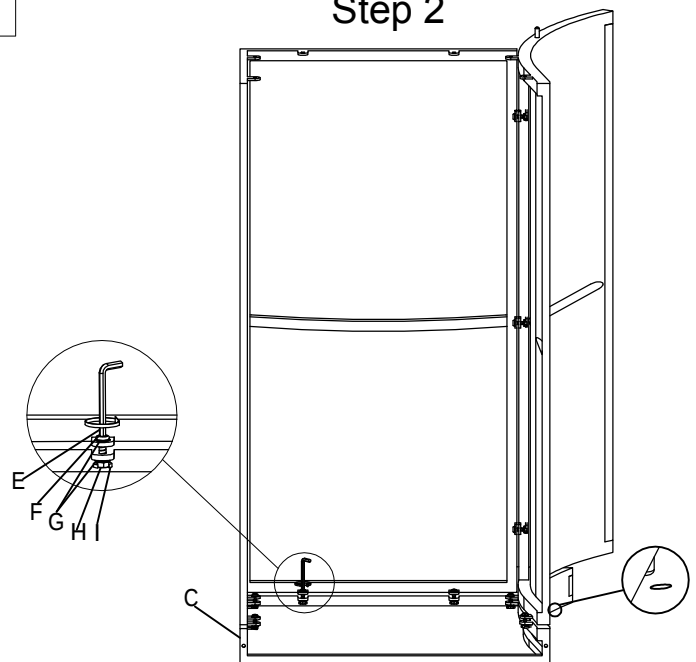
Step 2



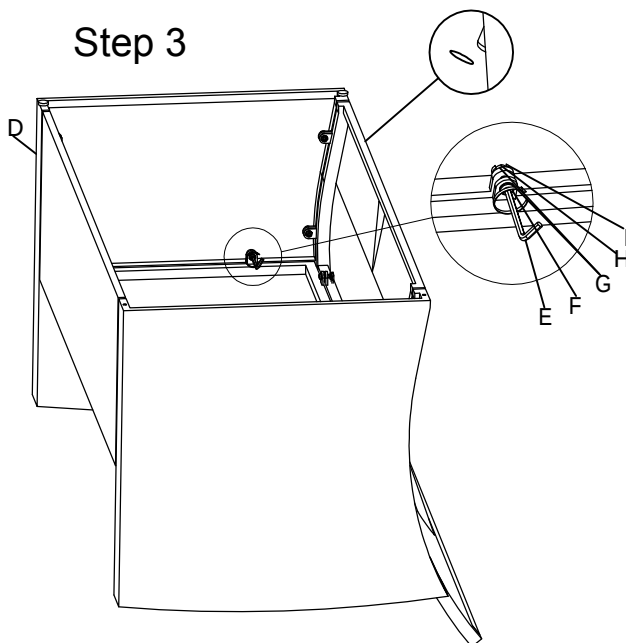Step 3



Completed unit



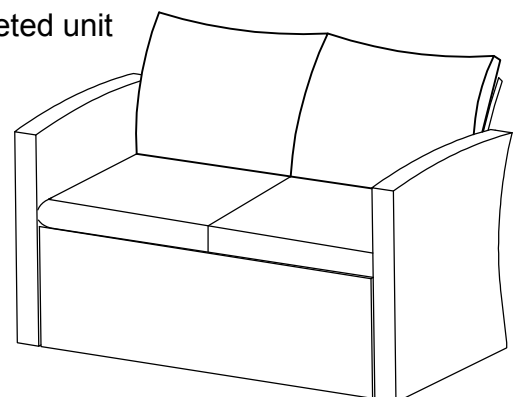
**NOTE : Do not tighten bolts until all parts are connected.**

ITEM NO: BAS2236DBBG


BATCH NO: BSRJ-BY

2. CHAIR ASSEMBLY INSTRUCTION


PART LIST

A		CHAIR SEAT	1PC	B		CHAIR BACKREST	1PC
C		RIGHT ARMREST	1PC	D		LEFT ARMREST	1PC
E		ALLEN WRENCH	1PC	F		BOLT (M6*25 mm)	14PCS
G		WASHER	28PCS	H		NUT	14PCS
I		WRENCH	1PC				

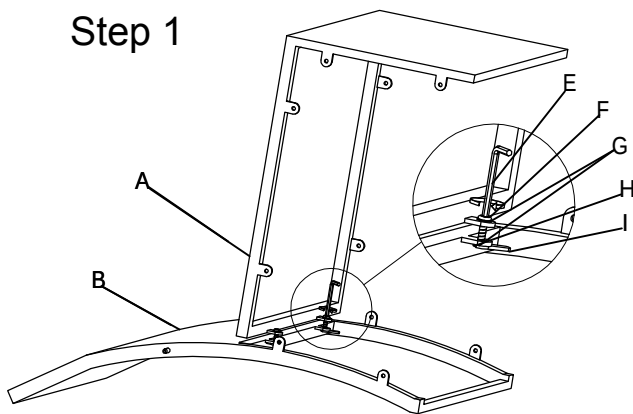
Step 1



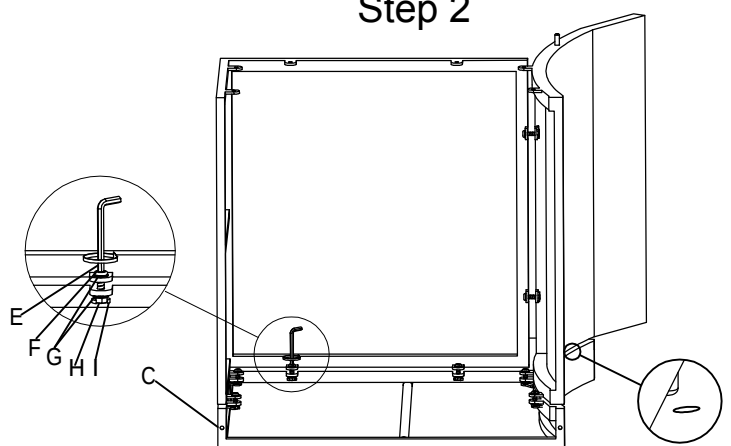
Step 2



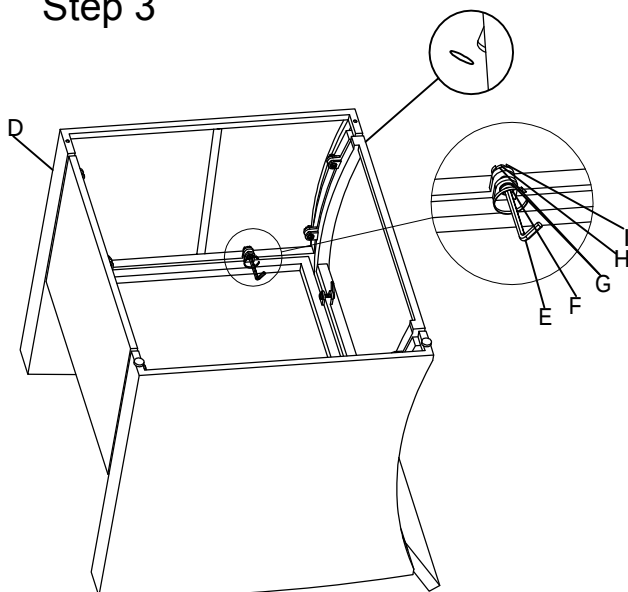Step 3



Completed unit



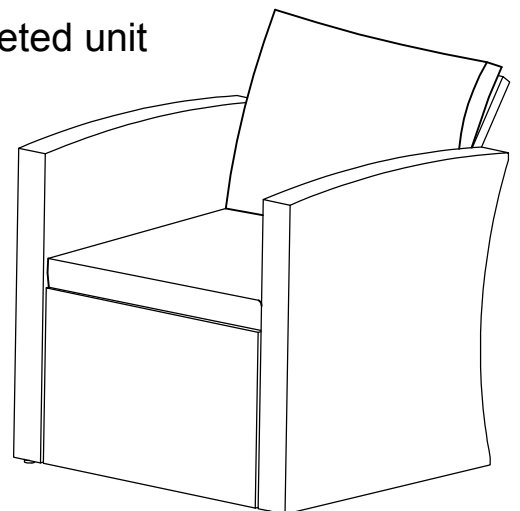
**NOTE : Do not tighten bolts until all parts are connected.**

ITEM NO: BAS2236DBBG


BATCH NO: BSRJ-BY

3. COFFEE TABLE ASSEMBLY INSTRUCTION


PART LIST

A		LONG SIDE	2PCS	B		SHORT SIDE	2PCS
C		GLASS	1PC	D		ALLEN WRENCH	1PC
E		BOLT (M6*30 mm)	8PCS	F		WASHER	8PCS

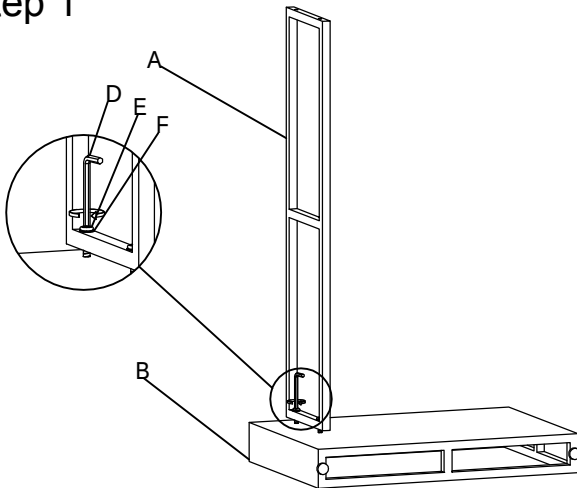
Step 1



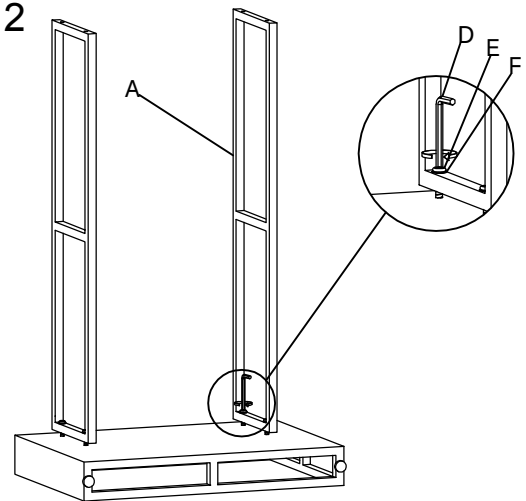
Step 2



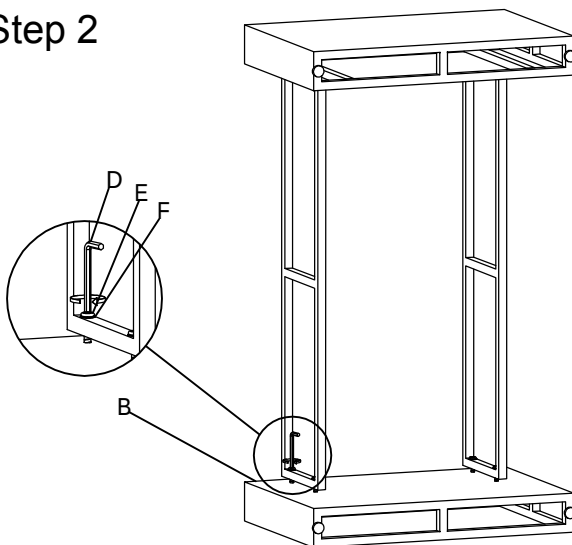Step 2



Completed unit

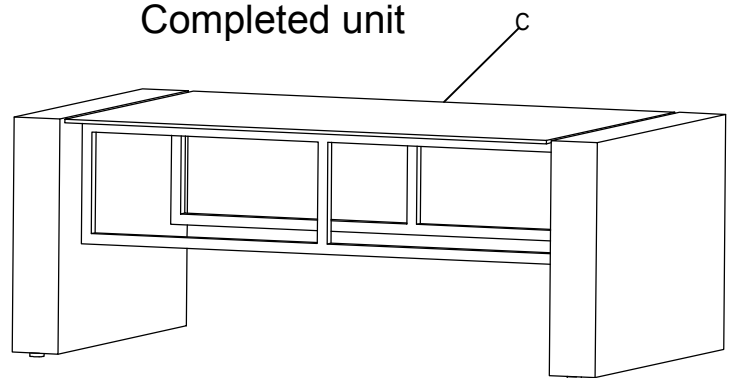**NOTE : Do not tighten bolts until all parts are connected.**