
Fontana Flavia Brushed Nickel Color Changing LED Rainfall Shower Set

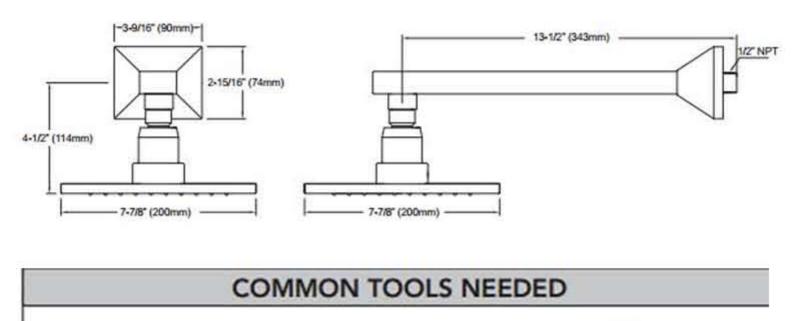





Screwdriver



Pipe Tape





Adjustable Wrench



BEFORE INSTALLATION


- Observe all local plumbing codes.
- Make sure water supply is shut off.
- Read these instructions carefully to ensure proper installation.
- TOTO[®] reserves the right to update product design without notice.
- Check to make sure you have the following parts indicated below:

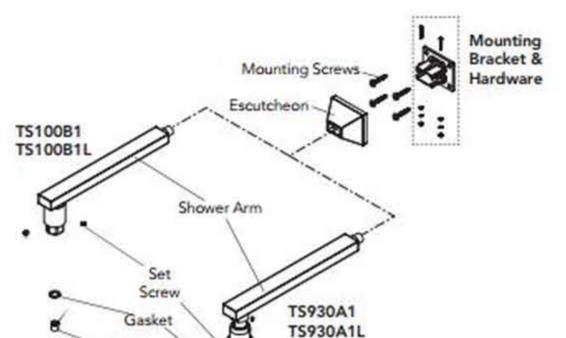

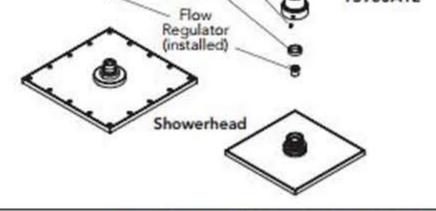

INSTALLATION PROCEDURE

- NOTE: The product is heavy. Use the recommended mounting support as shown to suppor the shower prior to installation.
- Thoroughly clean and remove any debris from the water supply pipe before installation to prevent clogging the spray outlet.



Slide the escutcheon and mounting bracket onto the shower arm as shown.

Apply an adequate amount of pipe tape on the threads and thread the shower arm into the supply elbow.


 Slide the mounting bracket back against the wall and tighten with pan head screws and washers.


Secure the mounting bracket onto the wall with mounting screws. Slide the escutcheon toward the wall over the mounting bracket.


FOR TS930A1/TS930A1L ONLY: Make sure that the flow regulator and gasket are both properly installed in the showerhead adapter.

Thread the showerhead adapter into the shower arm adapter until it is tight.

Adjust the showerhead so that the TOTO® logo is parallel to the wall (slightly loosen the showerhead if necessary), then tighten with set screws.

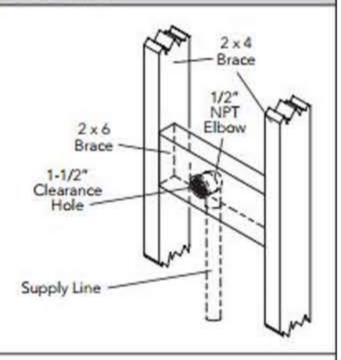

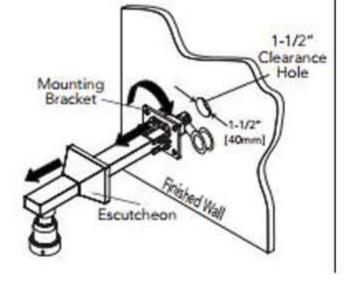

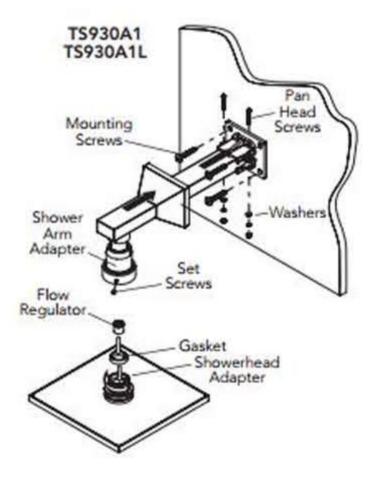

Installation Procedure (continued)

 Slide the mounting bracket back against the wall and tighten with pan head screws and washers.

Secure the mounting bracket onto the wall with mounting screws.


Slide the escutcheon toward the wall over the mounting bracket.

FOR TS100B1/TS100B1L ONLY: Slide the shower arm adapter upward so that the hex nut is accessible.

Make sure that the flow regulator is properly installed into the showerhead adapter and that the gasket is inside the hex nut.


Thread the showerhead adapter into the hex nut until tight.


Adjust the showerhead so that the

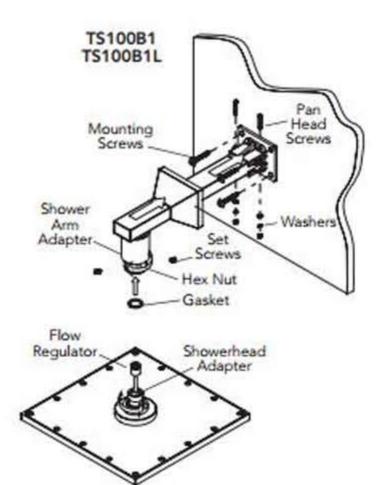



TOTO[®] logo is parallel to the wall (slightly loosen the showerhead if necessary), then tighten with set screws.

Slide the shower arm adapter over the hex nut and thread it onto the showerhead adapter.

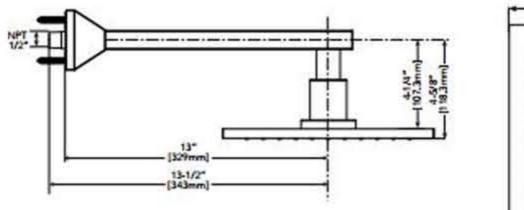

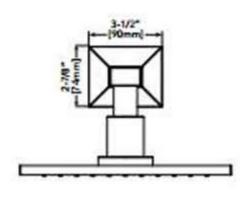


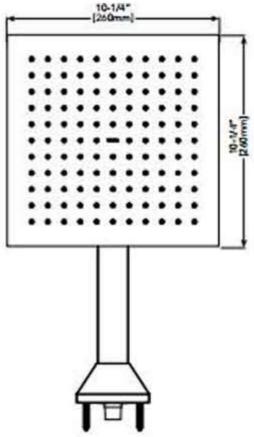

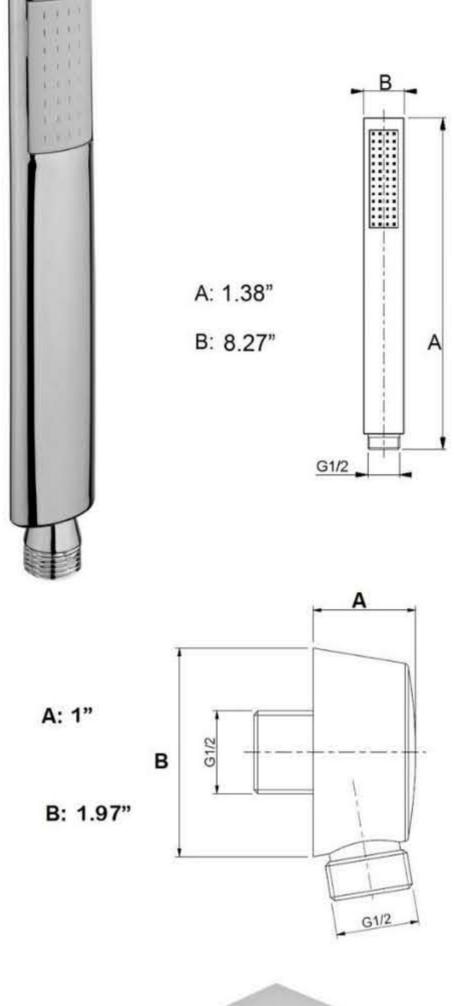






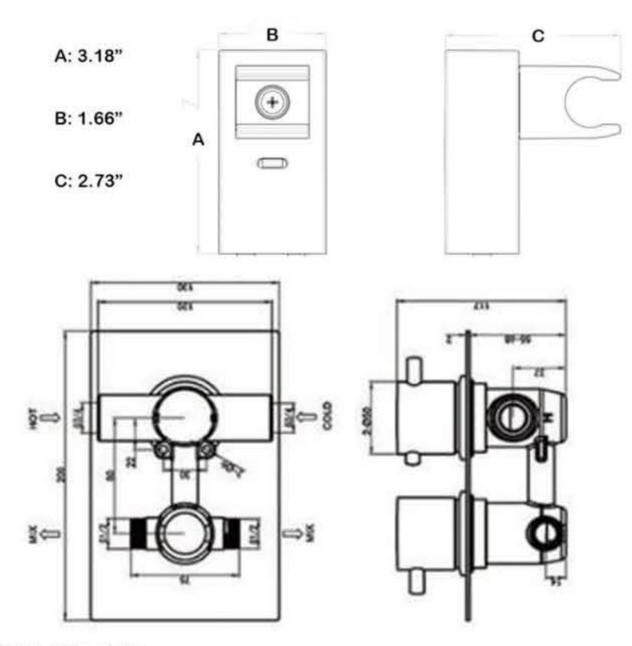



VALVE EXPLODED VIEW:

1	SD10101000200
2	M0105004
3	SD15617000100
4	SD10117000400
5	SD10117000500
6	SD15619000300
7	OXQ50030
8	FX0402
9	SD10117000600
10	SD10119000800-1
11	SD10119000700-1
12	M0305022
13	SD10119000900
14	M0805032
15	SD10119001000
16	SD10119001100
17	M110405

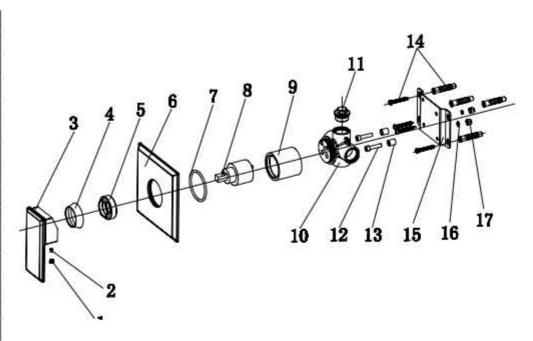



INSTALLATION:

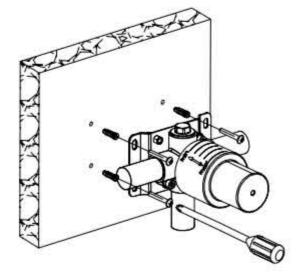

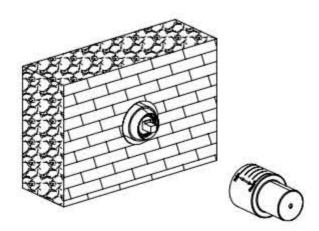

When the finished wall is complete, remove the protective cover.

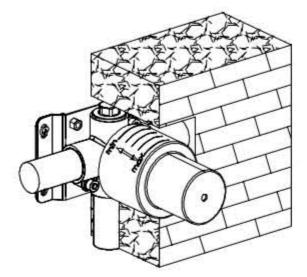

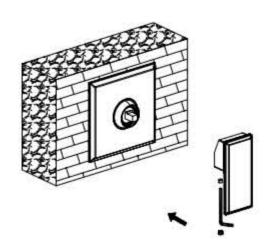

- 4. Install the escutcheon, and handle. Tighten the set screw with an Allen wrench to secure.
- 5. Attach the shower arm escutcheon to the shower arm. Wrap the threaded portions of the shower arm with Teflon tape and connect the arm to the shower inlet. Adjust the direction of the water flow as needed. Attach the rainfall shower head to the shower arm.

This General diagram and installation instructions are not intended for any specific model, but is presented as a general guideline for Installations!