### ASSEMBLY INSTRUCTION FOR ACME FURNITURE


# MODEL# 97162 Three Layer Shelf

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Separate, identify, and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of the part(s) needed.

### \*\*\* Do not fully tighten screws until fully assembled \*\*\*

COMPONENT PARTS			
DECERPTION	PART NAME	Q'TY(PCS)	
1)	Side Support Frame	2pcs	
2	Shelf Support Frame	3pcs	
3	Shelf	> 3pcs	

HARDWARE REQUIRED:		
A Ommunio	Bolt 1/4"x1-3/4" - 12pcs	
B Quin	Screw M5 - 12pcs	
	Allen Wrench M4 - 1pc	
	Screw M4 - 1pc	
	Metal Plate - 2pcs	
F	Anchor - 1pc	
© 7	Girding - 1pc	

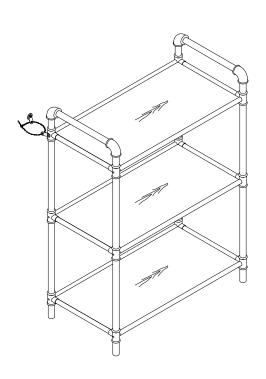


#### Attention

<sup>\*\*\*</sup>Mattreses not included.

<sup>\*\*\*</sup>Some number parts listed on the instruction sheet may not be in parts bag as they may already be assemble. Carefully check parts and packing materials prior to odering replacements.

## How to Assemble:

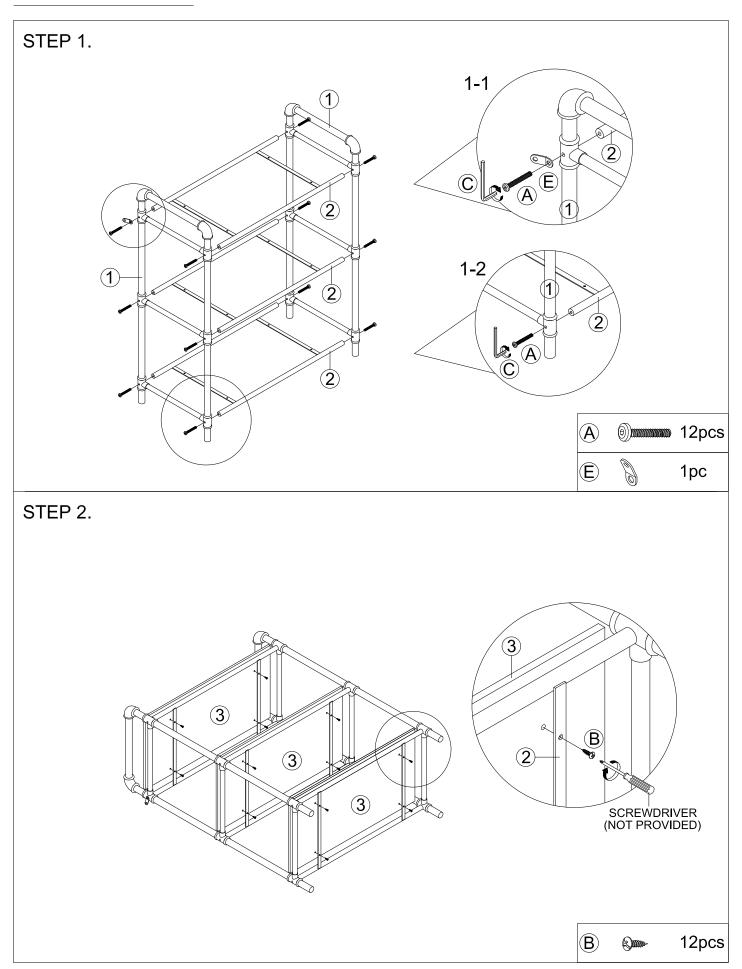

## How to Assemble:

