

Assembly Instructions


CARE INSTRUCTIONS:

WIPE CLEAN WITH A DRY CLOTH. A MILD ODOUR MAY BE PRESENT WHEN FIRST OPENING THIS CARTON. SIMPLY ALLOW TO AIR OUTSIDE AND THIS WILL FADE. DO NOT USE ABRASIVE MATERIALS AND SOLVENTS. KEEP AWAY FROM WATER AND DIRECT SUNLIGHT. DO NOT PLACE HOT ITEMS SUCH AS COFFEE CUPS DIRECTLY ON THE SURFACE. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY.






WARNING:

DO NOT STAND OR SIT ON THIS ITEM. DO NOT USE UNTIL ALL SCREWS ARE FIRMLY SECURED. USE ONLY ON A FLAT SURFACE. ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY. **MAXIMUM SAFE LOAD: 10KGS FOR TOP PANEL, 5KGS FOR SHELF.**


1 Hardware List

	A	6x30mm	10pcs		B		12pcs		C		12pcs
	D	M3x14 mm	4pcs		E	M4x30mm	2pcs		F		1pc
	G		4pcs		H	M3x18mm	4pcs		I		2pcs

2 Parts List

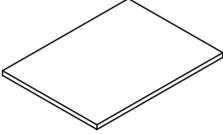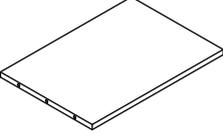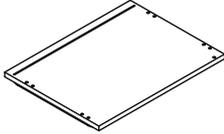
							
①	1pc	②	1pc	③	1pc	④	1pc
							
⑤	1pc	⑥	1pc	⑦	1pc	⑧	4pcs

3

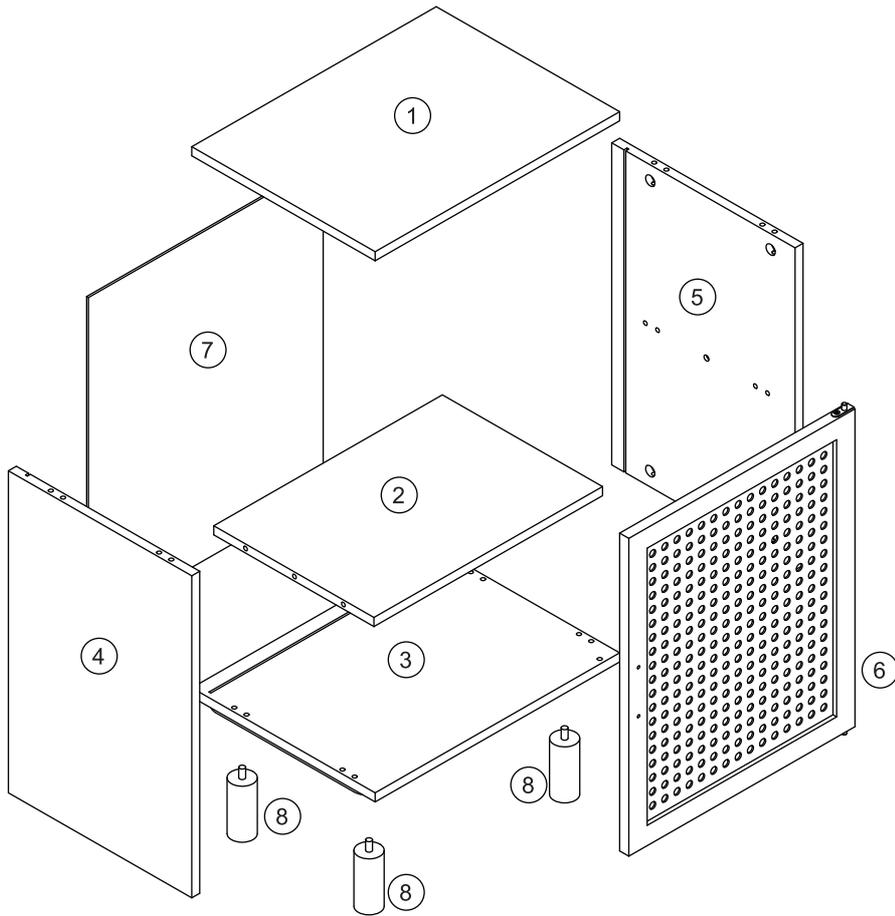


STEP 1

Begin assembly by attaching Part (4)(5) to Part (2) by inserting wooden dowel(A) and securing with camlock (B)&(C).

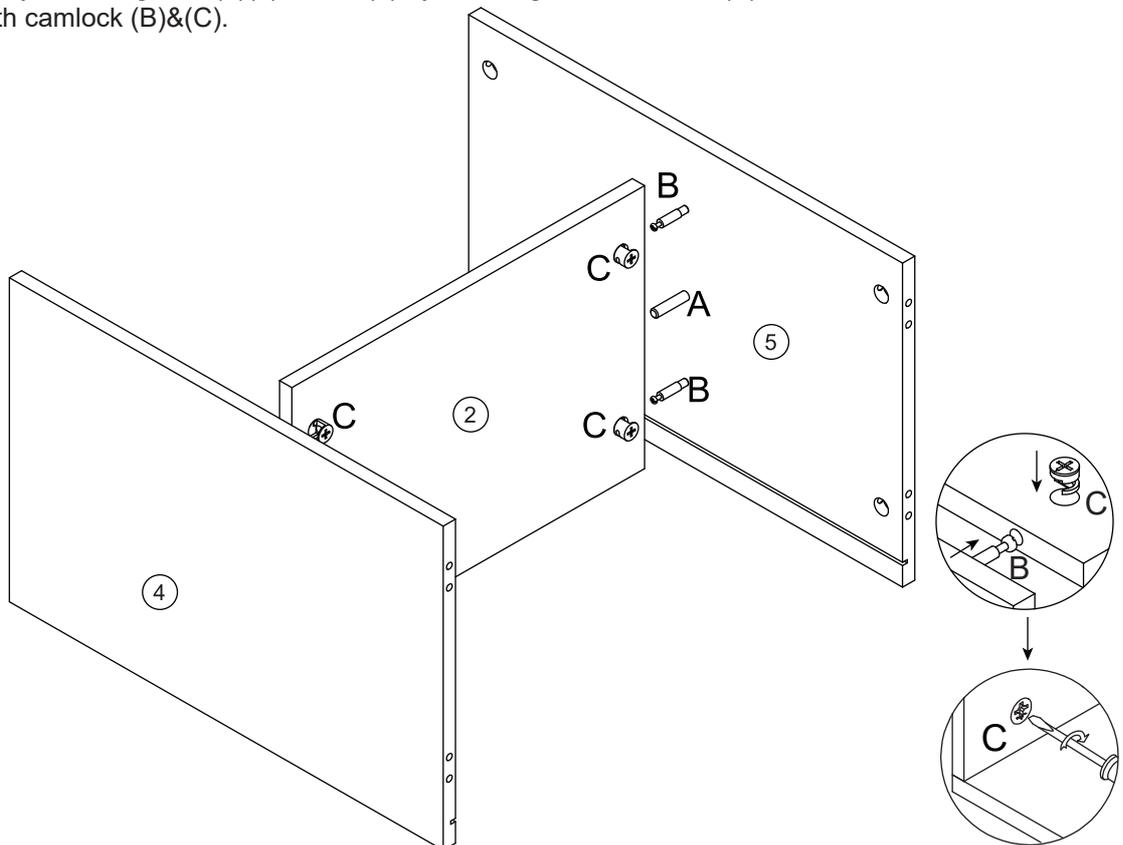


STEP 2

Insert Part (7) to Part(3)(4)(5).
Attach Part (4)(5) to Part(3) by inserting wooden
dowel (A) and securing with camlock (B) & (C).

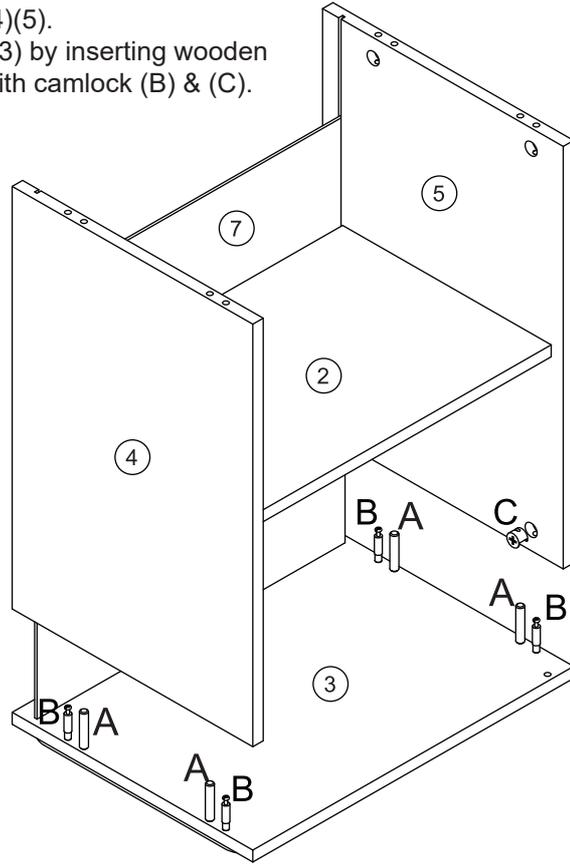


STEP 3

Attach Part (1) to Part (4)(5) by inserting
wooden dowel(A) and male camlock (B).

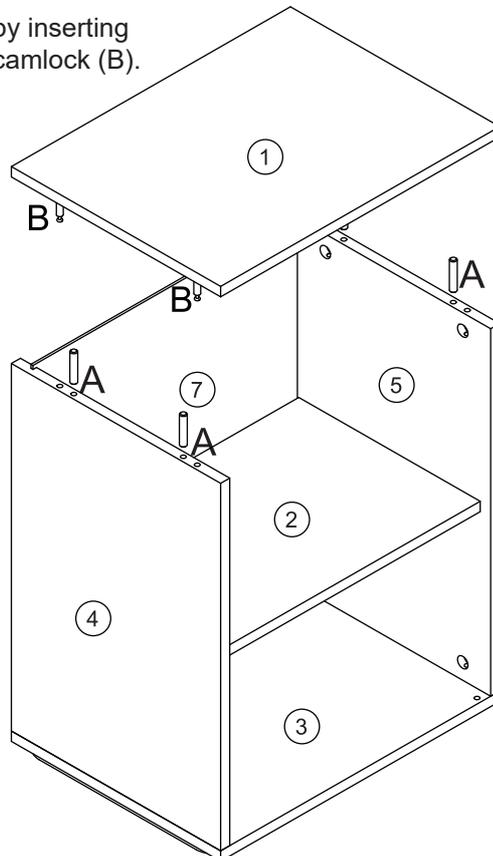


STEP 4

Attach (I) to Part (6) by securing with screw (H).

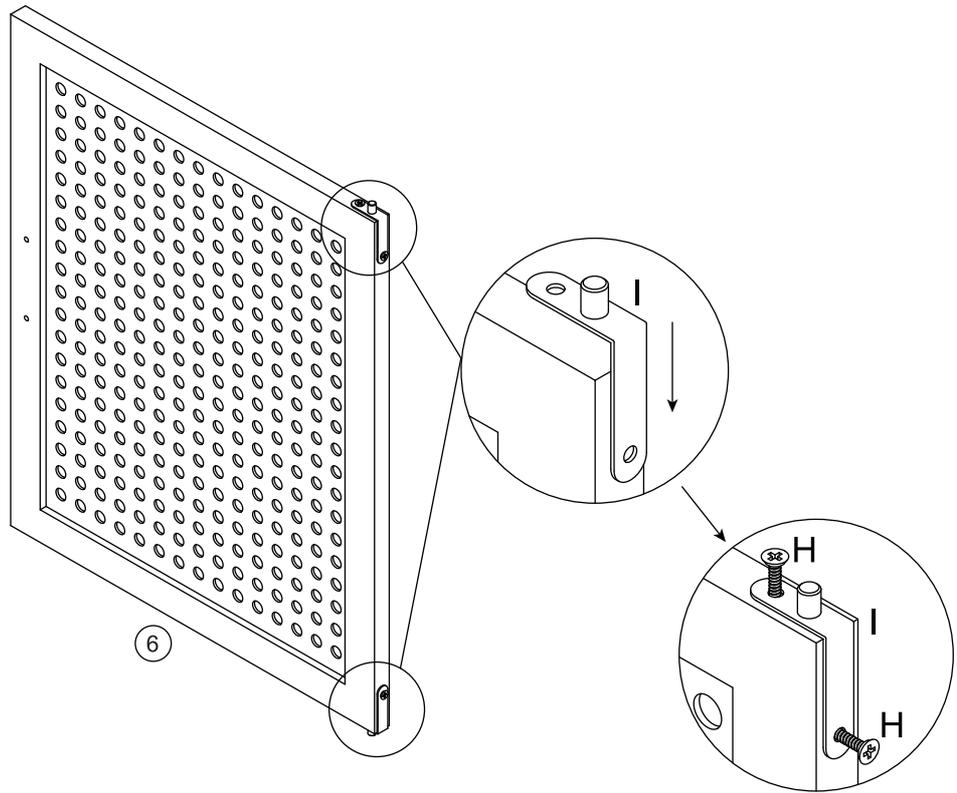


STEP 5

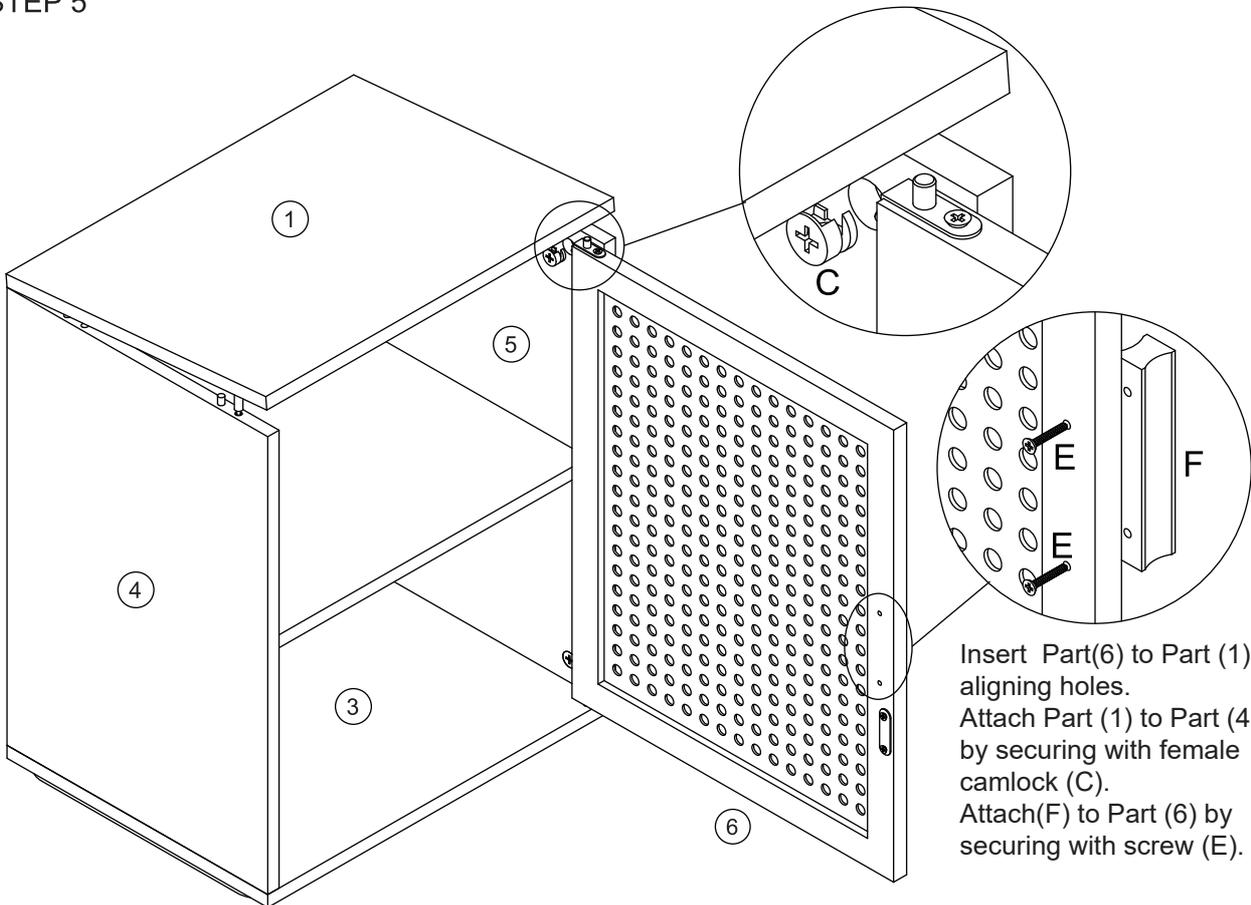

Insert Part(6) to Part (1)(3) by aligning holes.
Attach Part (1) to Part (4)(5) by securing with female camlock (C).
Attach(F) to Part (6) by securing with screw (E).


STEP 6

Rotate leg (8) into the bottom one by one by aligning hole. Tighten each leg before turning assembled product upside down.

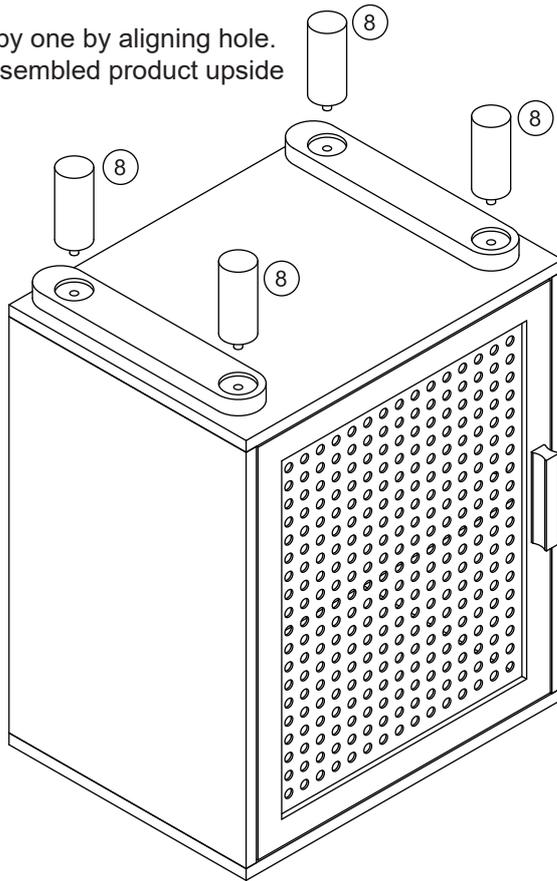

STEP 7

Attach (G) to each corner by securing with screw (D).

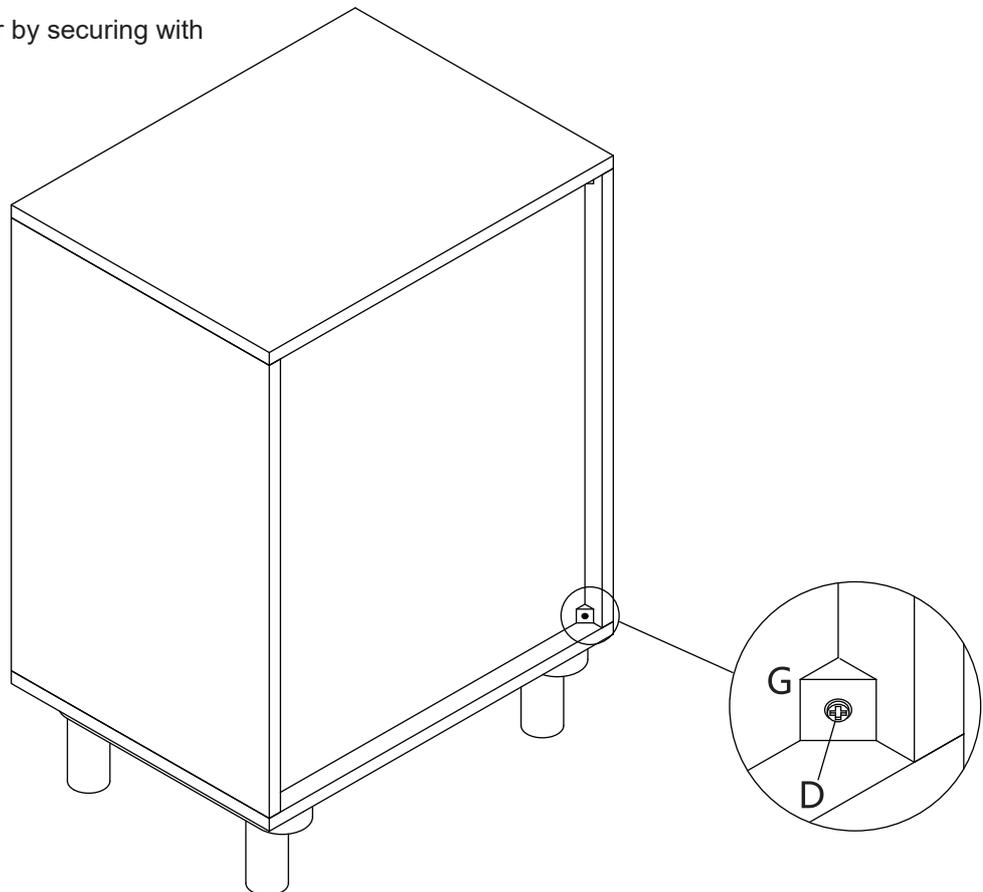

STEP 8

