

# ASSEMBLY INSTRUCTIONS

## BED

### (Box 1)

BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
A	Headboard	1 pc
B	Footboard	1 pc
C	Headboard Leg (L/R)	2 pcs
D	Bed Slat	4 pcs
E	Bed Slat Support	8 pcs

### (Box 2)

BOX OF SIDE RAIL


No	ITEM	Qty
F	Side Rail	2 pcs

### (Box 1)


HARDWARE LIST

No	ITEM	Qty
1	Csk M4 x 32mm	8 pcs
2	JCBC M6 x 30mm	6 pcs
3	SPRING WASHER 1/4" Rbw	6 pcs
4	Flat Washer 1/4" ID x 13mm OD Blk	6 pcs
5	ALLEN KEY m4x65mm Blk	1 pc
6	ALLEN KEY m5x65mm Blk	1 pc


**STEP 1 :** Attach Head Board Leg ( C ) to Head Board ( A ) as shown using JCBC BOLT ( 2 ) with Spring Washer ( 3 ), Flat washer ( 4 ) and securing with ALLEN KEY ( 5 ).

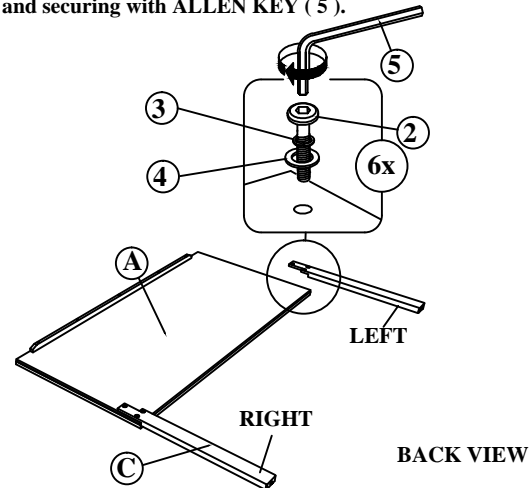

**STEP 2 :** Hook SIDE RAIL ( F ) TO HEAD BOARD ( A ) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD ( B ).

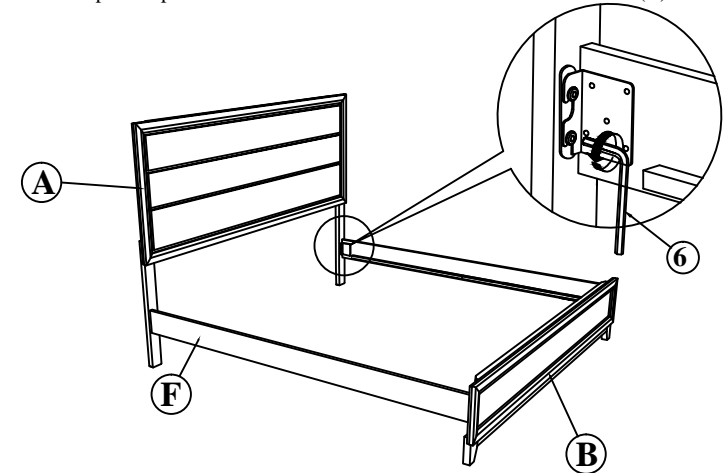

**STEP 3 :** Tighten the 4 Corner with Allen Key ( 6 ). Fix the Bed Slat Support Leg ( E ) to Bed Slat ( D ). Install the bed slat ( D ) to side rail ( F ) and tighten with Csk Screw ( 1 ) as per diagram shown. (NOTE: THE SETUP MUST BE DONE AT THE DECIDED LOCATION FOR THE BED TO OBTAIN PERFECT STABILITY)

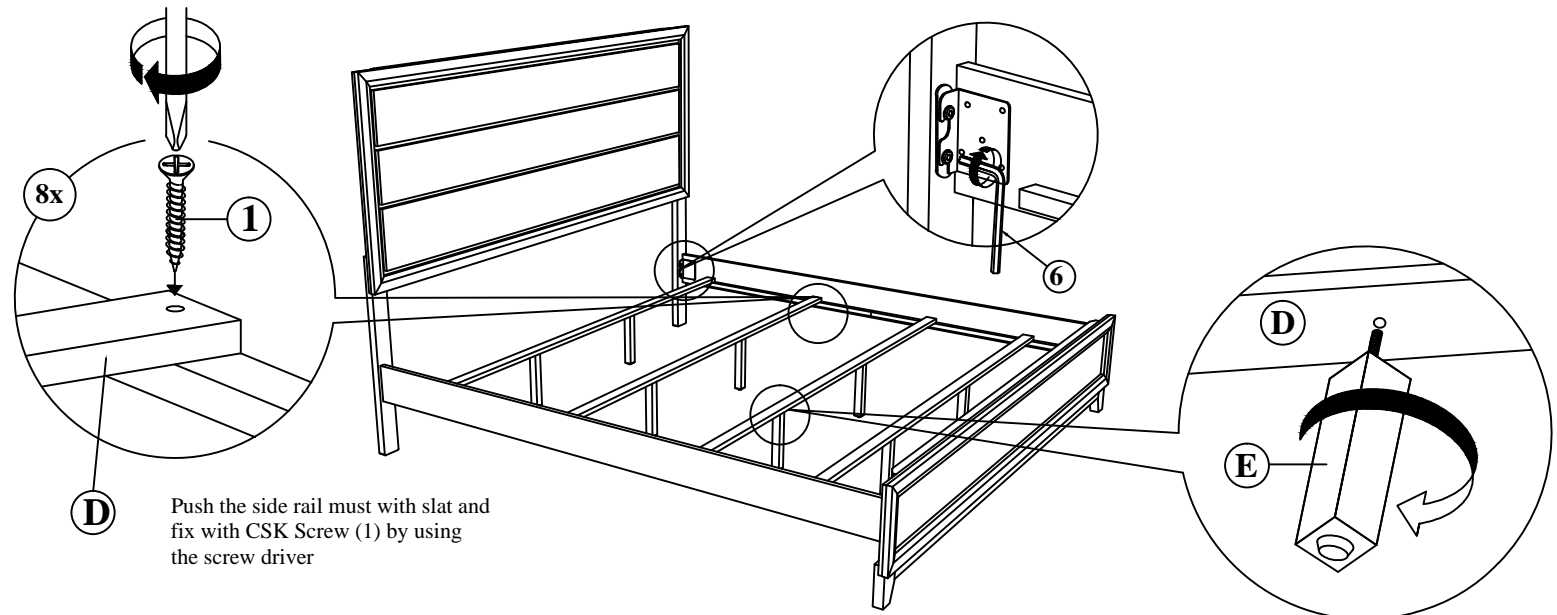




NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

# ASSEMBLY INSTRUCTIONS

## DRESSER





### (BOX 1)

#### BOX OF DRESSER


NO	ITEM	QTY
A	DRESSER 	1 pc
B	BUN FOOT 	4 pcs
C	BOTTOM SUPPORT 	1 PC

### (BOX 1)



#### HARDWARE LIST

NO	ITEM	QTY
1	JCBC M6 x 50mm 	4 PCS
2	Spring Washer 1/4" Rbw 	4 PCS
3	Flat Washer 1/4"ID x 19mmOD Blk 	4 PCS
4	ALLEN KEY m4x65mm Blk 	1 pc

**STEP 1 :** Pull the drawer and take out the Bunfoot carton ( B ). Attach the Bunfoot ( B ) at the bottom Night Stand ( A ) used JCBC ( 1 ) with Spring Washer ( 2 ) Flat Washer ( 3 ) and tighten with Allen Wrench ( 4 ).

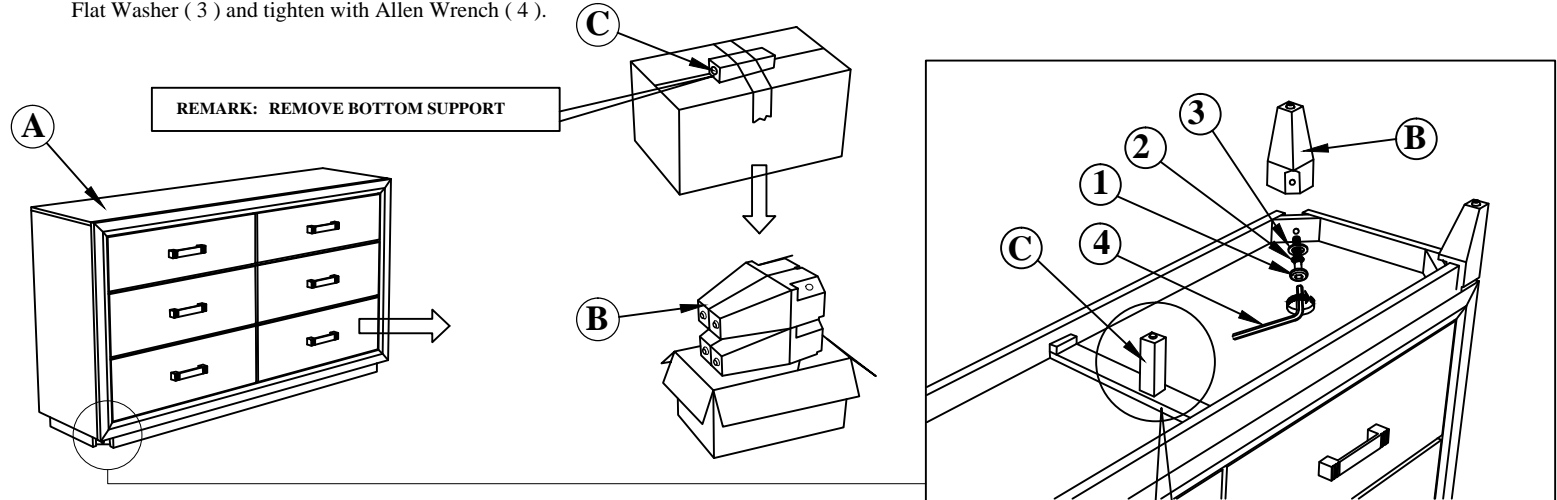



### LEVELER ADJUSTER

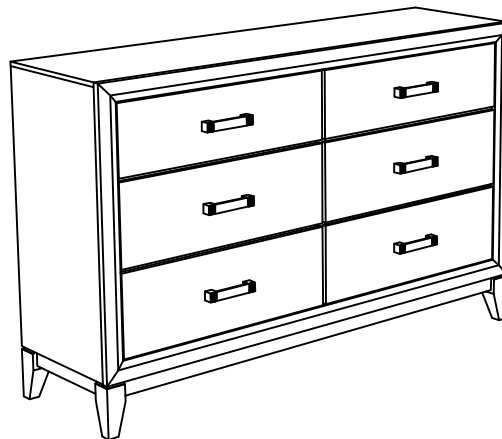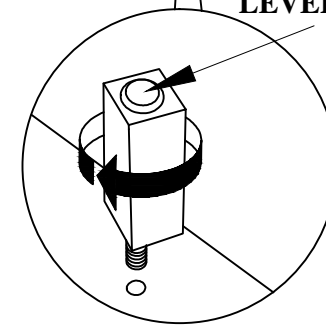


### COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


# ASSEMBLY INSTRUCTIONS


DRESSER & MIRROR		
<b>(Box 1)</b> BOX OF MIRROR		
NO	ITEM	QTY
A	MIRROR 	1 PC
B	MIRROR SUPPORT RAIL 	2 PCS

**STEP 1 : Take out the Mirror support rails (B) from the carton box.**

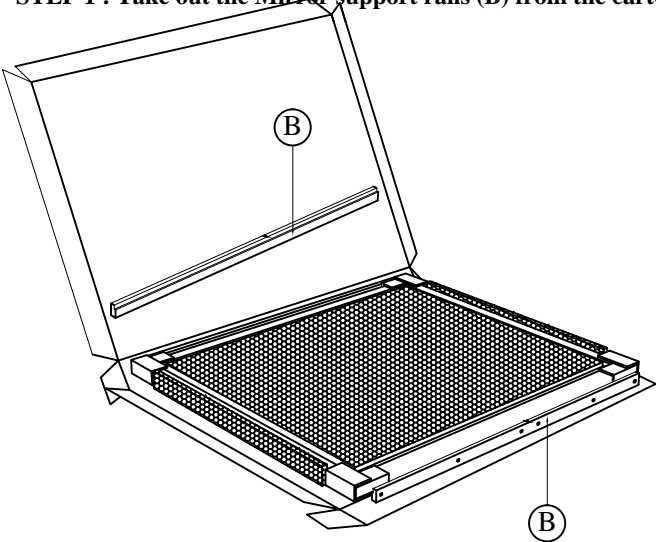


**STEP 2 : Attach Mirror Support Rail (B) to Mirror (A) as shown and tighten with CSK Screw (1)**

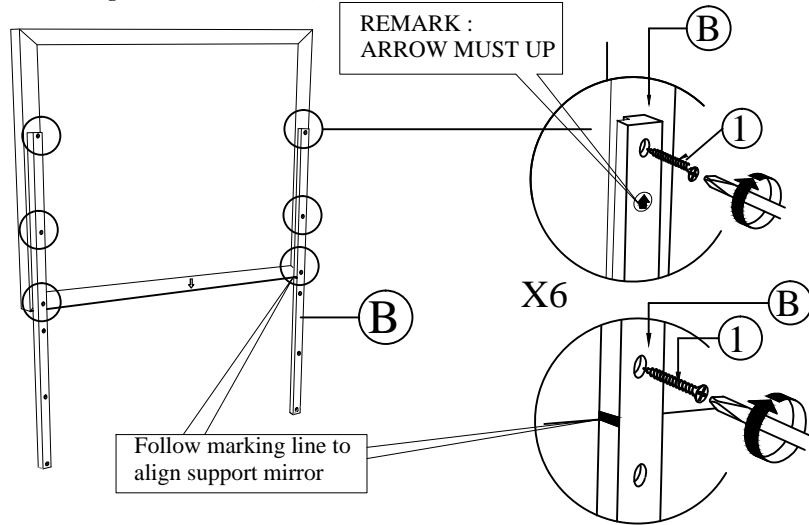



(Box 2) BOX OF DRESSER		
NO	ITEM	QTY
C	DRESSER 	1 PC

**(Box 1)**  
BOX OF MIRROR

NO	ITEM	QTY
1	CSK SCREW M4 X 32MM 	12 PCS

**STEP 3 / ETAPE 3 :**  
Tighten the CSK Screw (1) as shown.

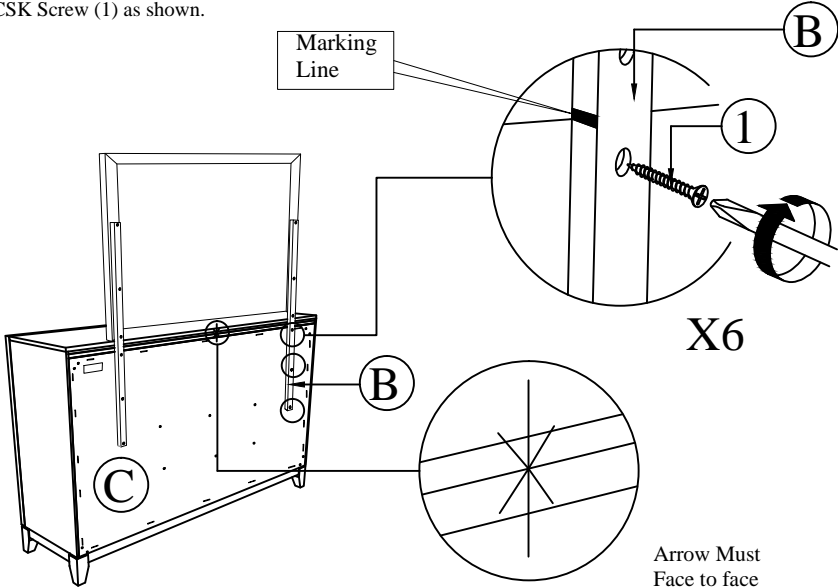

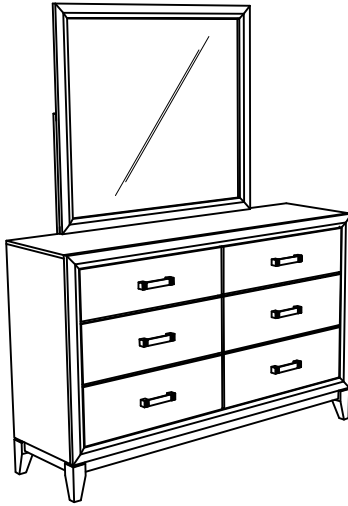

**COMPLETED**  
**ASSEMBLY**



NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

# ASSEMBLY INSTRUCTIONS




## CHEST

### (BOX 1)

#### BOX OF CHEST





NO	ITEM	QTY
A	CHEST	1 pc
		
B	BUN FOOT	4 pcs
		

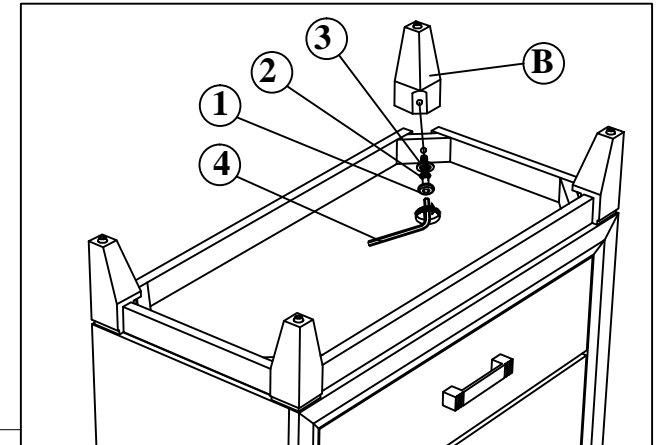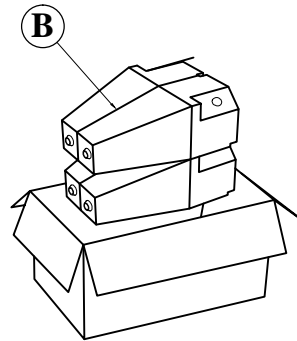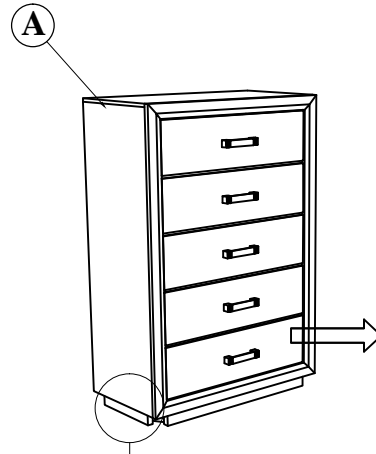**STEP 1 :** Pull the drawer and take out the Bunfoot carton ( B ). Attach the Bunfoot ( B ) at the bottom Night Stand ( A ) used JCBC ( 1 ) with Spring Washer ( 2 ) Flat Washer ( 3 ) and tighten with Allen Wrench ( 4 ).



### (BOX 1)

#### HARDWARE LIST

NO	ITEM	QTY
1	JCBC M6 x 50mm	4 PCS
		
2	Spring Washer 1/4" Rbw	4 PCS
		
3	Flat Washer 1/4"ID x 19mmOD Blk	4 PCS
		
4	ALLEN KEY m4x65mm Blk	1 pc
		



## COMPLETED ASSEMBLY



NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

# ASSEMBLY INSTRUCTIONS




## NIGHTSTAND

### (BOX 1)

#### BOX OF NIGHT STAND



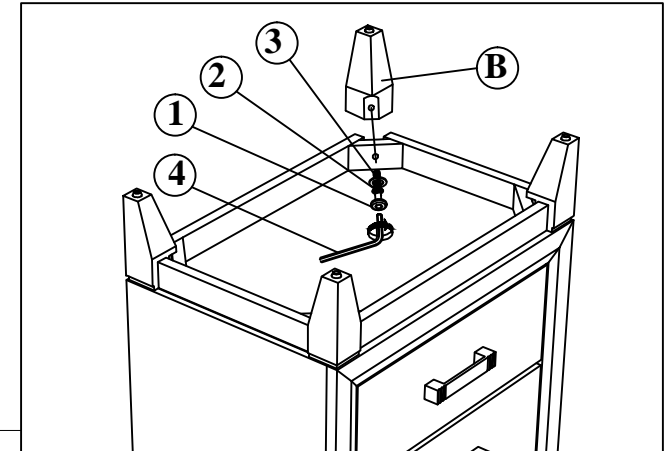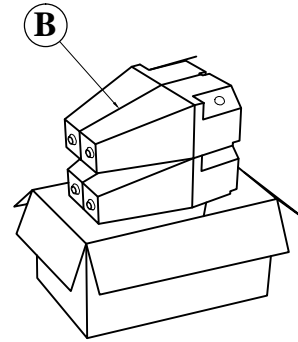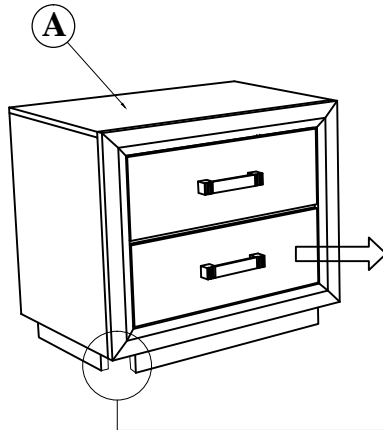

NO	ITEM	QTY
A	NIGHT STAND 	1 pc
B	BUN FOOT 	4 pcs


**STEP 1 :** Pull the drawer and take out the Bunfoot carton ( B ). Attach the Bunfoot ( B ) at the bottom Night Stand ( A ) used JCBC ( 1 ) with Spring Washer ( 2 ) Flat Washer ( 3 ) and tighten with Allen Wrench ( 4 ).



### (BOX 1)

#### HARDWARE LIST

NO	ITEM	QTY
1	JCBC M6 x 50mm 	4 PCS
2	Spring Washer 1/4" Rbw 	4 PCS
3	Flat Washer 1/4" ID x 19mm OD Blk 	4 PCS
4	ALLEN KEY m4x65mm Blk 	1 pc

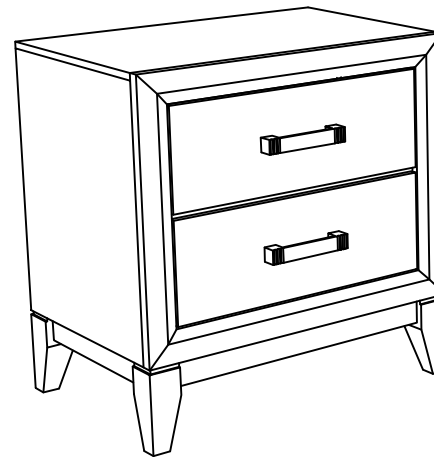

### COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.