




ZB-803-SEAT-

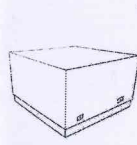


803# ottoman

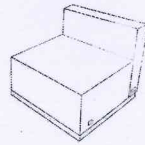

803# single chair

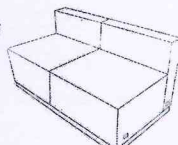

803# 2seat

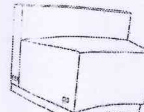

803# inset



803# outset




803# arch-seat




2pcs Female connector fixed on right side



2pcs male connectors fixed on Left side




2pcs Locking bolts

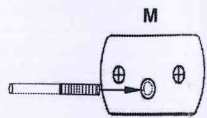

How to link it in different shape combination?

Step 1. Screw the 2 locking bolts <on the left side>
Make sure it's 100% tightened!

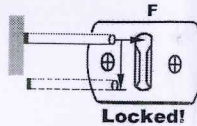


Step 2. Make sure the position of the 2 <M> and 2 <F> matched,
Carry the chair <left side with 2 M > up about 3cm, Insert the 2 bolts
into the hole of F, then press down the chair, The 2pcs is locked!

Locked!

Notice: If necessary, adjust the adjustable feet to keep the height of the seat and back at same level.


linking bolt come out



Release the Linking bolt


How to release the the linked PCS?

Step 1. Press the seat of the chair <right side fixed with F > no move,
Carry up the other one <left side with M > about 3-5cm,
move out the linking bolts from F.

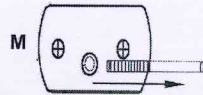


Step 2. Release the linking bolts from Bracket M
Keep well the linking bolt for future use.

Need screw out the connectors and
change/fix them on the other side

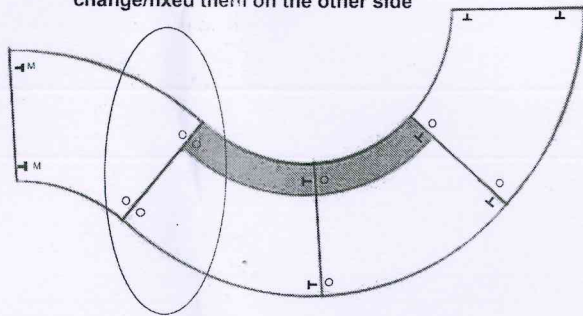

Need screw out the connectors and
change/fix them on the other side

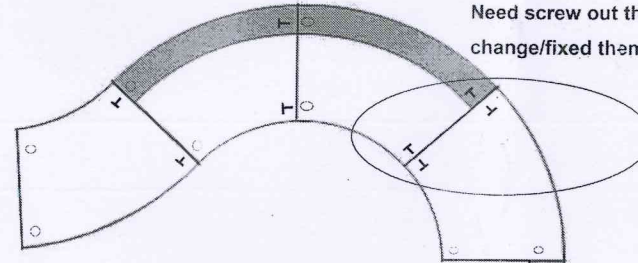

Special Notice:

All M connectors are fixed on LEFT side, F connectors are fixed on RIGHT side,
So are Arch-seat.

For some configurations, If need Lock the arch-seat with others,
Need screw out the connectors and change/fix them on the other side.

Need screw out the connectors and
change/fix them on the other side

