



# FELYL

shower door

## HAO2 Shower Door Instruction Guide

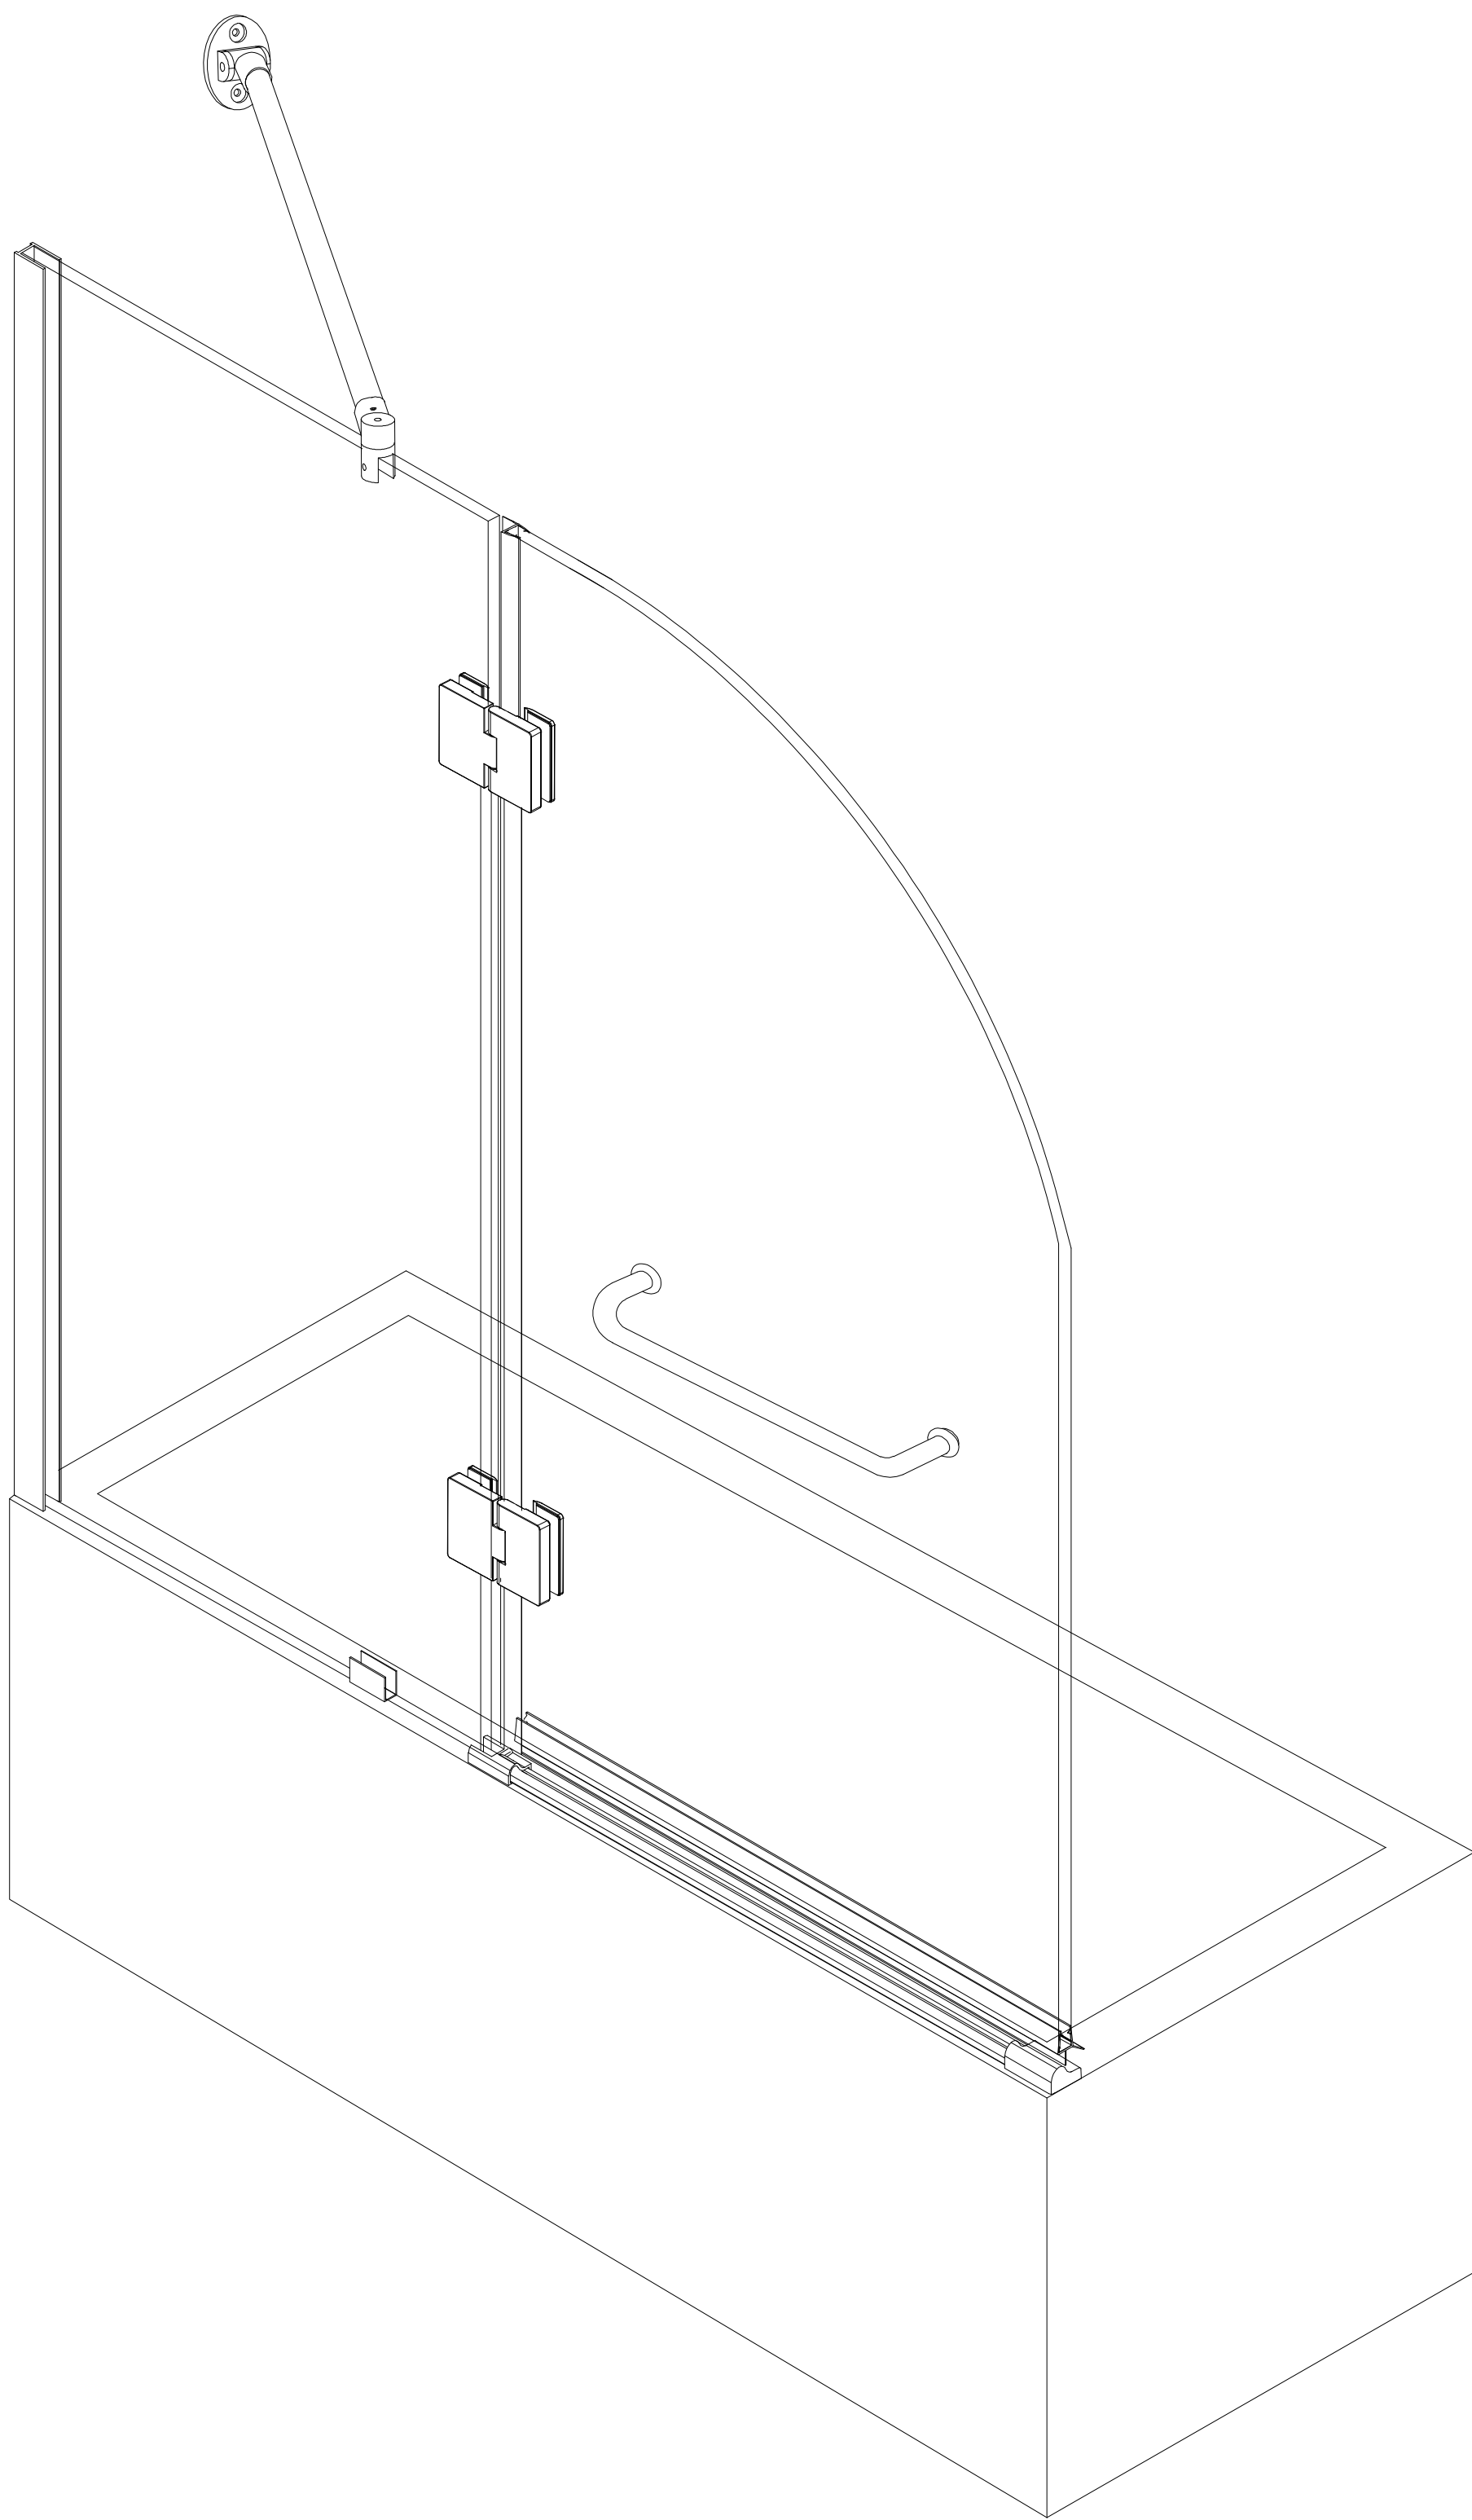

**Left Hand Install**

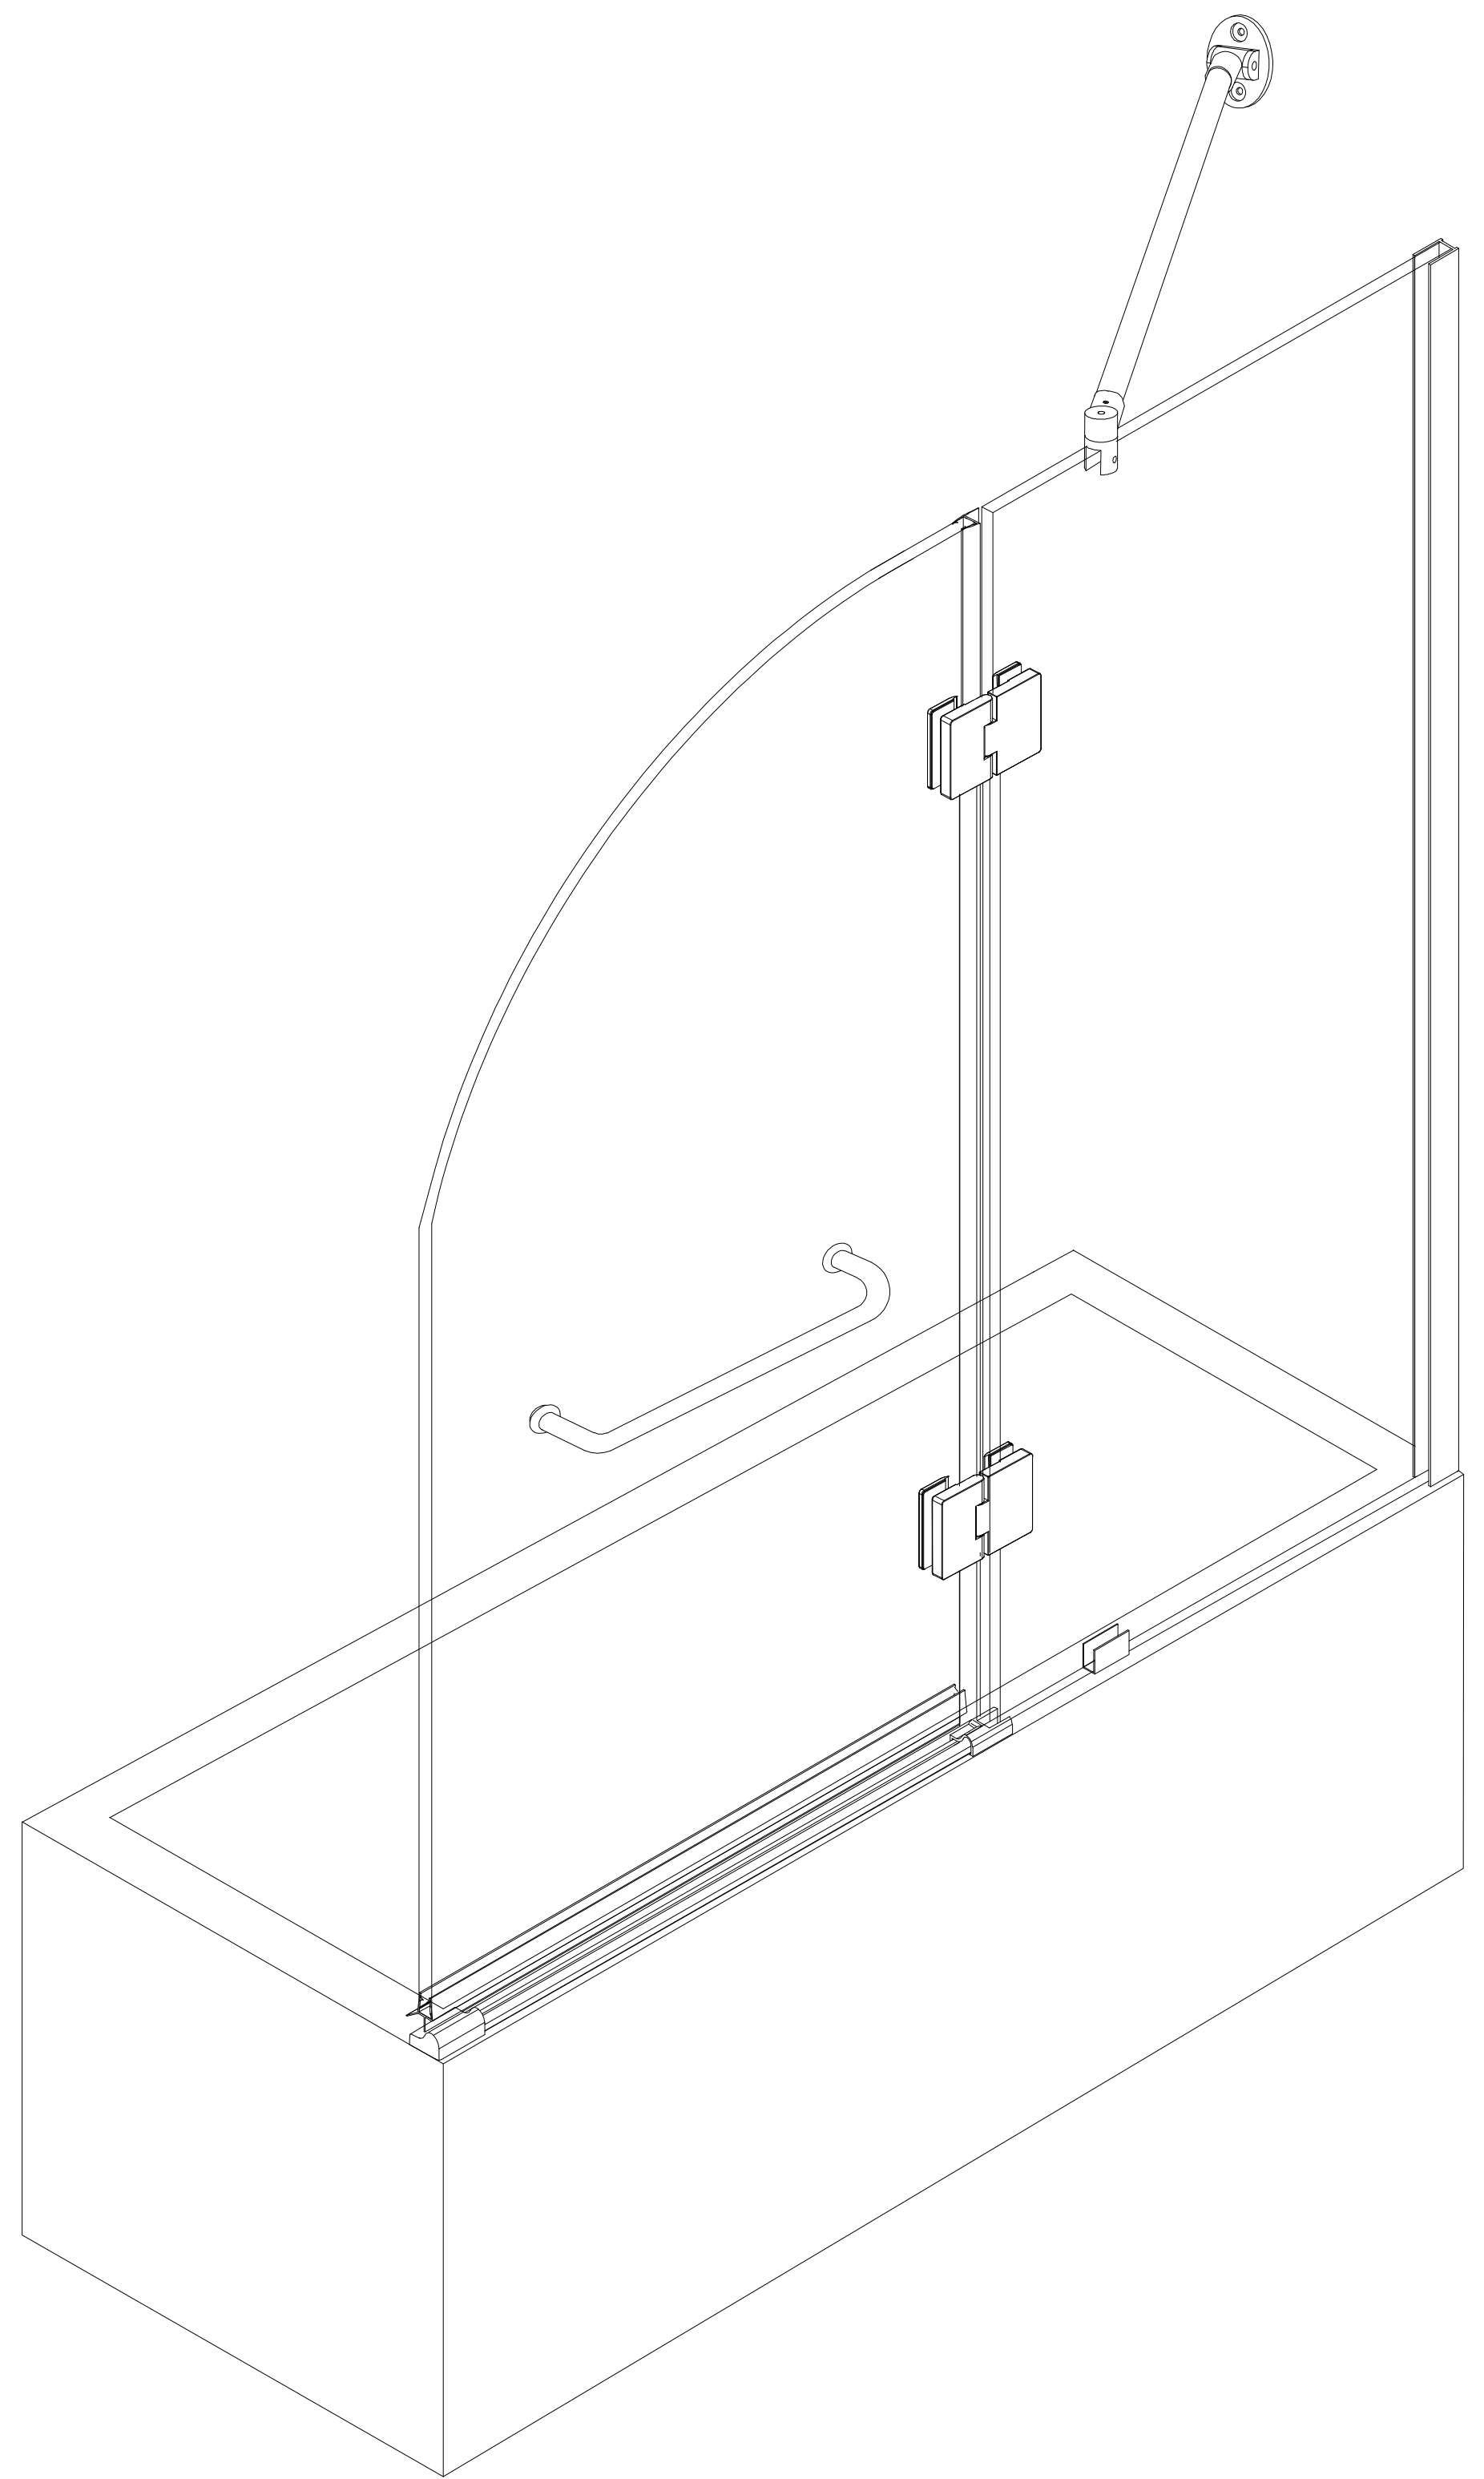


**Right Hand Install**

---




















Customer Support: 1-877-897-1222  
After-sale service: [felyl@outlook.com](mailto:felyl@outlook.com)  
Hours of Operation: M-F 9 AM-5:00PM

# Detailed Diagram










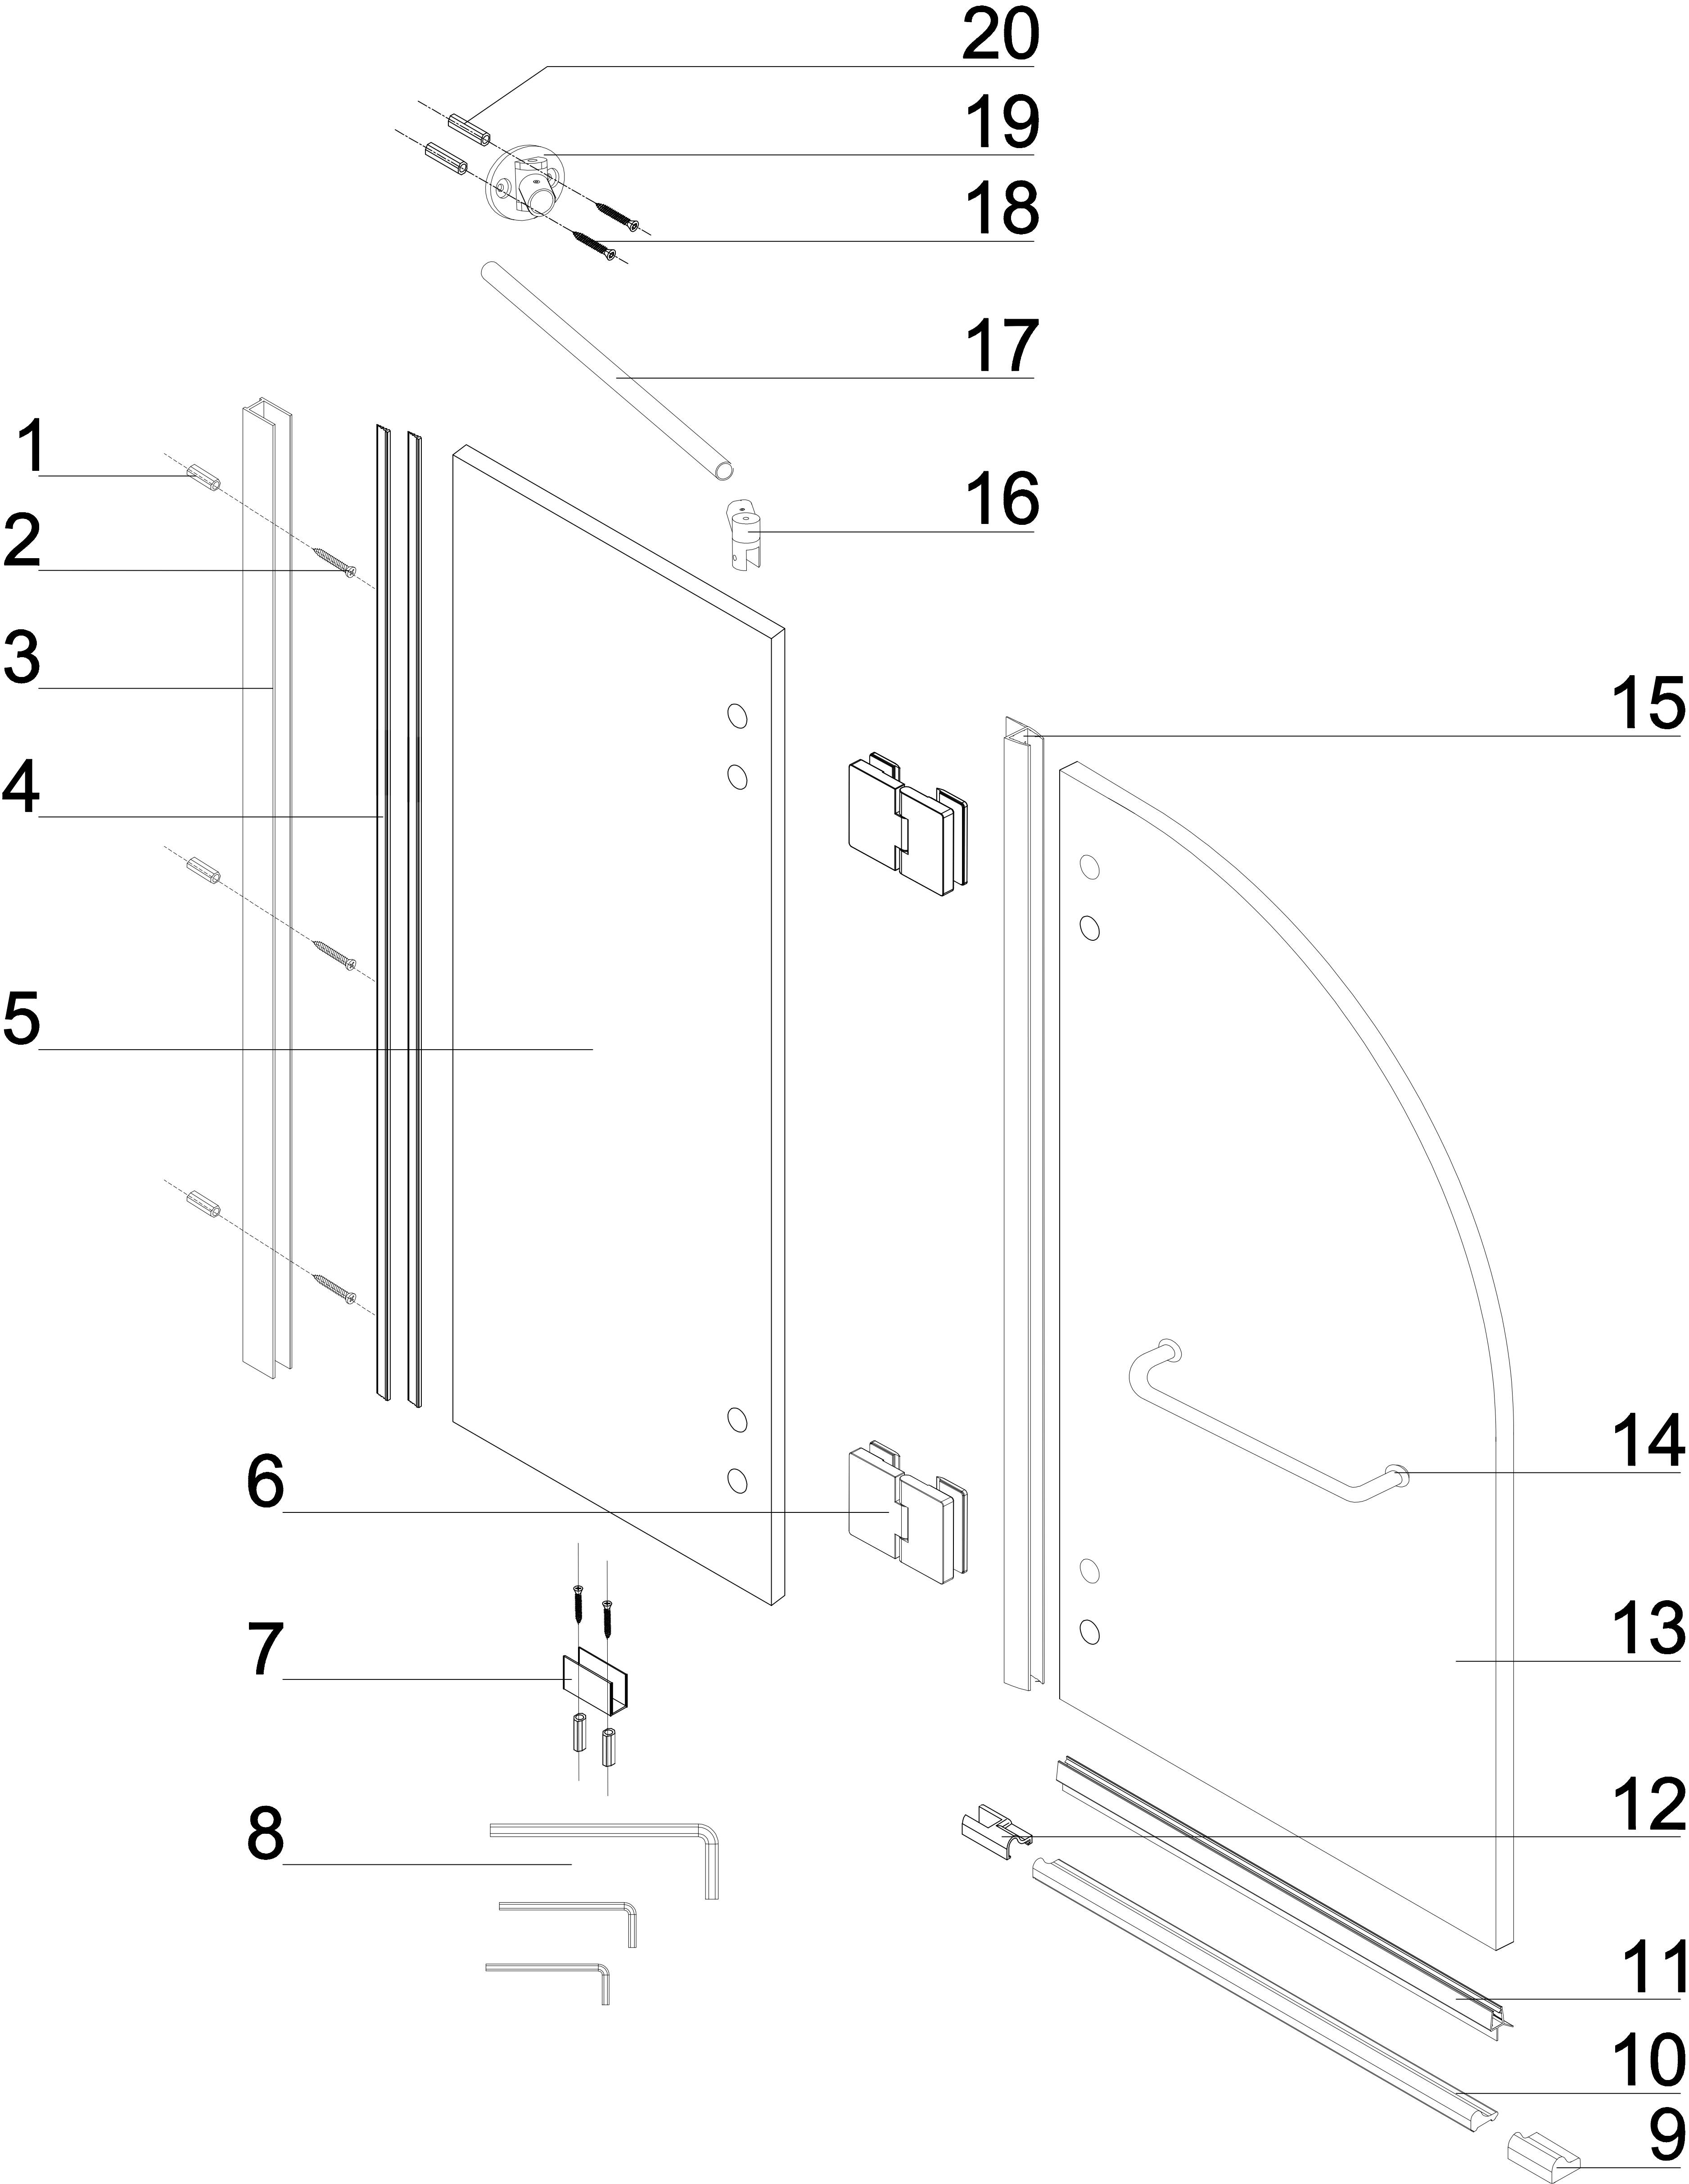




# PART LIST

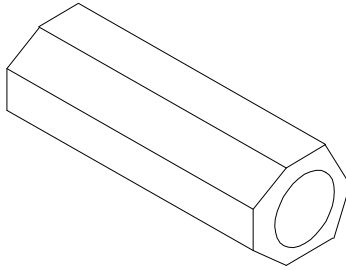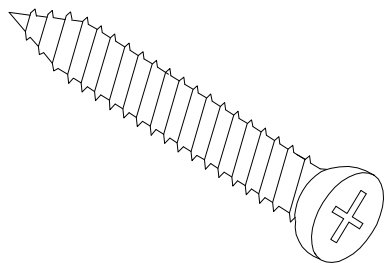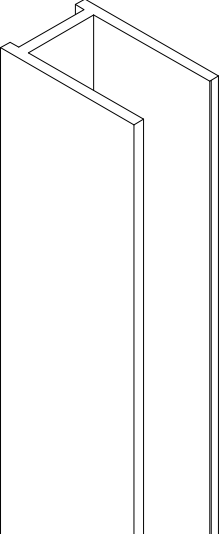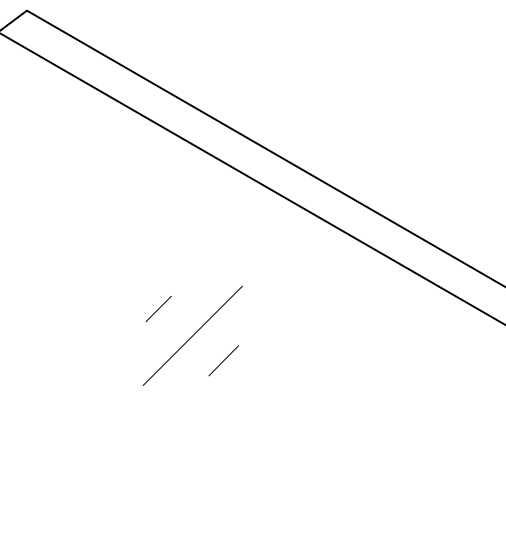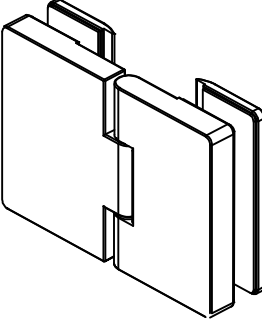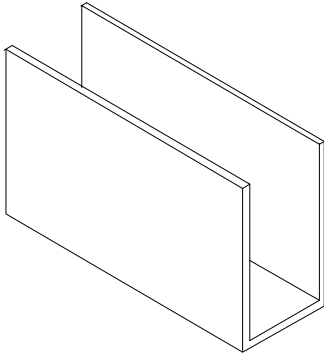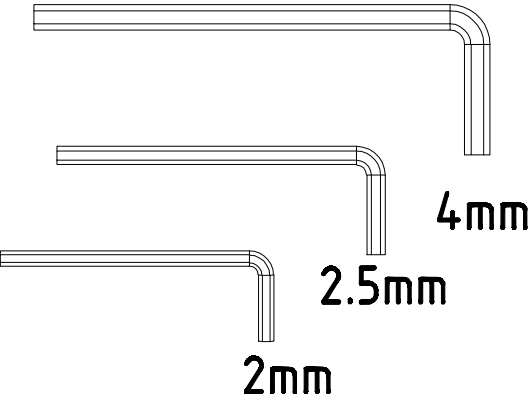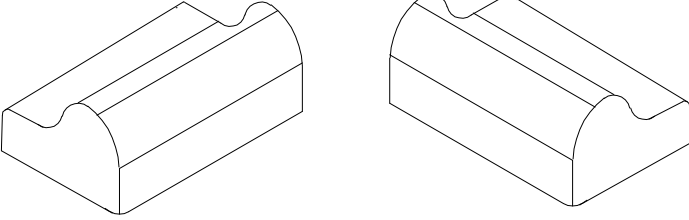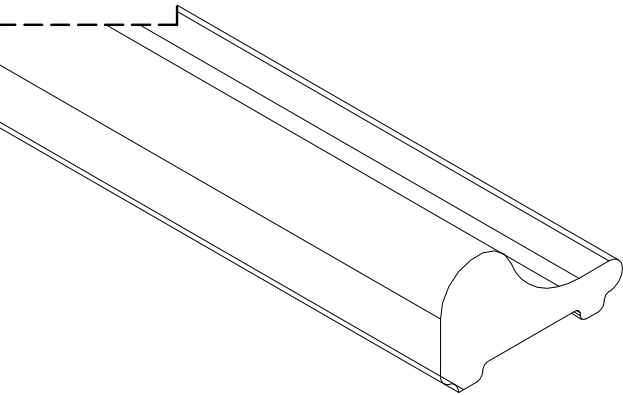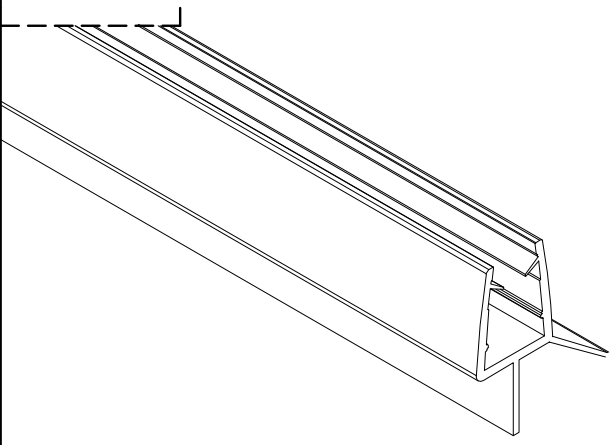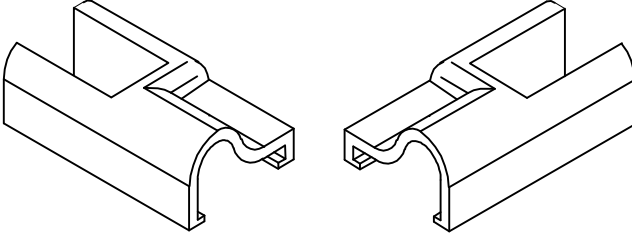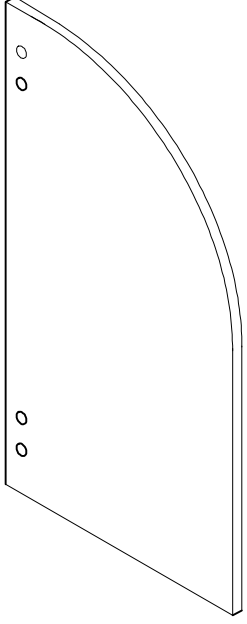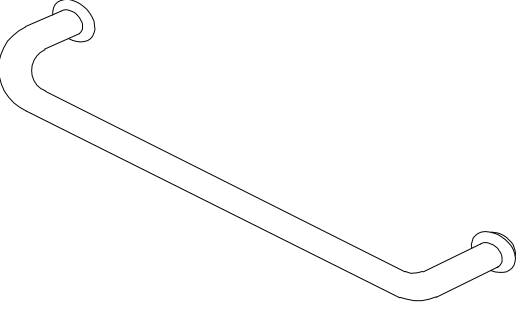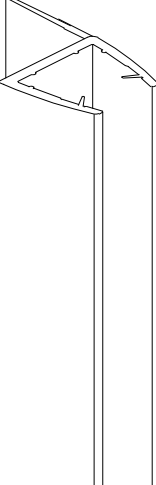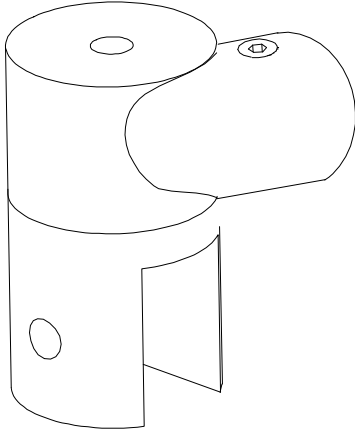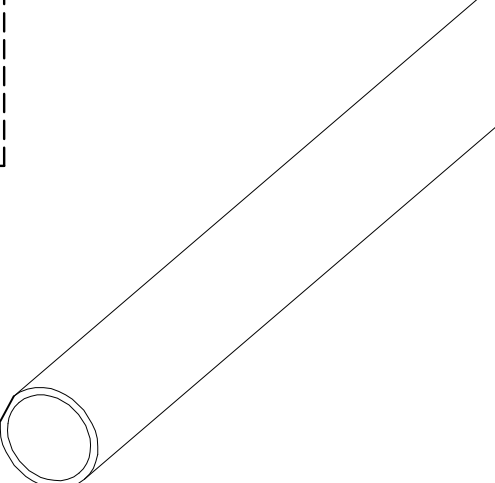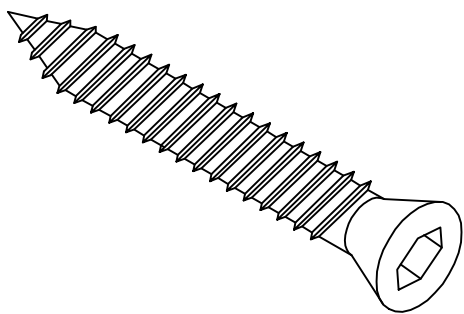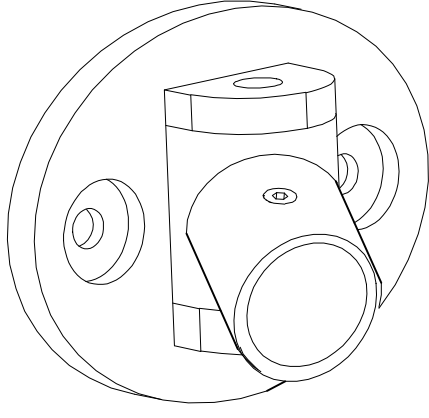Check all parts according to the list before assembly . Feel free to contact with us if you need assistance .

<div>1</div> 	<div>2</div> 	<div>3</div> 	<div>4</div> 	<div>5</div> 	<div>6</div> 
Plug 6*28 (7 PCS)	Screw 4*30(5PCS)	Wall-mounted stabilizer strip for fixed panel(1PC)	One-sided plastic strip(2PCS)	Fixed panel(1PC)	Shower door hinge(2PCS)
<div>7</div> 	<div>8</div> 	<div>9</div> 	<div>10</div> 	<div>11</div> 	<div>12</div> 
Glass clamp(1PC)	Allen Wrench(3PCS)	Wall-mounted strip connector(2PCS)	Aluminum strip(1PC)	Shower door bottom seal strip (1PC)	Strip connector(2PCS)
<div>13</div> 	<div>14</div> 	<div>15</div> 	<div>16</div> 	<div>17</div> 	<div>18</div> 
Movable shower door (1PC)	Tubular single-sided towel bar(1PC)	Side seal strip(1PC)	Top rail connected glass clamp(1PC)	Top rail(1PC)	Screw 4*30(2PCS)
<div>19</div> 					
Wall-mounted top rail connector(1PC)					
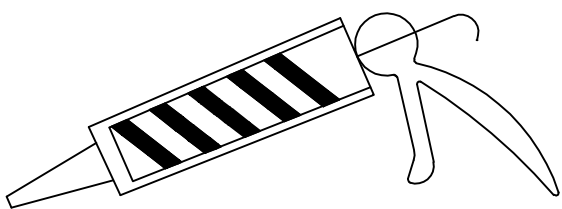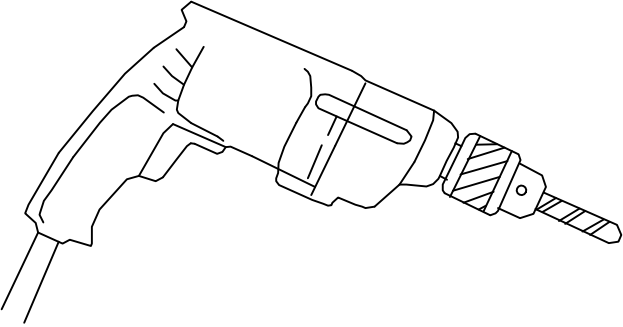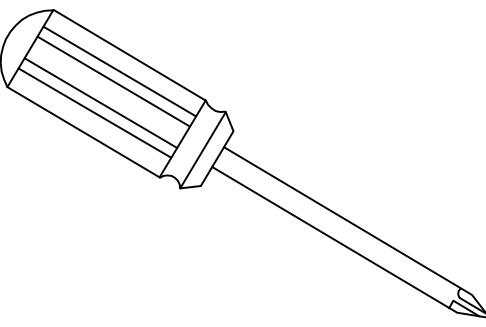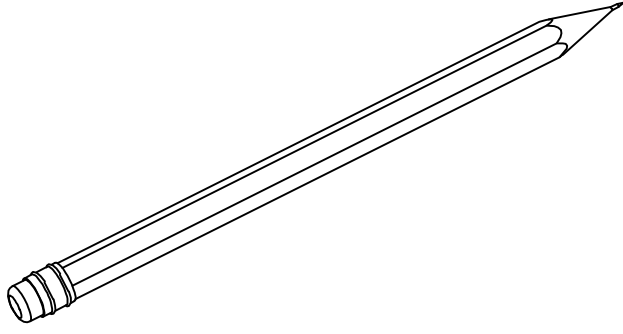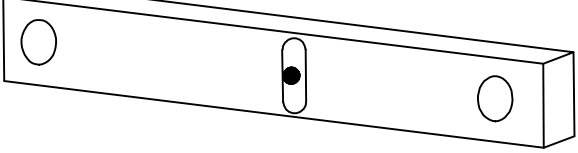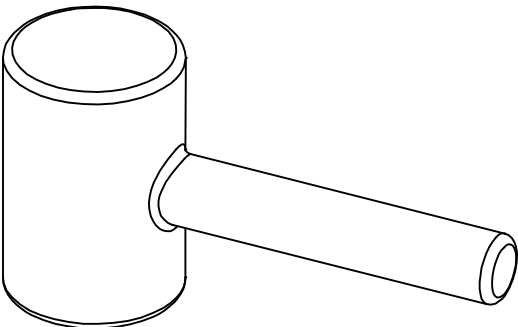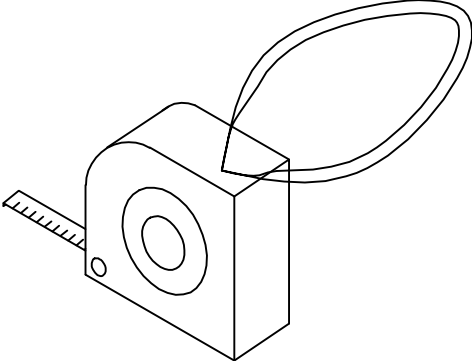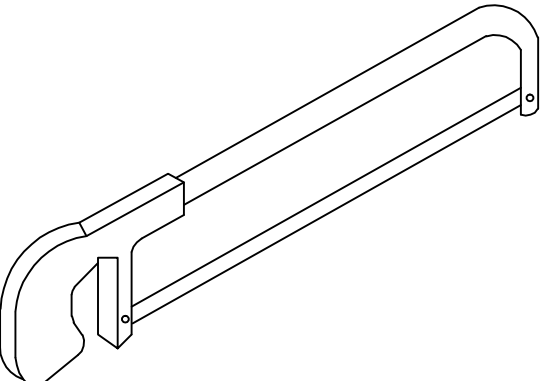
## Recommended Tools







					
Silicone	Drill	Philips Screw Driver	Pencil	Level	Rubber Mallet
					
Tape Measure	Ø1/4"Drill Bit	Wooden Jam	Hacksaw	Safety Glass	Safety Gloves

\*Utilize Safety Glasses and Safety Gloves when constructing this shower door\*

# Left Hand Assembly

## STEP 1







- 1.Put wall-mounted stabilizer strip for fixed panel(3) on bathtub,the distance is 5mm to bathtub.
- 2. Hold wall-mounted stabilizer strip for fixed panel(3) against the wall, level it vertical and mark the hole positions with pencil.
- 3. Take off wall-mounted stabilizer strip(3) and drill holes on markings.
- 4. Hammer the plug 6\*28(1) into hole.
- 5. Secure wall-mounted stabilizer strip(3) with 4\*30 screws(2).

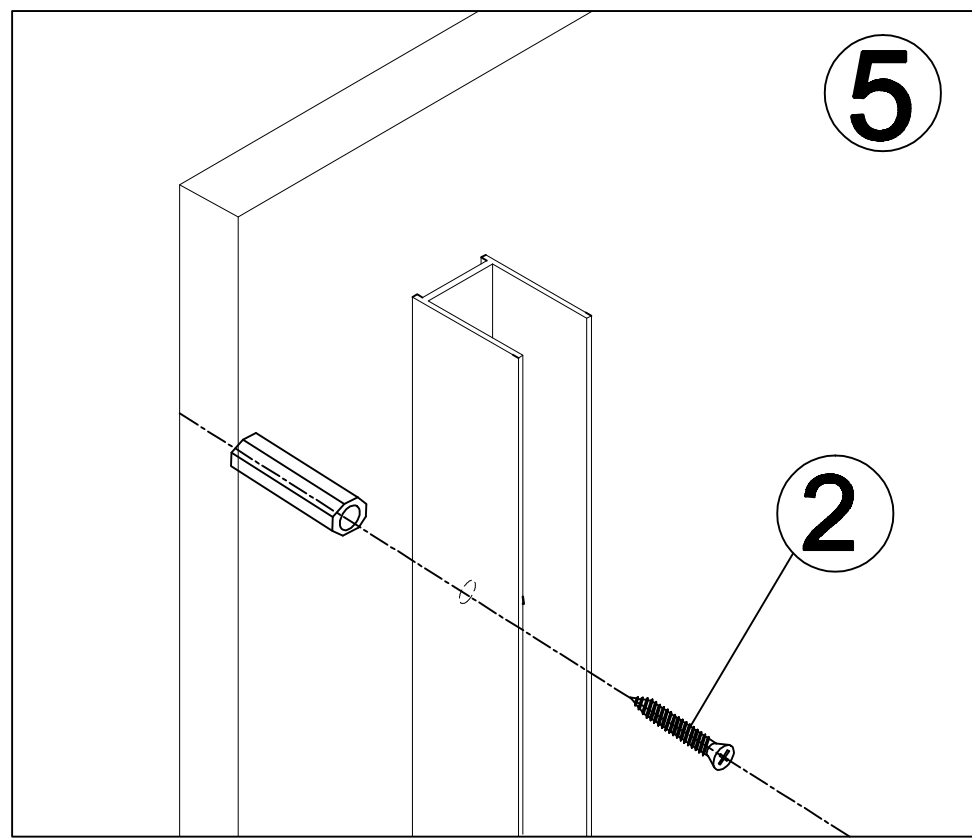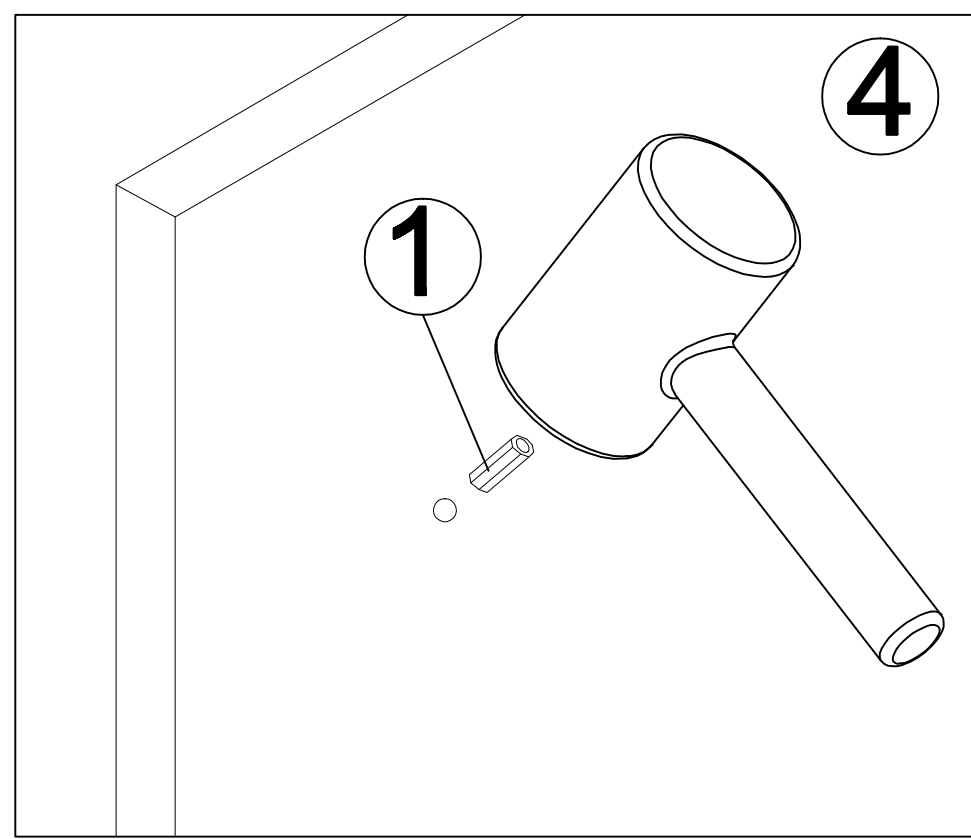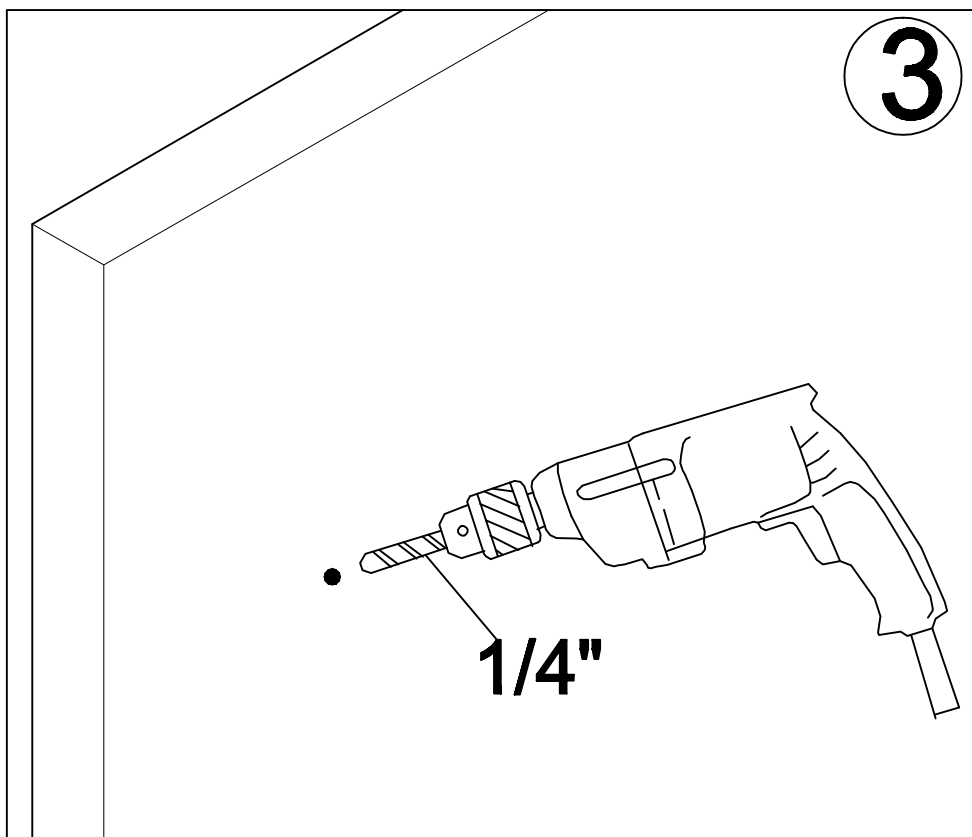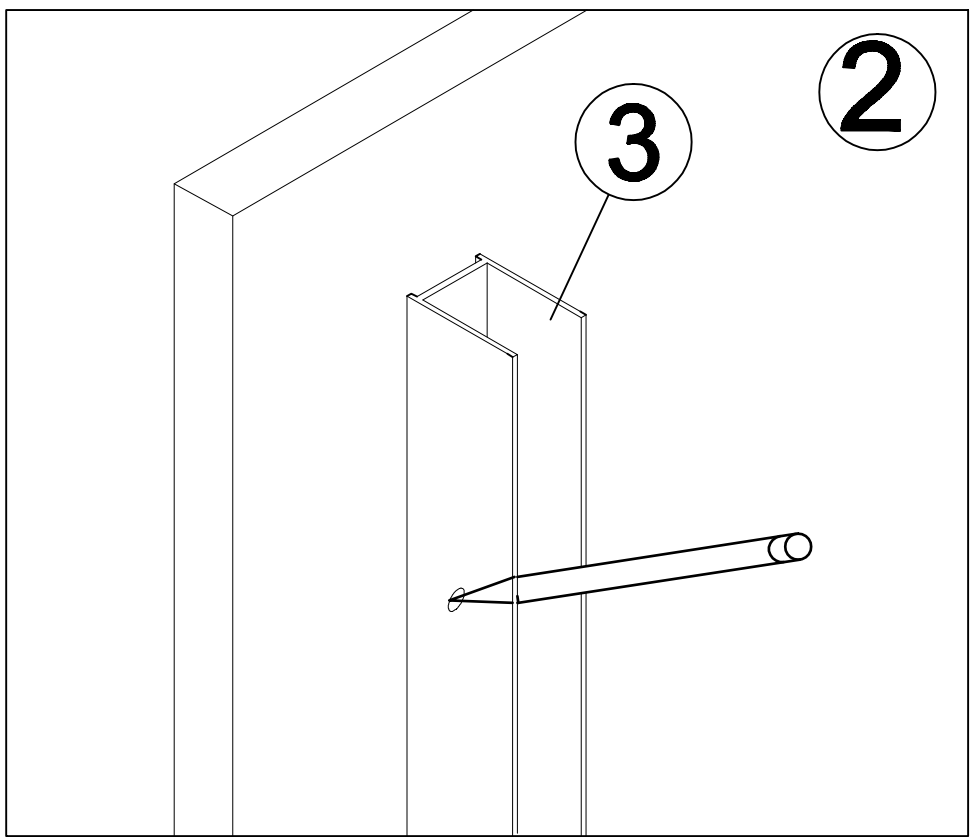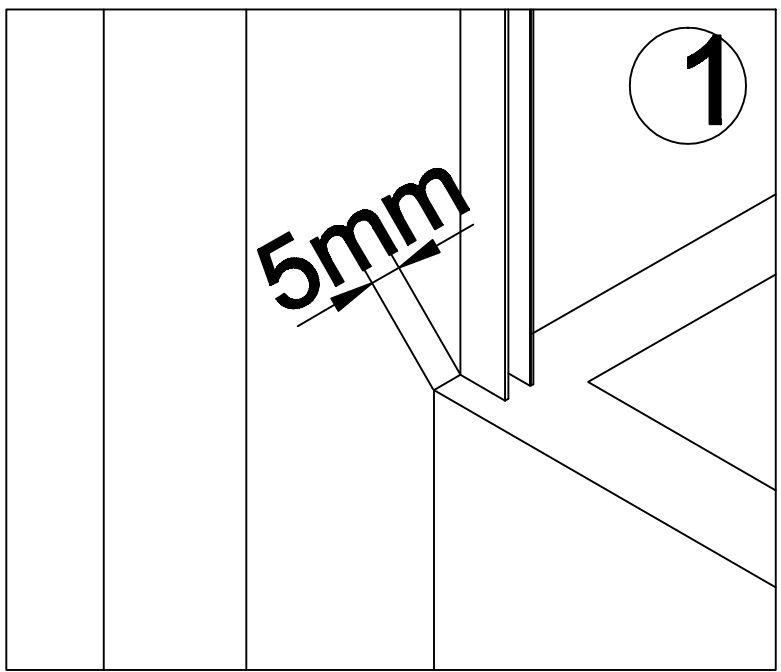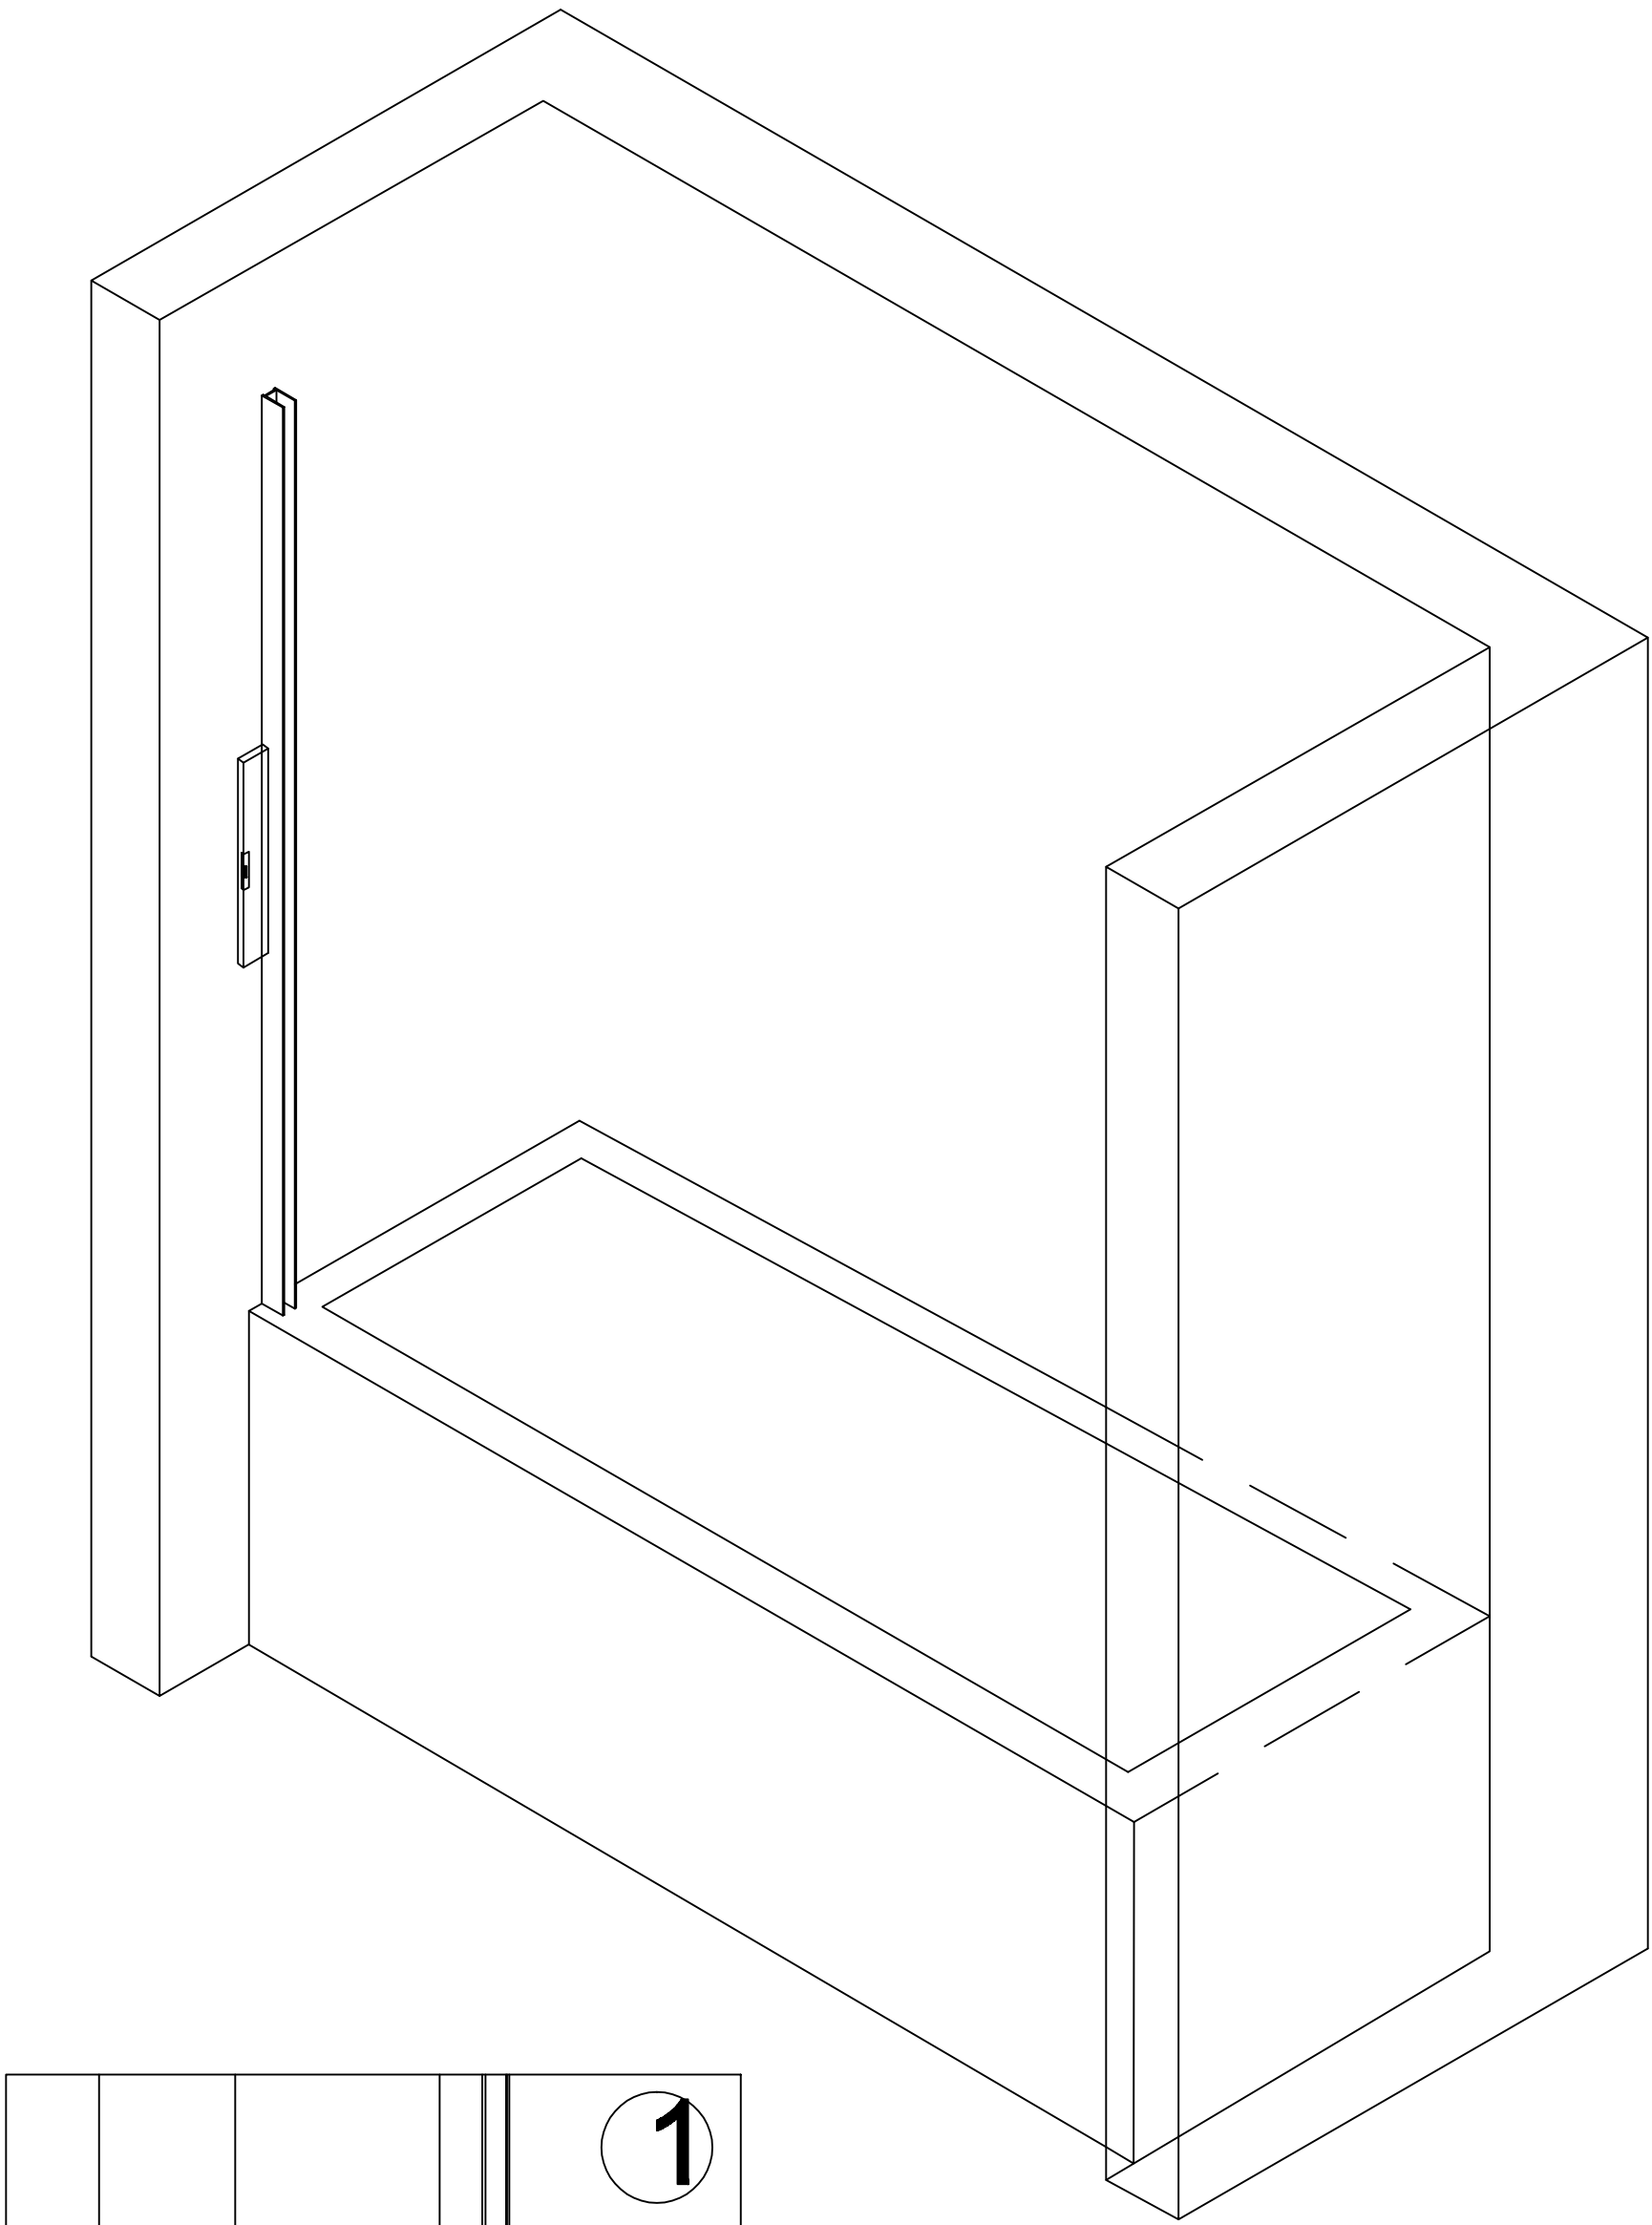

# Right Hand Assembly

## STEP 1

- 1.Put wall-mounted stabilizer strip for fixed panel(3) on bathtub,the distance is 5mm to bathtub.
- 2. Hold wall-mounted stabilizer strip for fixed panel(3) against the wall, level it vertical and mark the hole positions with pencil.
- 3. Take off wall-mounted stabilizer strip(3) and drill holes on markings.
- 4. Hammer the plug 6\*28(1) into hole.
- 5. Secure wall-mounted stabilizer strip(3) with 4\*30 screws(2).

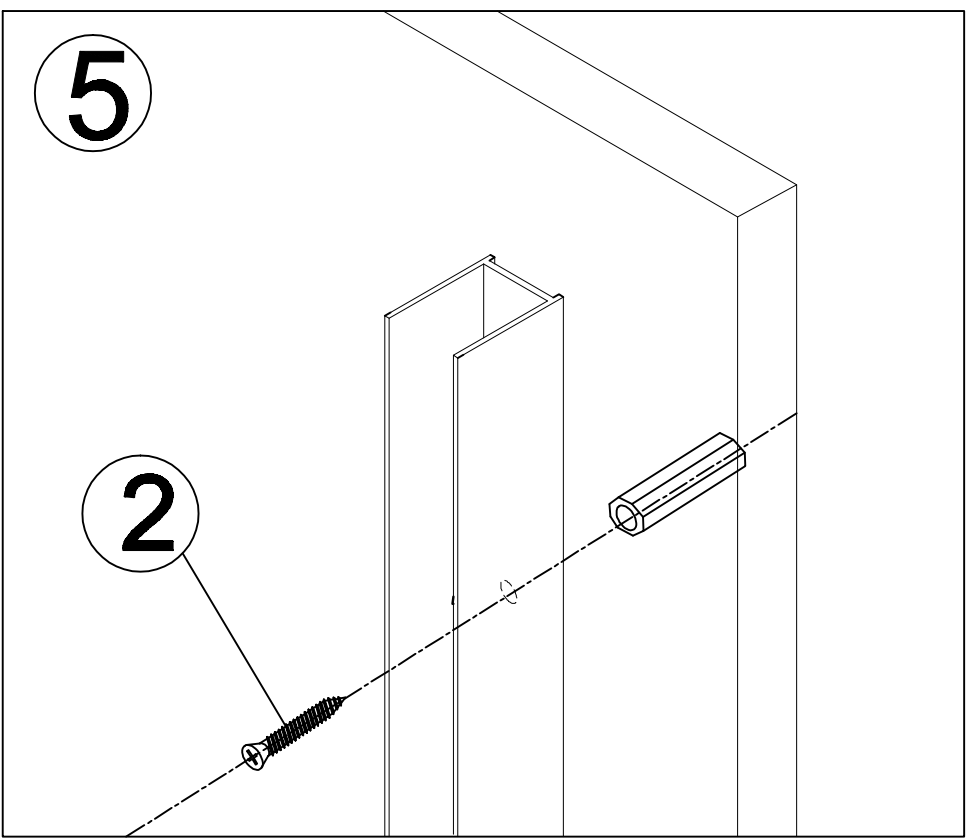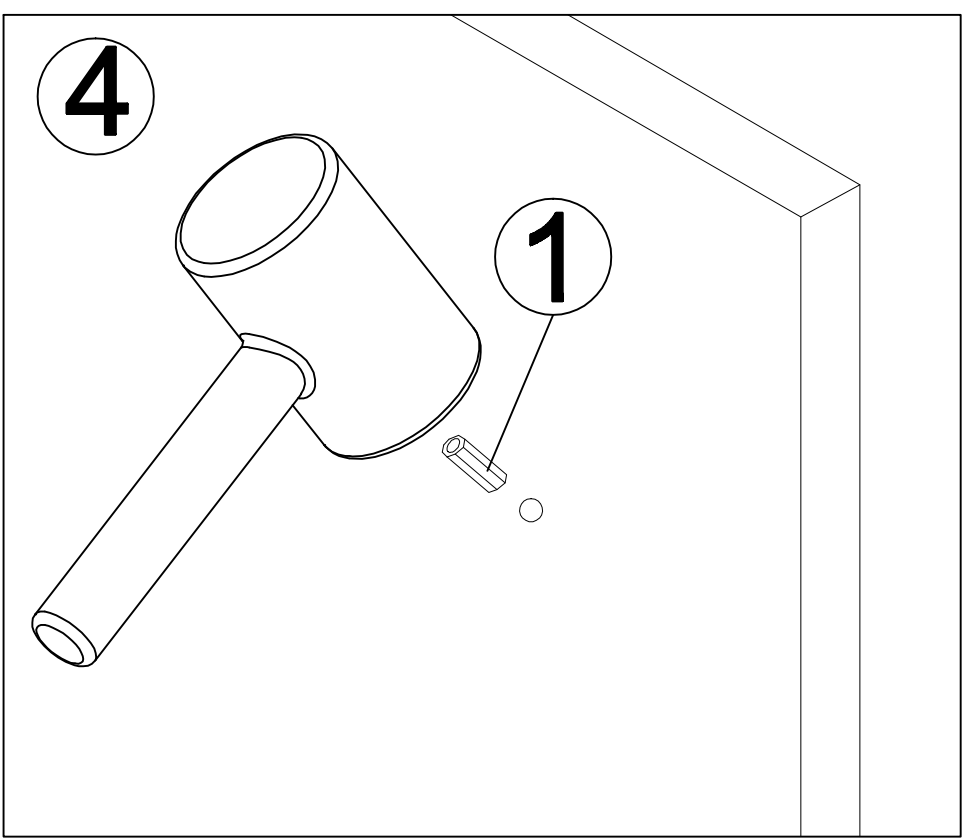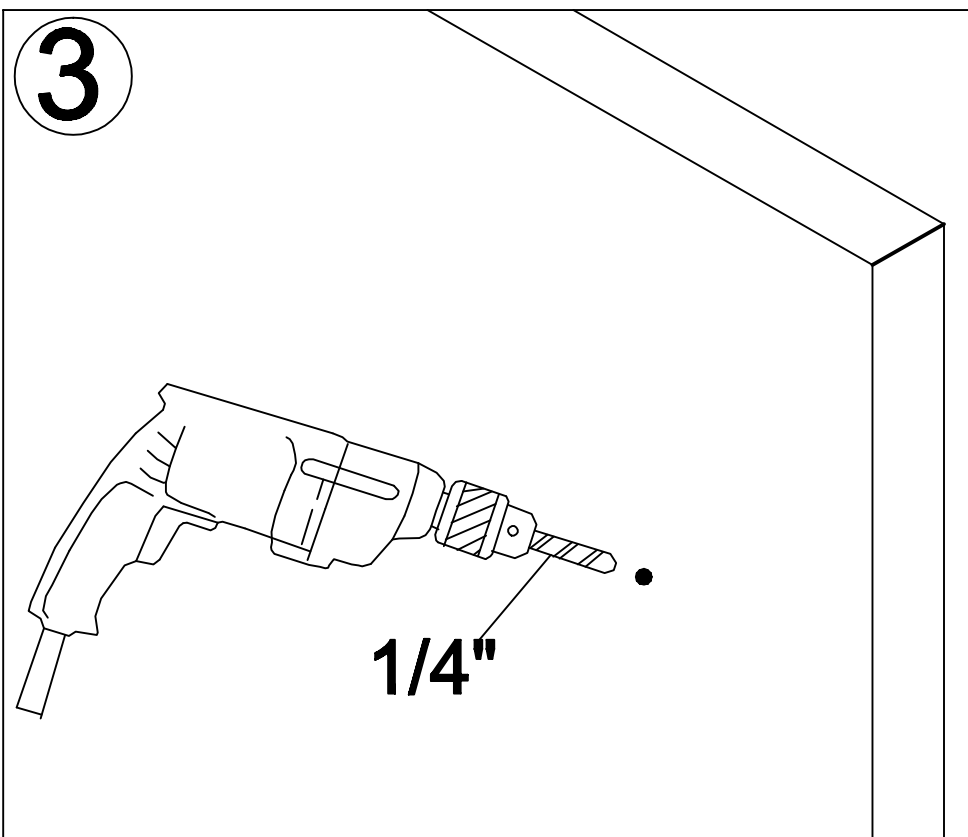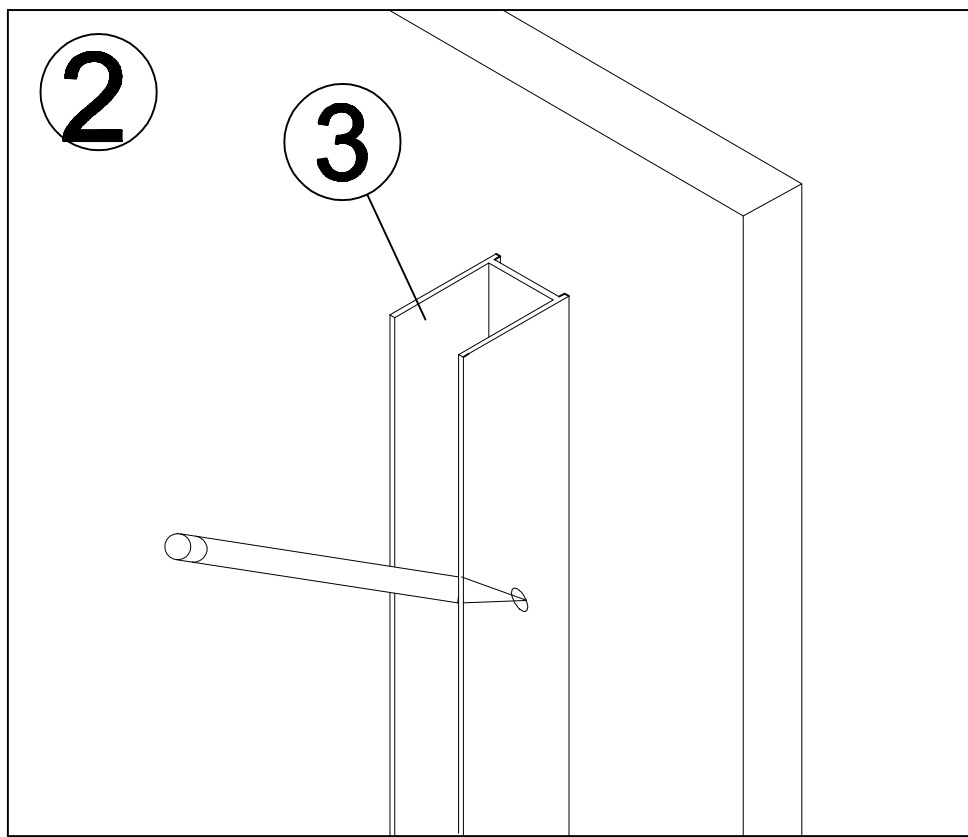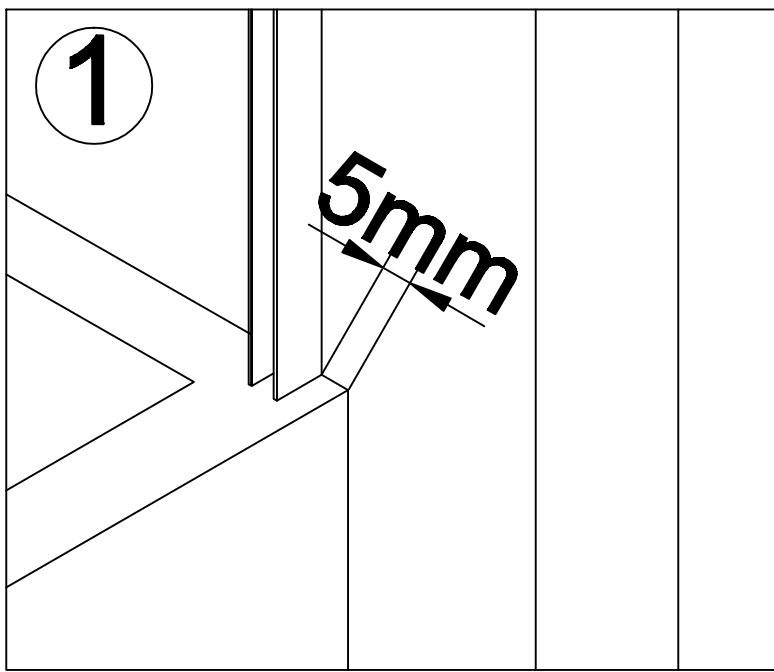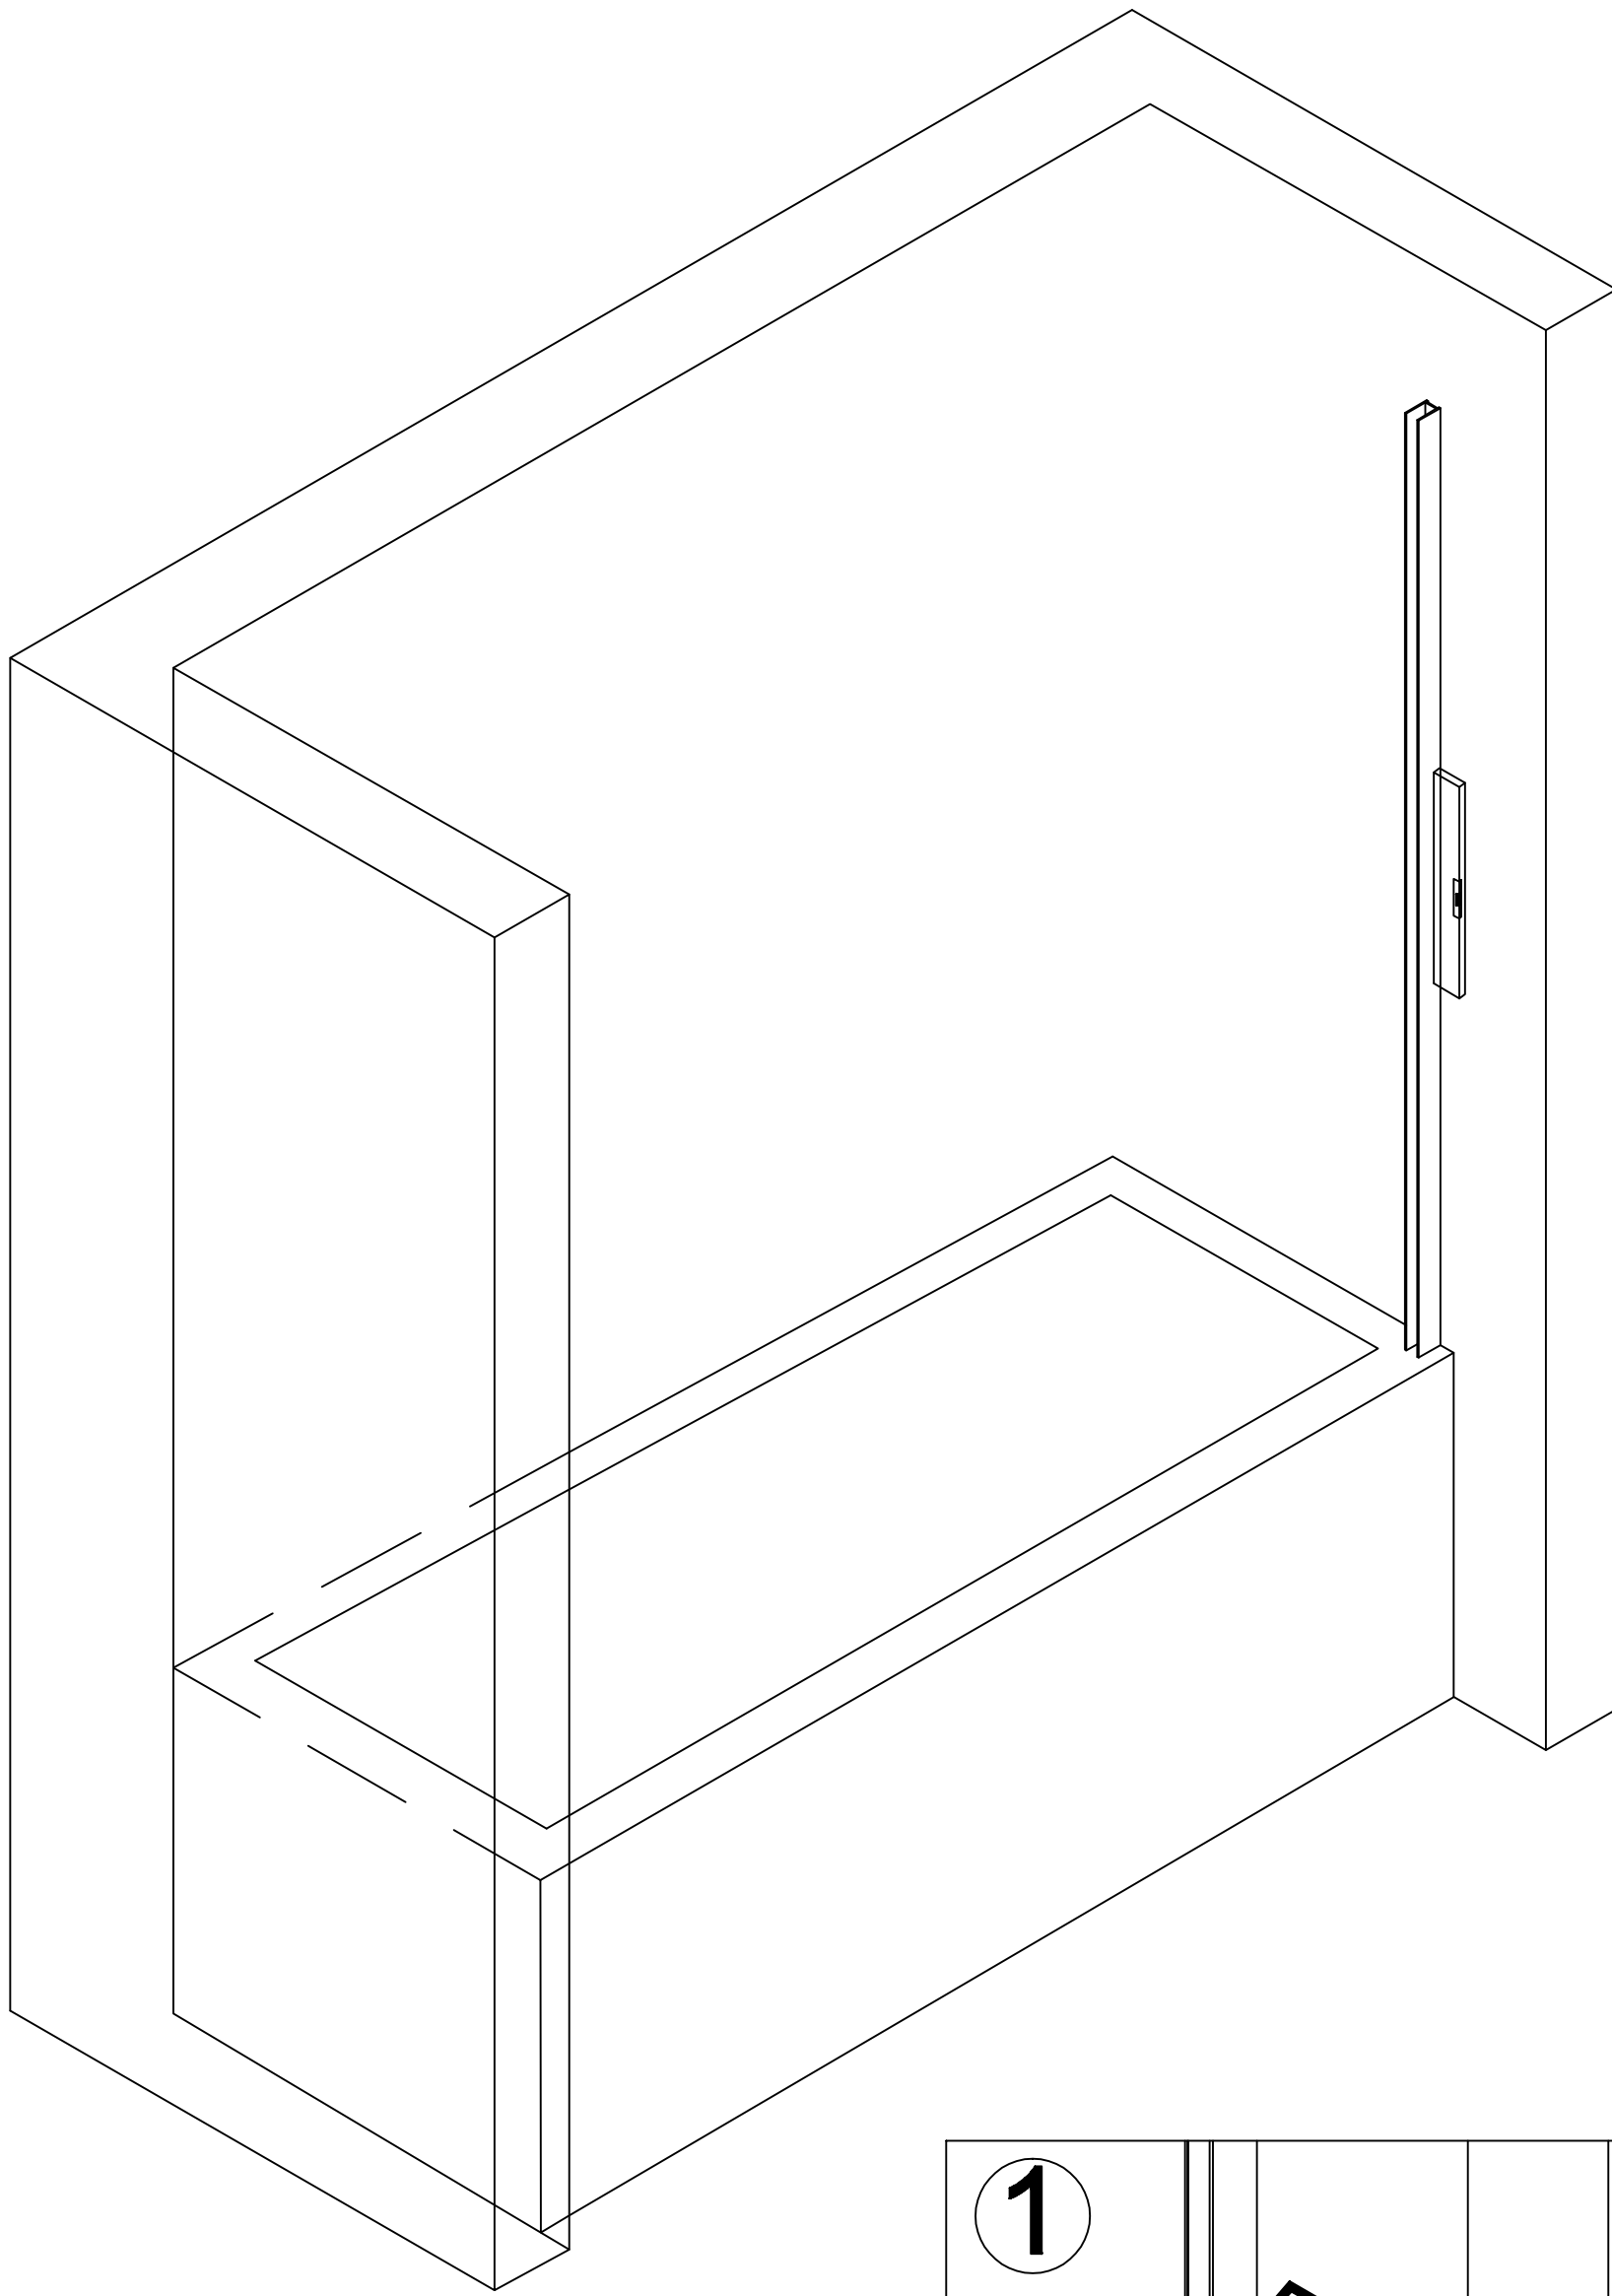




# Left Hand Assembly

## STEP 2














- 1. Lay glass clamp(7) on the tile, place the fixed panel(5) base part into glass clamp(7), fit fixed panel(5) into wall-mounted stabilizer strip(3), level it vertical with level and mark the clamp(7) position with pencil.(Note:the distance is 460mm from wall to glass clamp)
- 2. Take off fixed panel(5), then place glass clamp(7) on the marking and mark the hole position with pencil.
- 3. Take off clamp(7) and drill holes on the markings.
- 4. Hammer the plug 6\*28(1) into the hole.
- 5. Secure the glass clamp(7) with 4\*30 screw(2).
- 6. Fill a small amount of silicone in inner wall-mounted stabilizer strip for fixed panel(3), then place the fixed panel(5) base part into glass clamp(7) and fit fixed panel(5) and the two one-sided plastic strips(4) into wall-mounted stabilizer strip(3)Then push the fixed panel into the wall-mounted stabilizer strip for fixed panel, and finally snap the one-sided plastic strip into the gap between the fixed panel and the all-mounted stabilizer strip for fixed panel

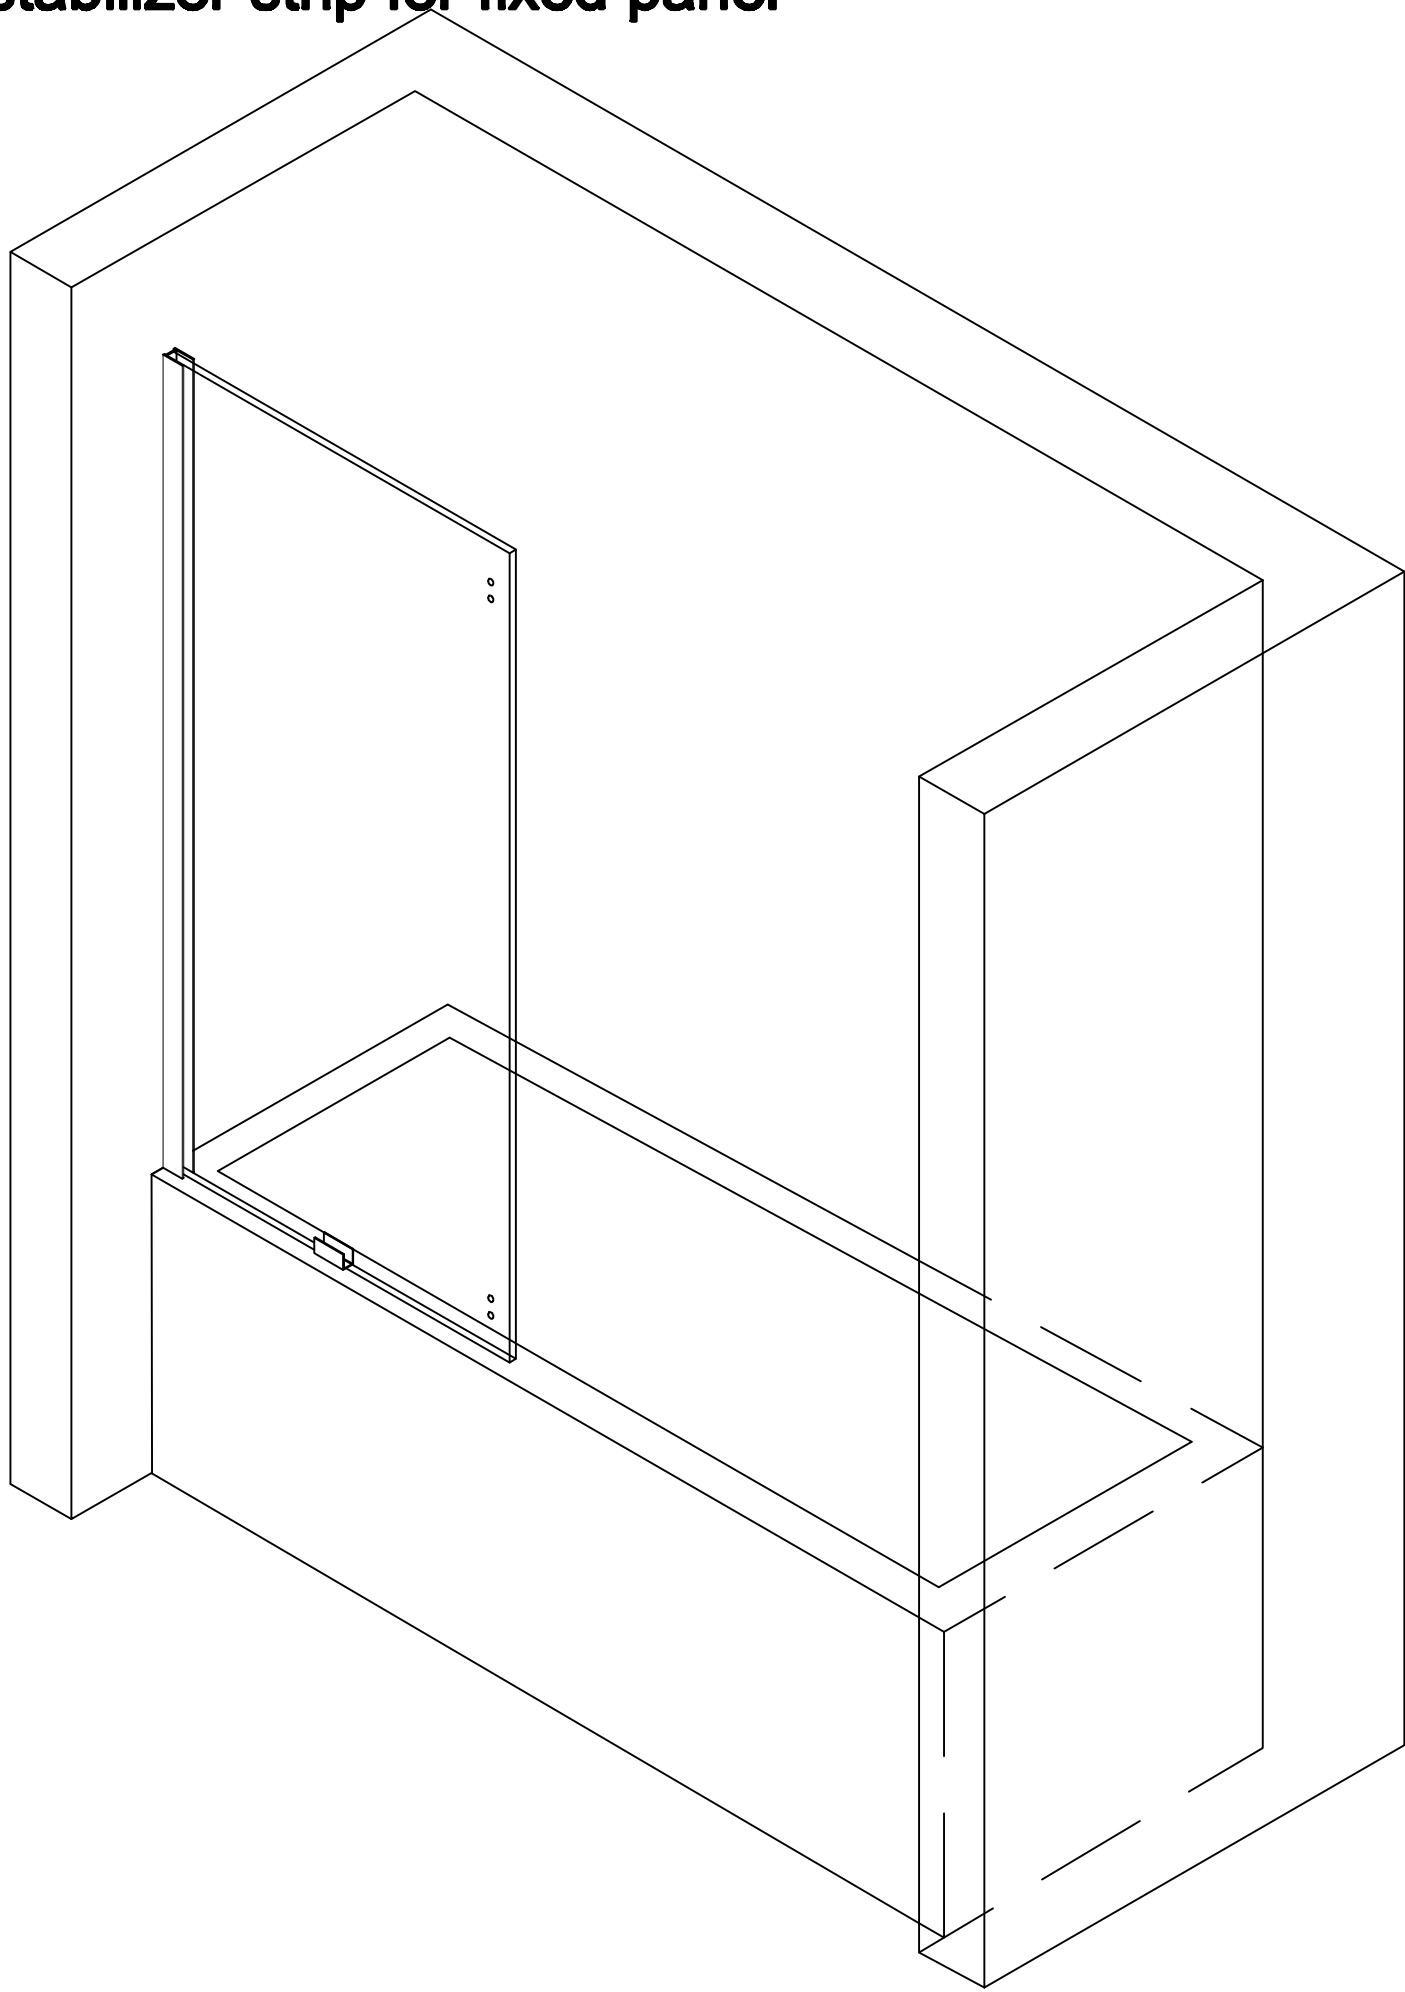

# Right Hand Assembly

## STEP 2


- 1. Lay glass clamp(7) on the tile, place the fixed panel(5) base part into glass clamp(7), fit fixed panel(5) into wall-mounted stabilizer strip(3), level it vertical with level and mark the clamp(7) position with pencil.(Note:the distance is 460mm from wall to glass clamp)
- 2. Take off fixed panel(5), then place glass clamp(7) on the marking and mark the hole position with pencil.
- 3. Take off clamp(7) and drill holes on the markings.
- 4. Hammer the plug 6\*28(1) into the hole.
- 5. Secure the glass clamp(7) with 4\*30 screw(2).
- 6. Fill a small amount of silicone in inner wall-mounted stabilizer strip for fixed panel(3), then place the fixed panel(5) base part into glass clamp(7) and fit fixed panel(5) and the two one-sided plastic strips(4) into wall-mounted stabilizer strip(3)Then push the fixed panel into the wall-mounted stabilizer strip for fixed panel, and finally snap the one-sided plastic strip into the gap between the fixed panel and the all-mounted stabilizer strip for fixed panel

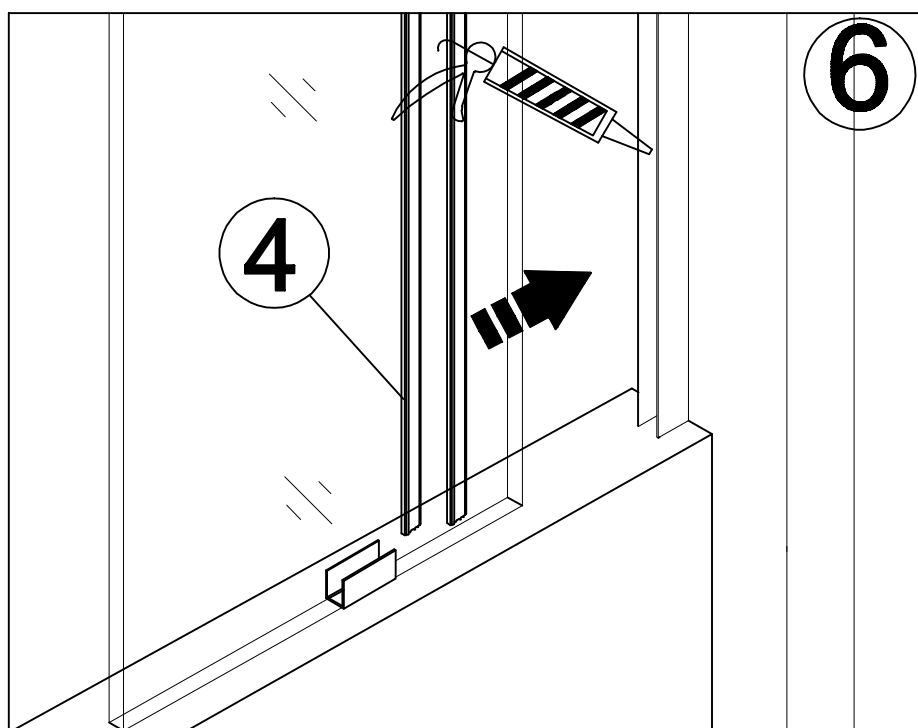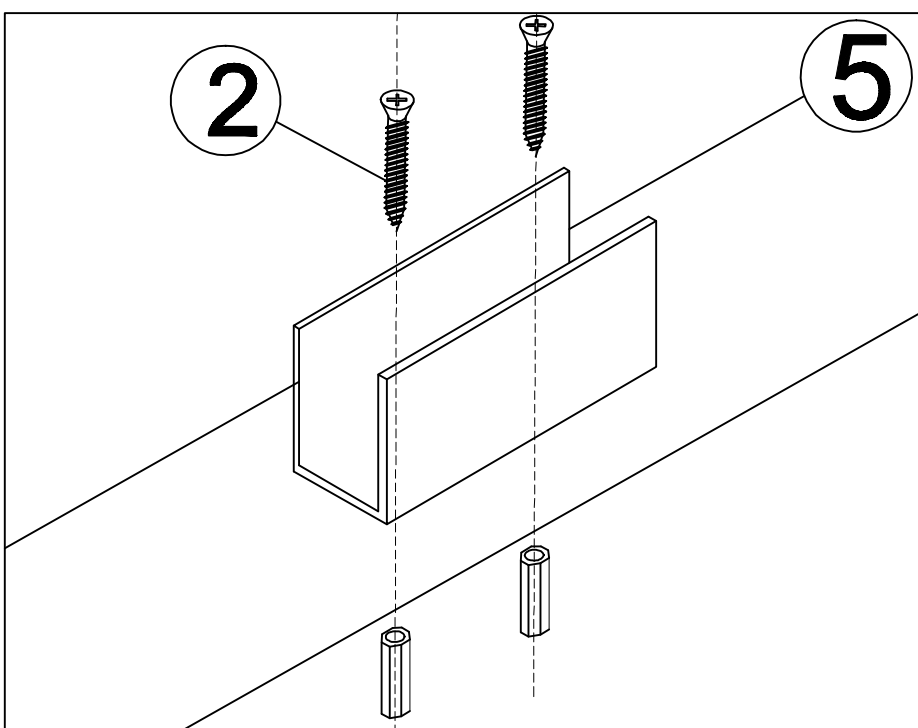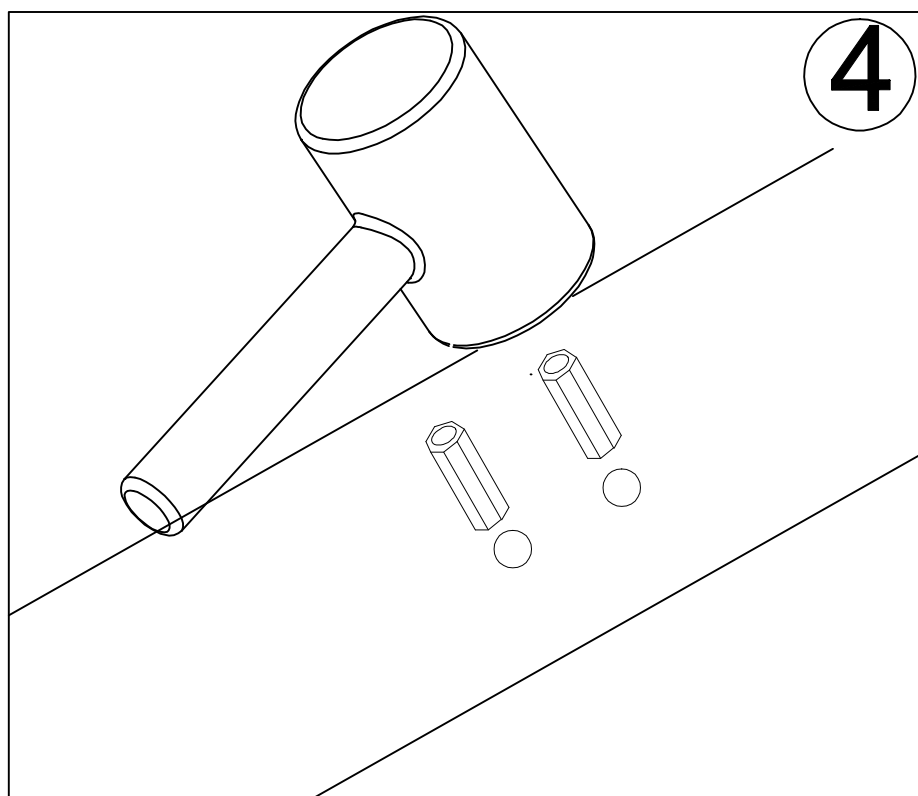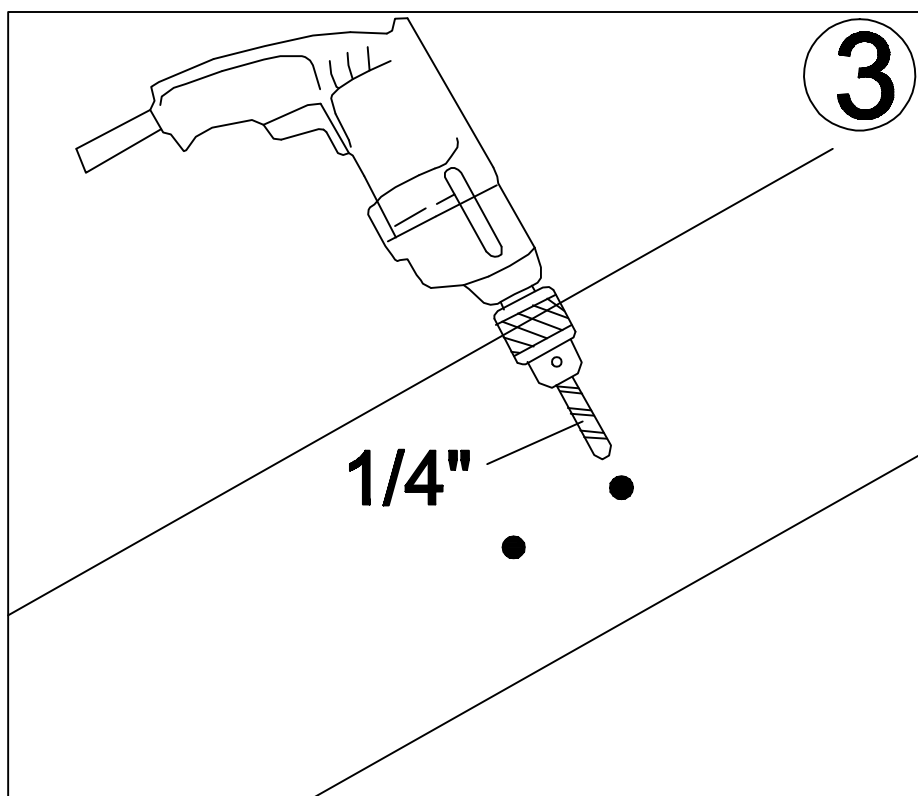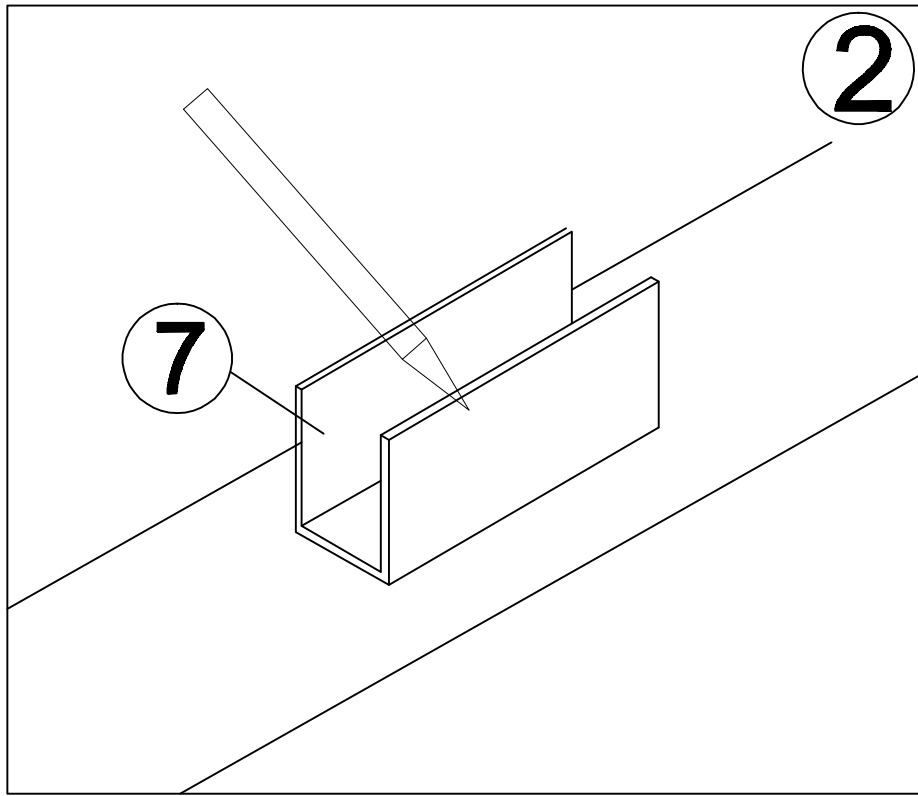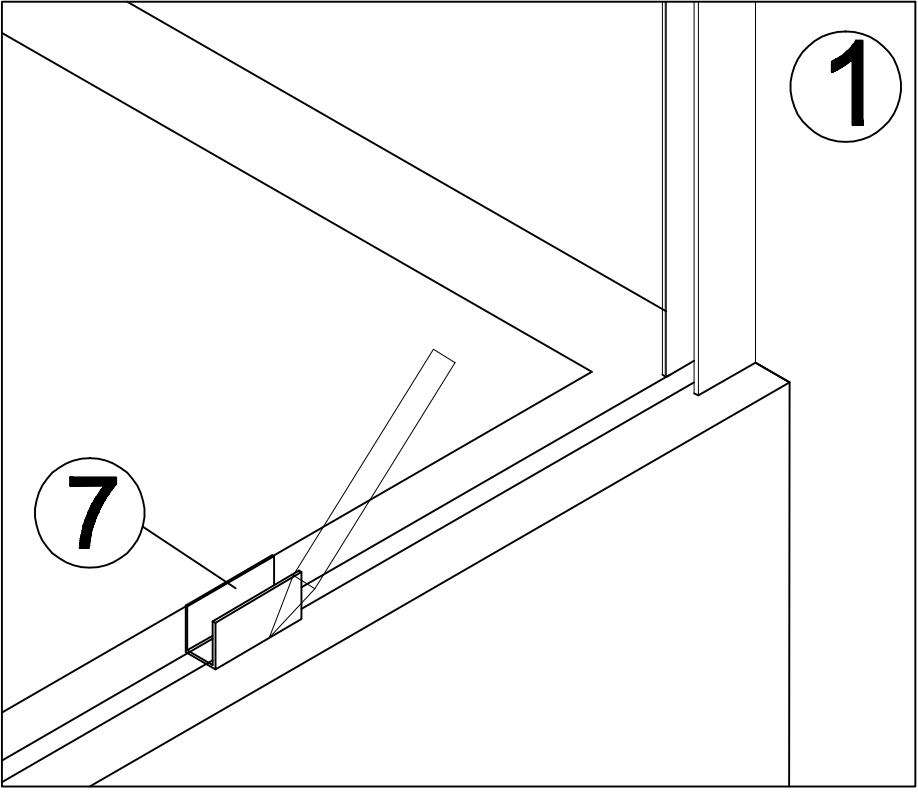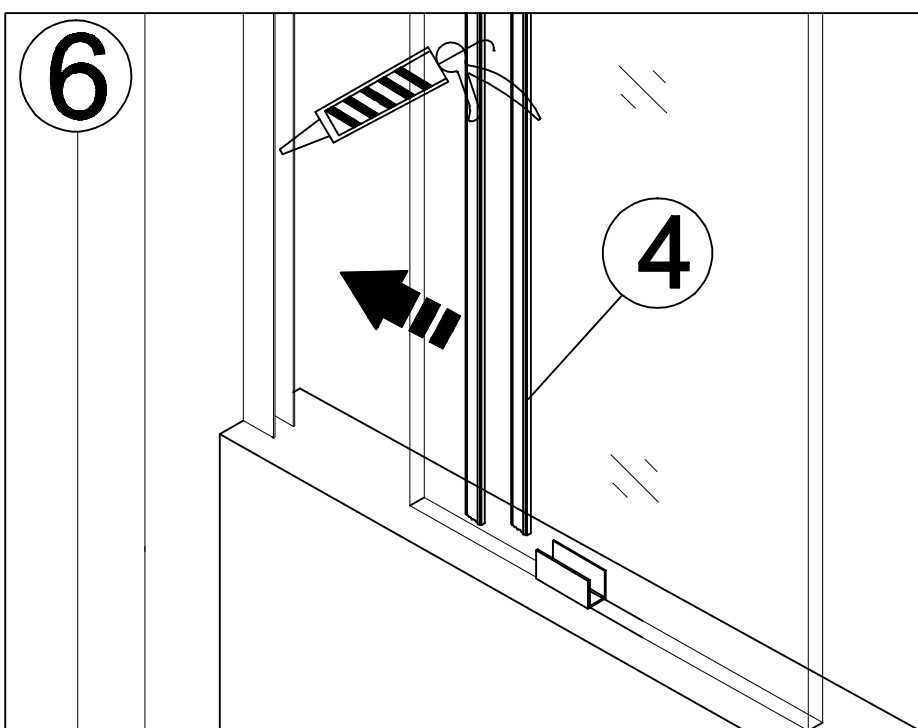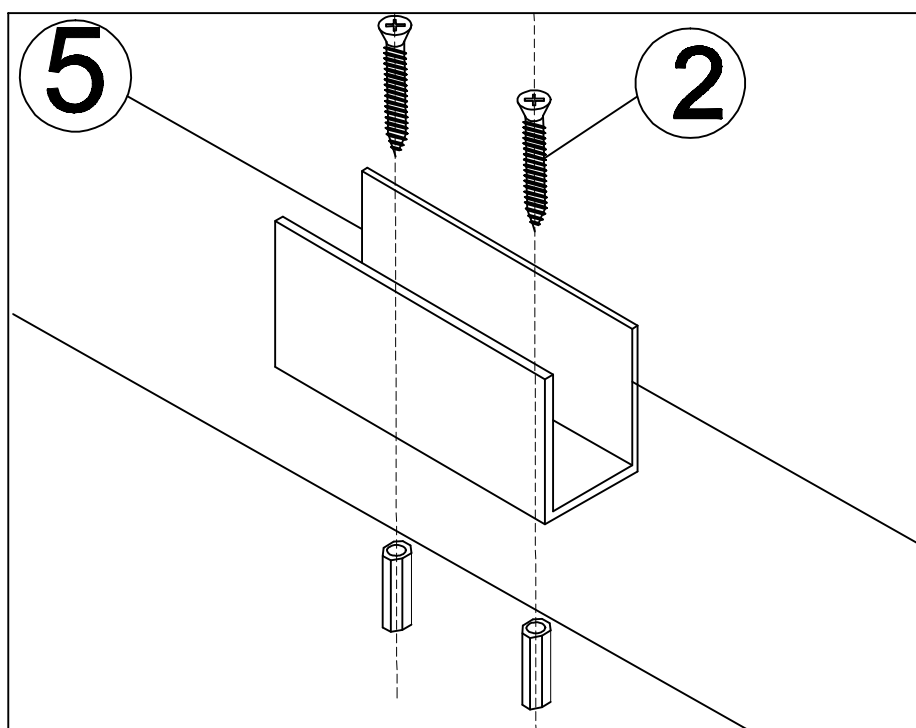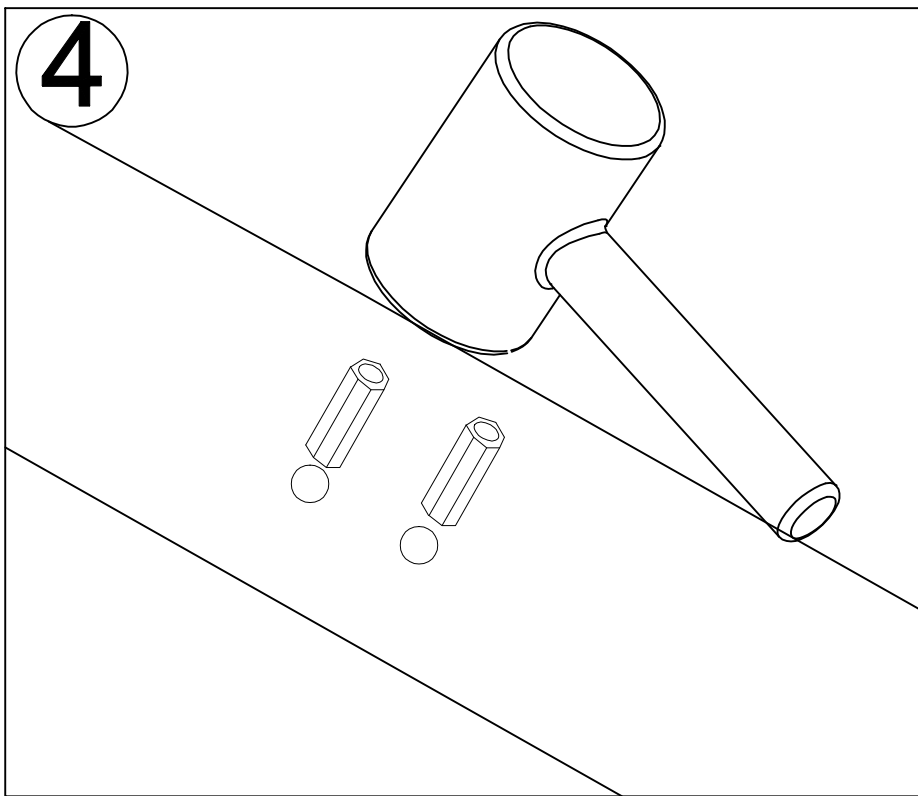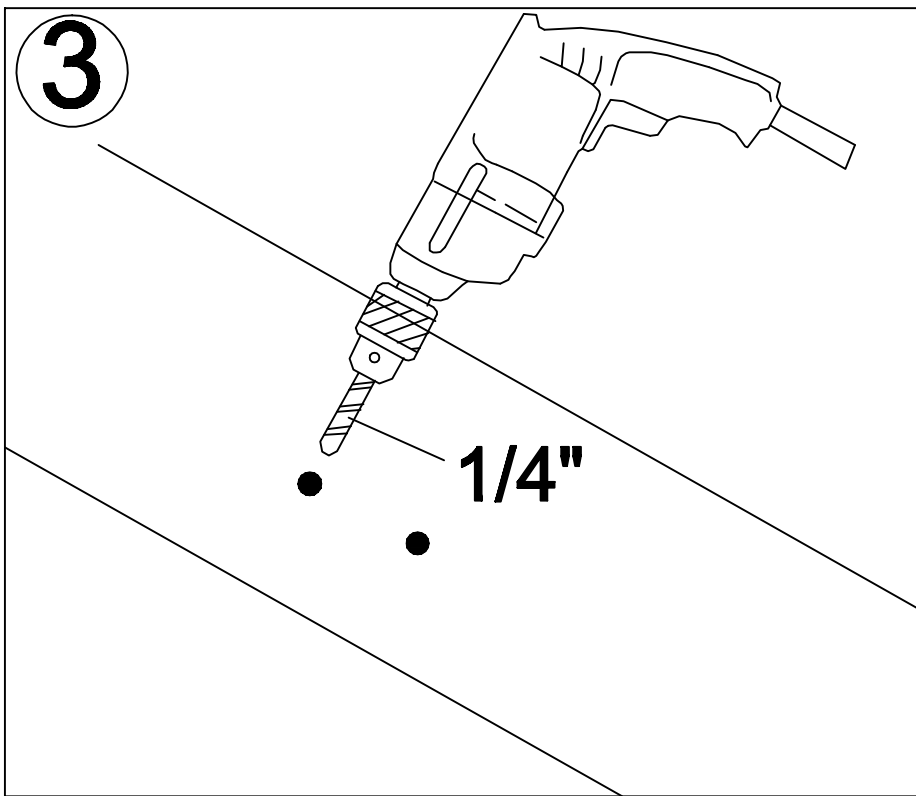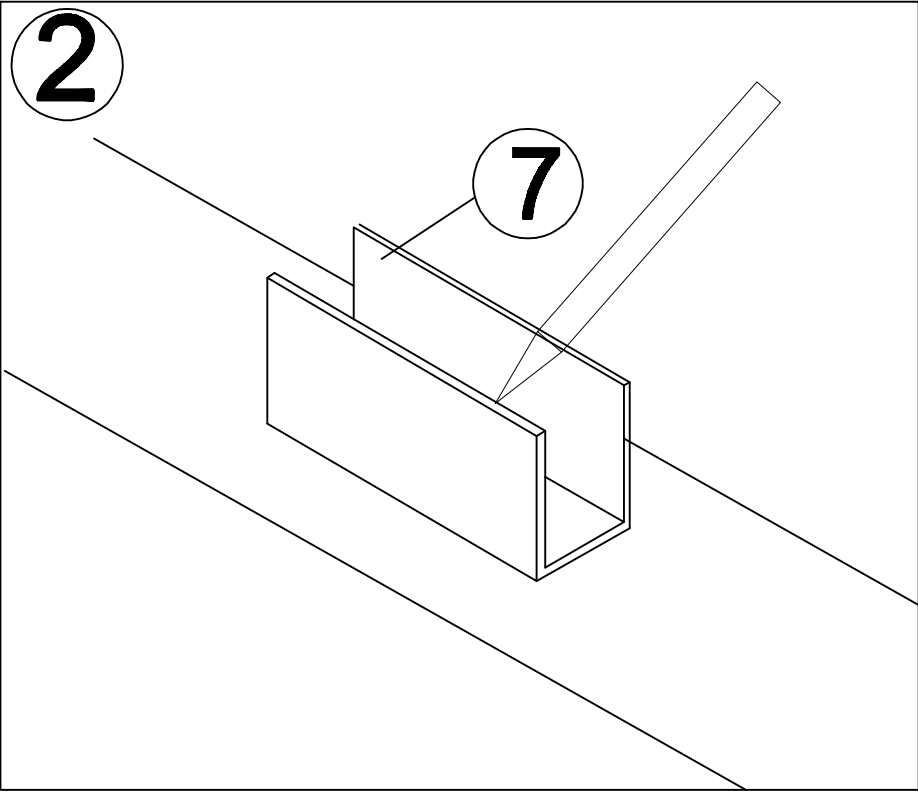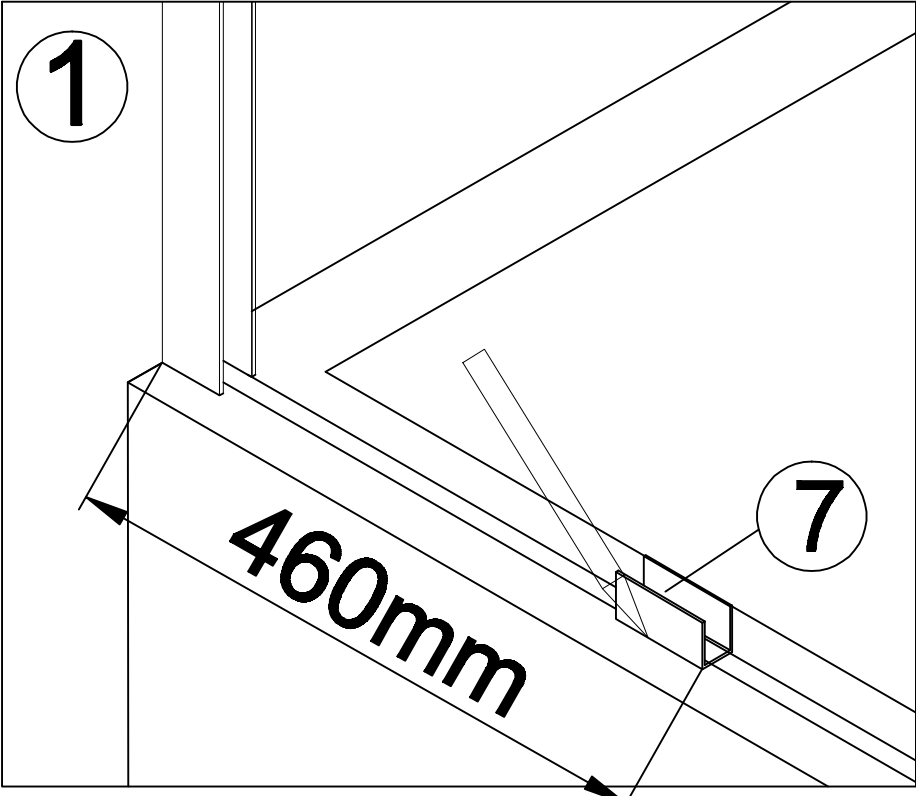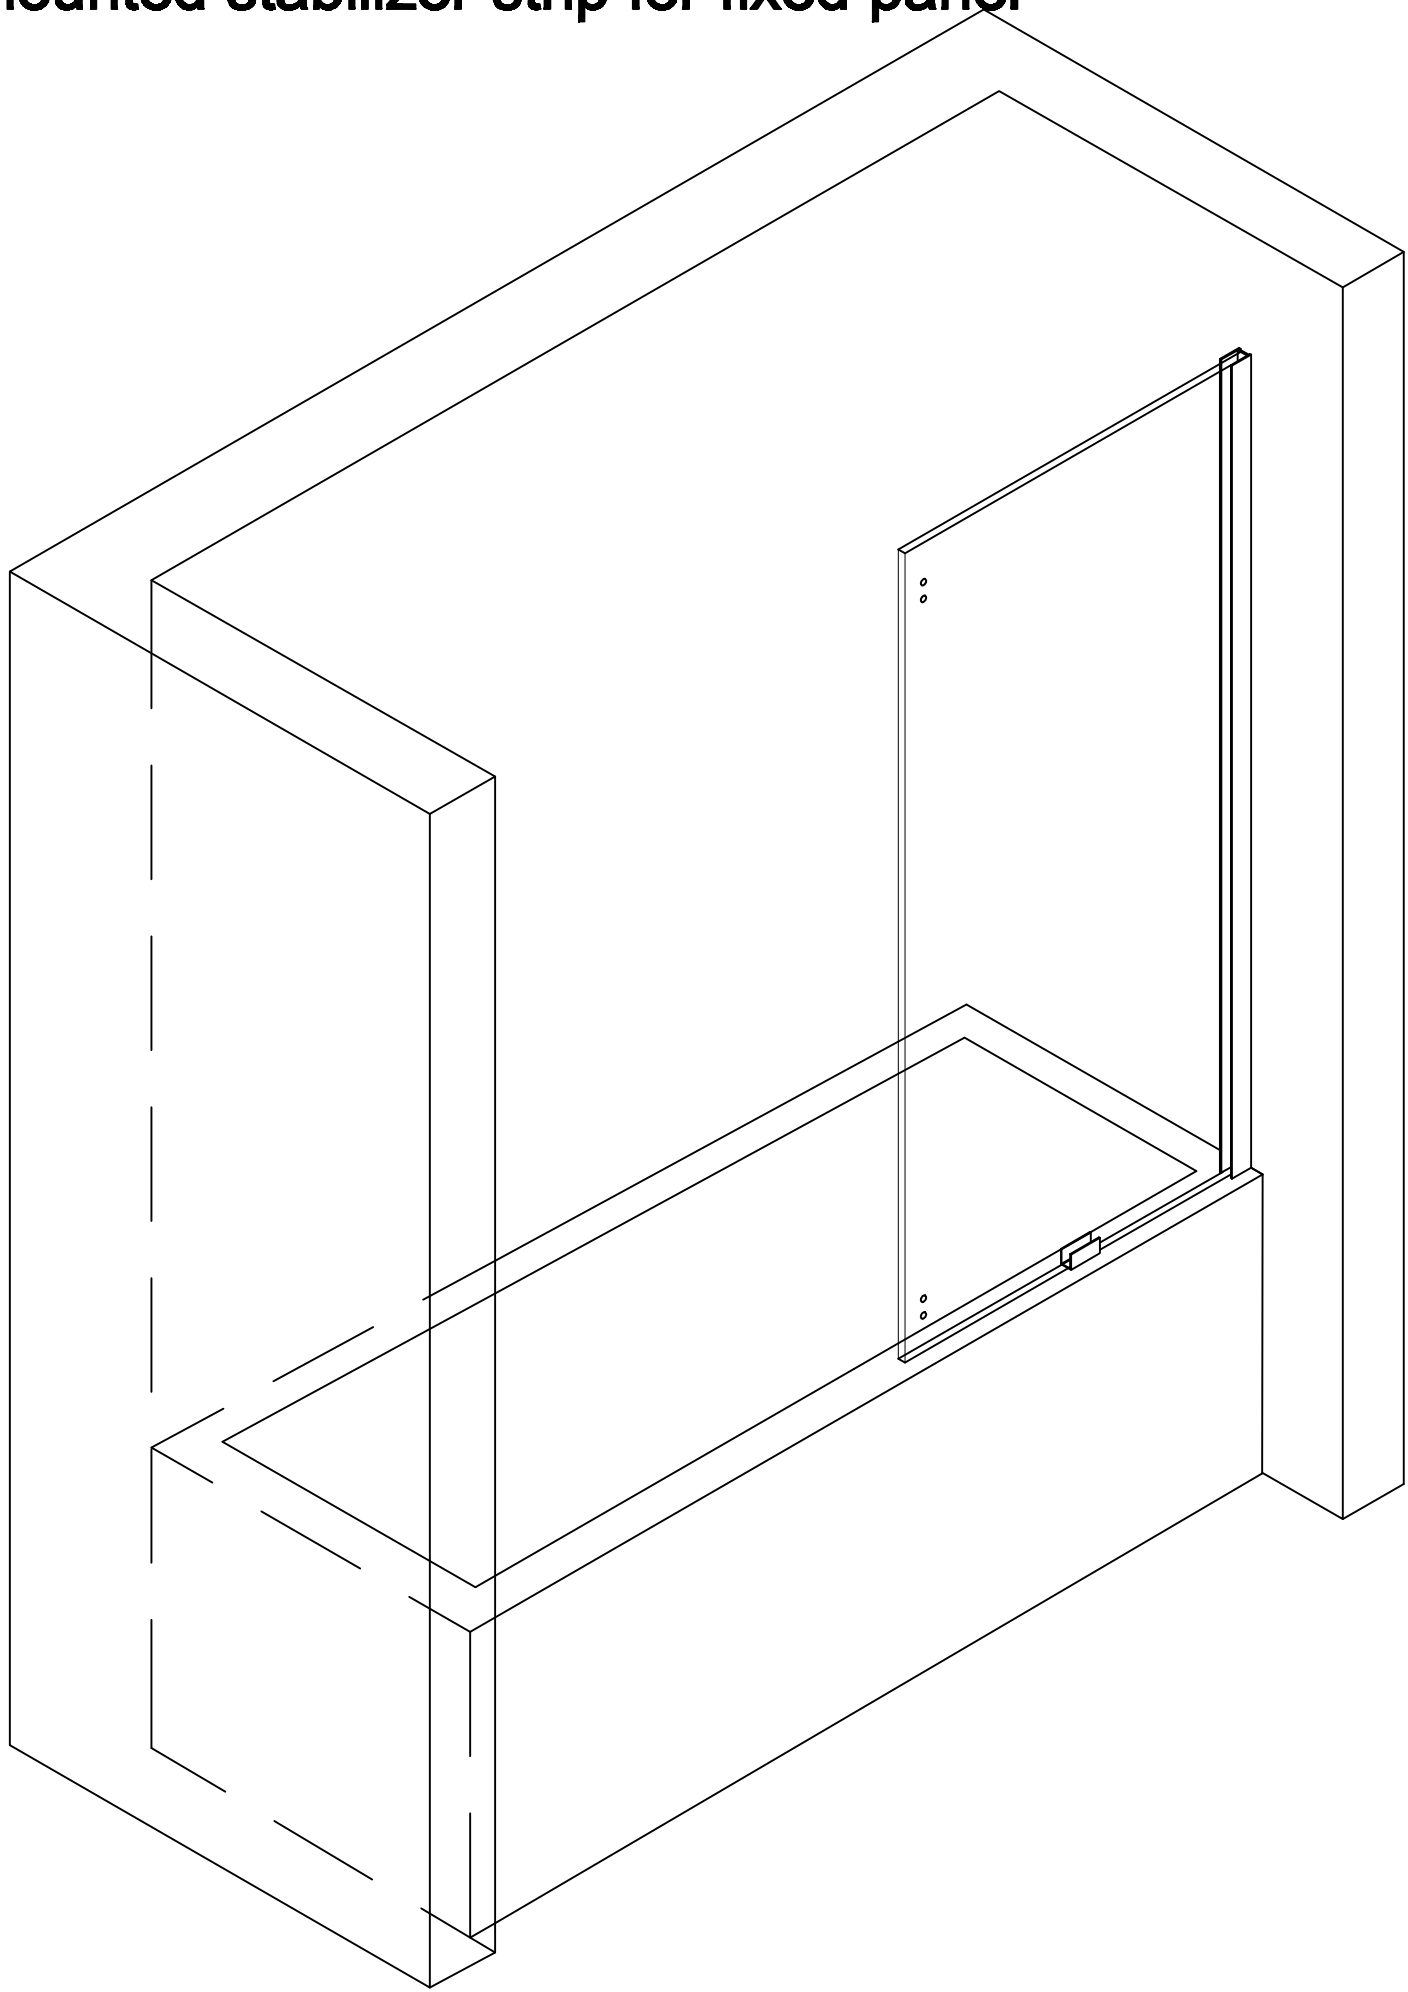

# Left Hand Assembly

## STEP 3














- 1. Loose the rail-side screw of top rail connected glass clamp(16) with Allen wrench, fit top rail(17) into clamp(16)'s hole and secure with screw, and then assemble wall-mounted top rail connector(19) to the other end of the top rail(21).
- 2. Loose clamp(16)'s top screw and fit its slot into fixed panel(5), adjust the position of wall-mounted top rail connector(19), then mark hole position of the connector(19).
- 3. Take off wall-mounted top rail connector(19) and drill holes on the markings.
- 4. Hammer the plug 6\*28(1) into the hole.
- 5. Hold wall-mounted top rail connector(19) against the wall and secure it with screw 4\*30(18).
- 6. Secure the top screw of top rail connected glass clamp(16) with Allen wrench.

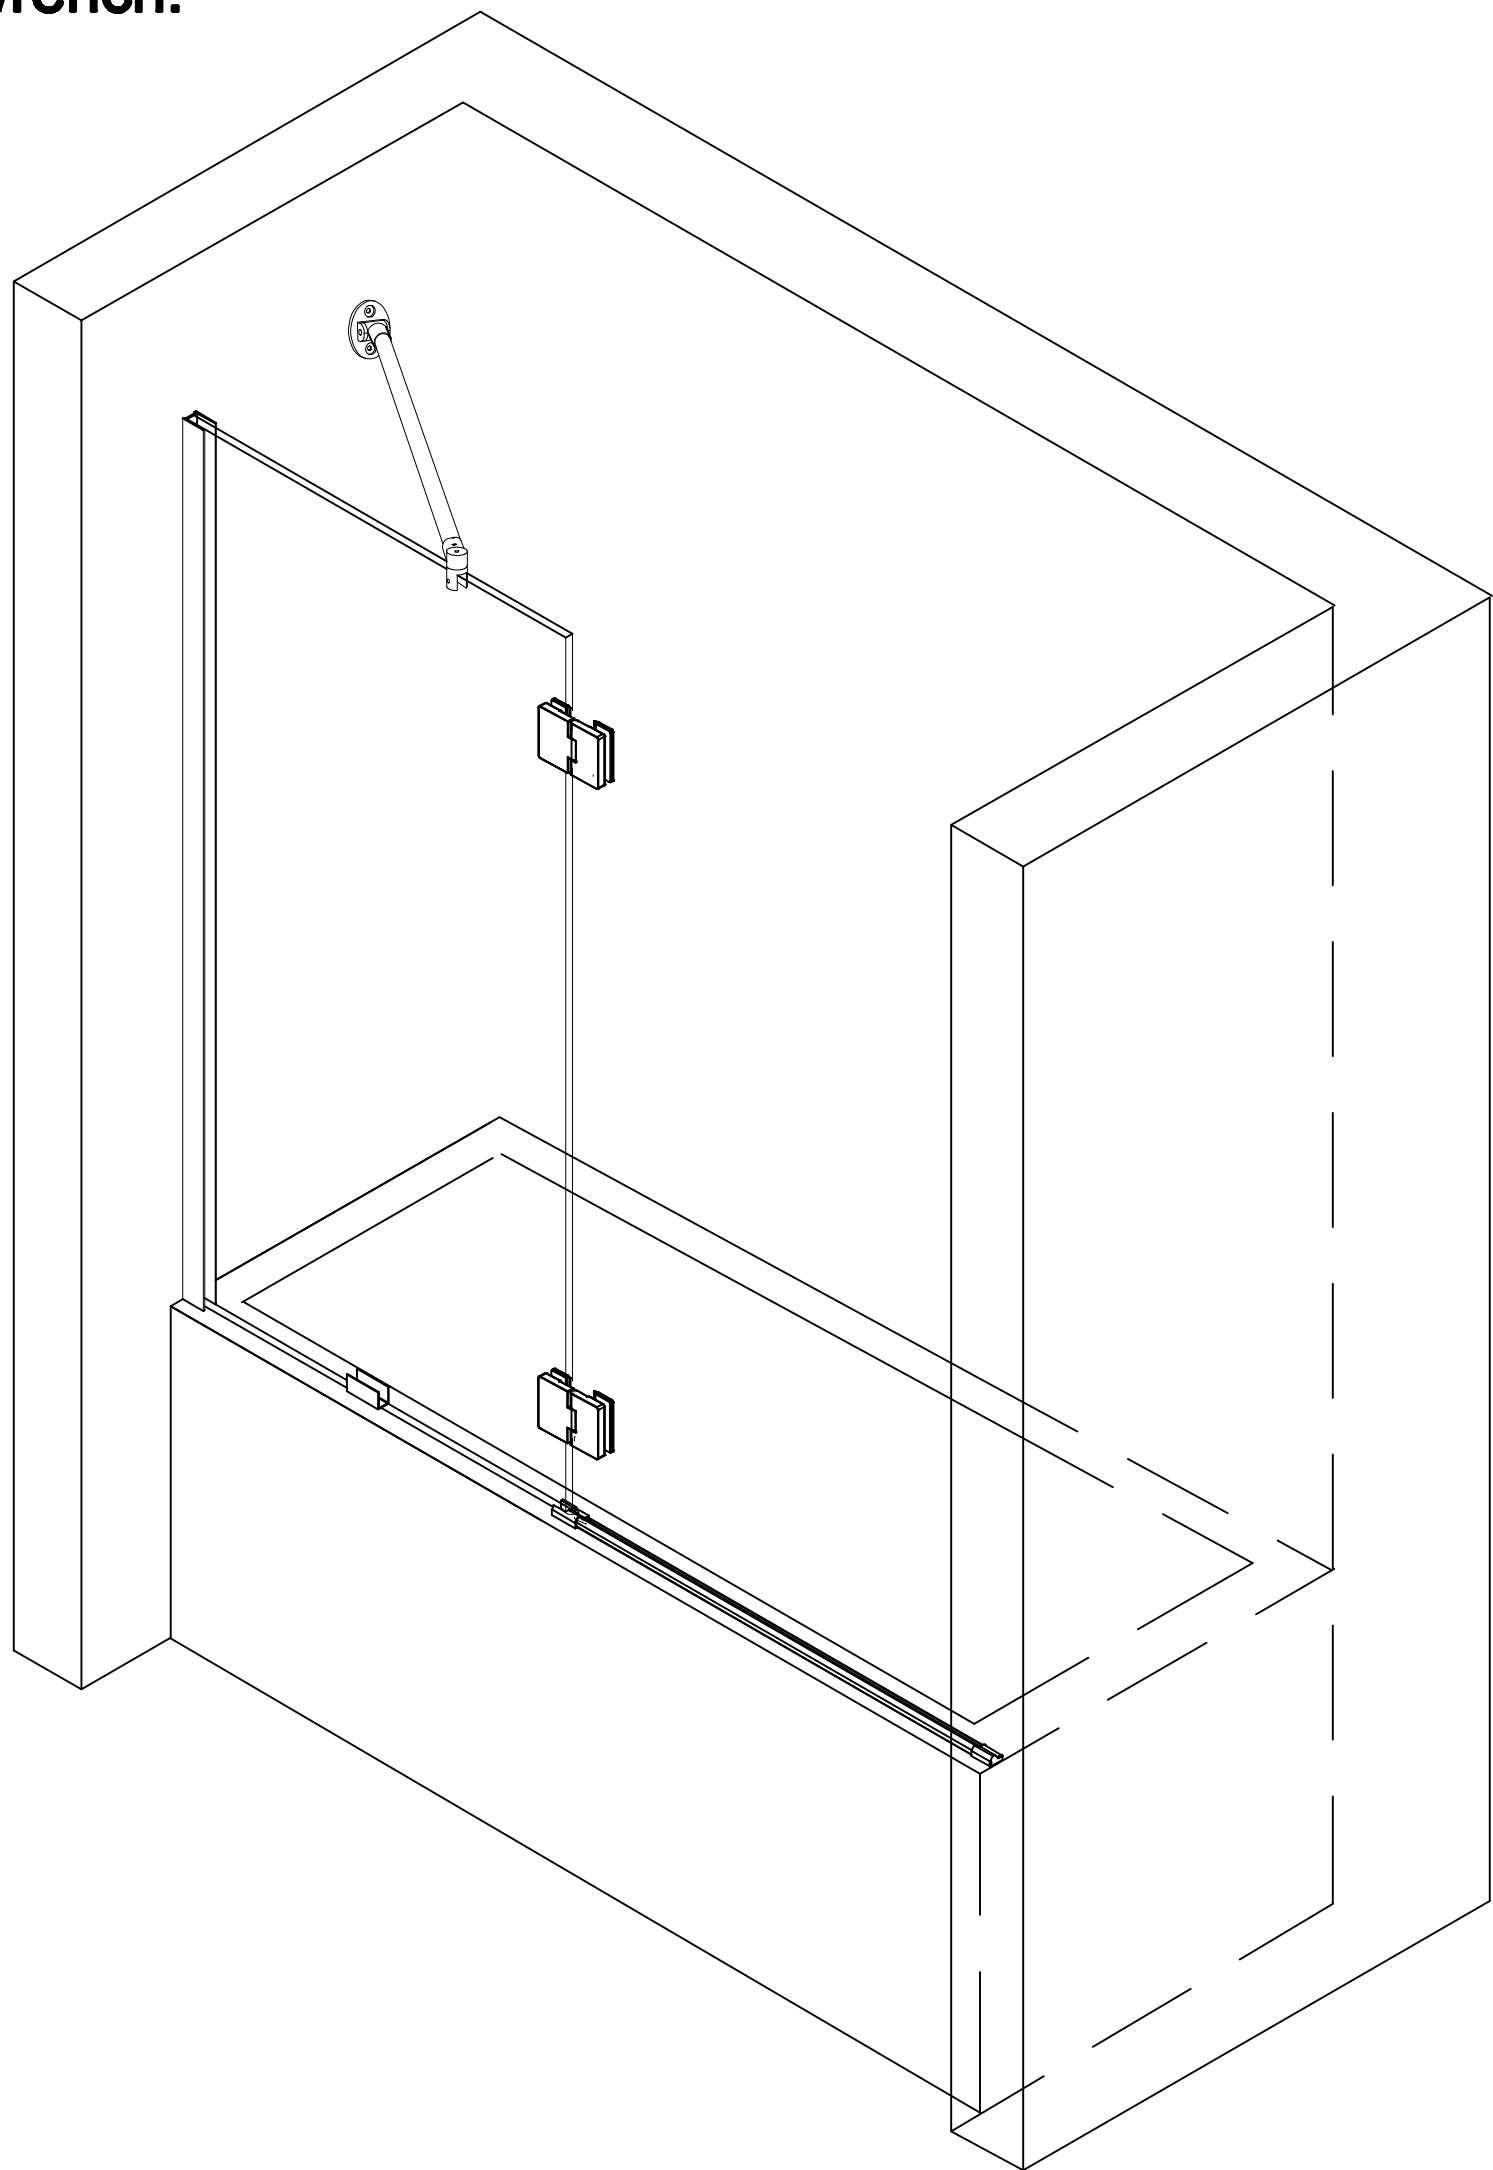

# Right Hand Assembly

## STEP 3




- 1. Loose the rail-side screw of top rail connected glass clamp(16) with Allen wrench, fit top rail(17) into clamp(16)'s hole and secure with screw, and then assemble wall-mounted top rail connector(19) to the other end of the top rail(21).
- 2. Loose clamp(16)'s top screw and fit its slot into fixed panel(5), adjust the position of wall-mounted top rail connector(19), then mark hole position of the connector(19).
- 3. Take off wall-mounted top rail connector(19) and drill holes on the markings.
- 4. Hammer the plug 6\*28(1) into the hole.
- 5. Hold wall-mounted top rail connector(19) against the wall and secure it with screw 4\*30(18).
- 6. Secure the top screw of top rail connected glass clamp(16) with Allen wrench.

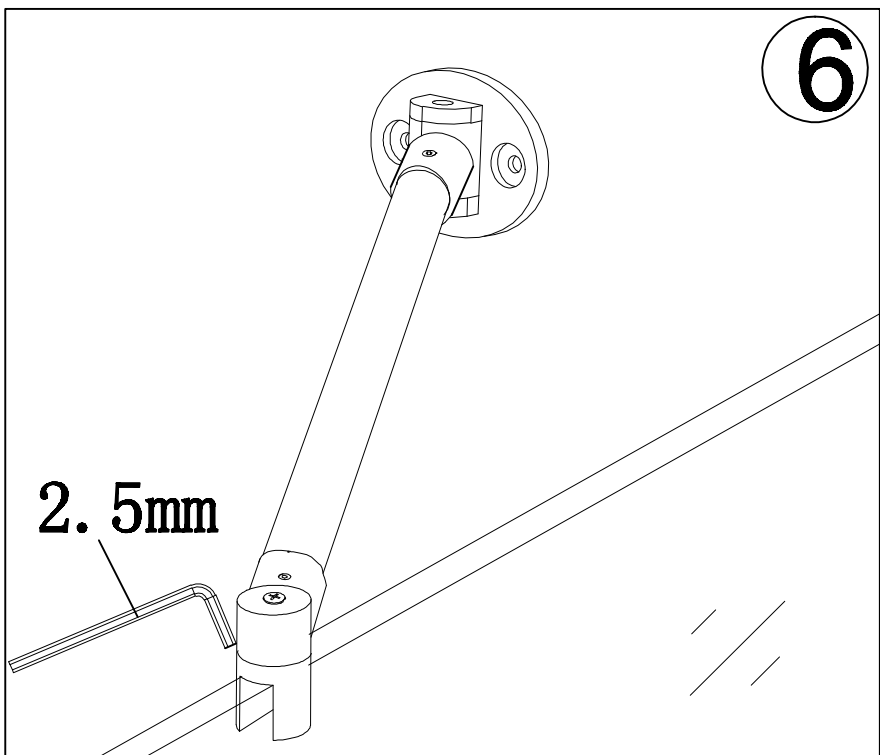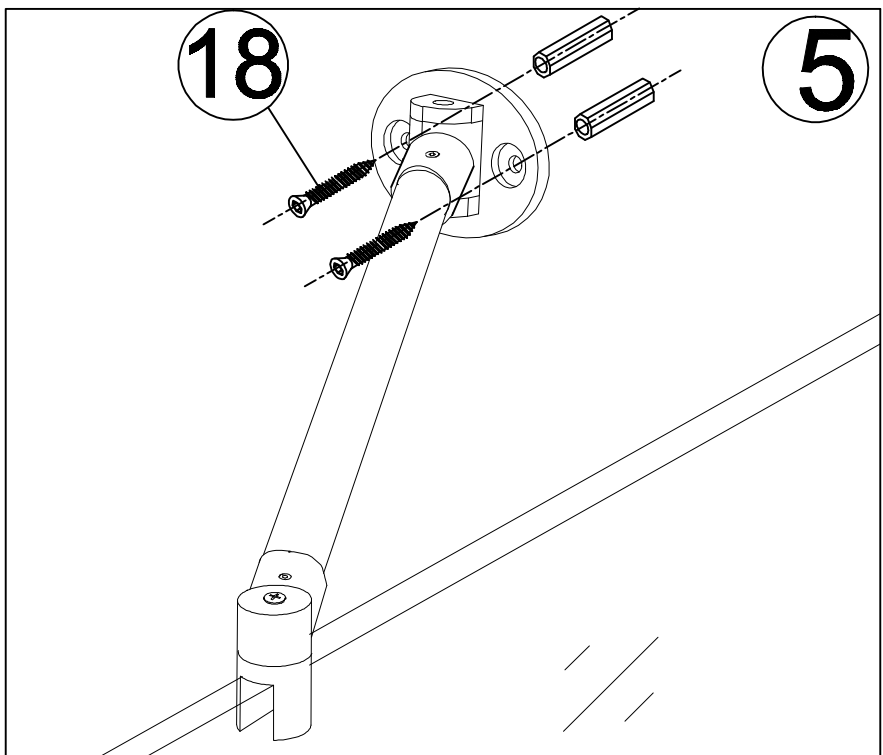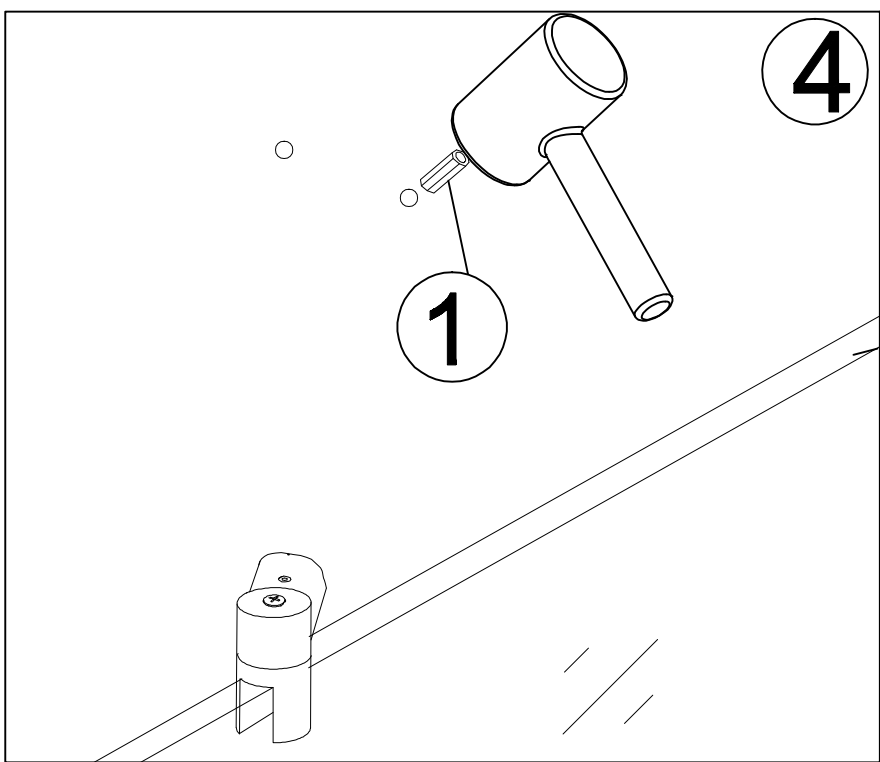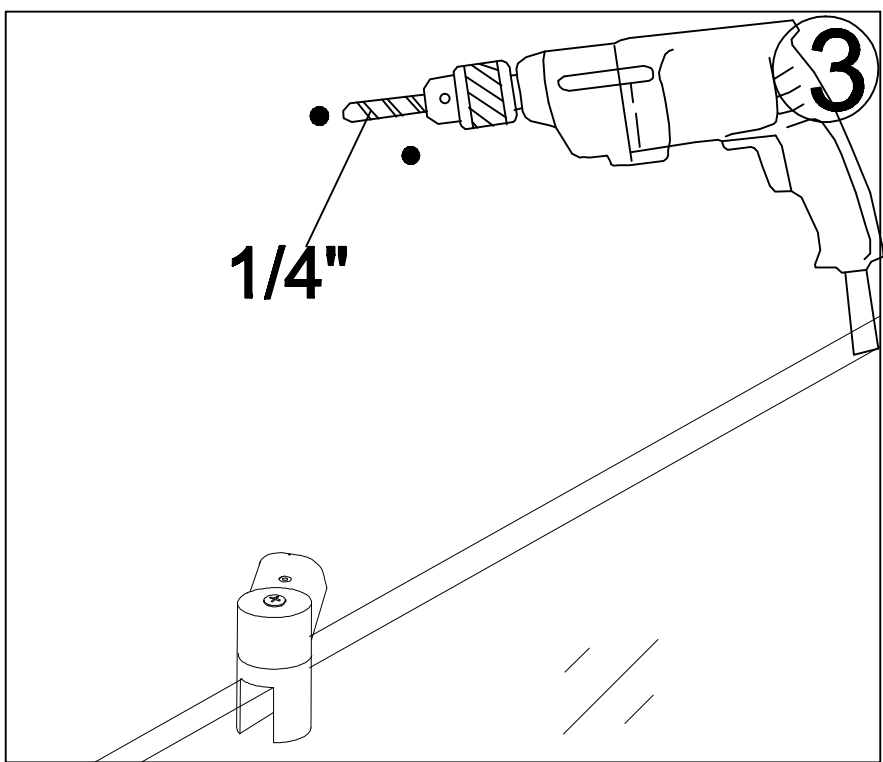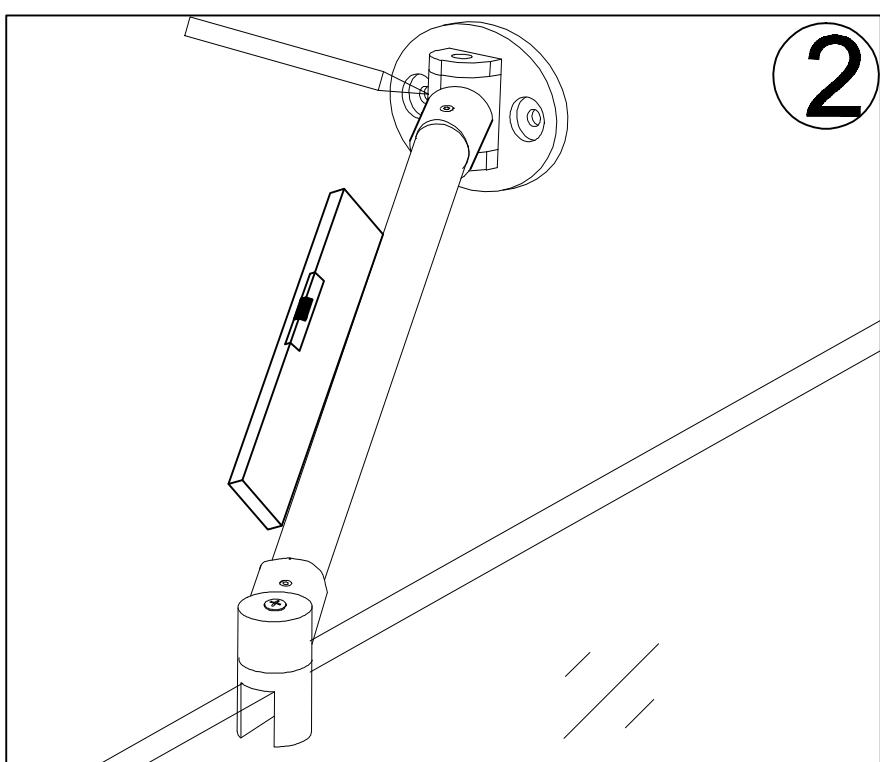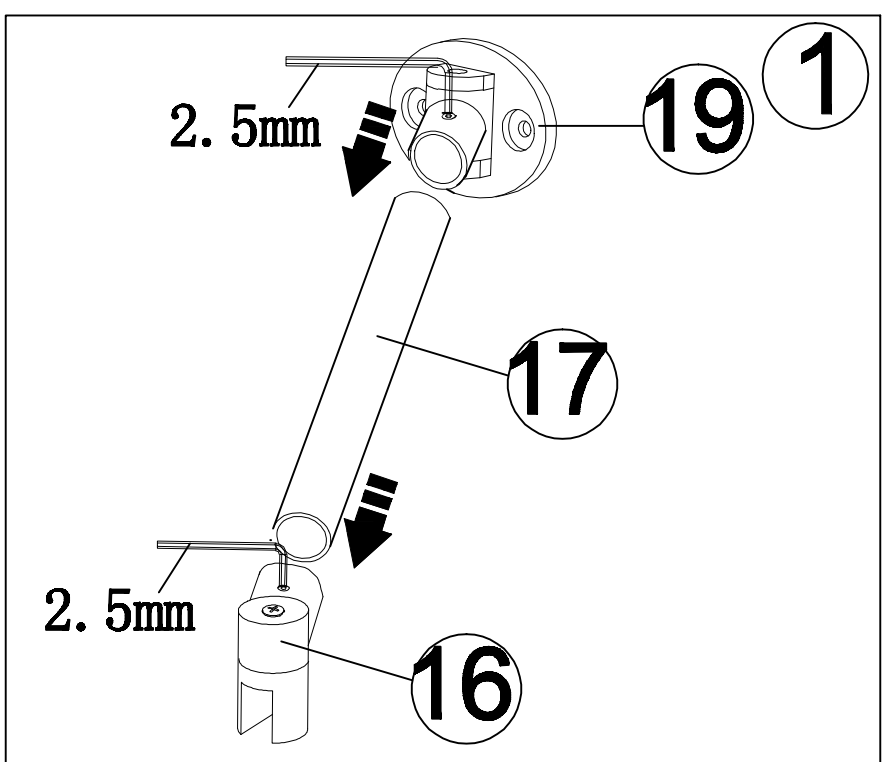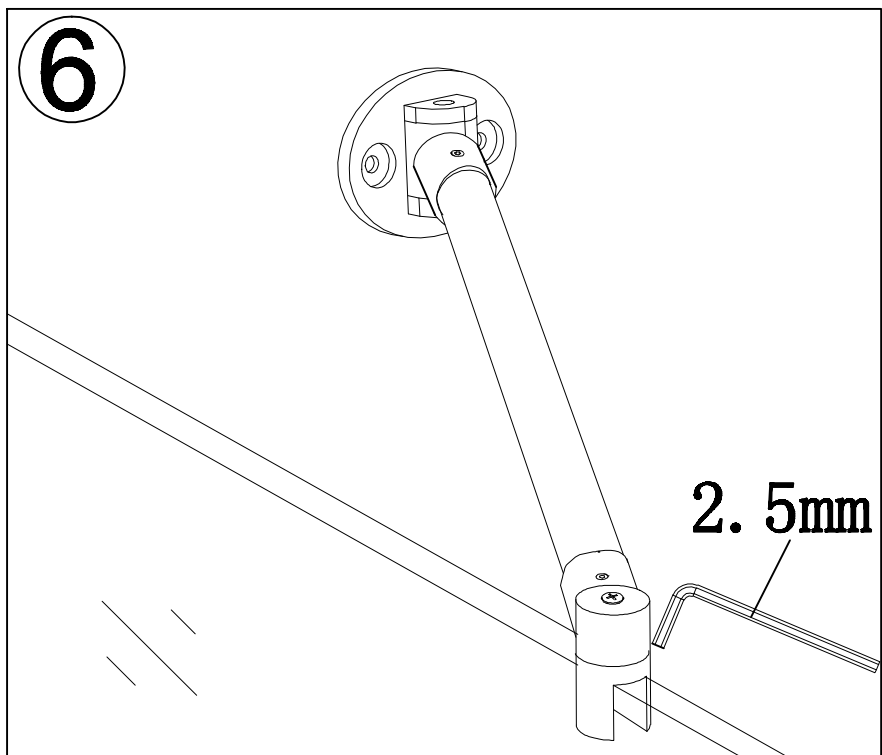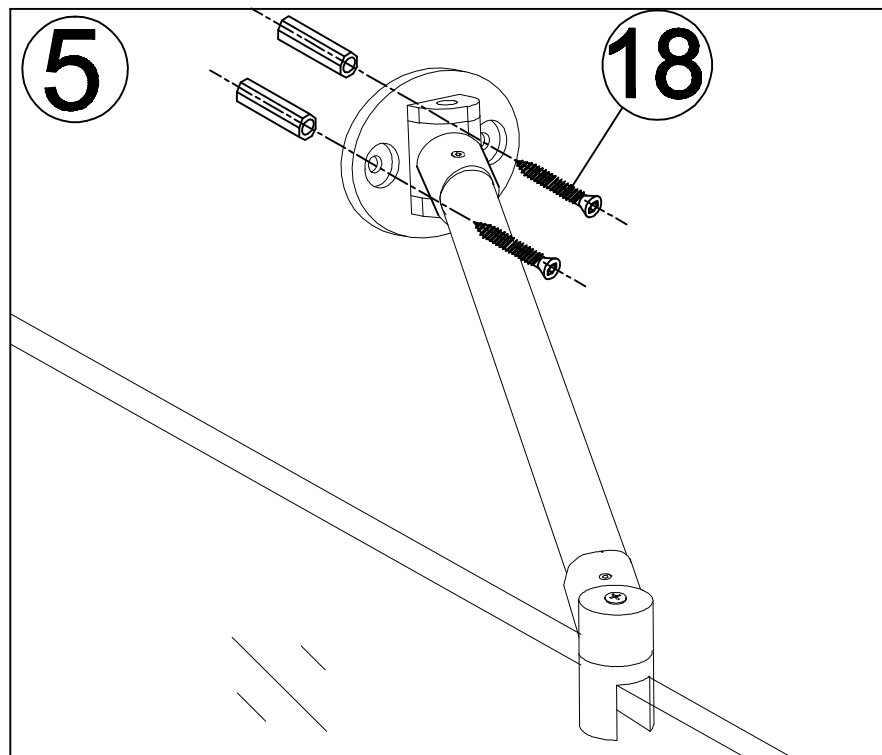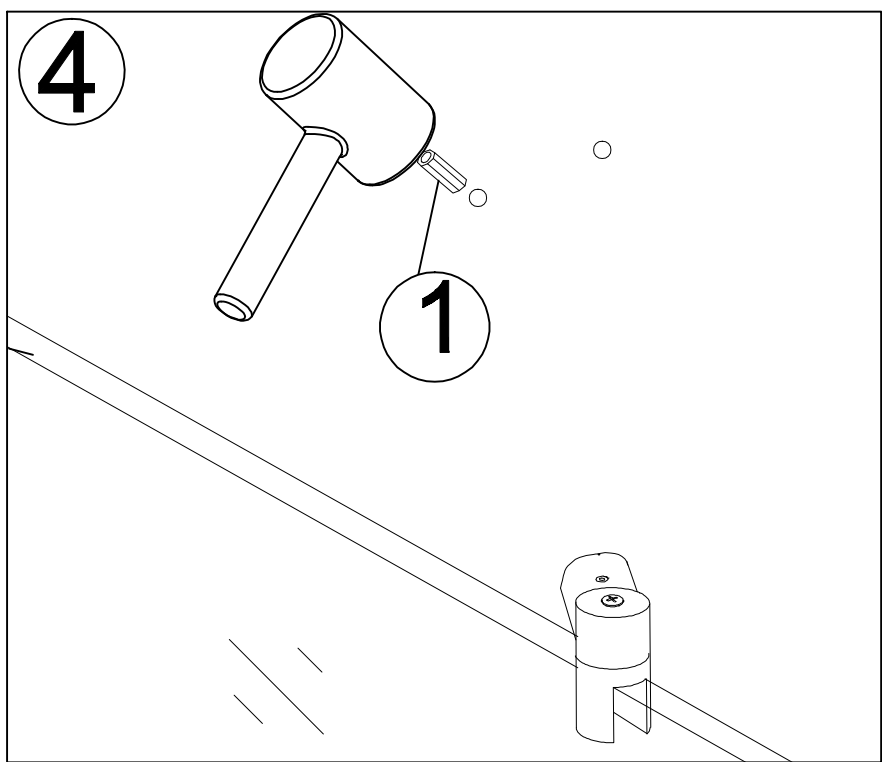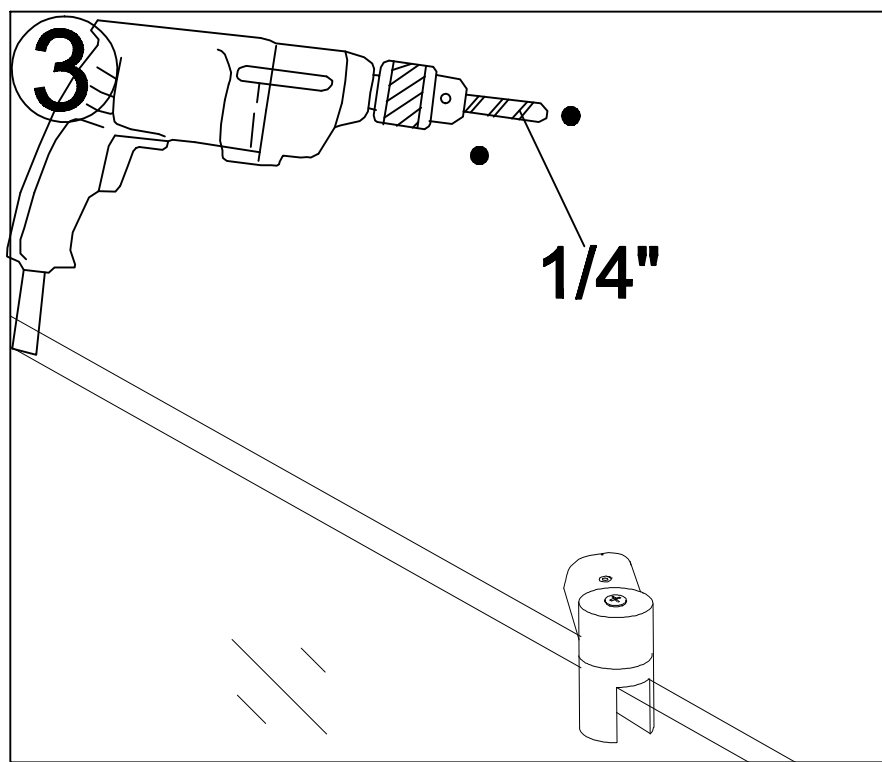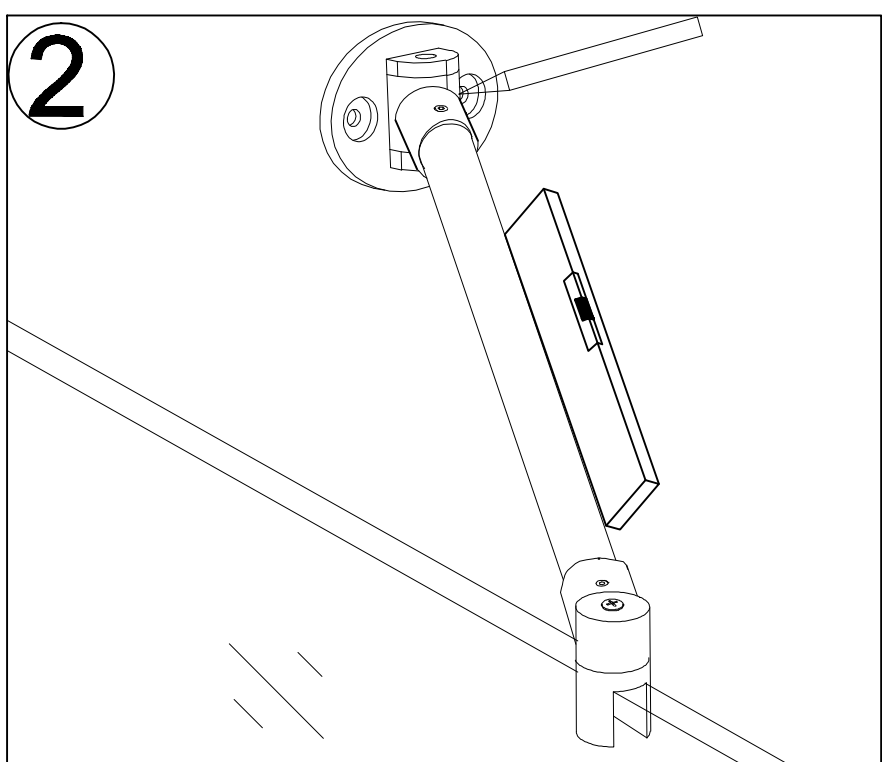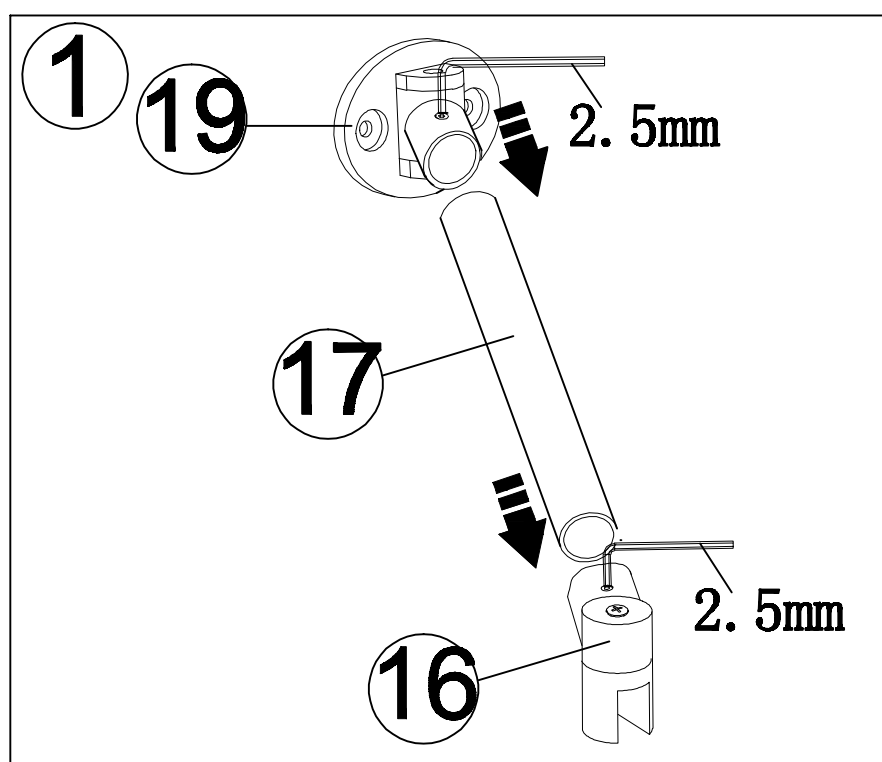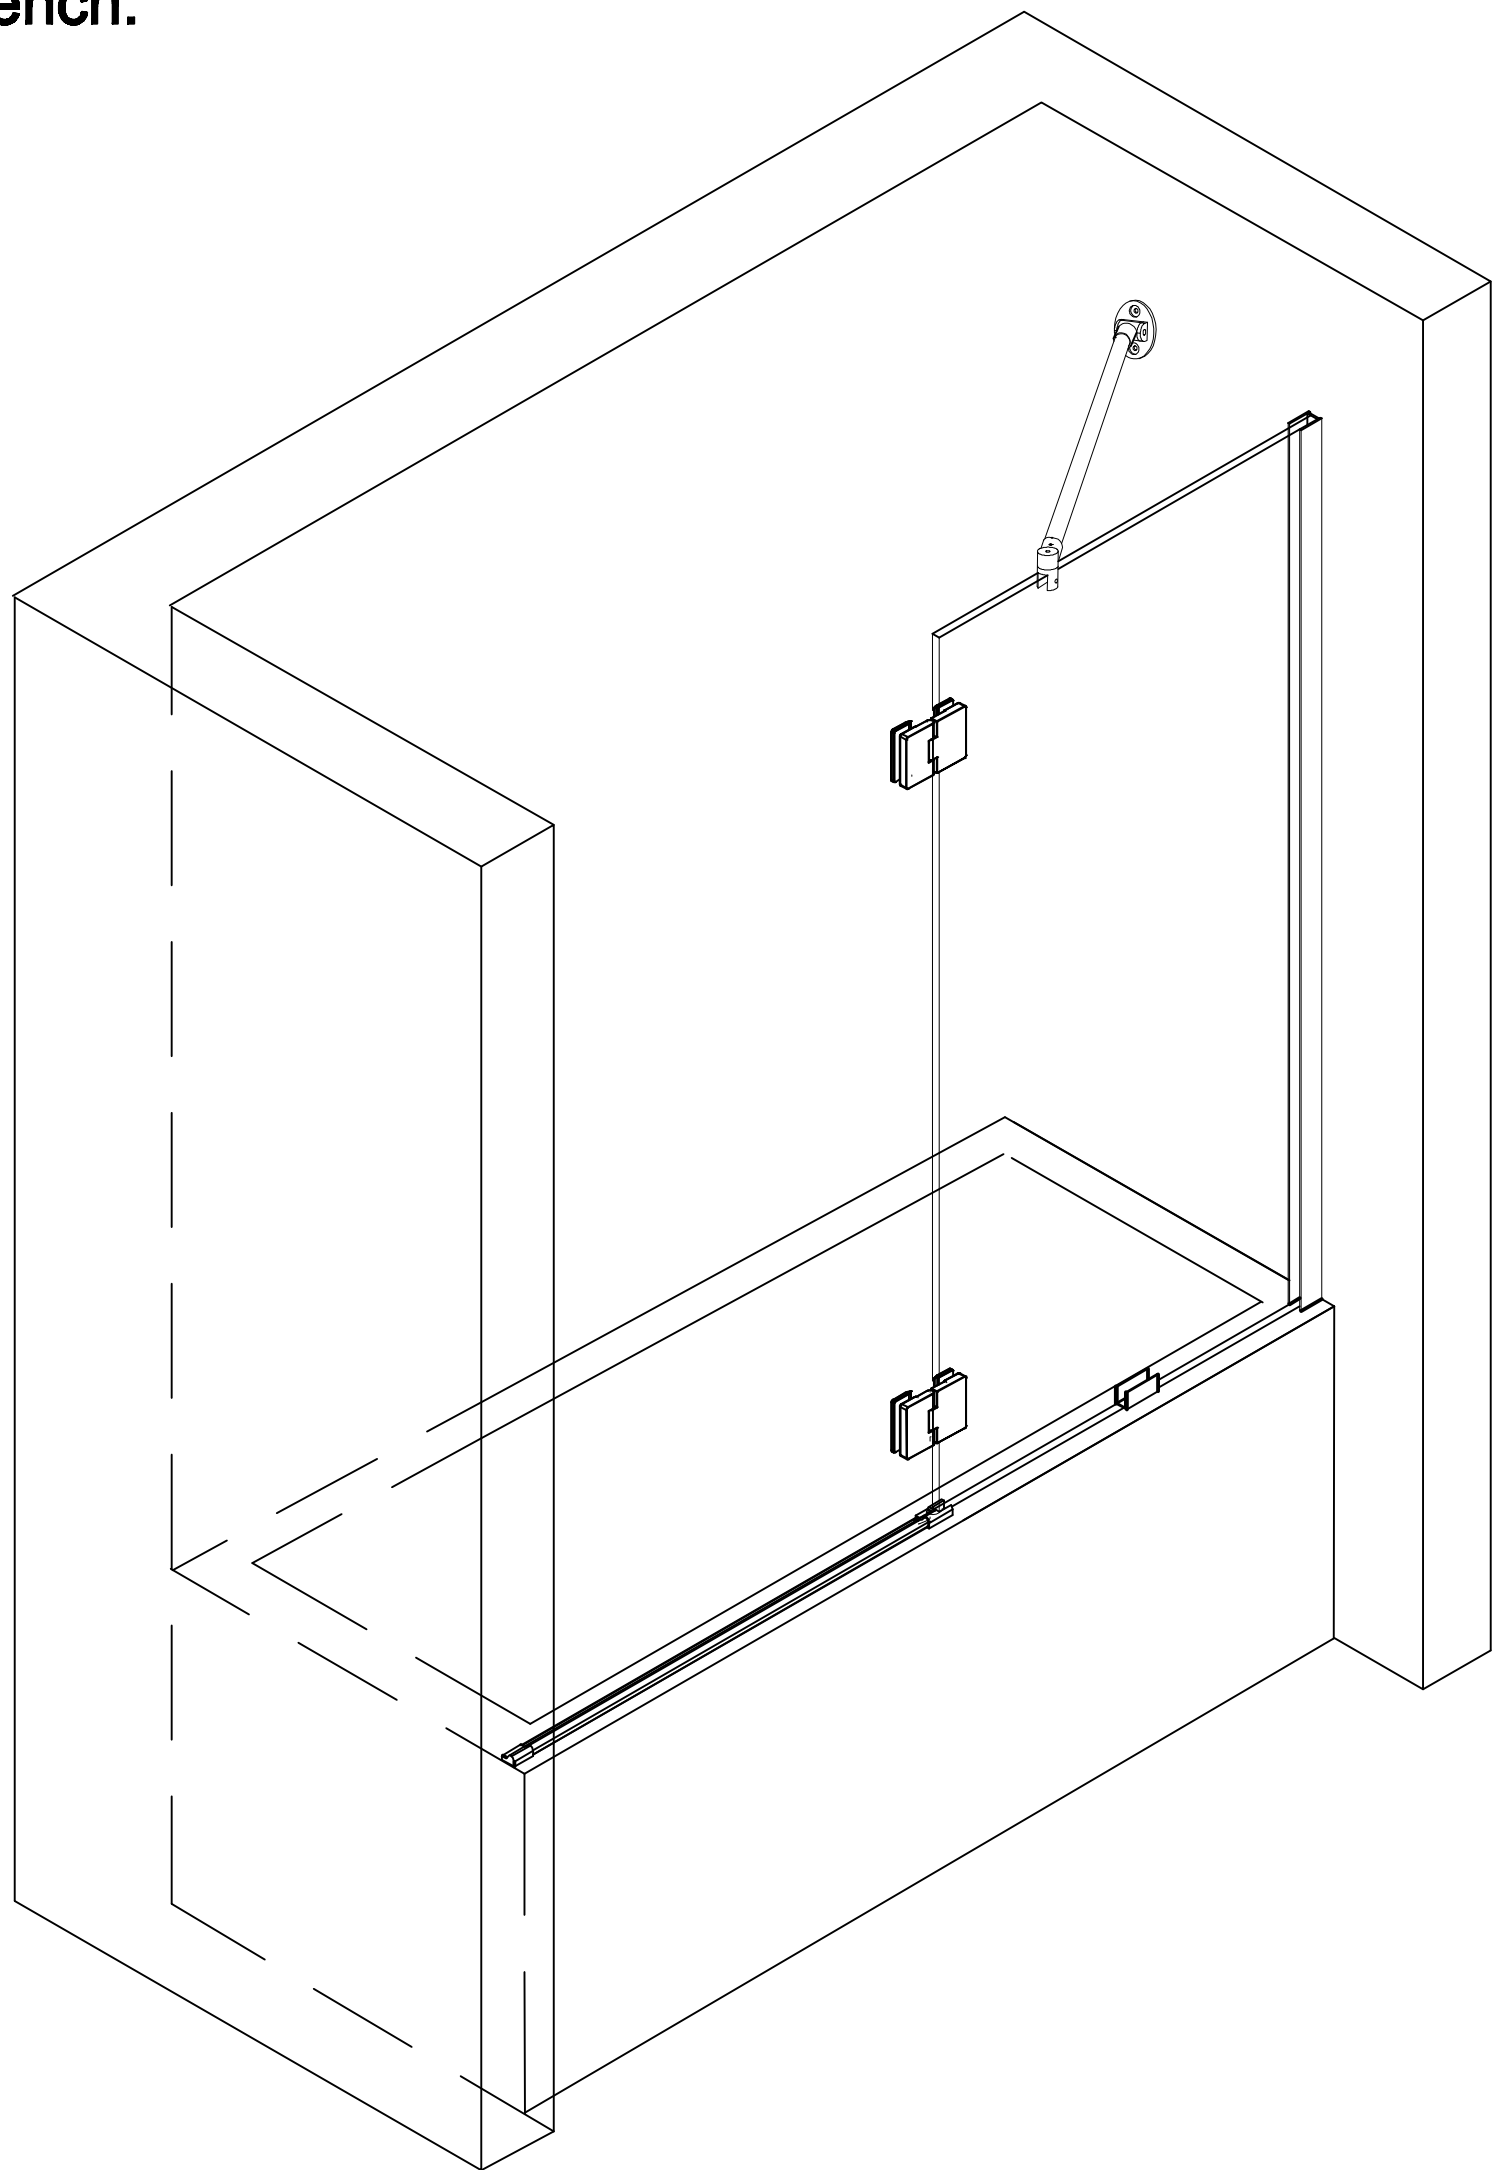

# Left Hand Assembly

## STEP 4




- 1. Assemble the left-side wall-mounted strip connector(9) and the right-side strip connector(12) to Aluminum strip(10).
- 2. Fit the connector(12)'s slot into fixed panel(5)

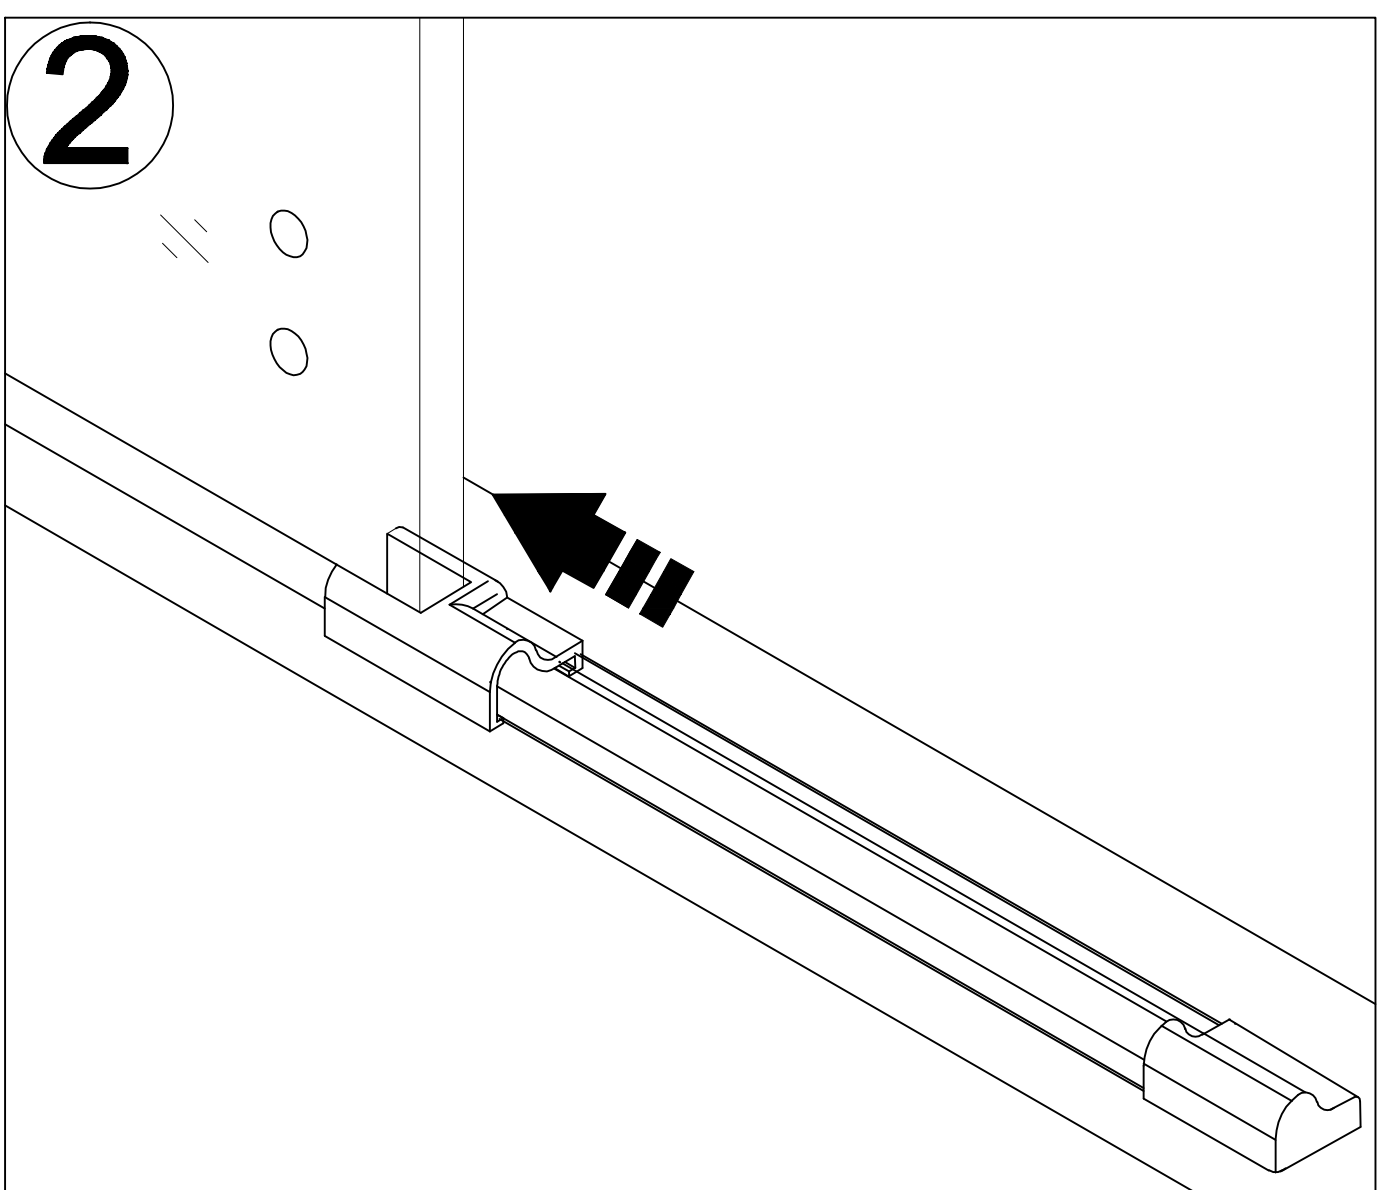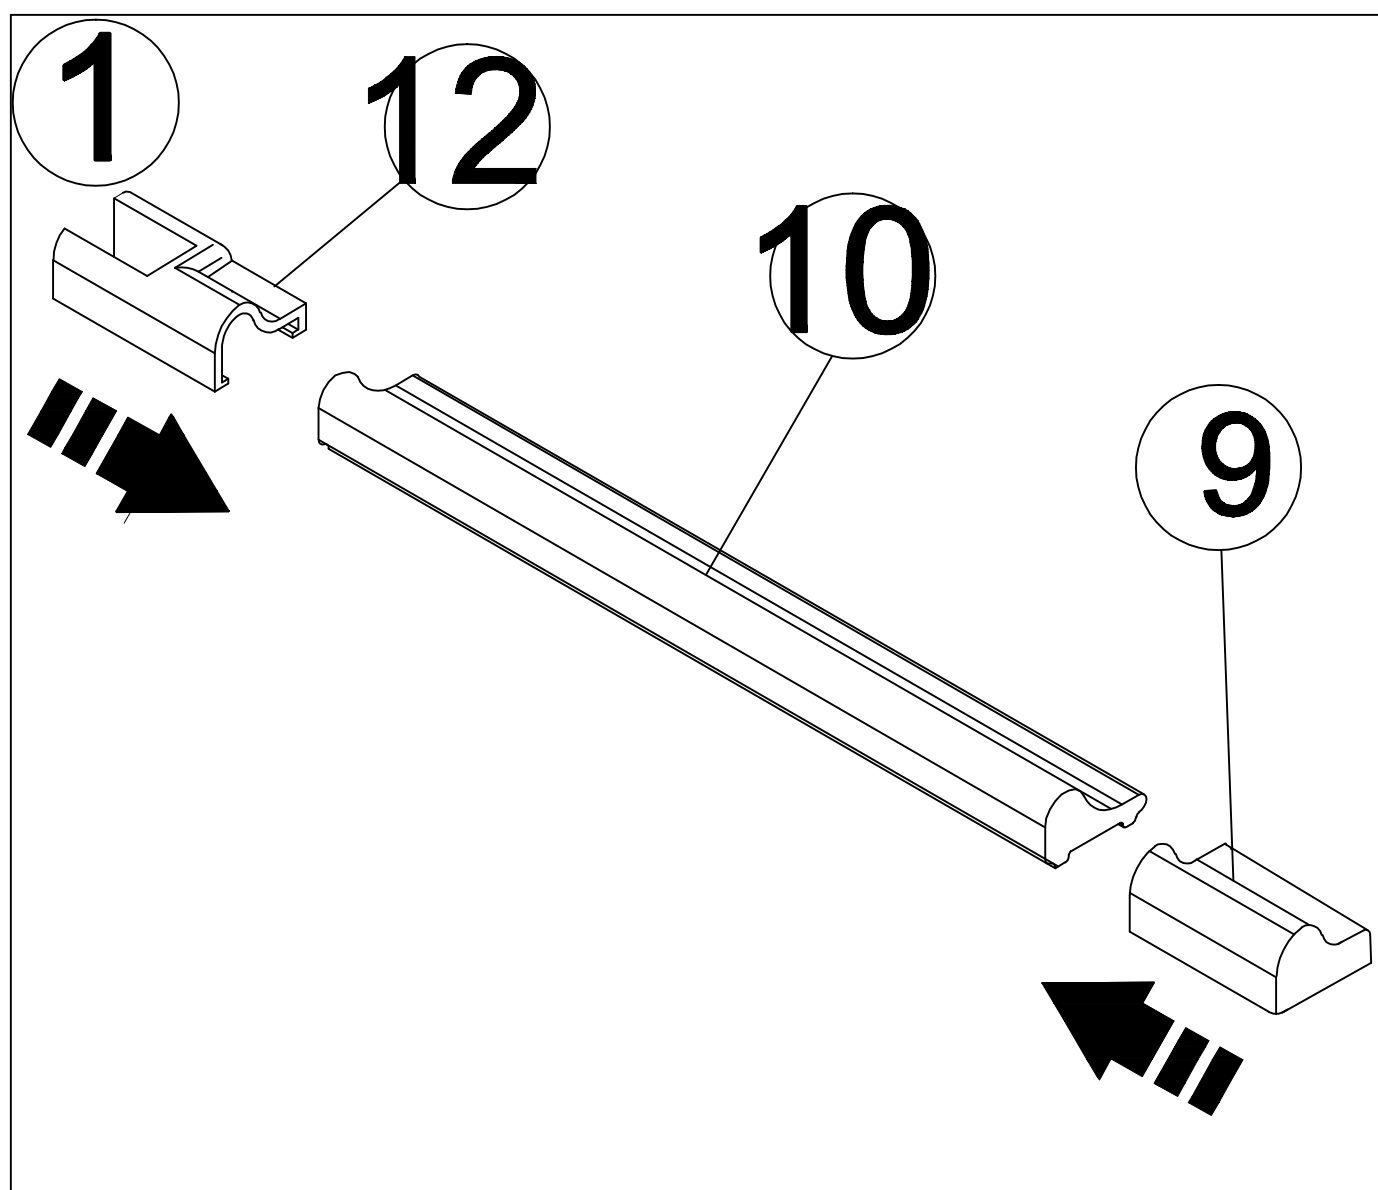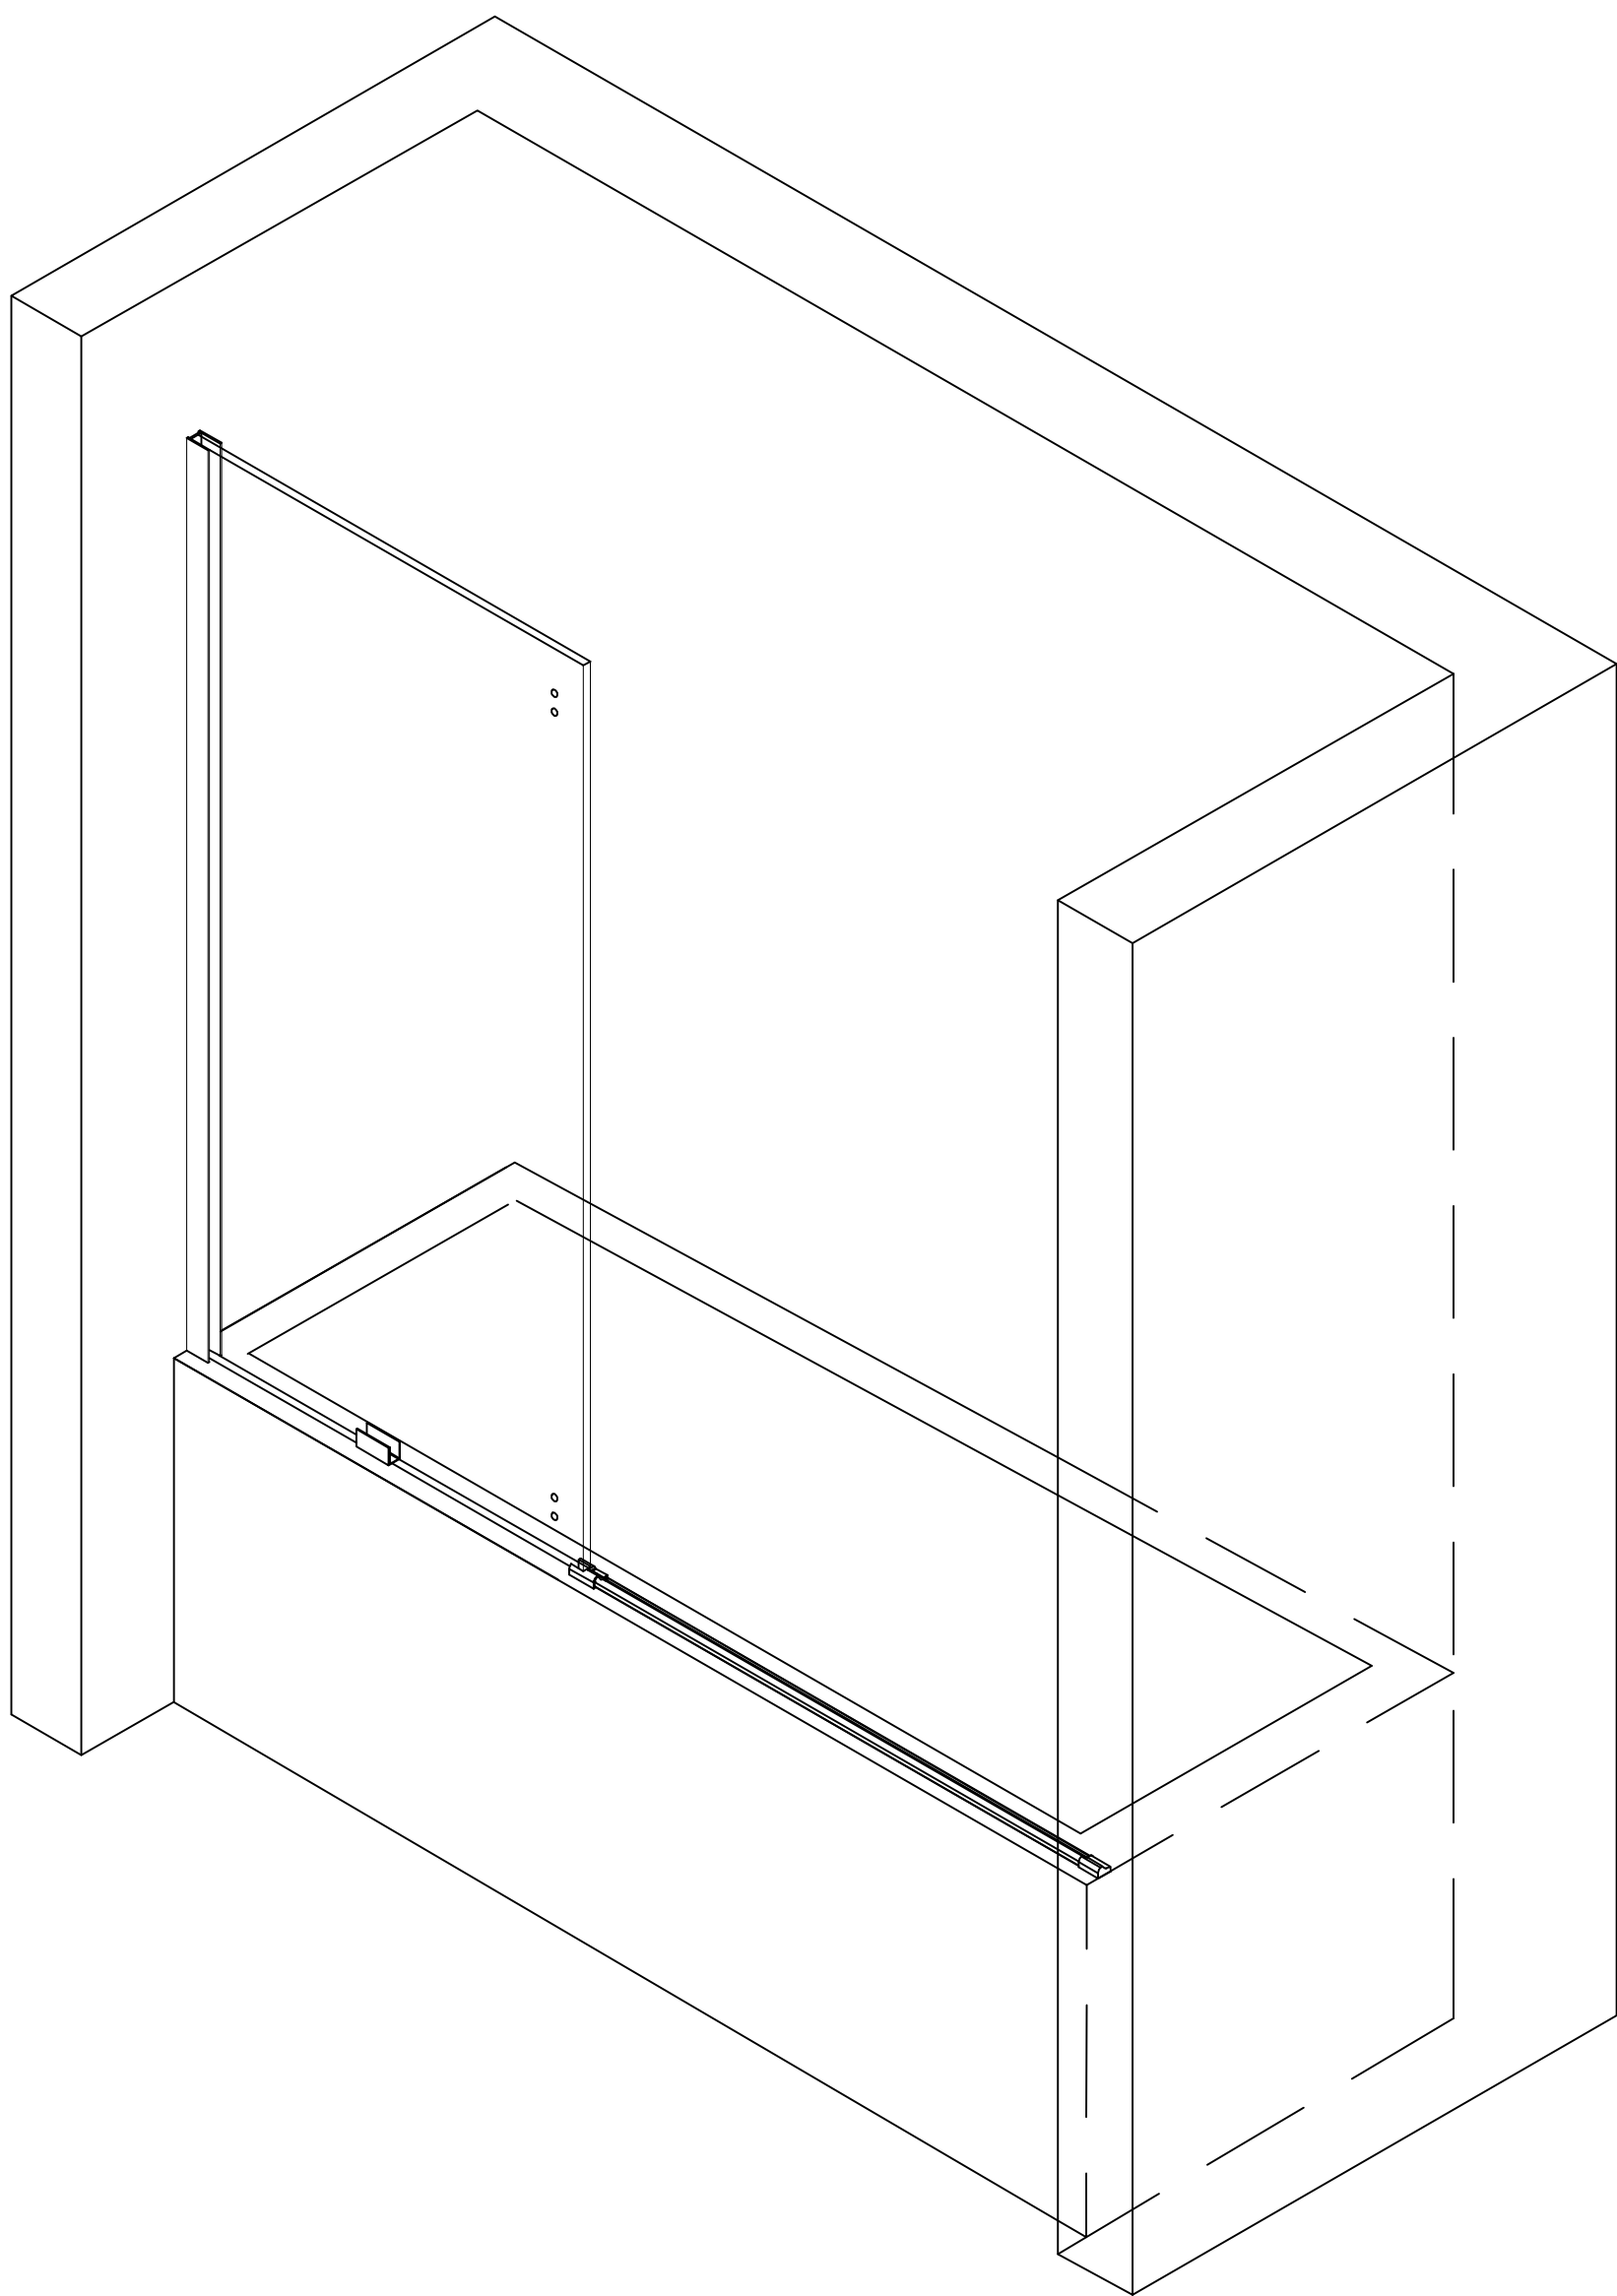

# Right Hand Assembly

## STEP 4



- 1. Assemble the right-side wall-mounted strip connector(9) and the left-side strip connector(12) to Aluminum strip(10).
- 2. Fit the connector(12)'s slot into fixed panel(5).

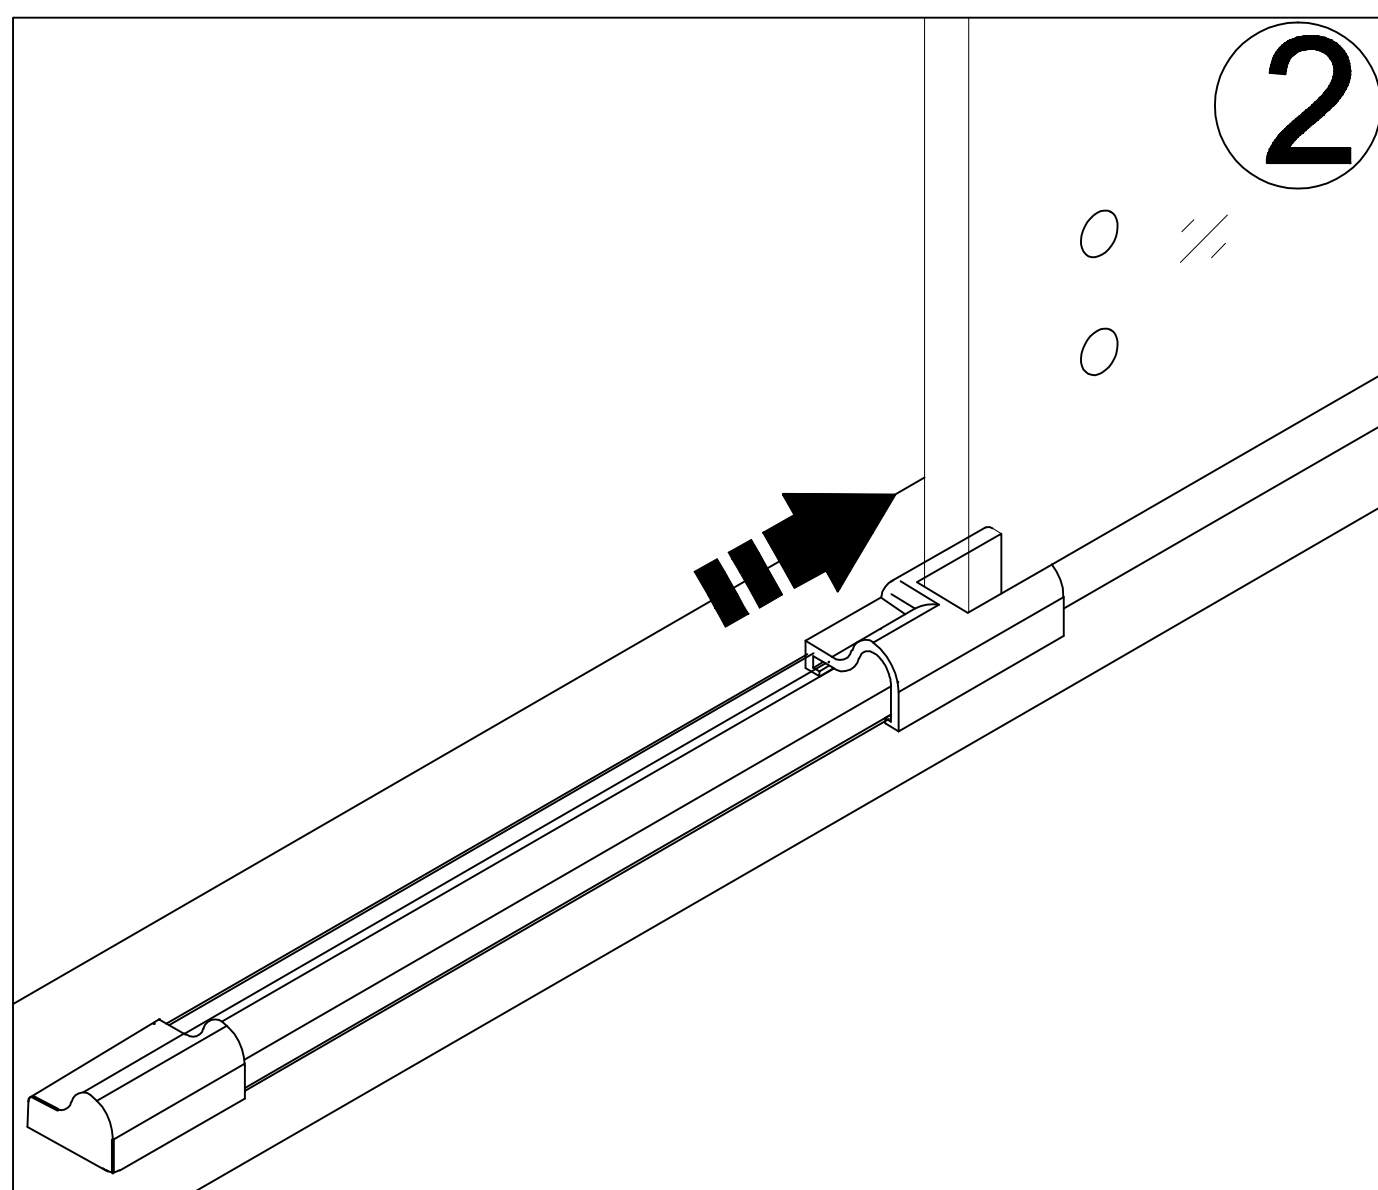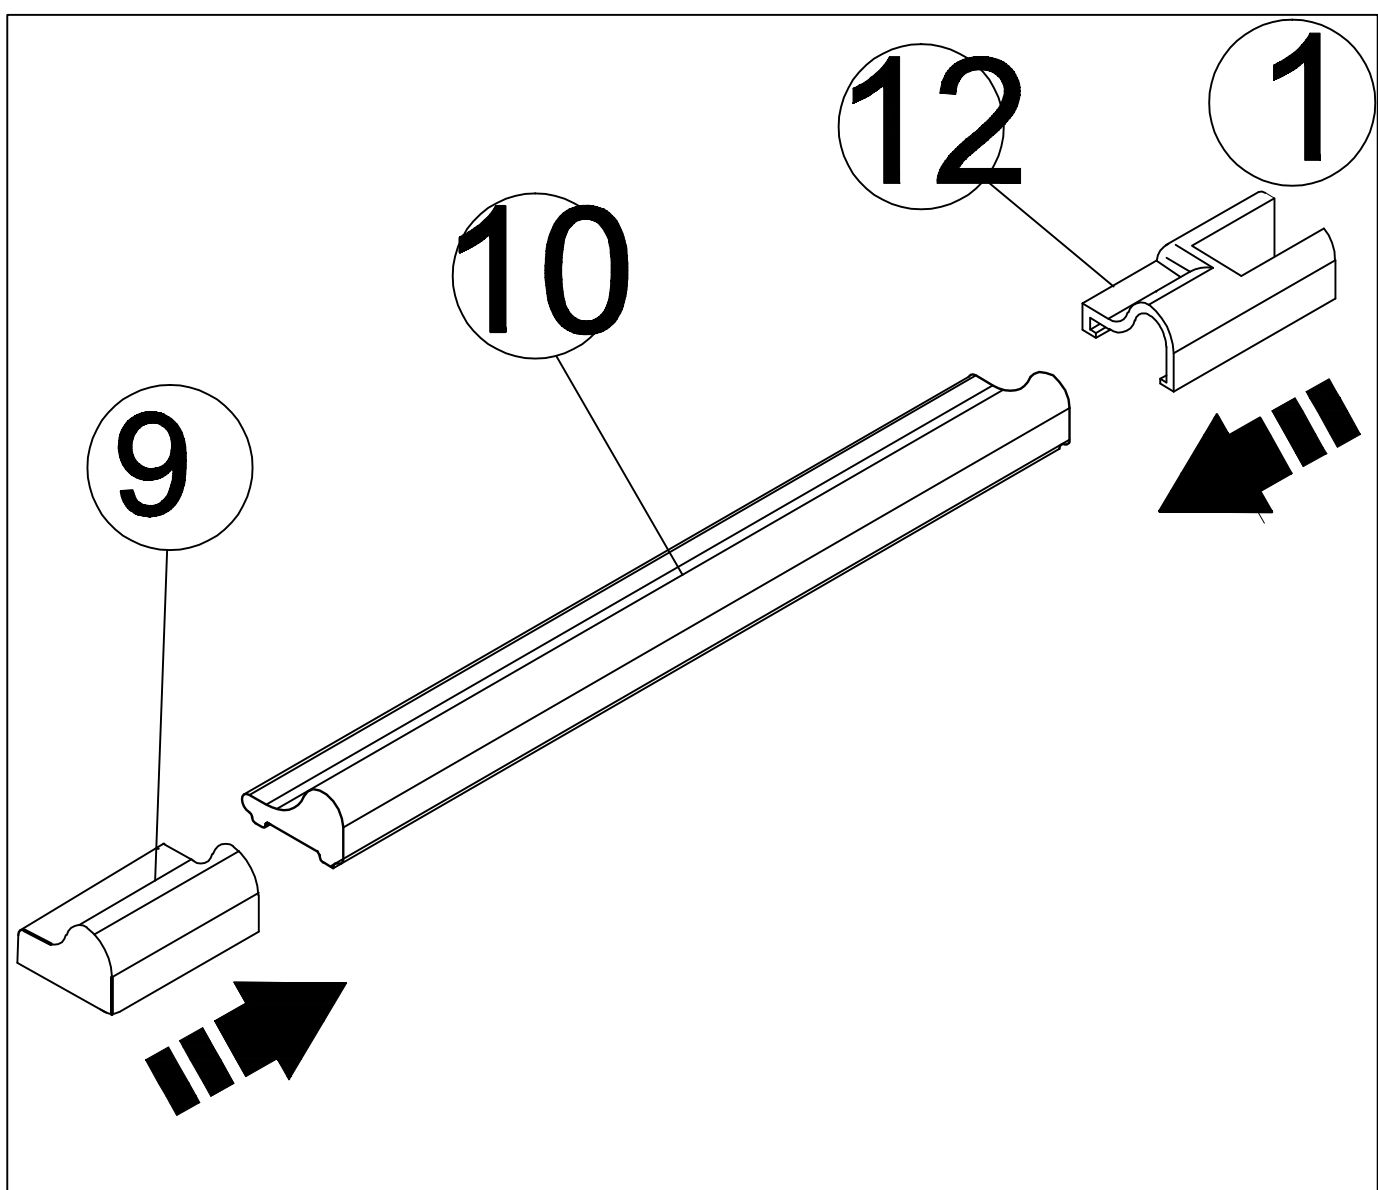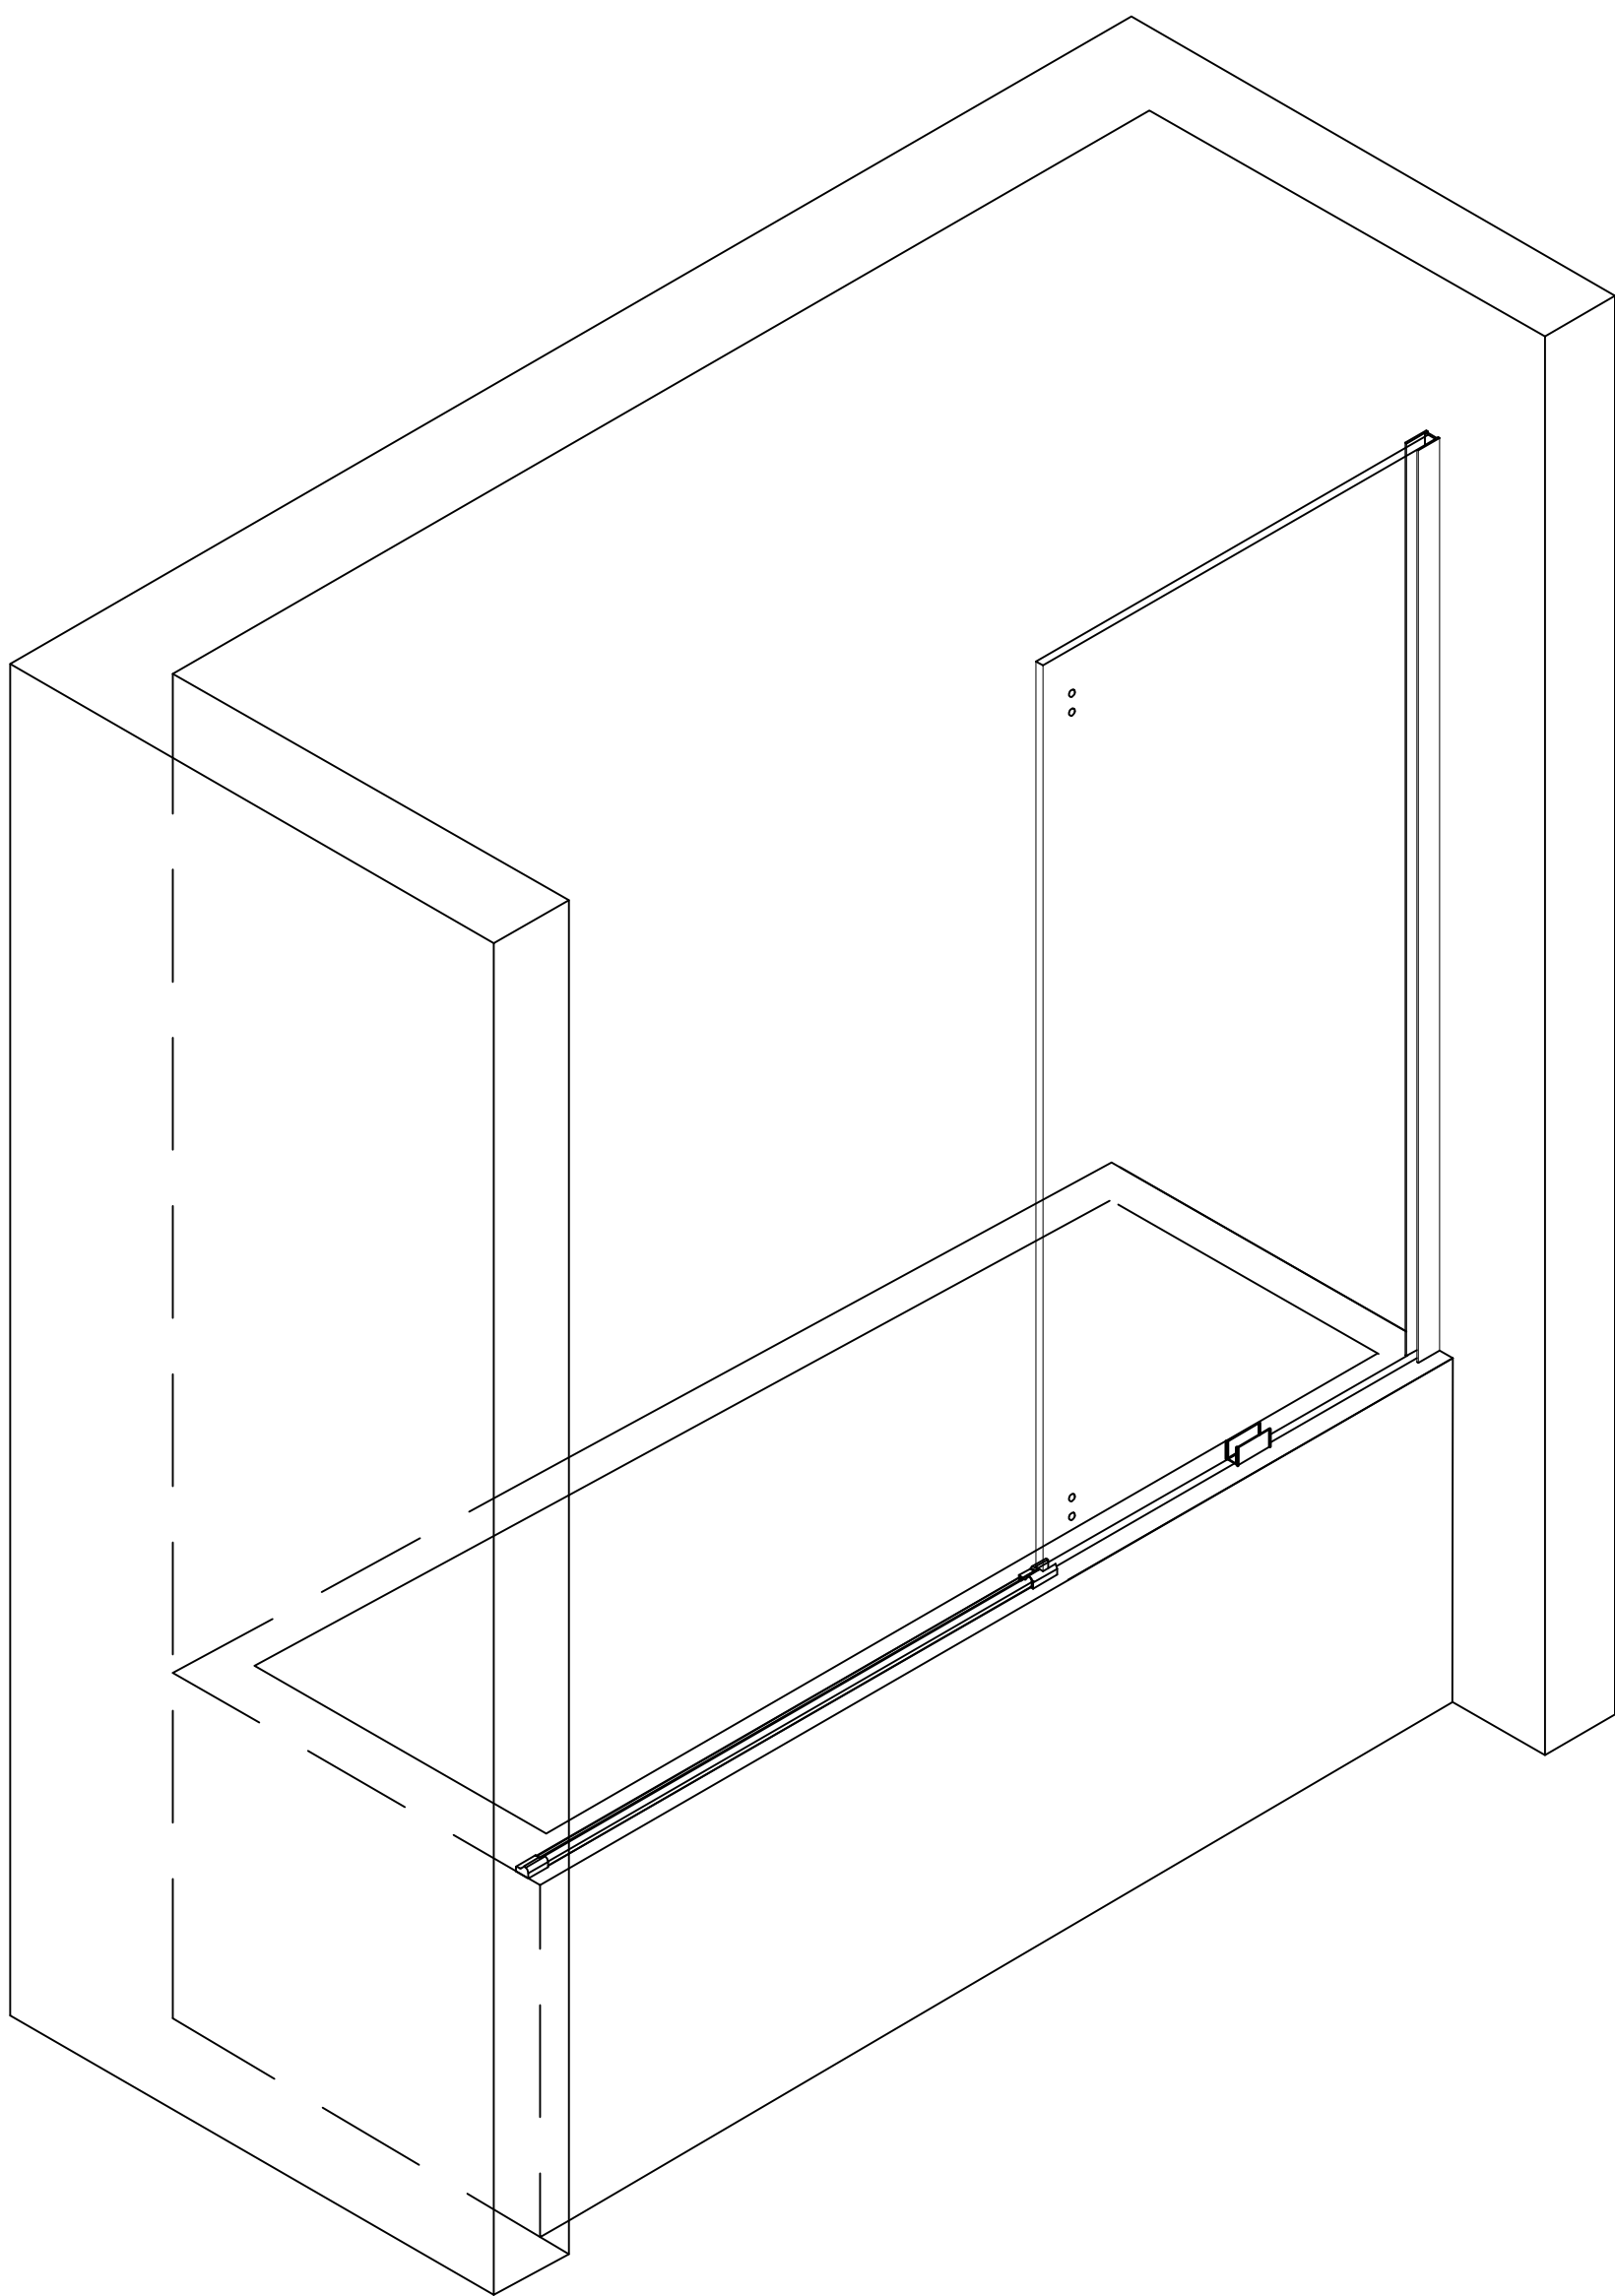

# Left Hand Assembly

## STEP 5



1. Assemble shower door hinges(6) on the movable shower door(13).

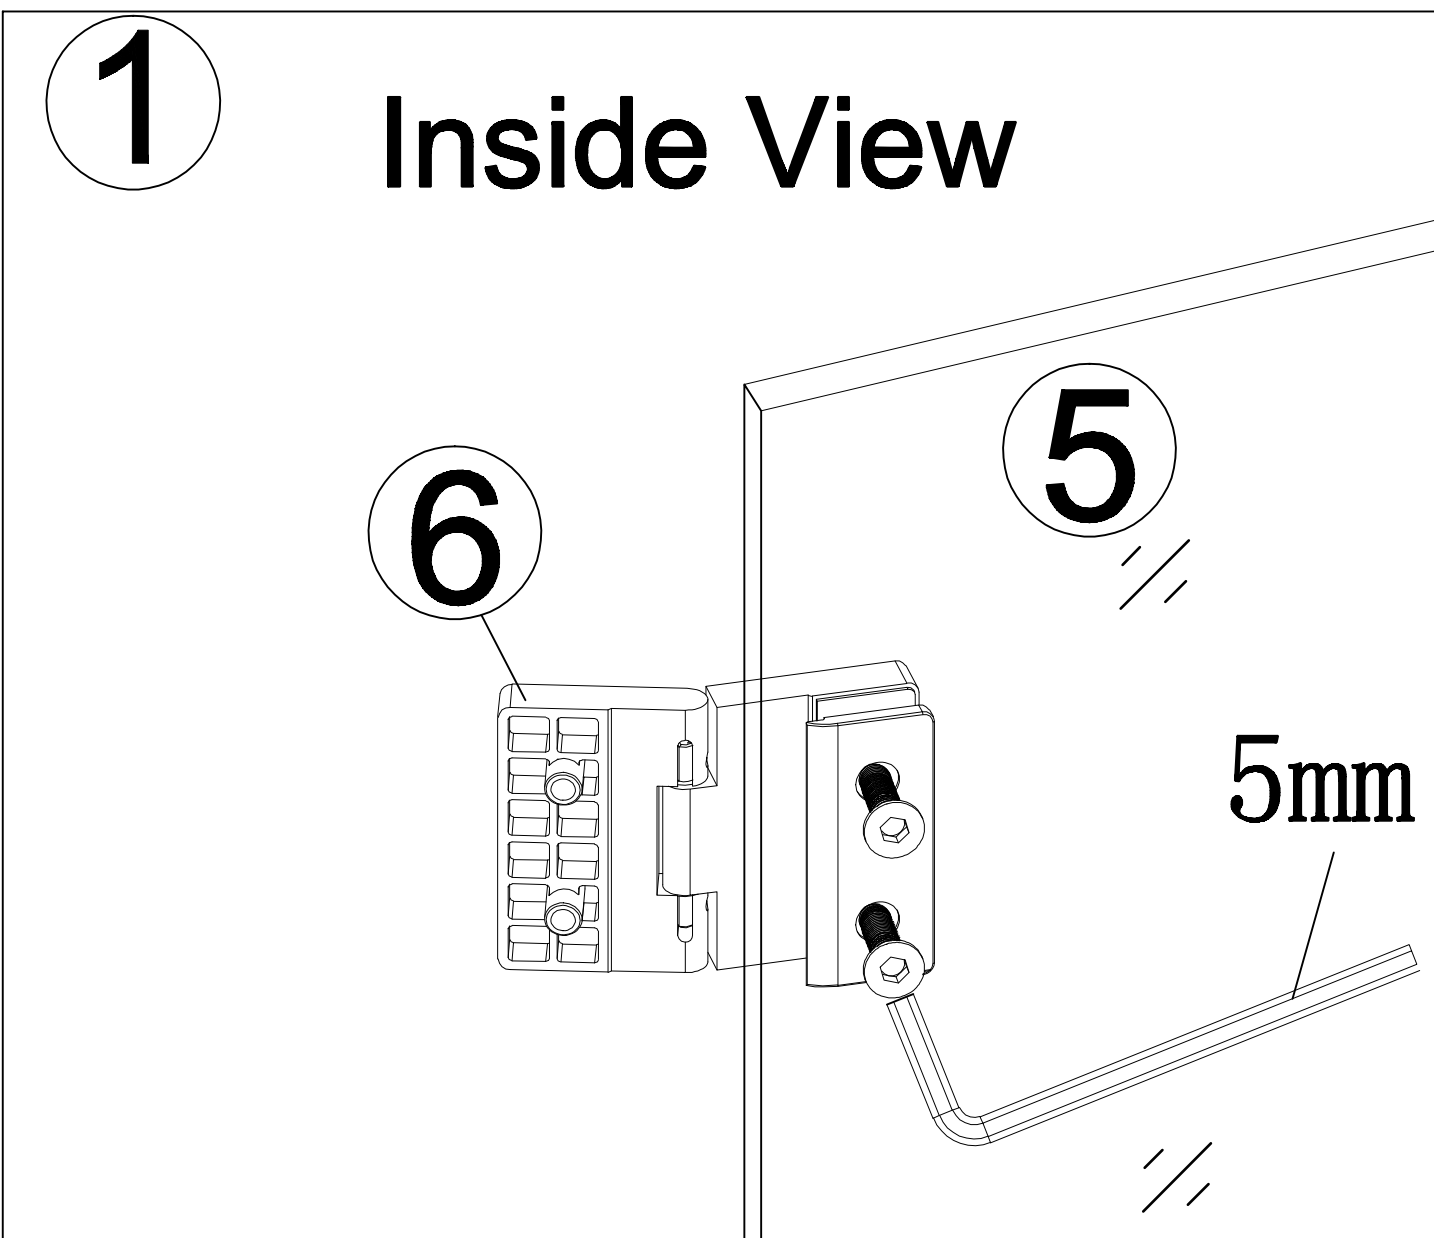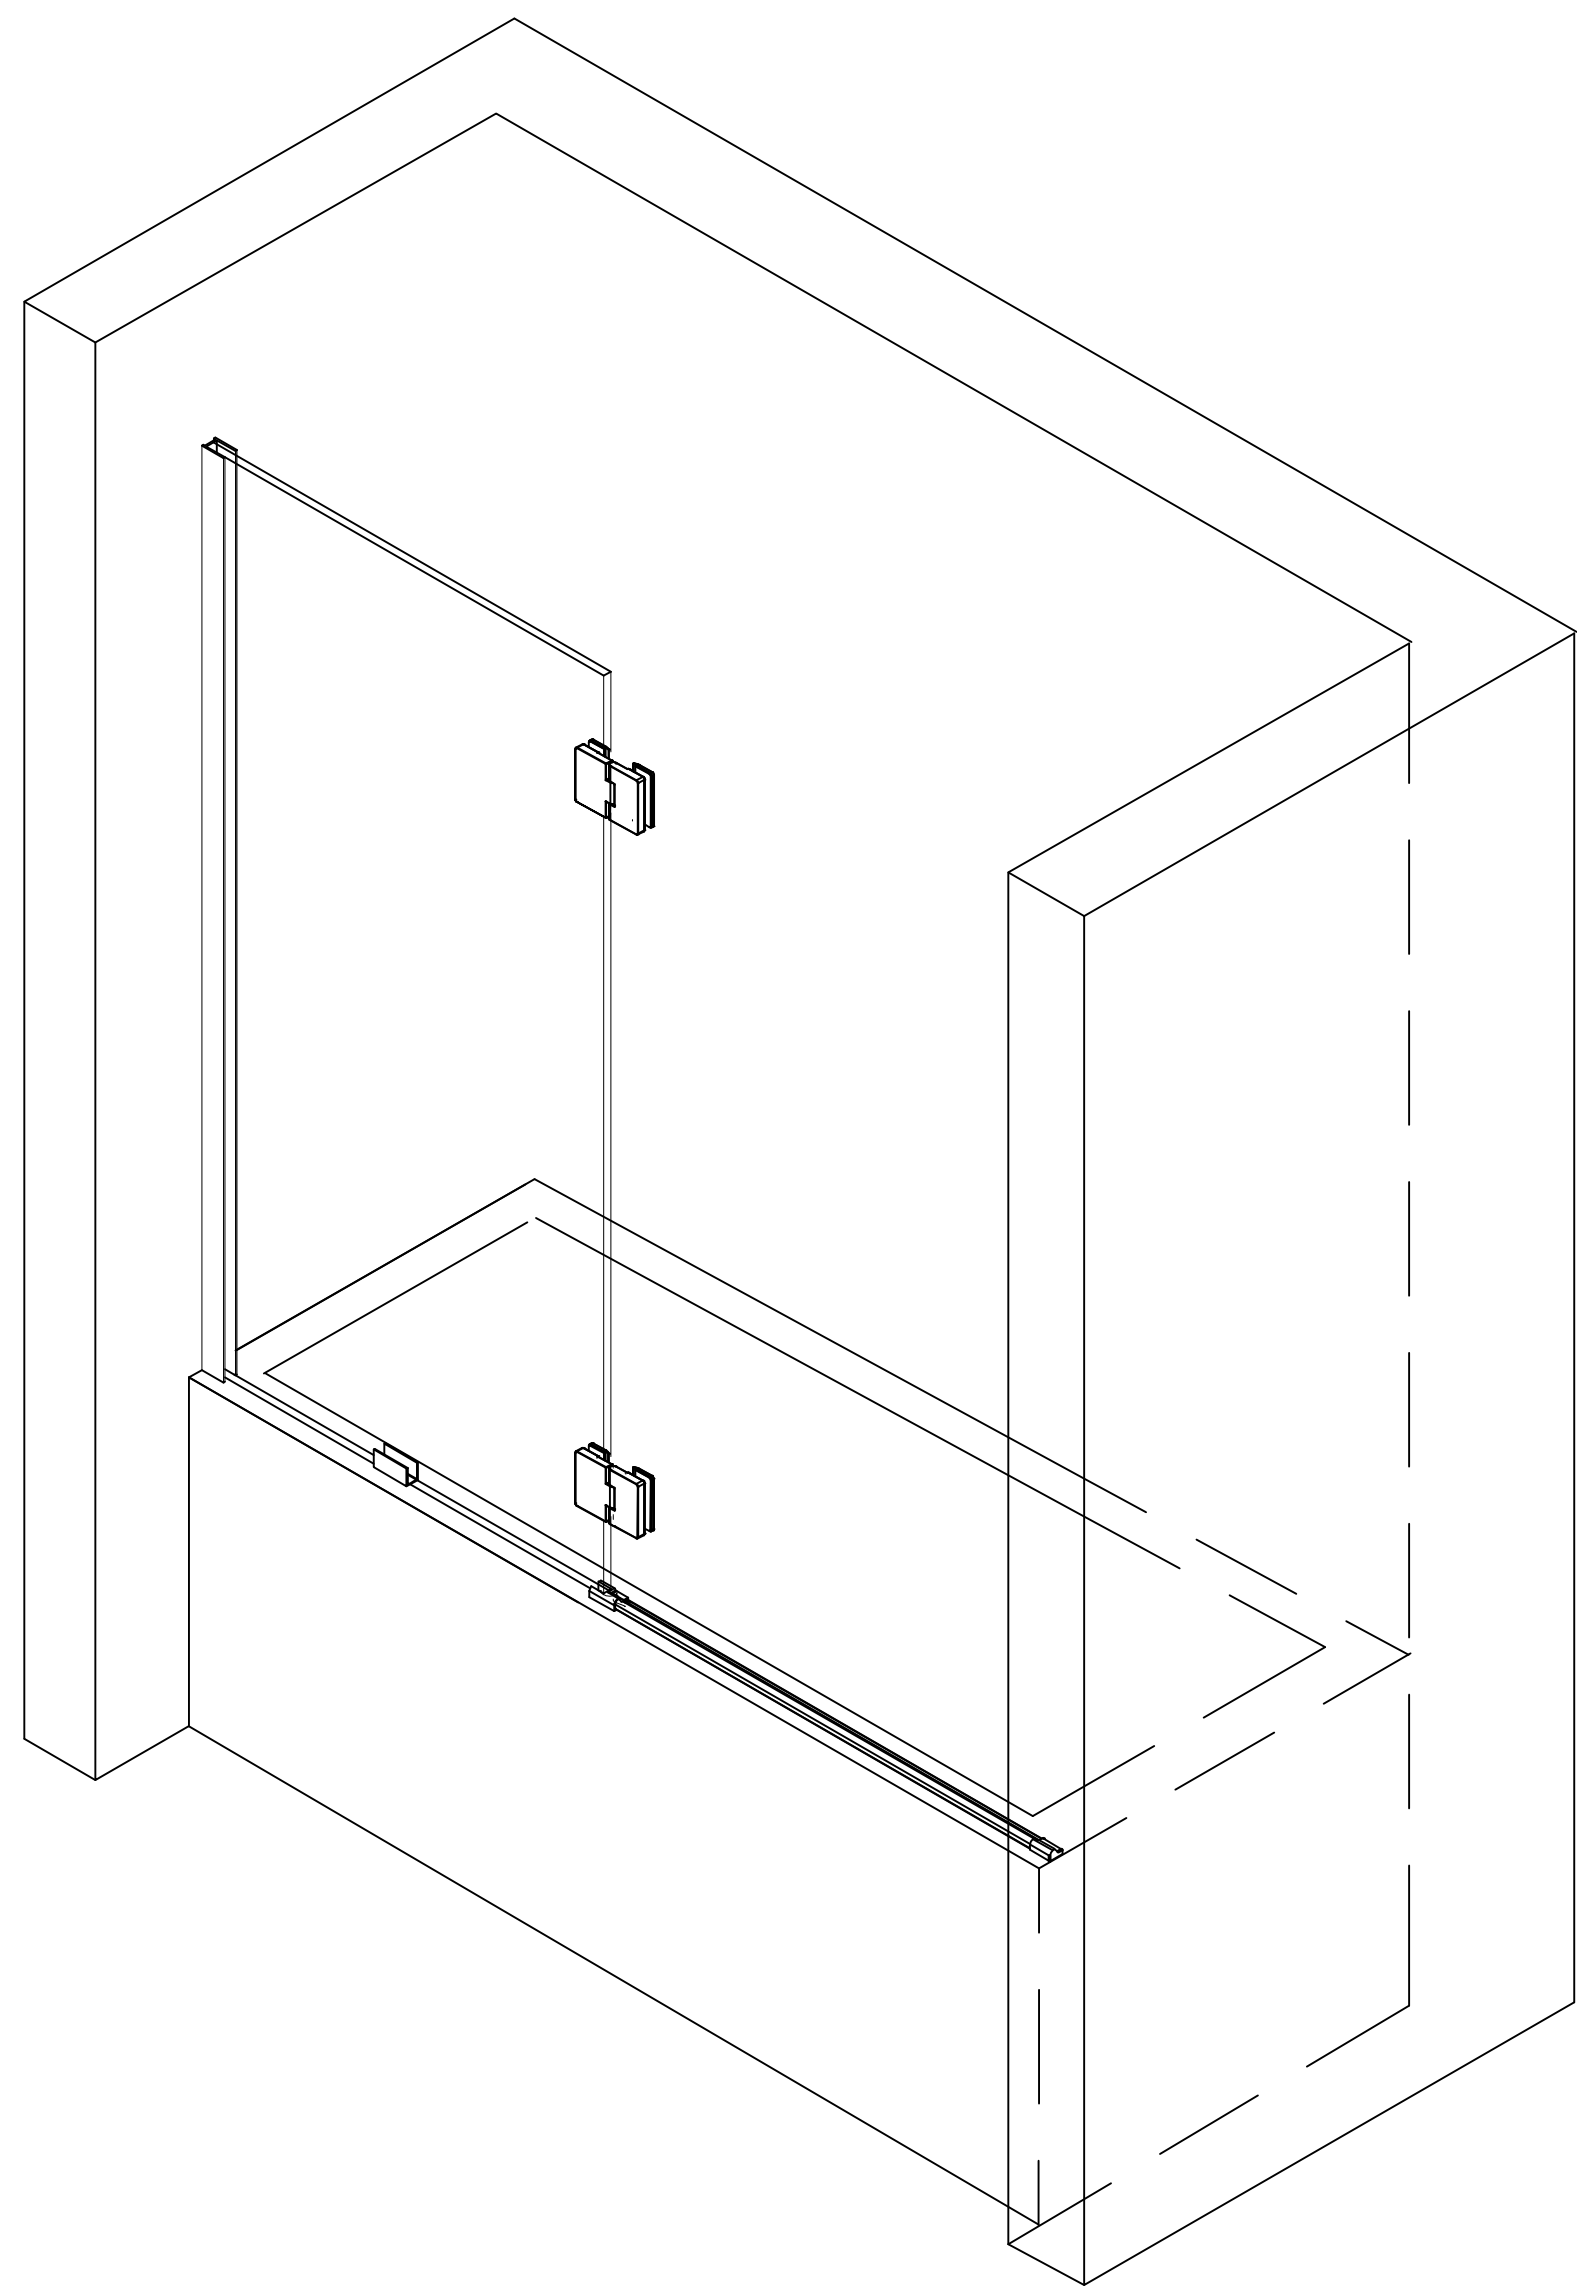

# Right Hand Assembly

## STEP 5

1. Assemble shower door hinges(6) on the movable shower door(13).

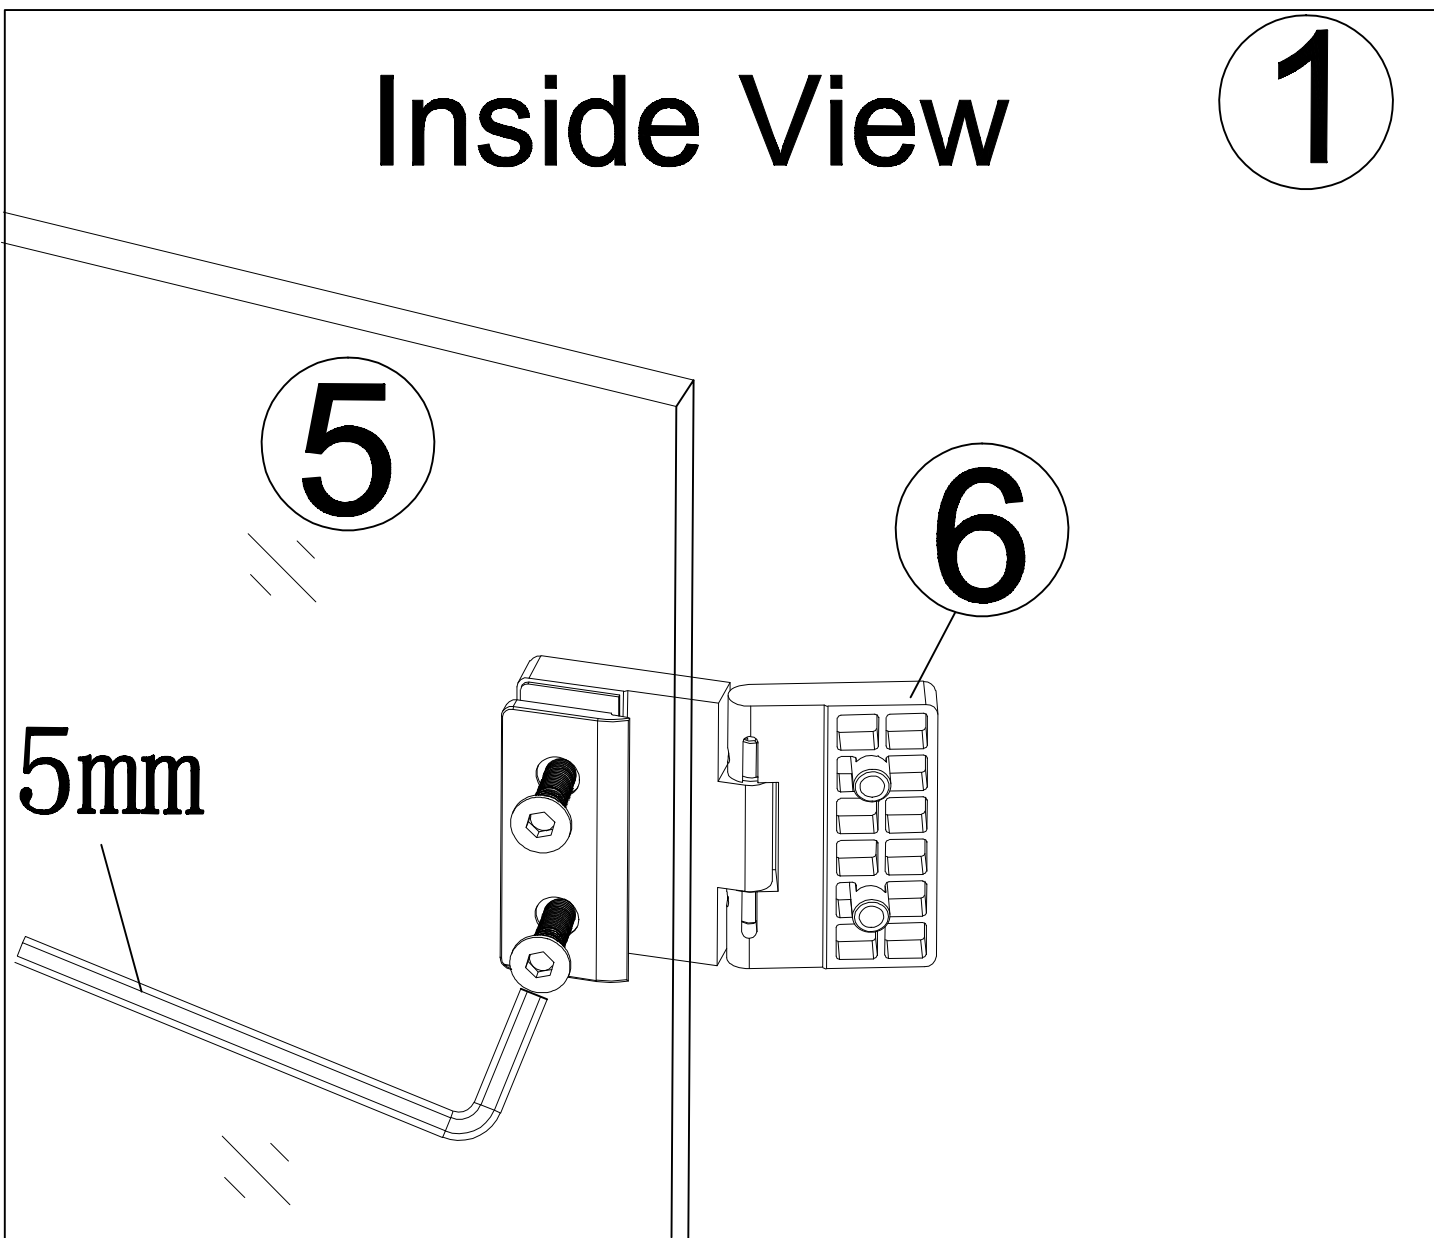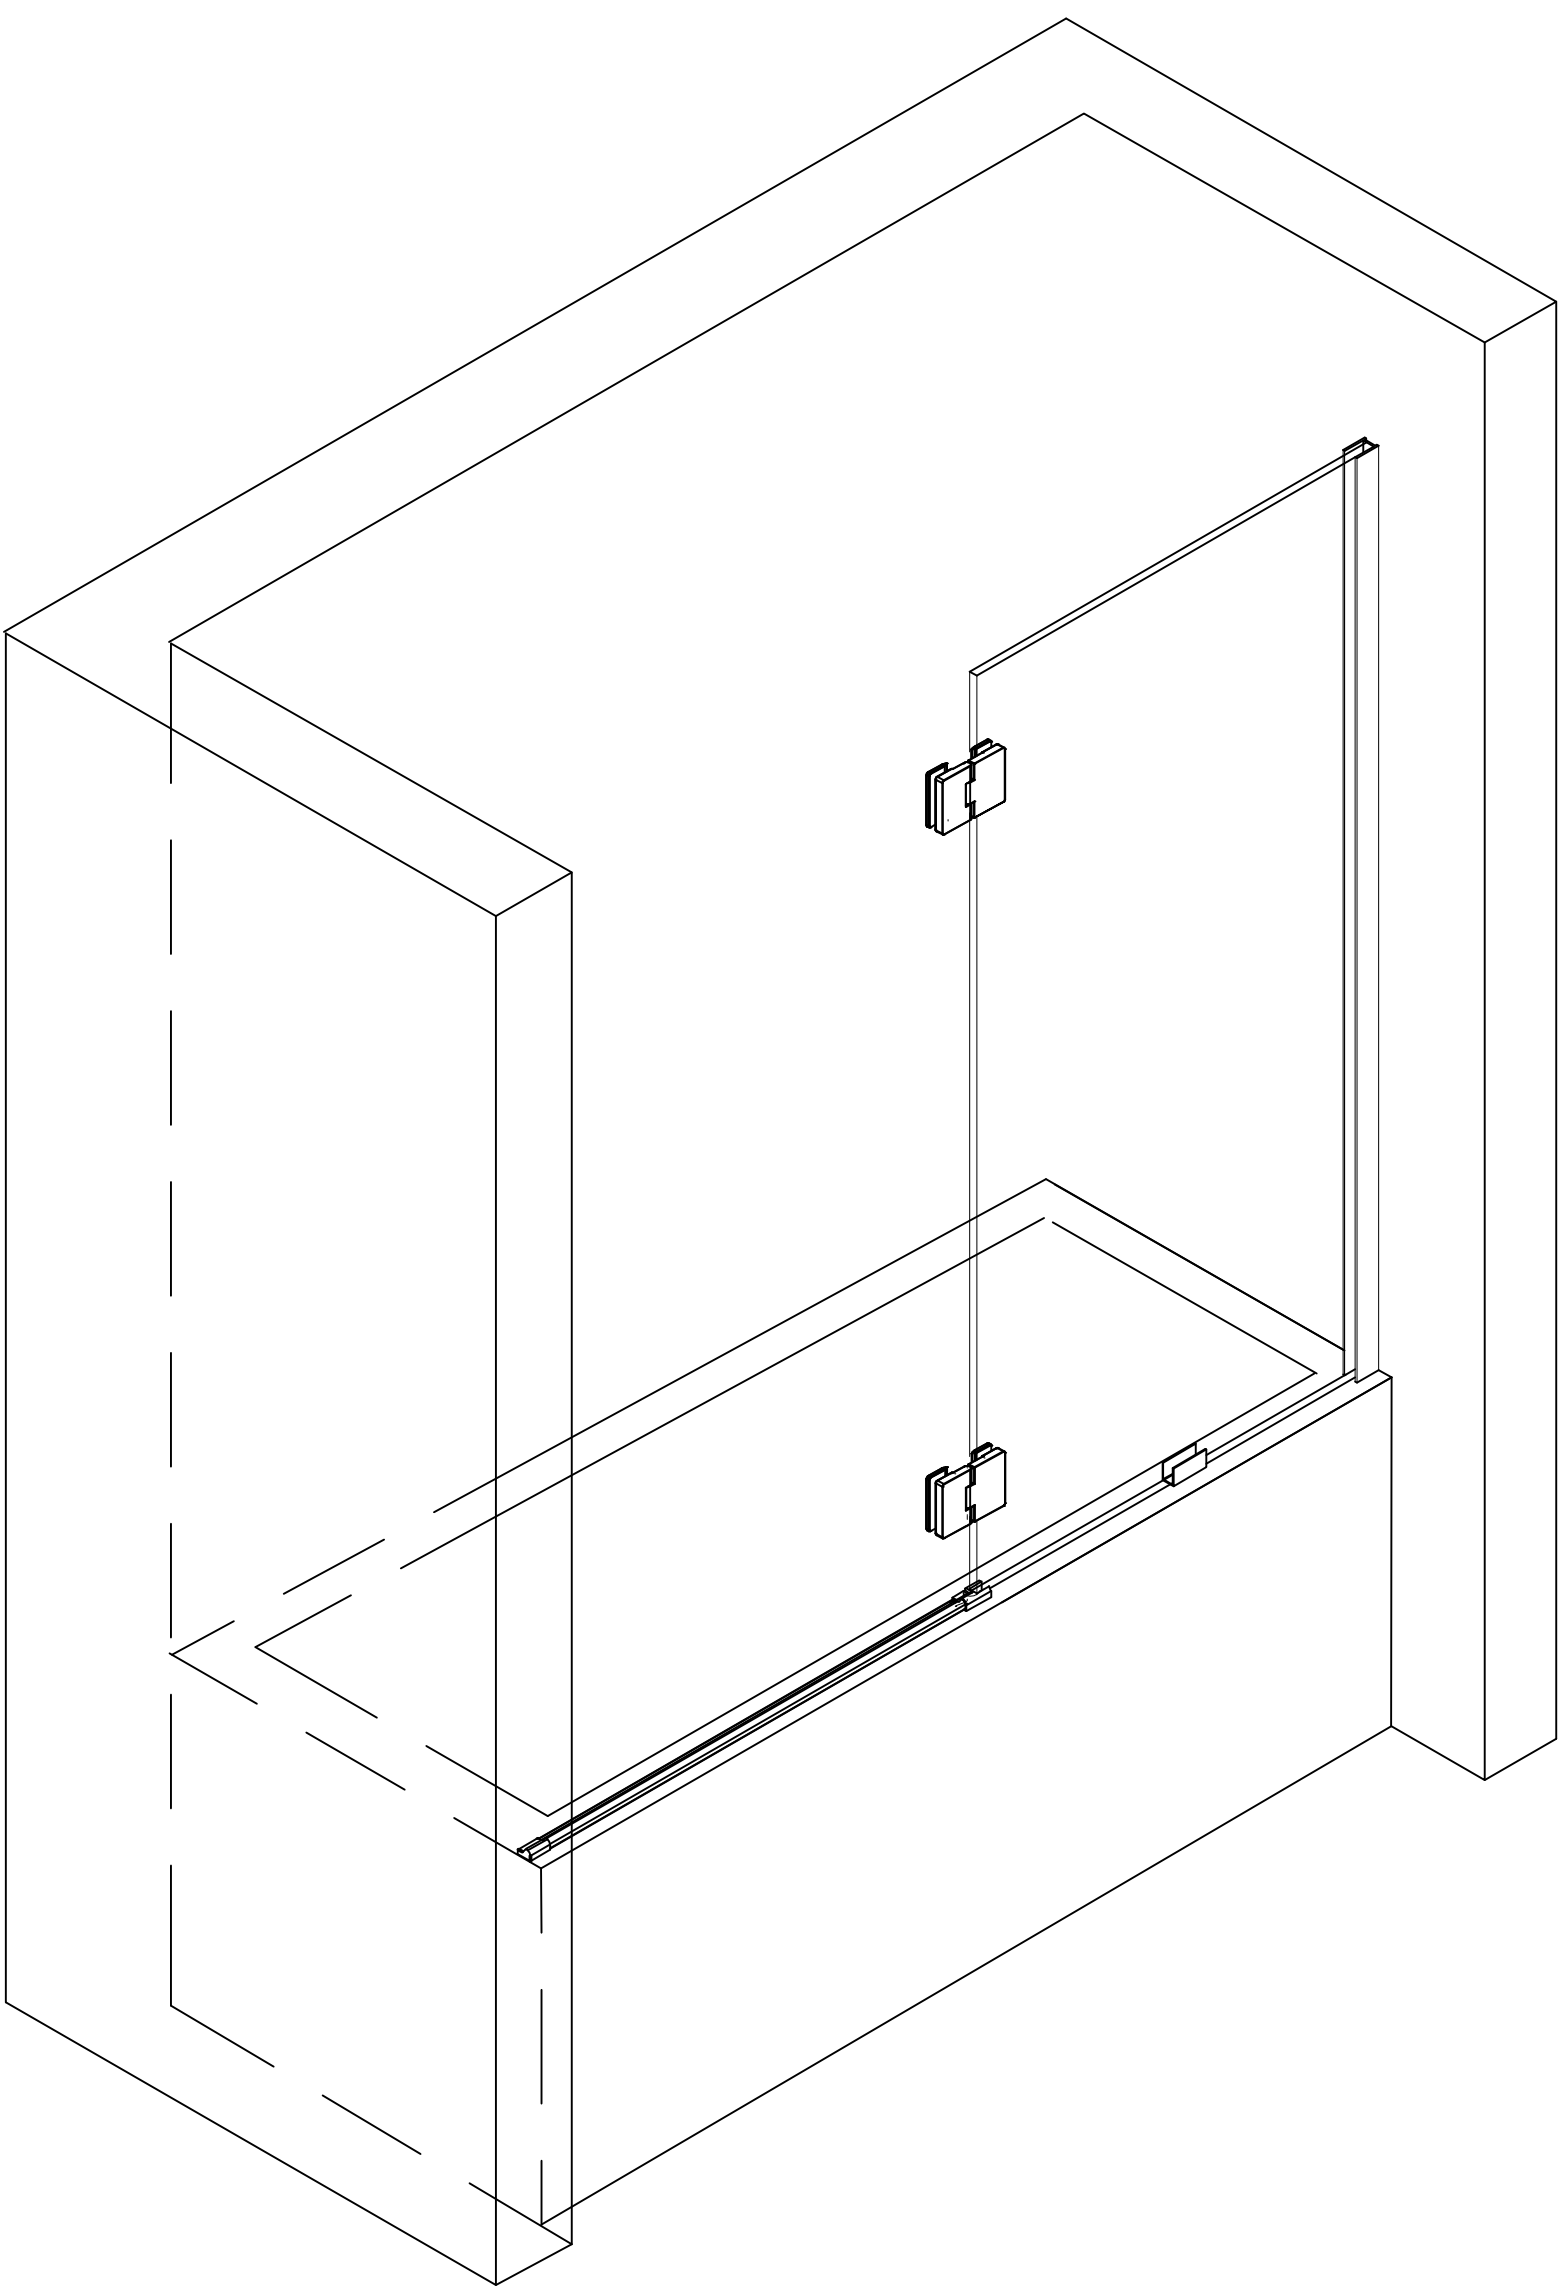




# Left Hand Assembly

## STEP 6




1. Install removable shower door(13) to shower door hinges(6).

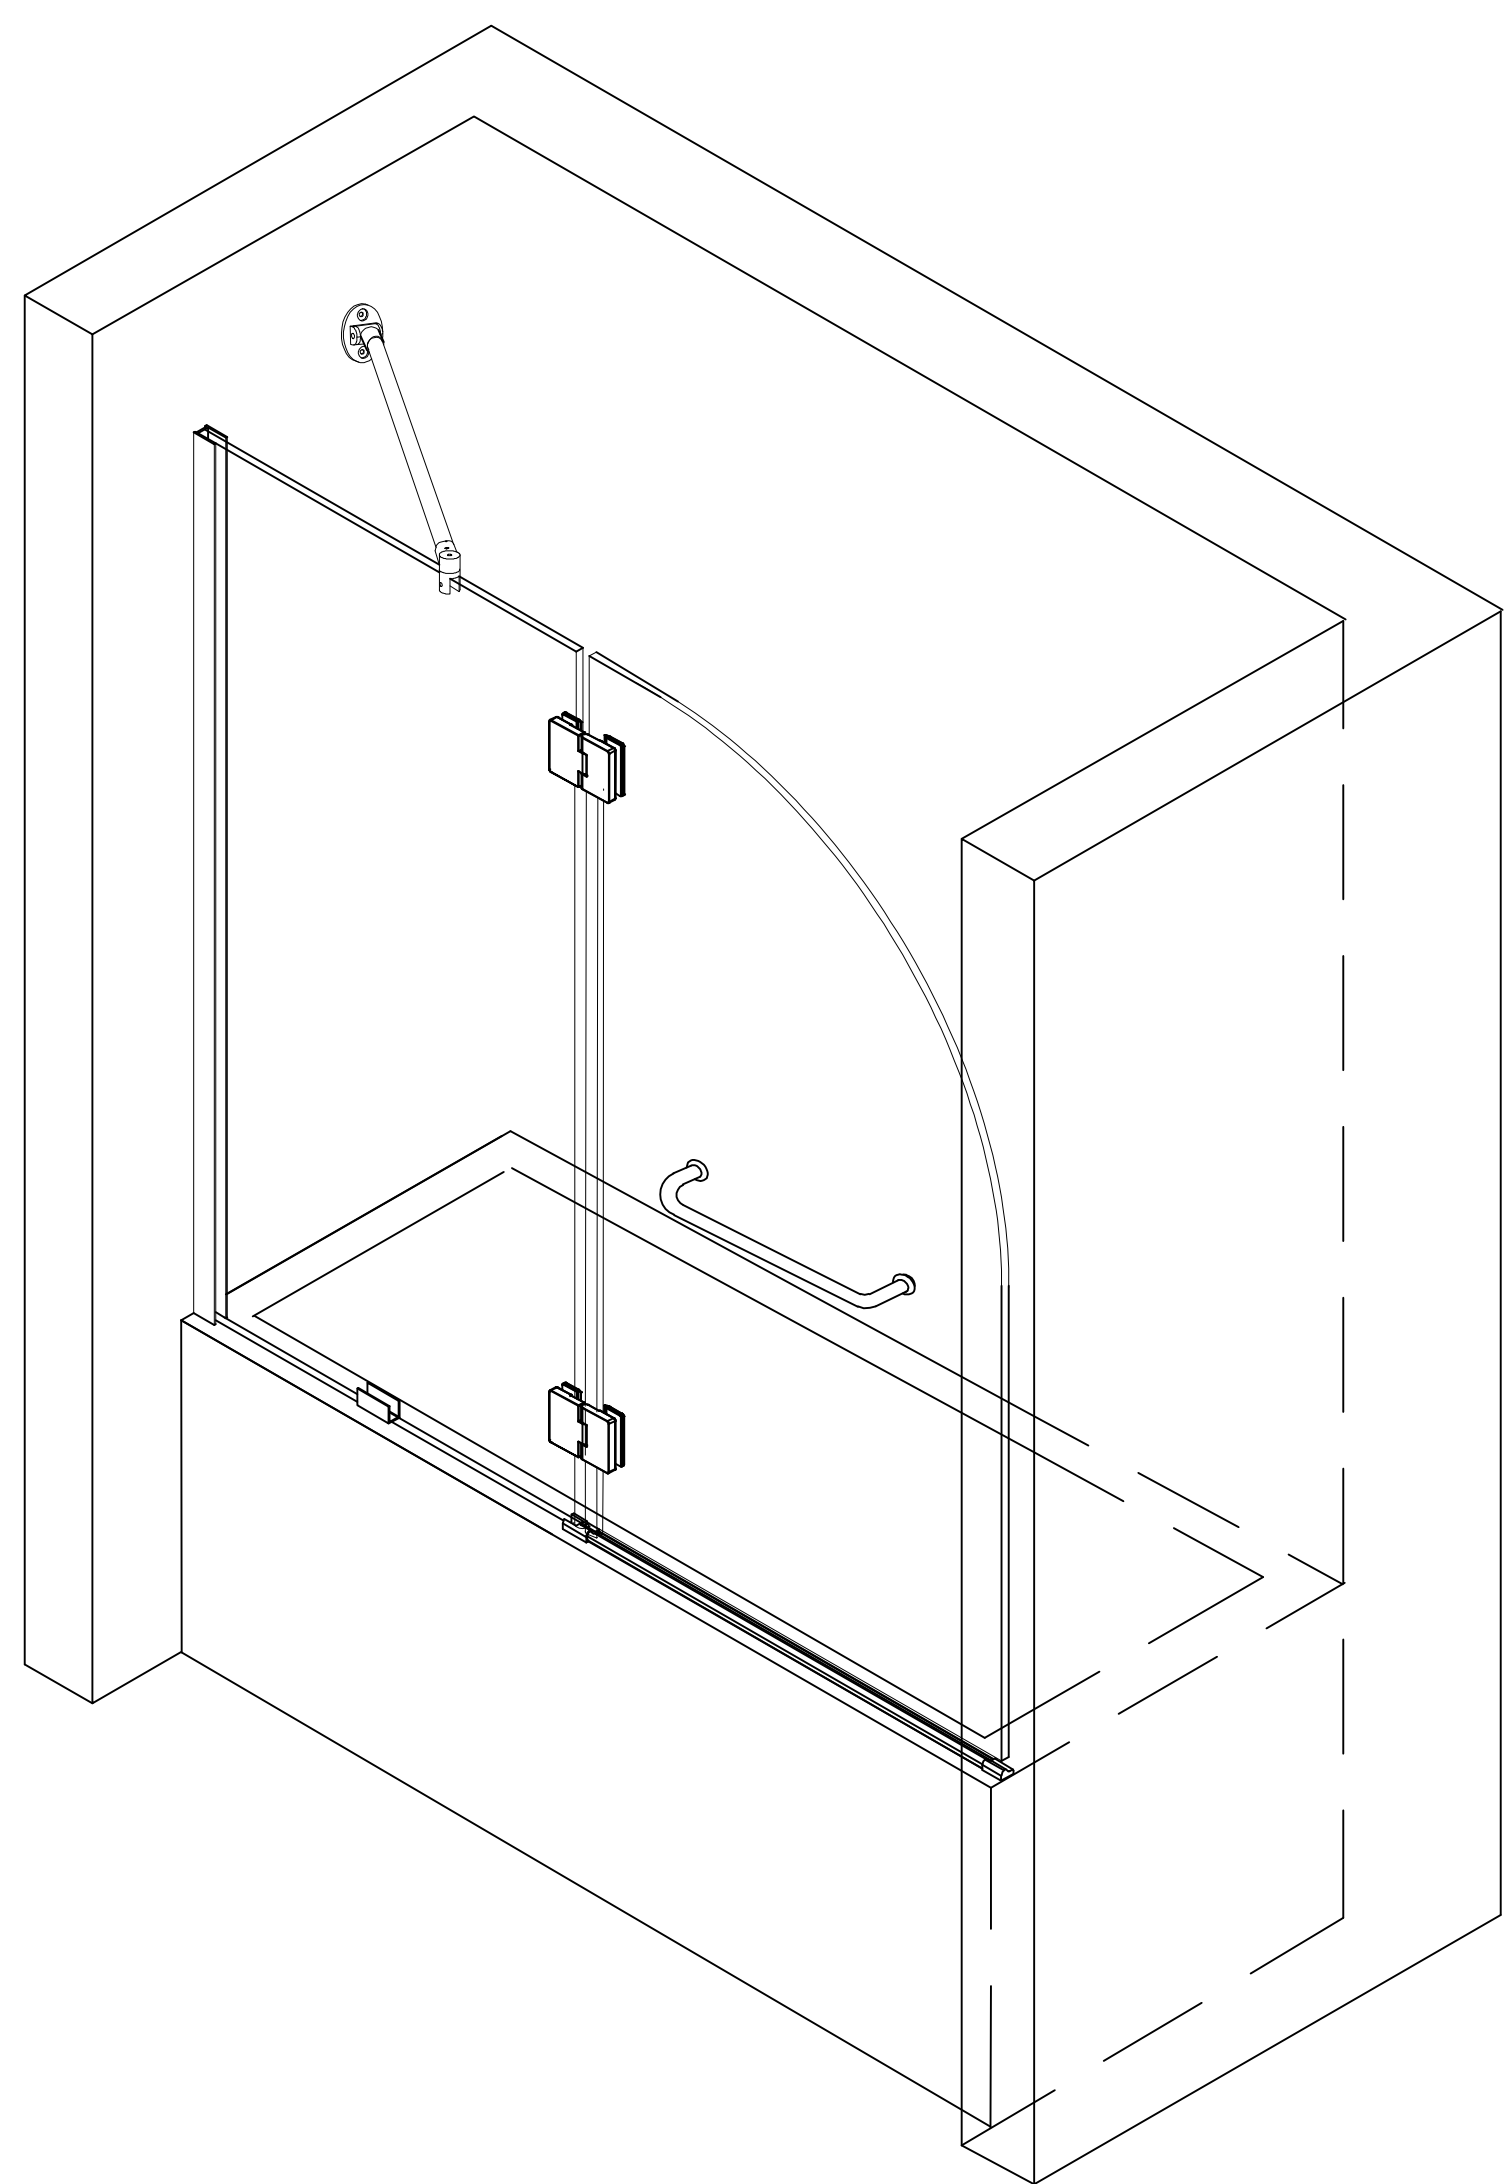

# Right Hand Assembly

## STEP 6



1. Install removable shower door(13) to shower door hinges(6).

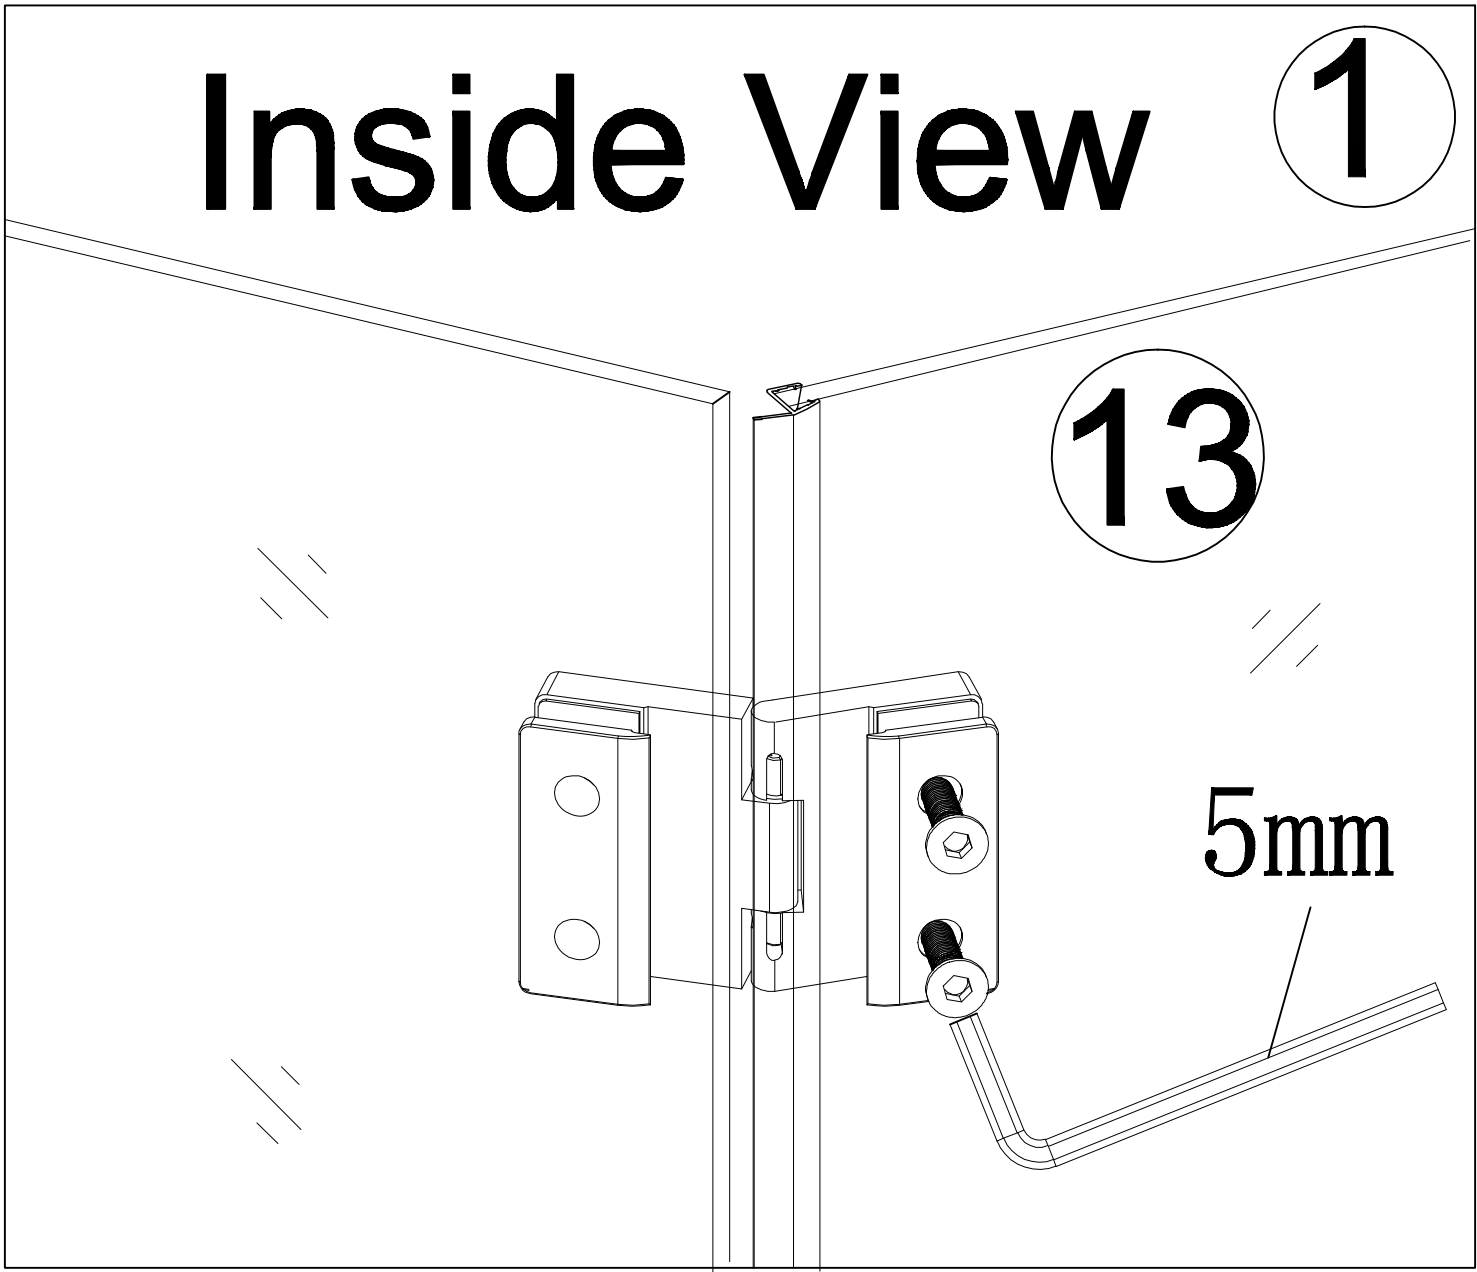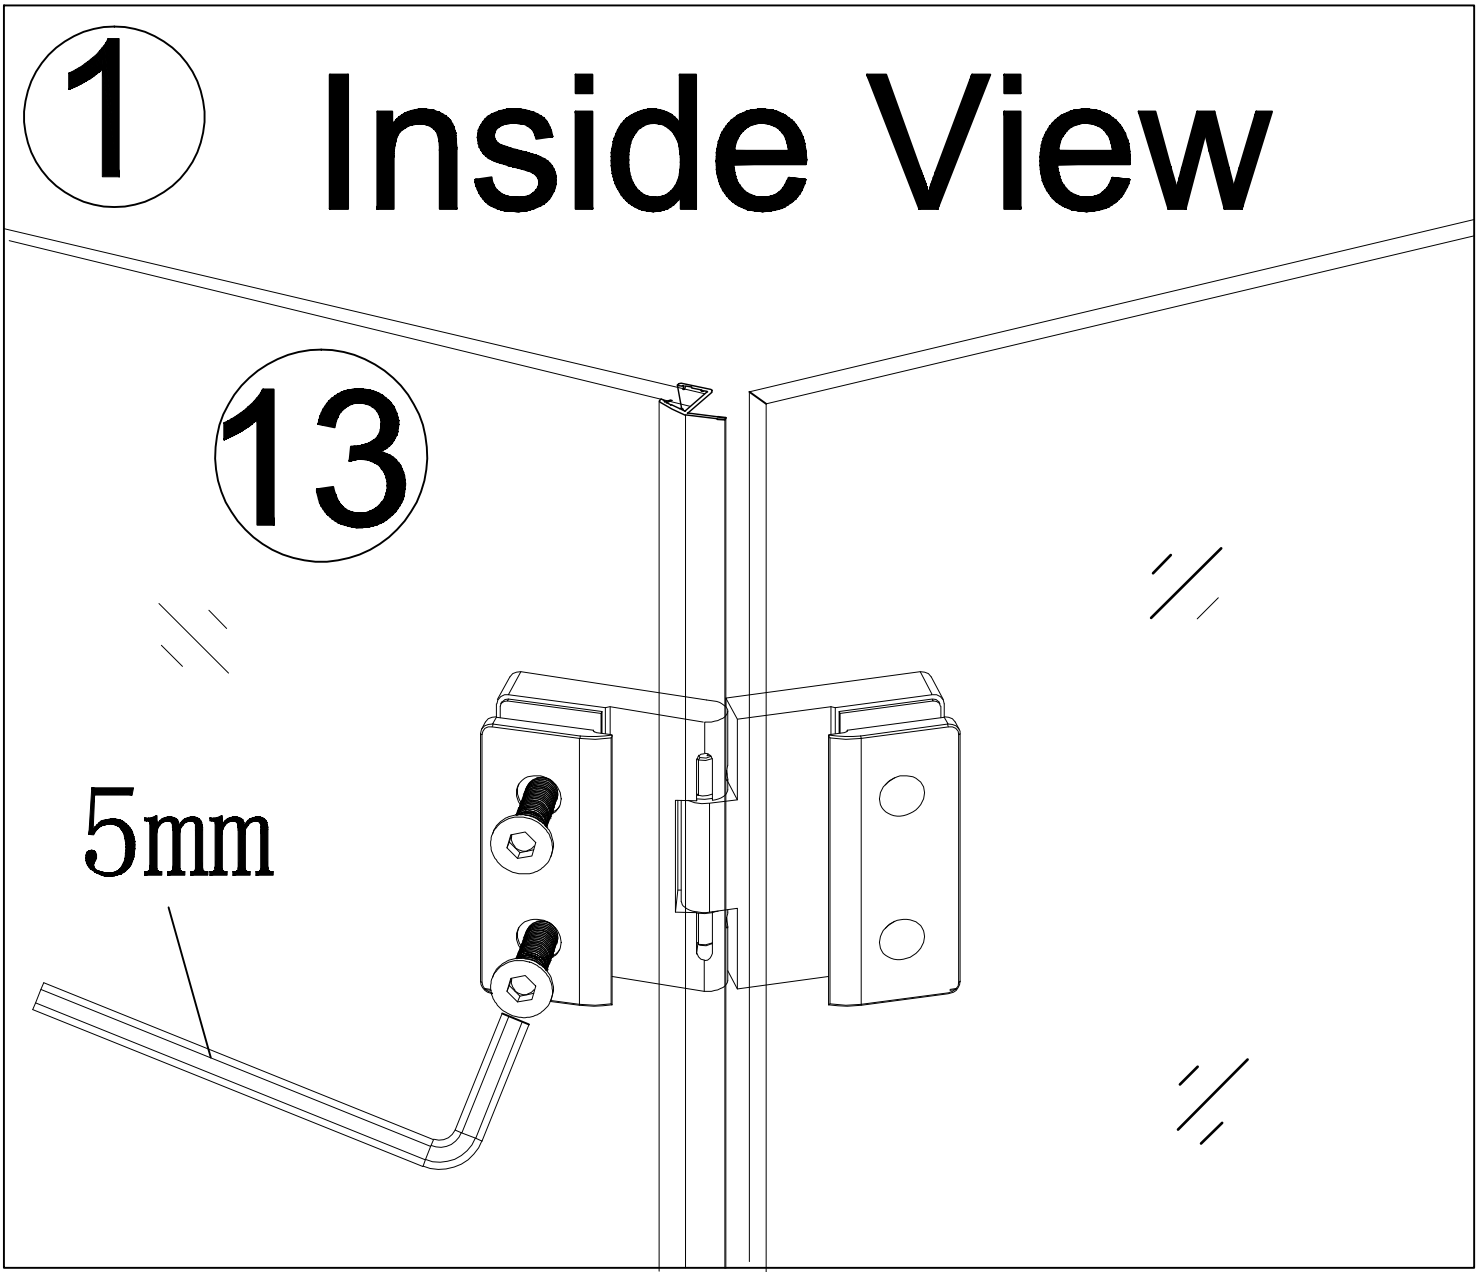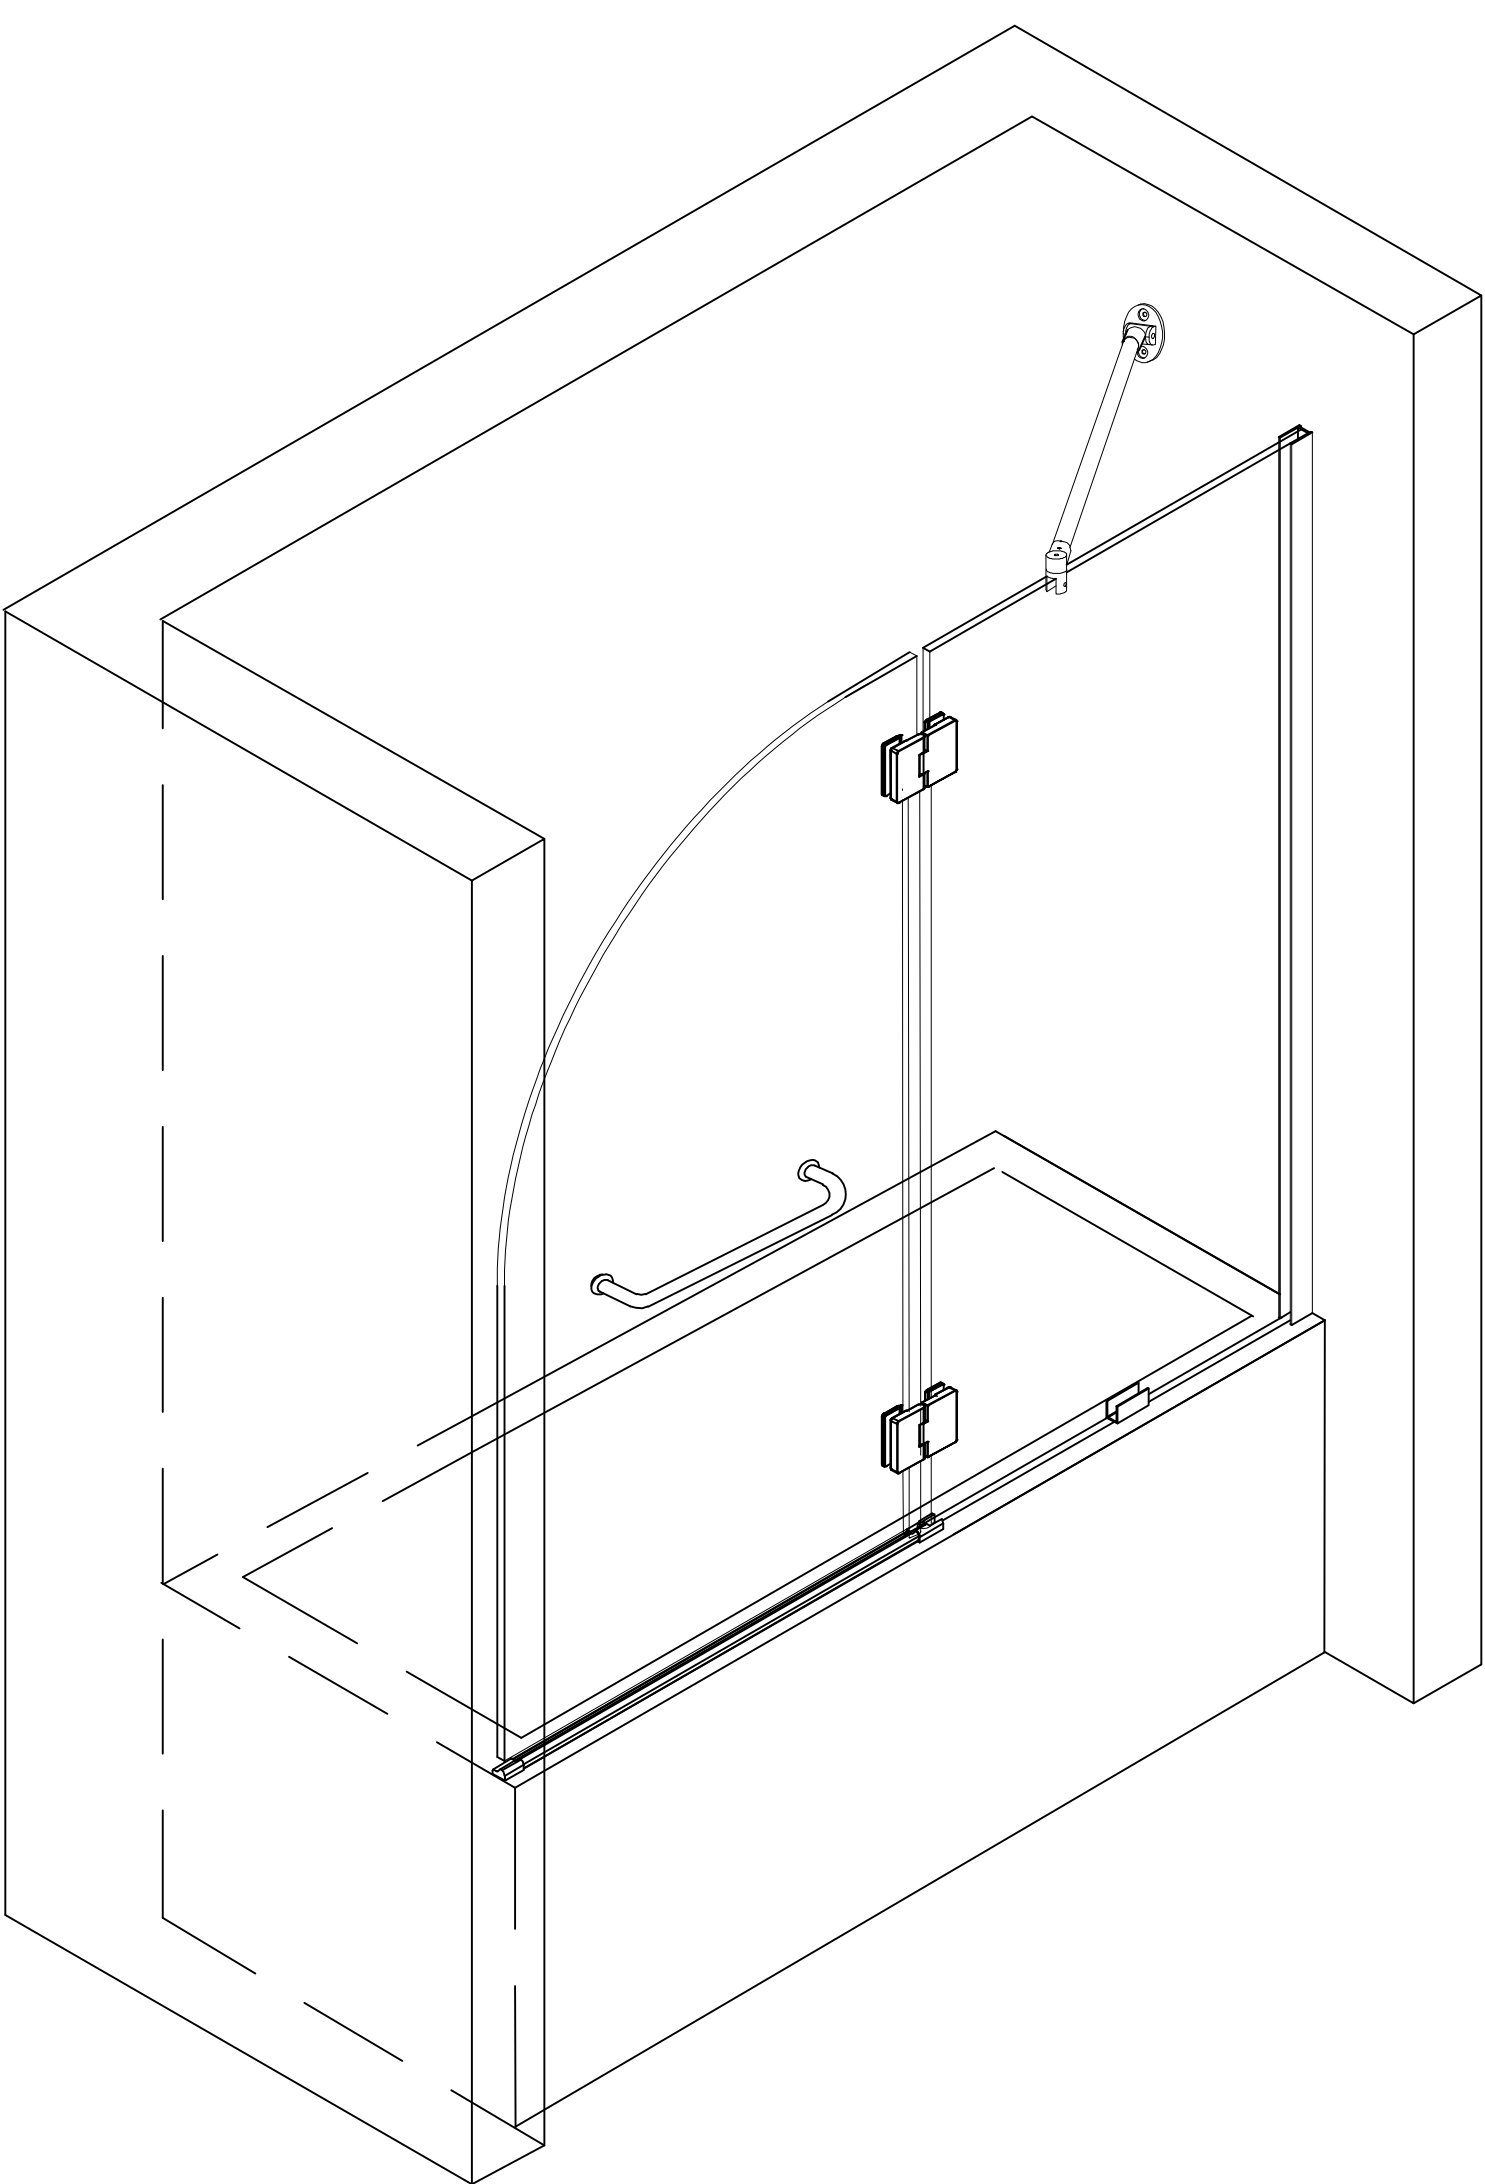

# Left Hand Assembly

## STEP 7



1. Assemble tubular single-sided towel bar(14) onto movable shower door(13).

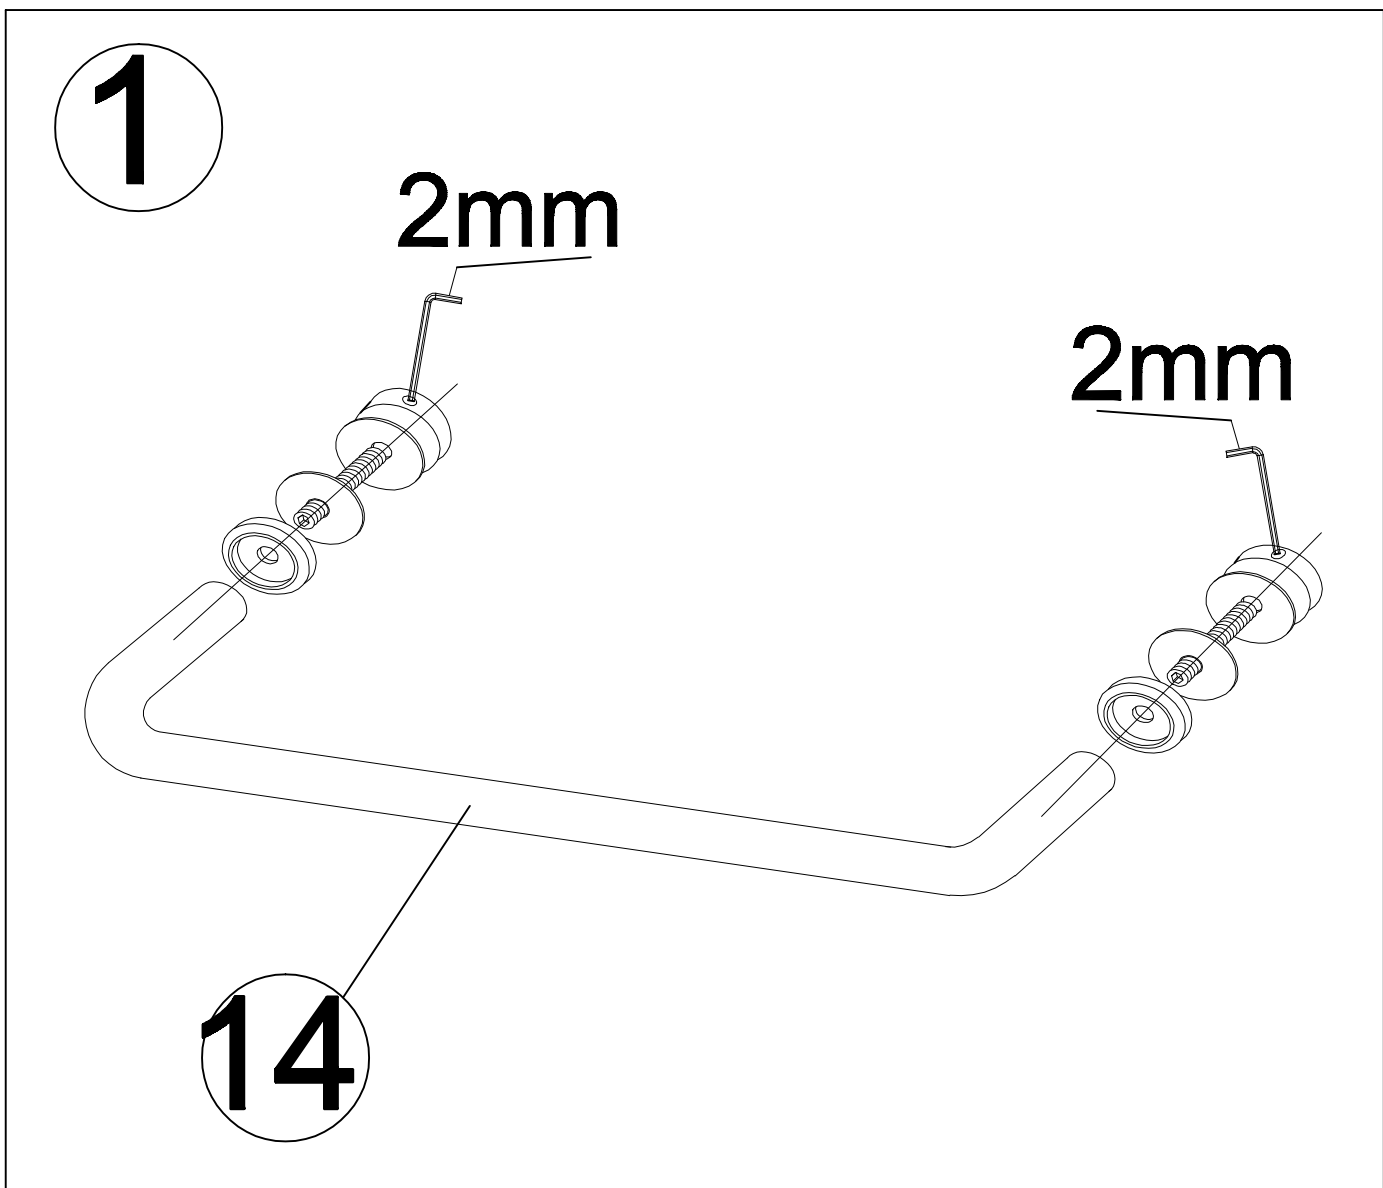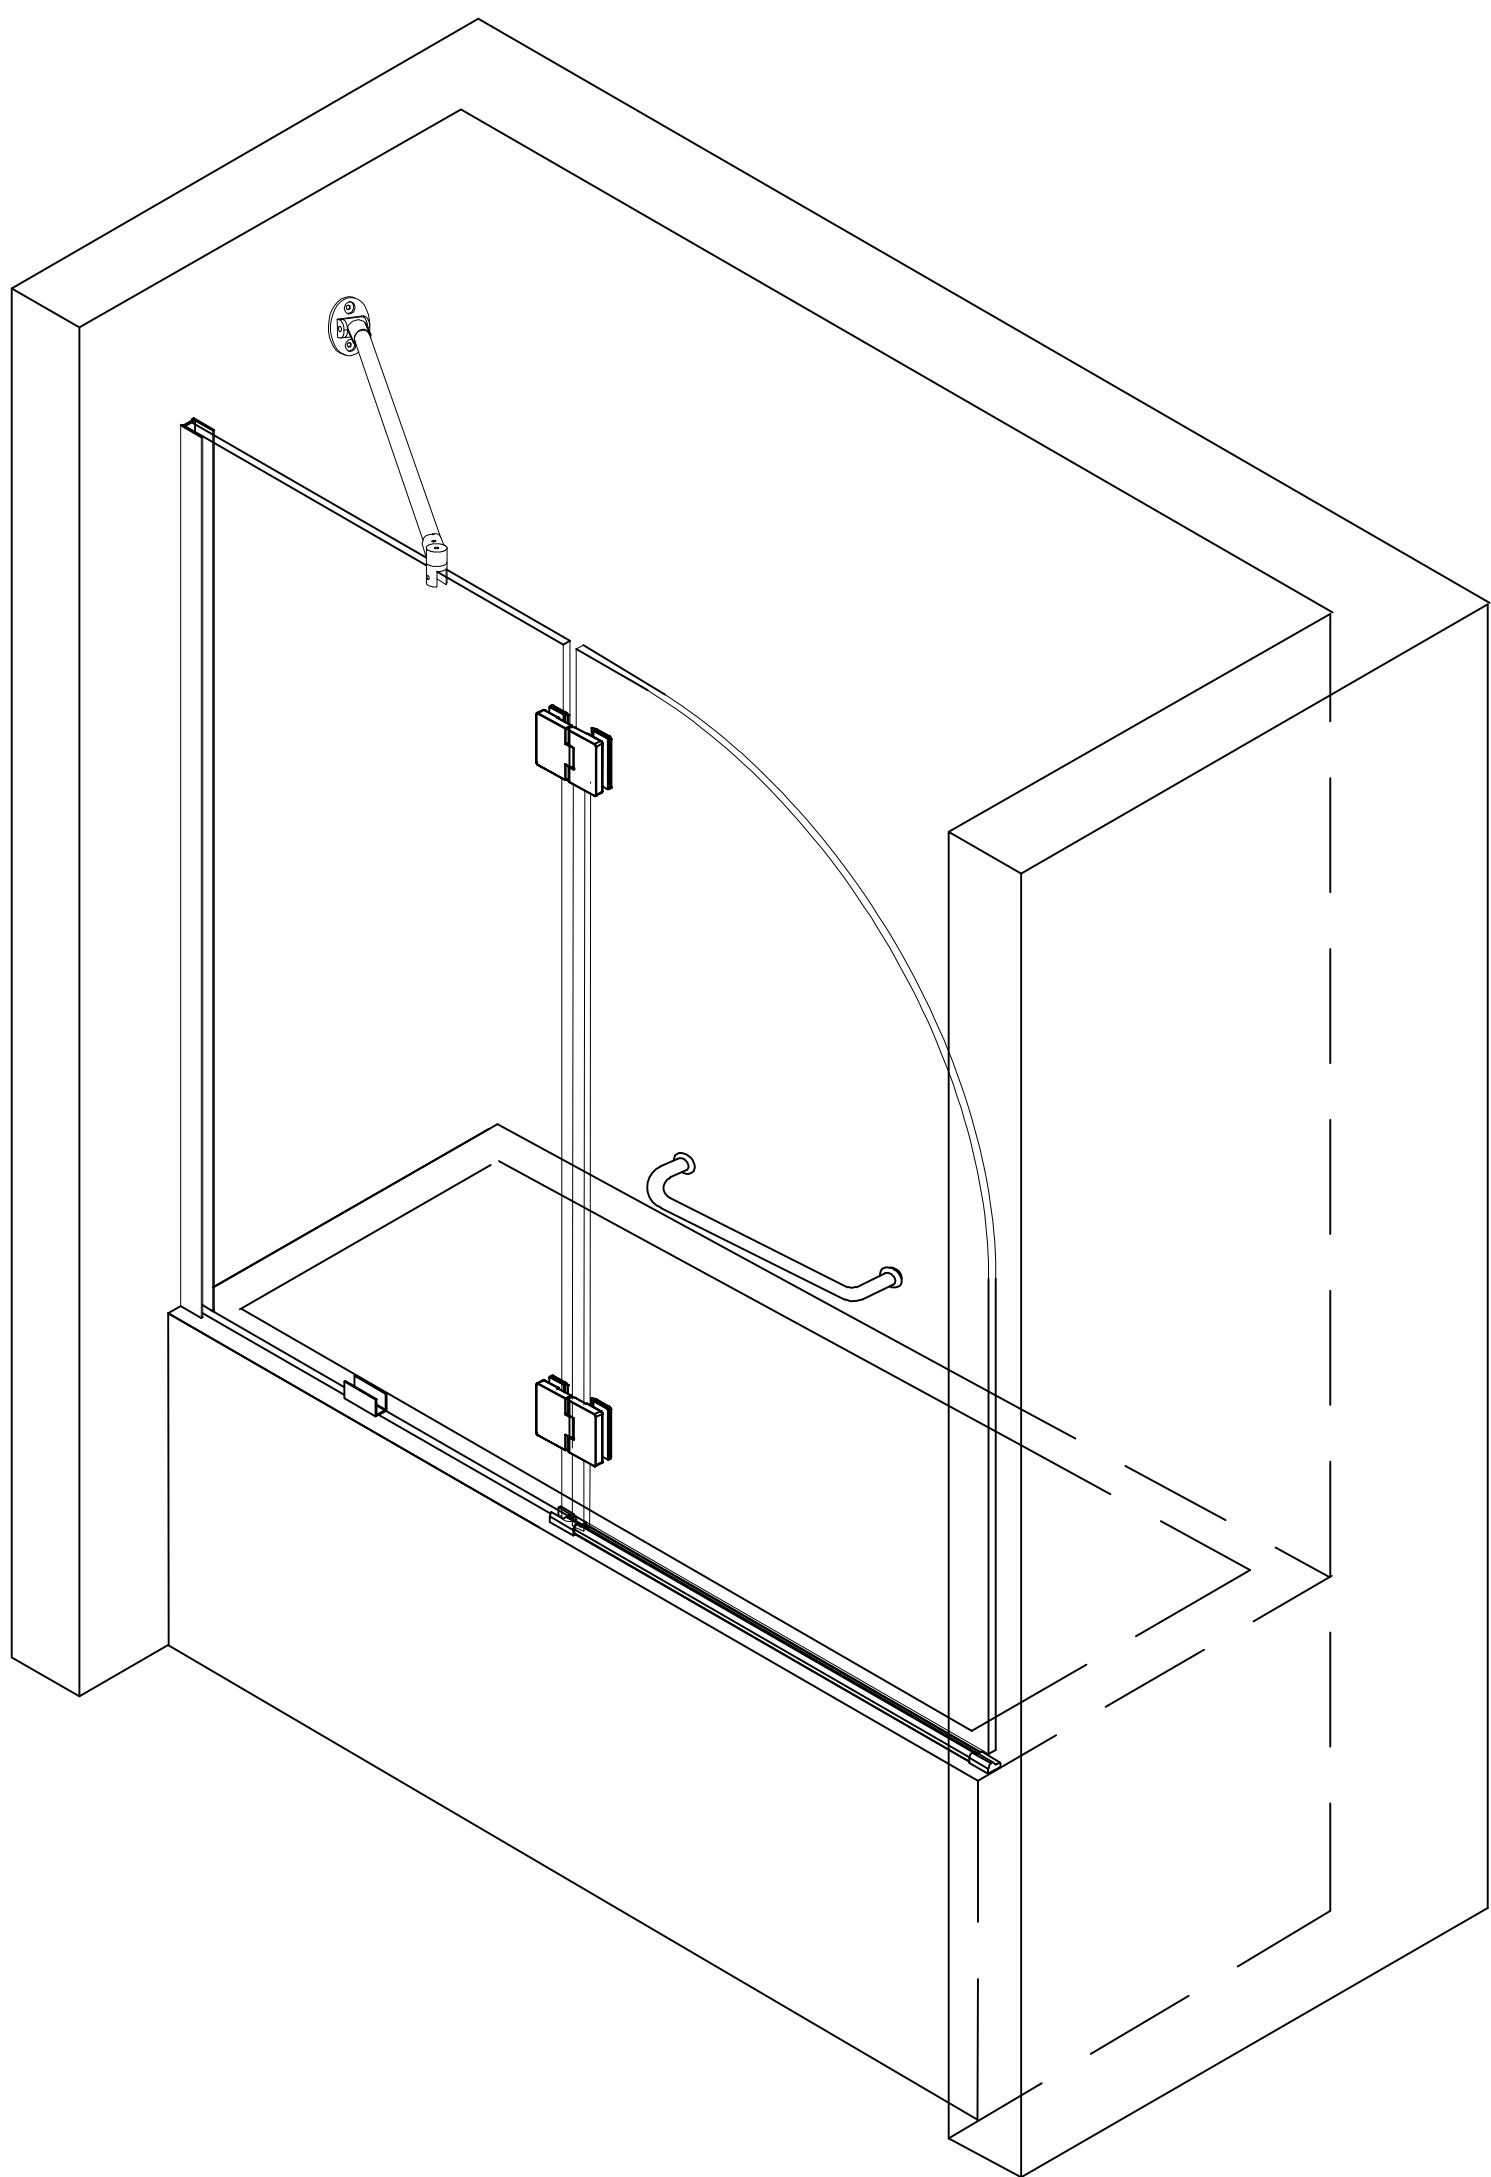

# Right Hand Assembly

## STEP 7




1. Assemble tubular single-sided towel bar(14) onto movable shower door(13).

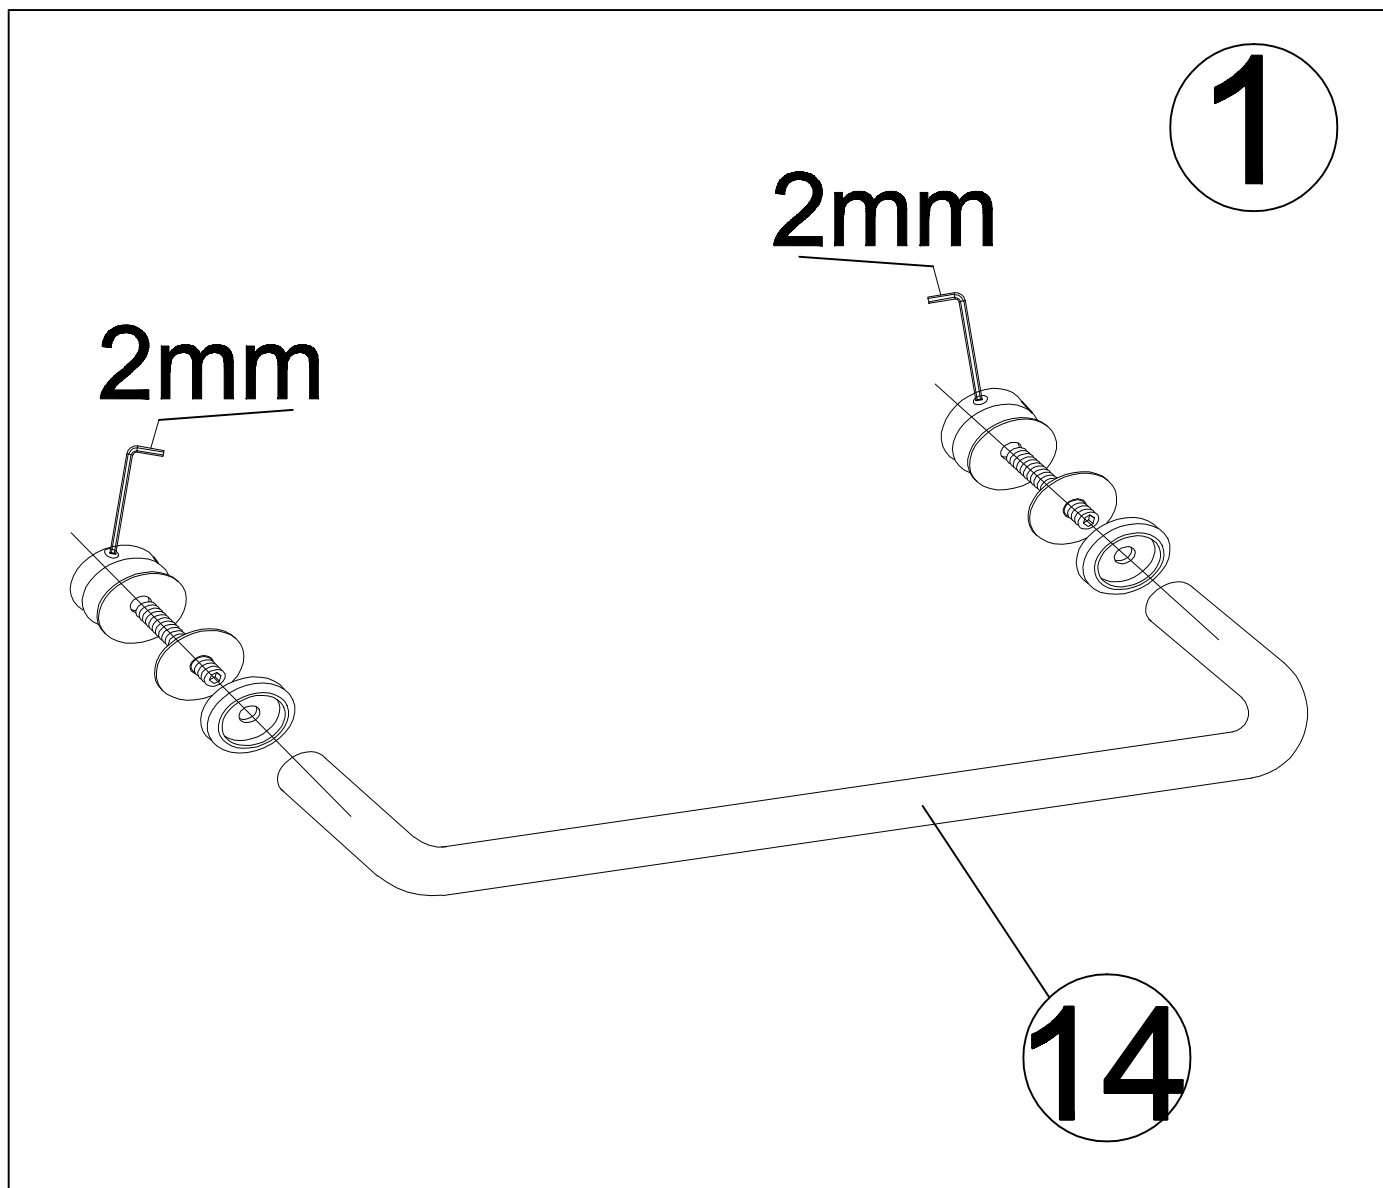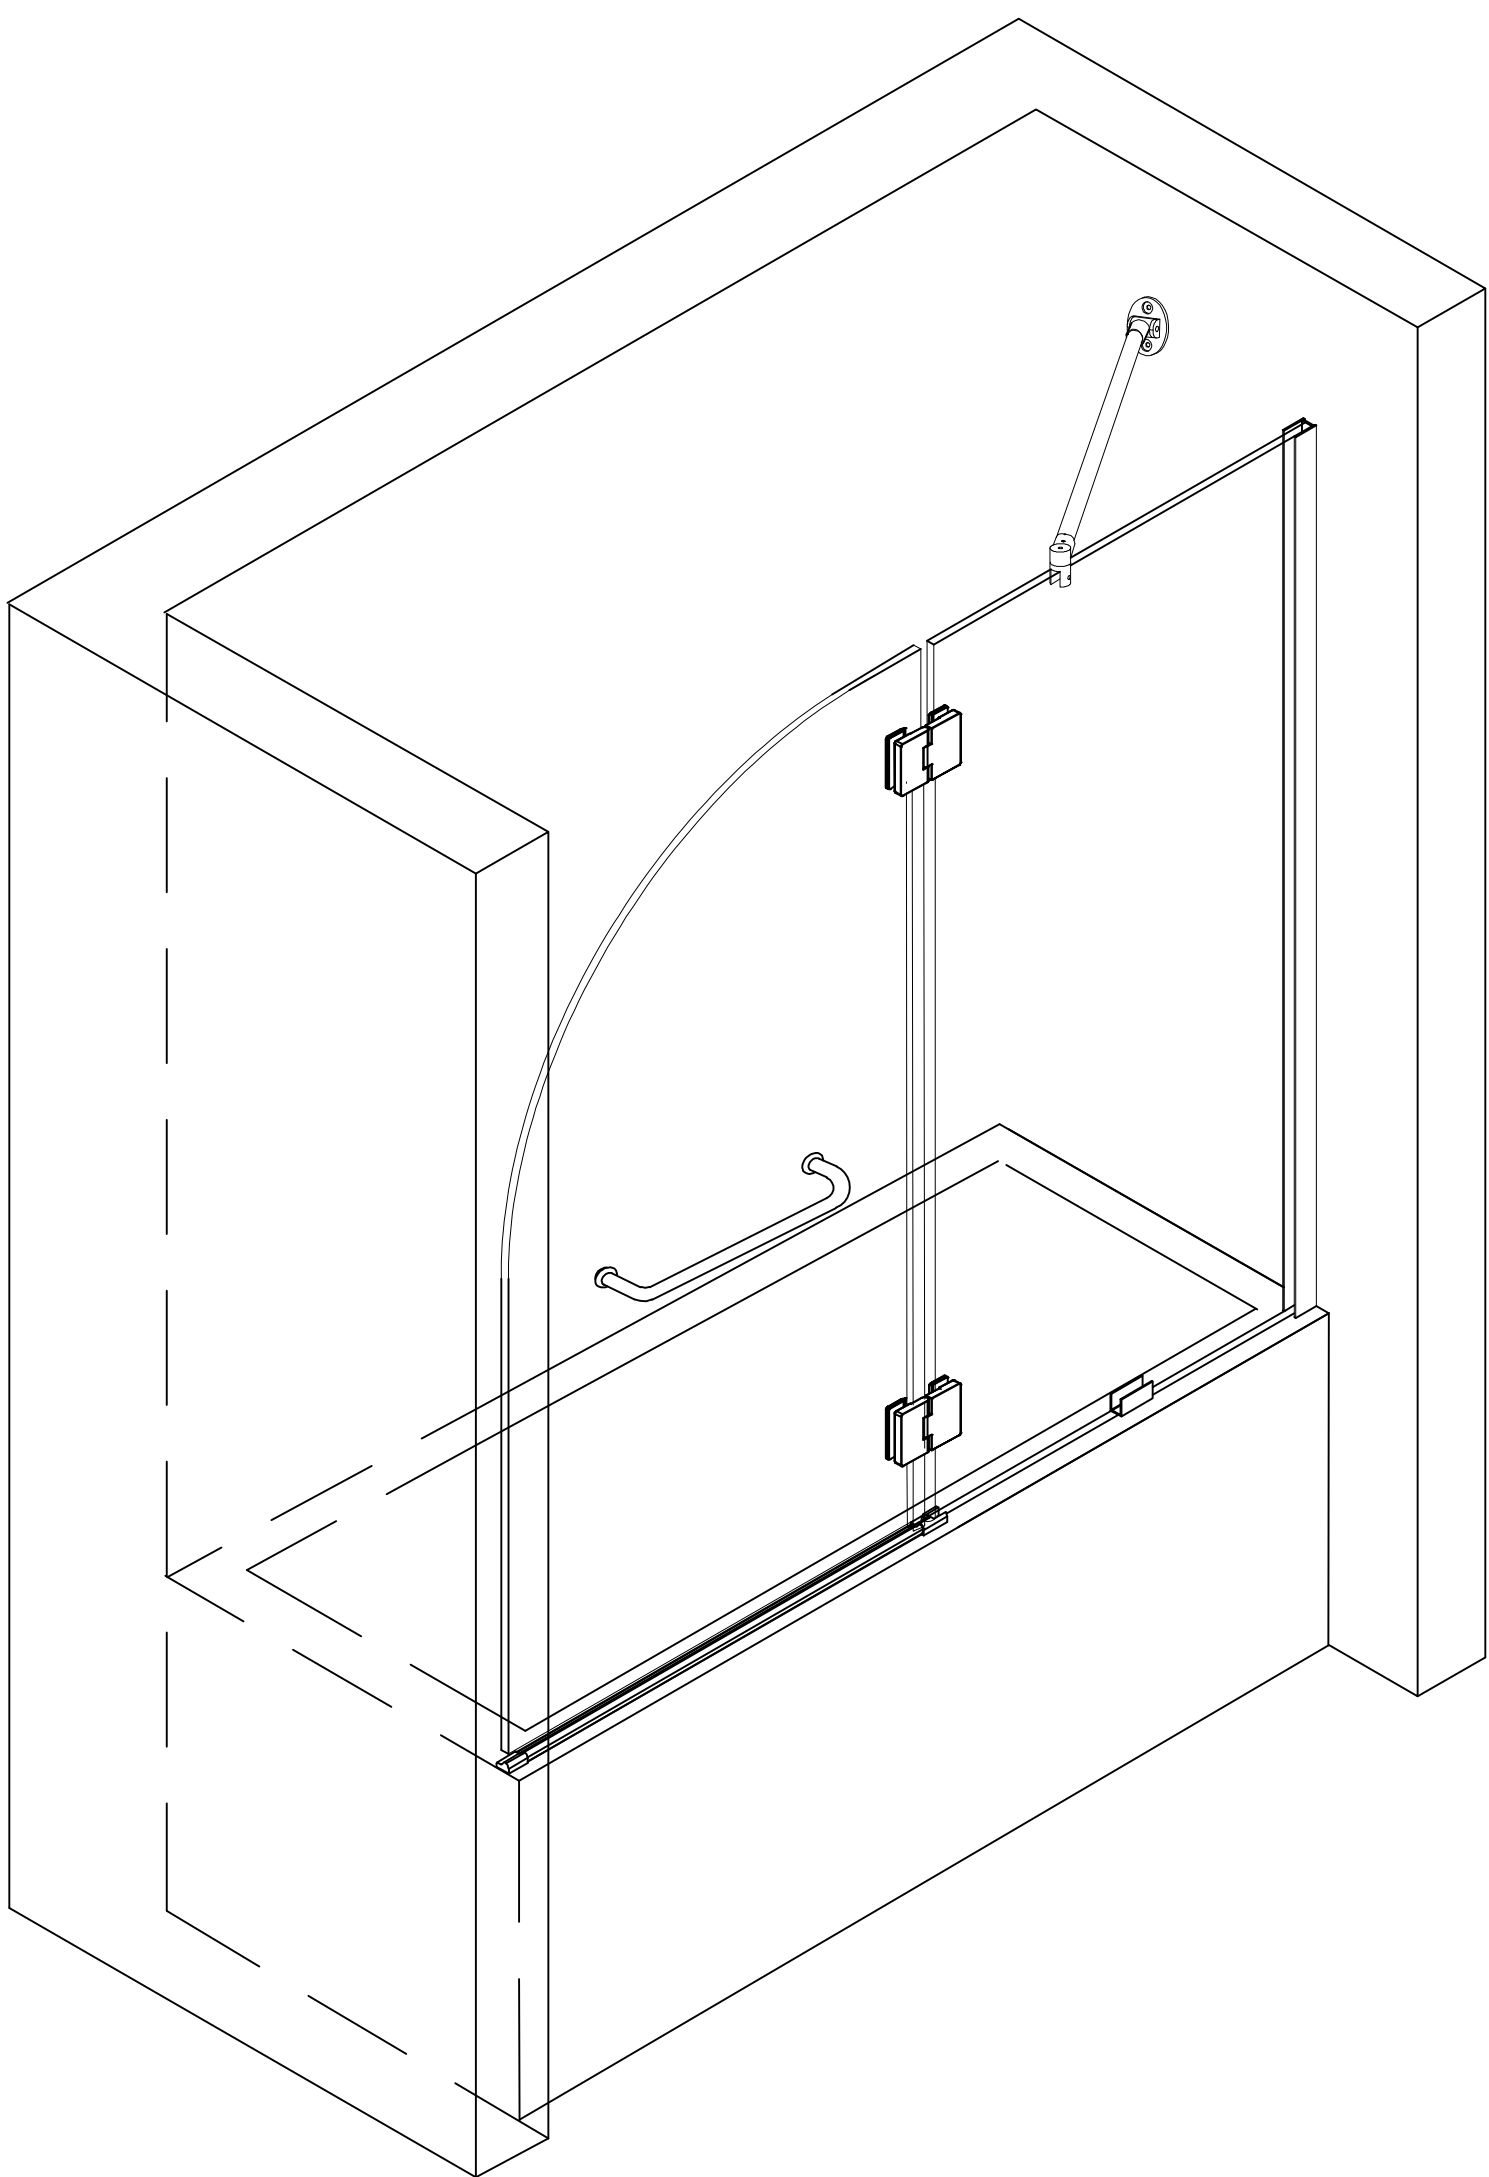

# Left Hand Assembly

## STEP 8




- 1. Install Side seal strip(15) .Open the Movable shower door(13),then insert Side seal strip(15) to side of Movable shower door(13) .
- 2. Install Shower door bottom seal strip(11). Insert Shower door bottom seal strip(11) to bottom of Movable shower door(13).

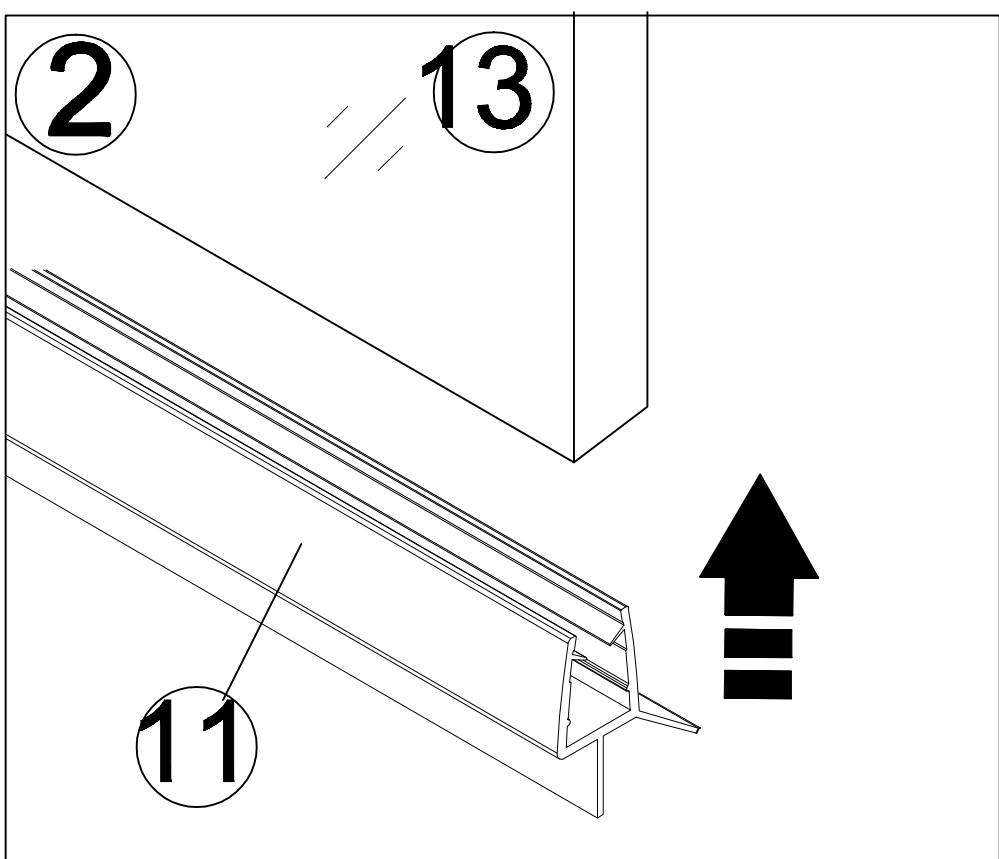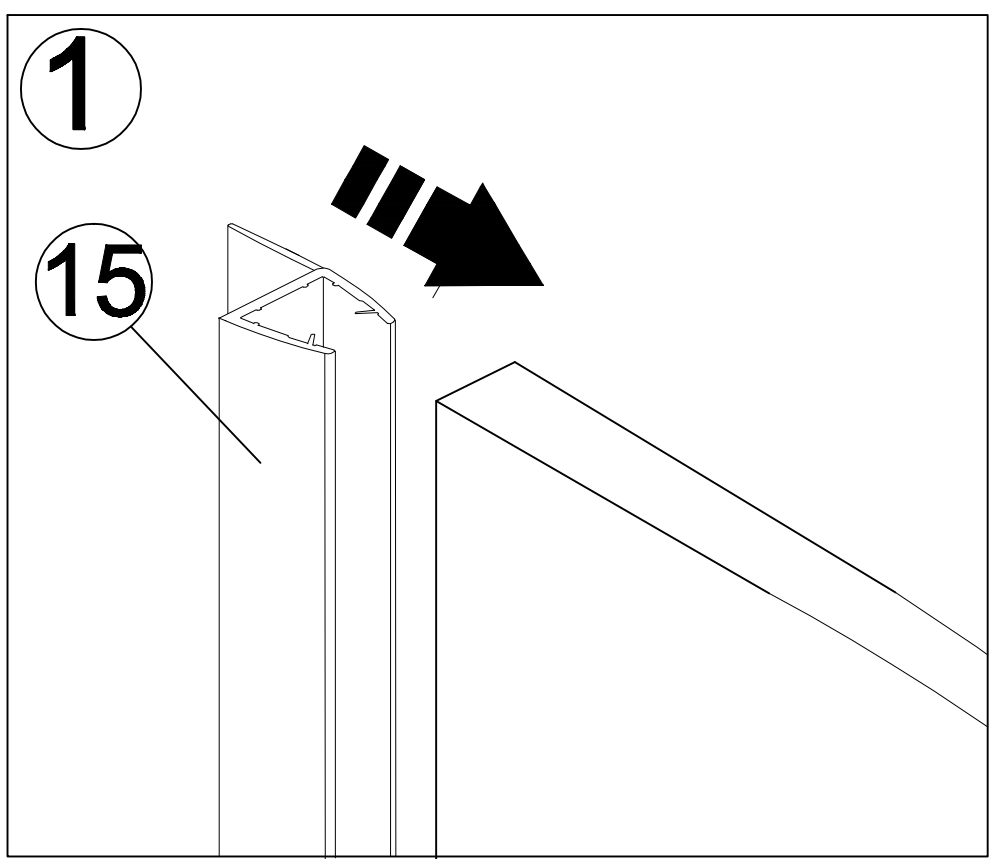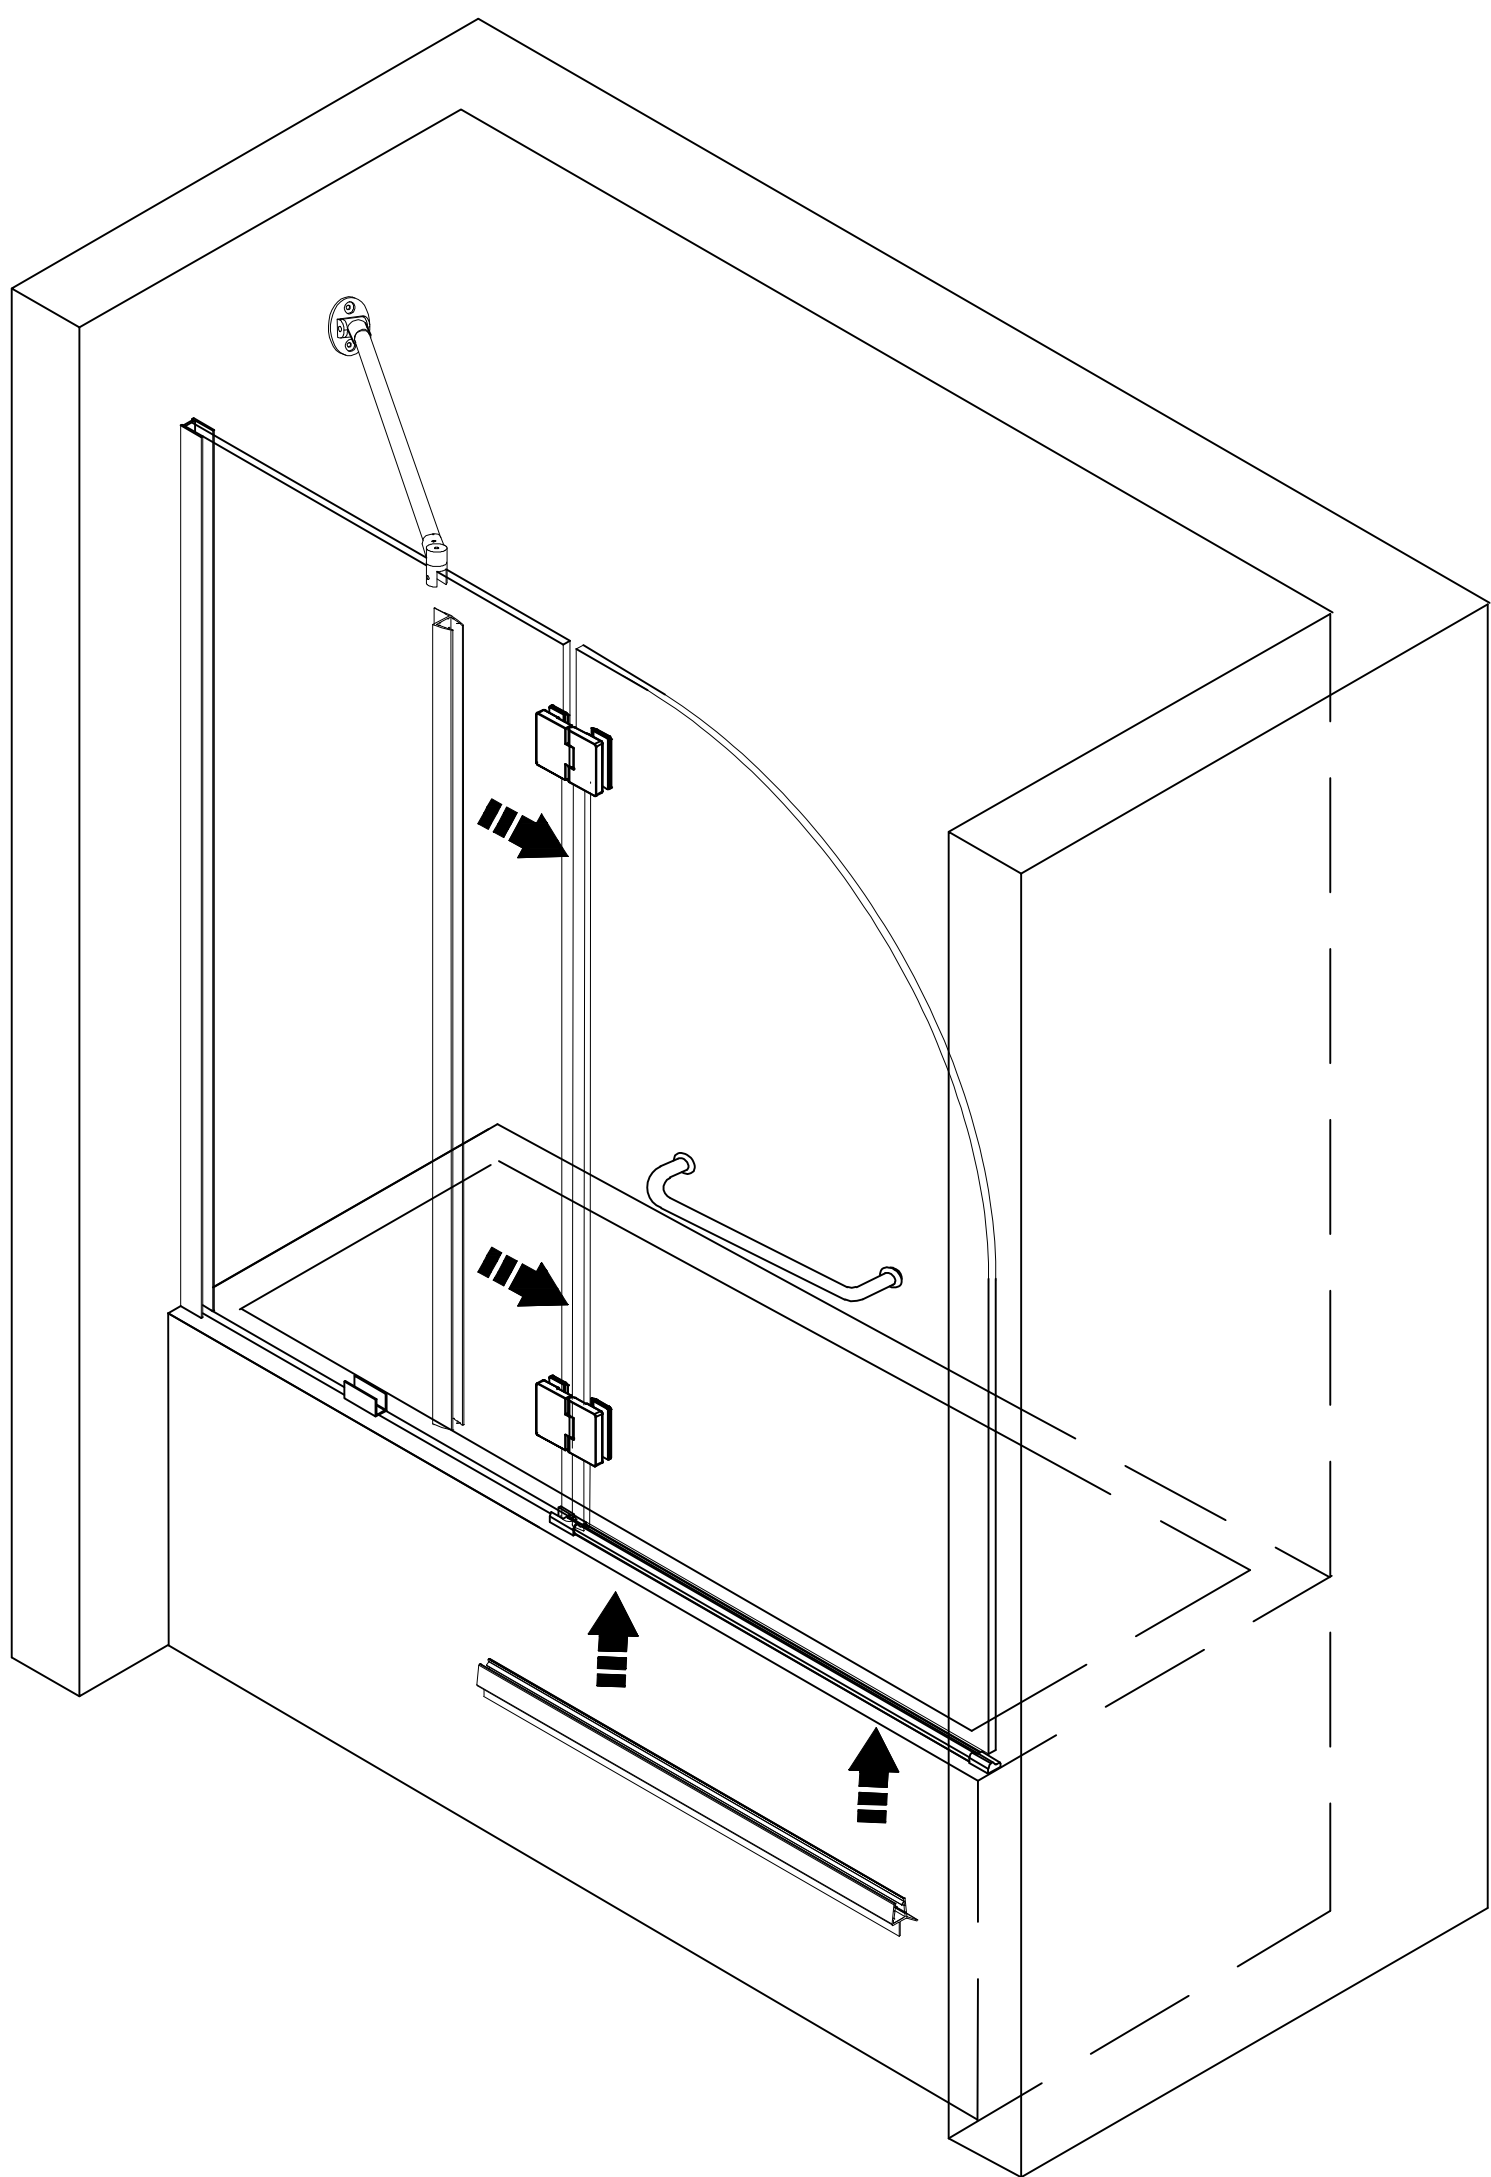

# Right Hand Assembly

## STEP 8



- 1. Install Side seal strip(15) .Open the Movable shower door(13),then insert Side seal strip(15) to side of Movable shower door(13) .
- 2. Install Shower door bottom seal strip(11). Insert Shower door bottom seal strip(11) to bottom of Movable shower door(13).

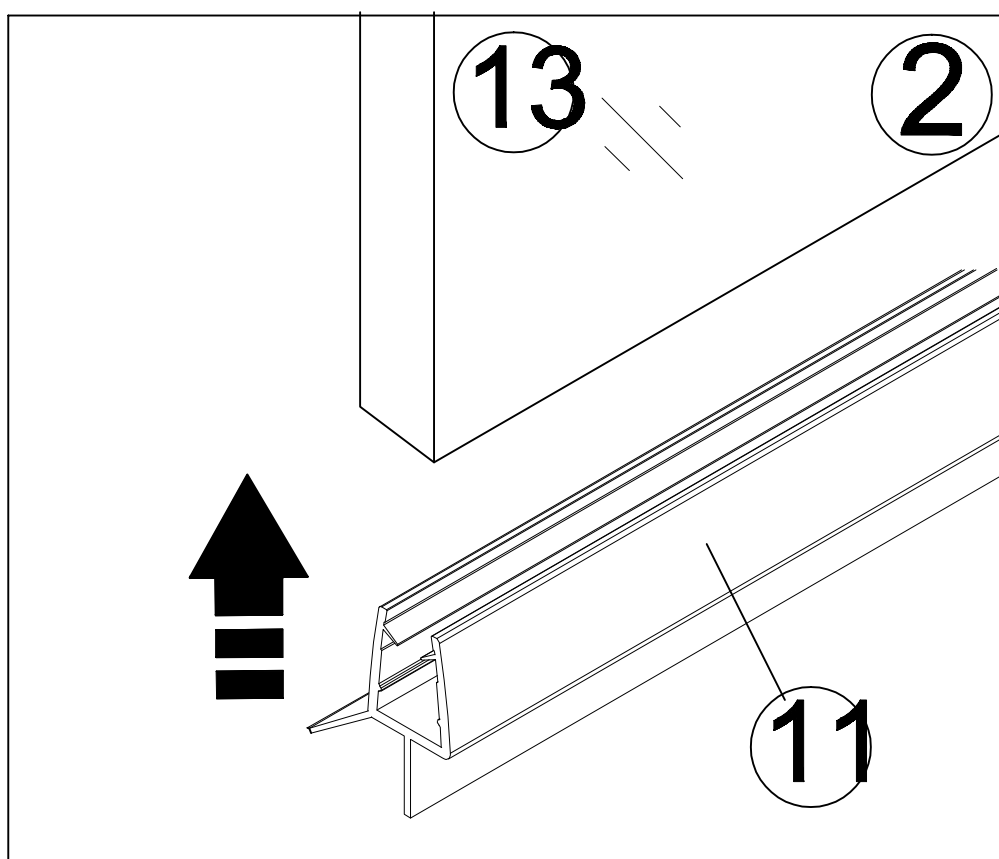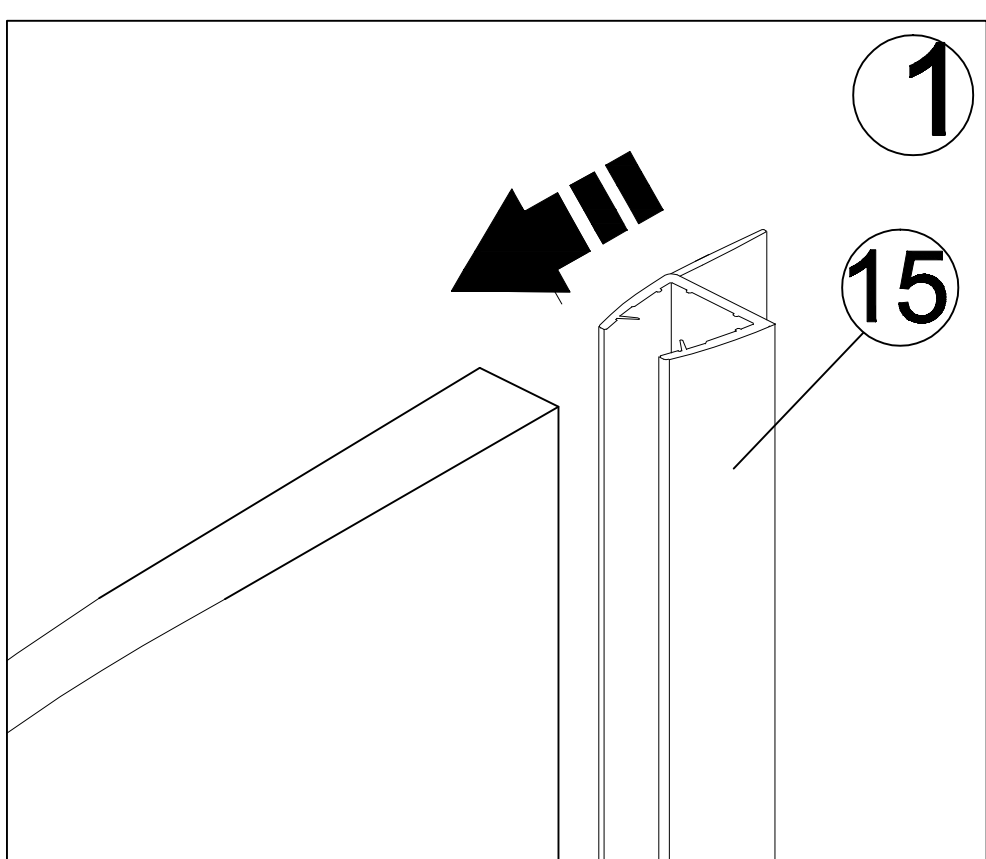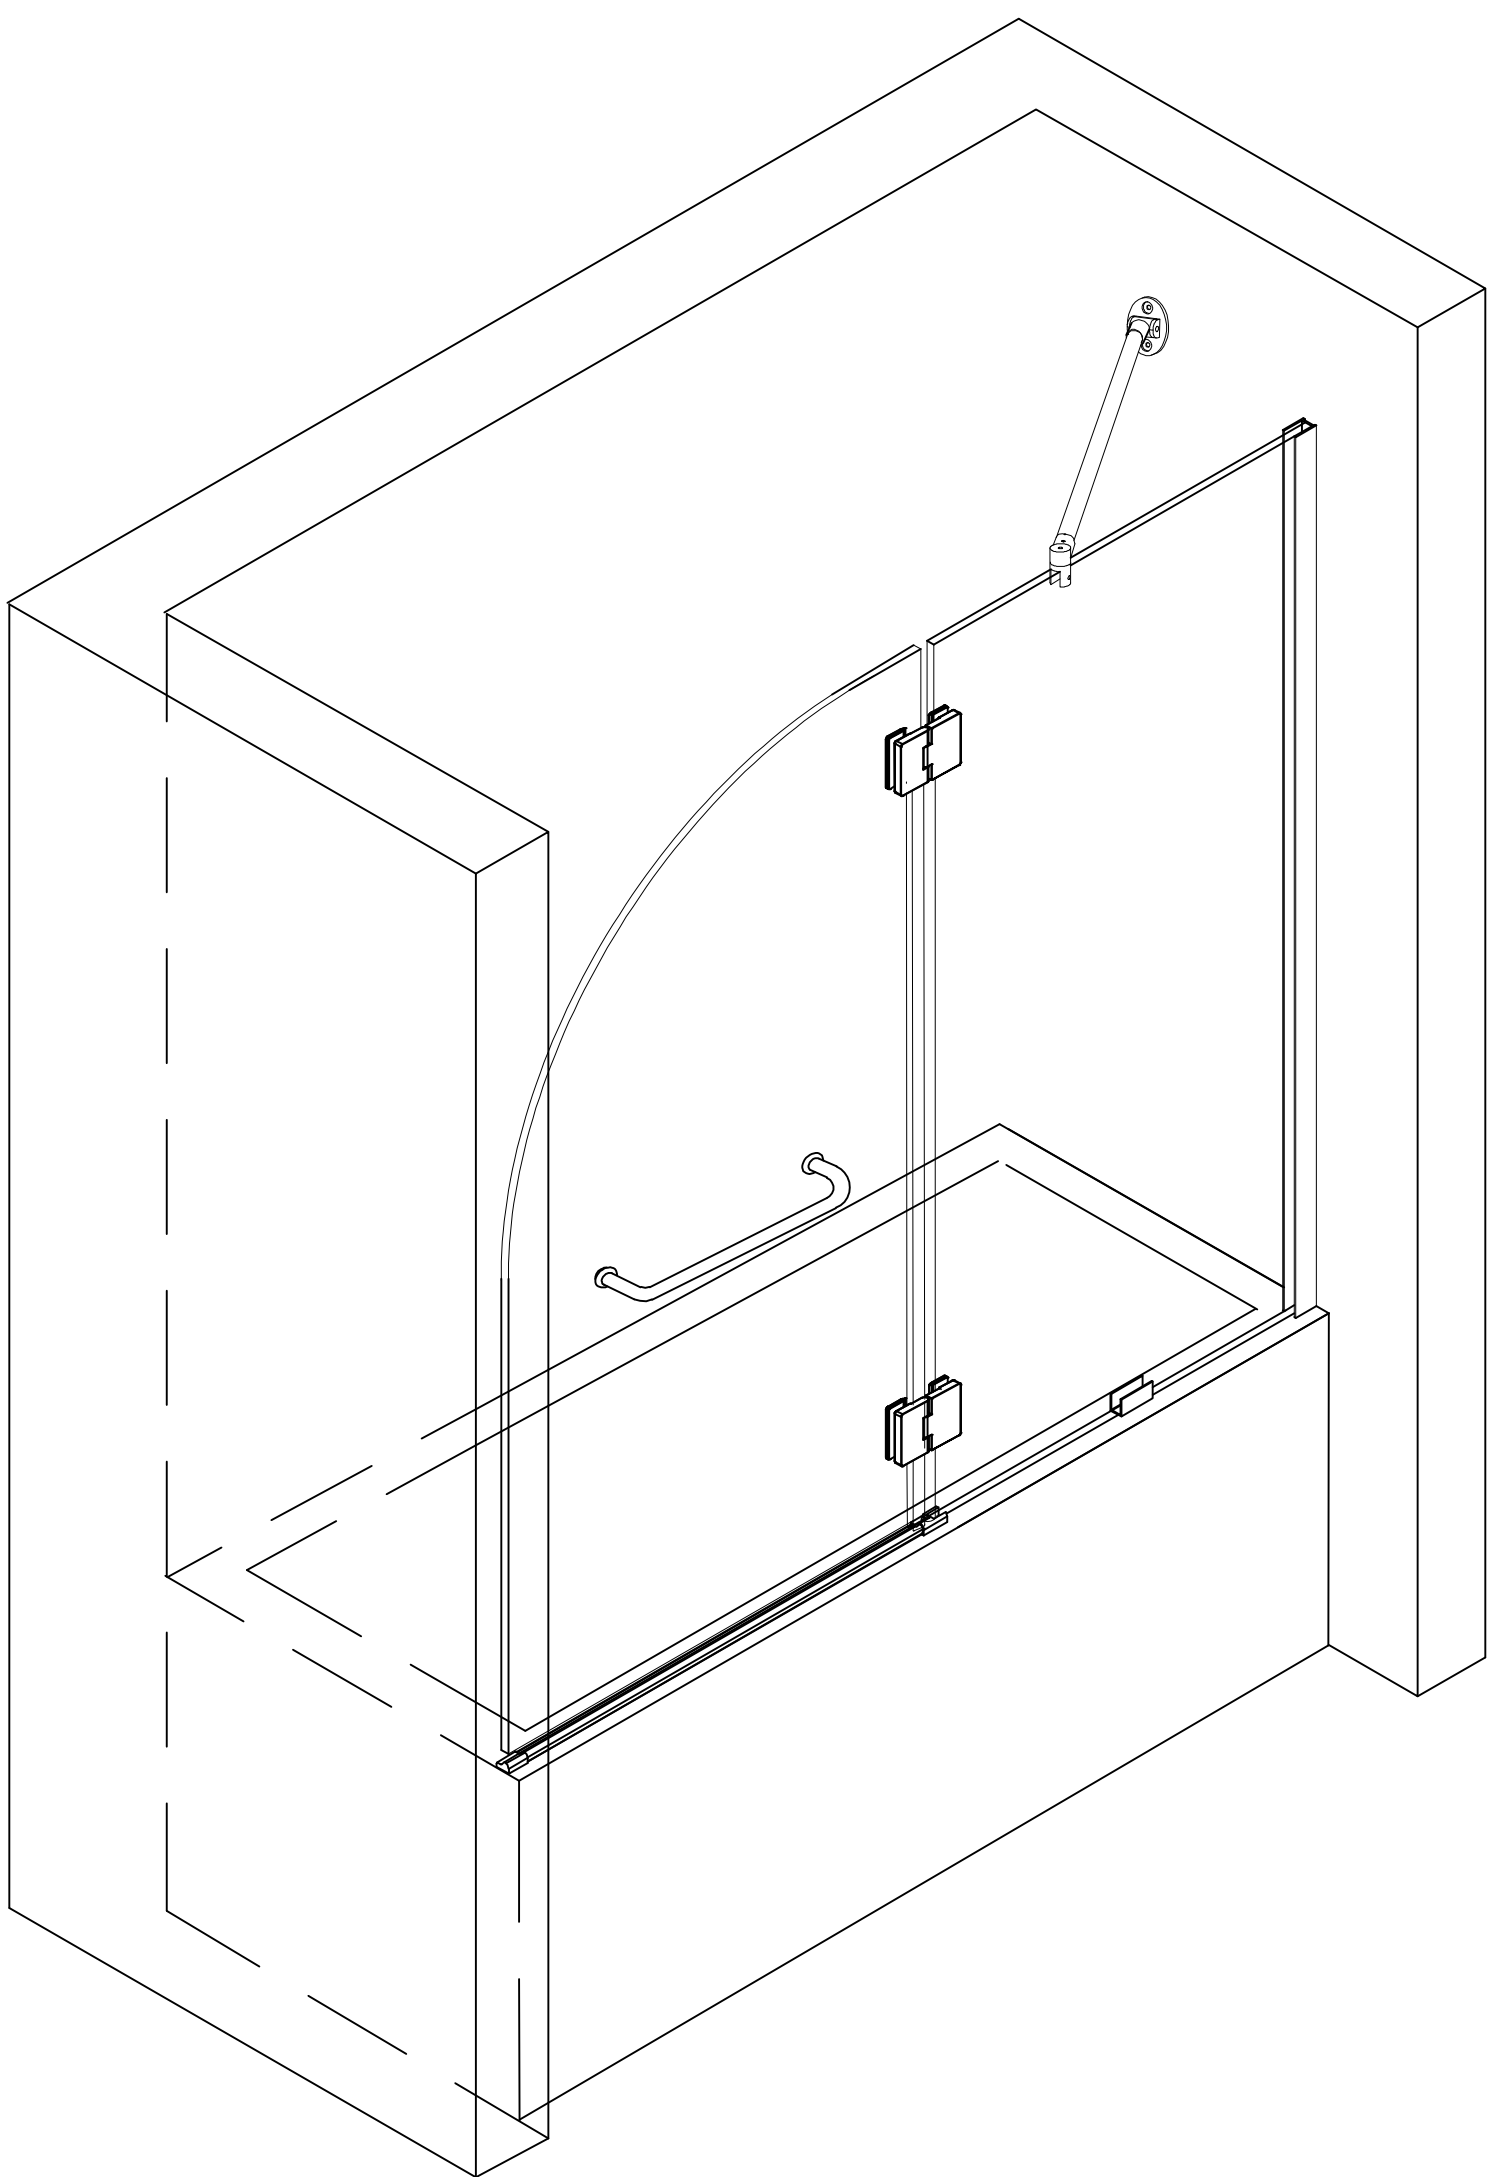

# Left Hand Assembly

## STEP 8

1. Apply qualified mildew resistant silicone along the sides of wall-mounted stabilizer strip for fixed panel(3), Aluminum strip(10) and fixed panel(5) base. Allow the silicone to dry for 24 hours before using the shower.

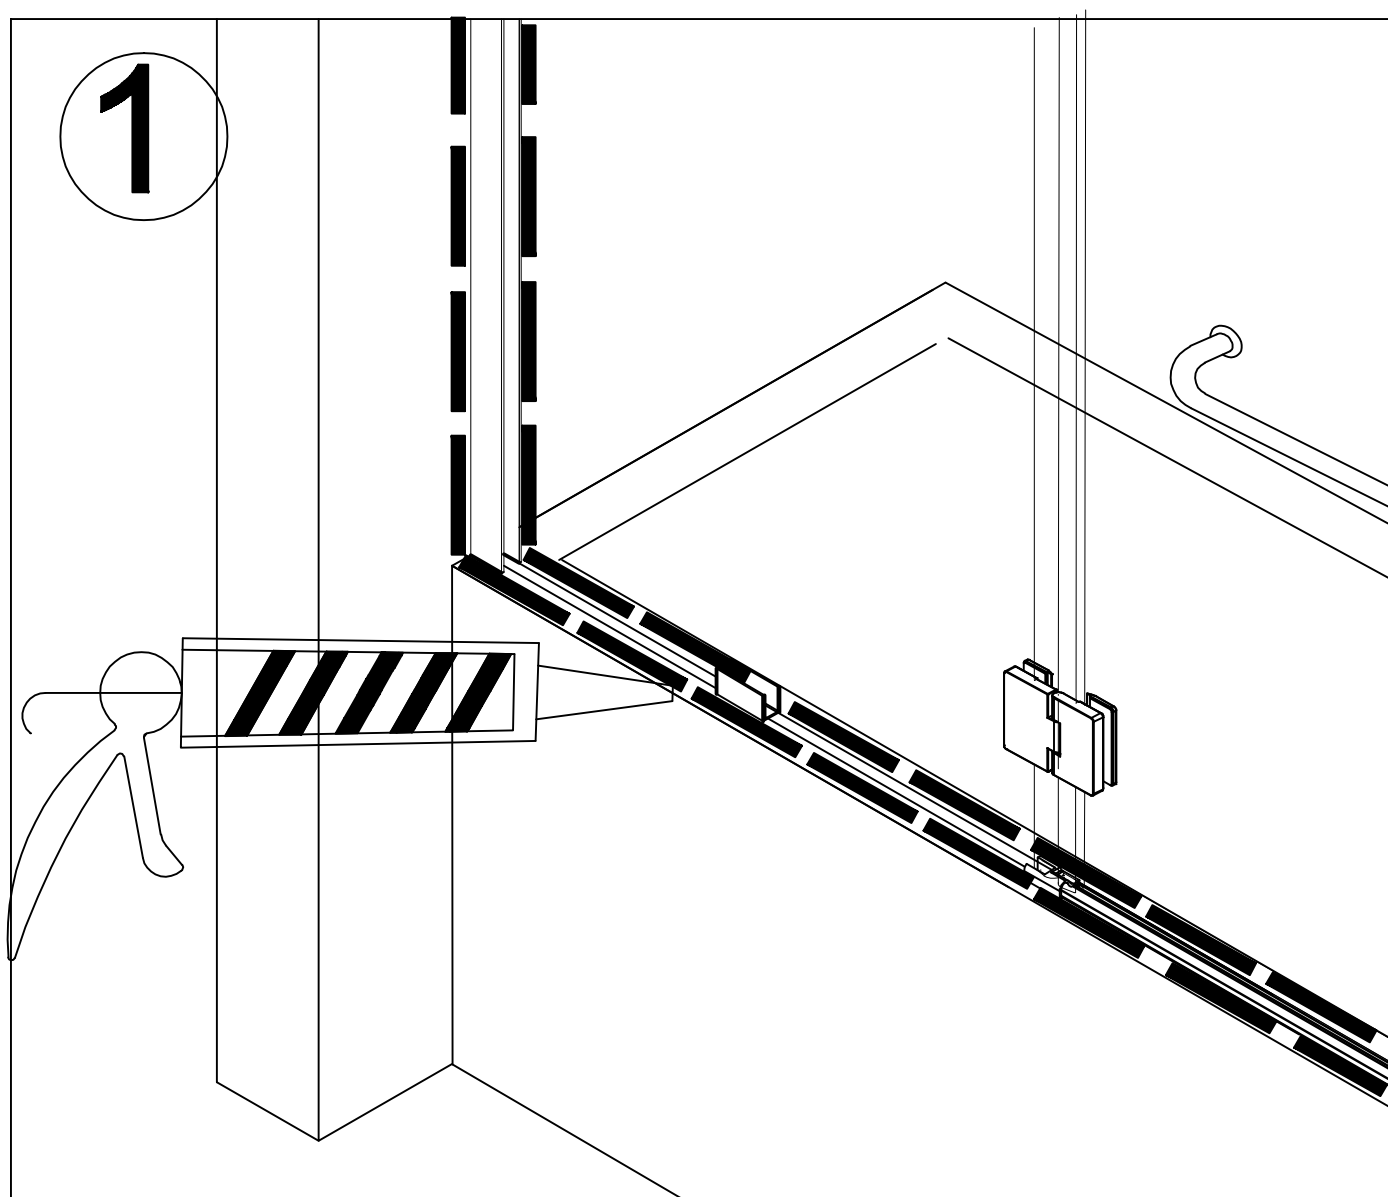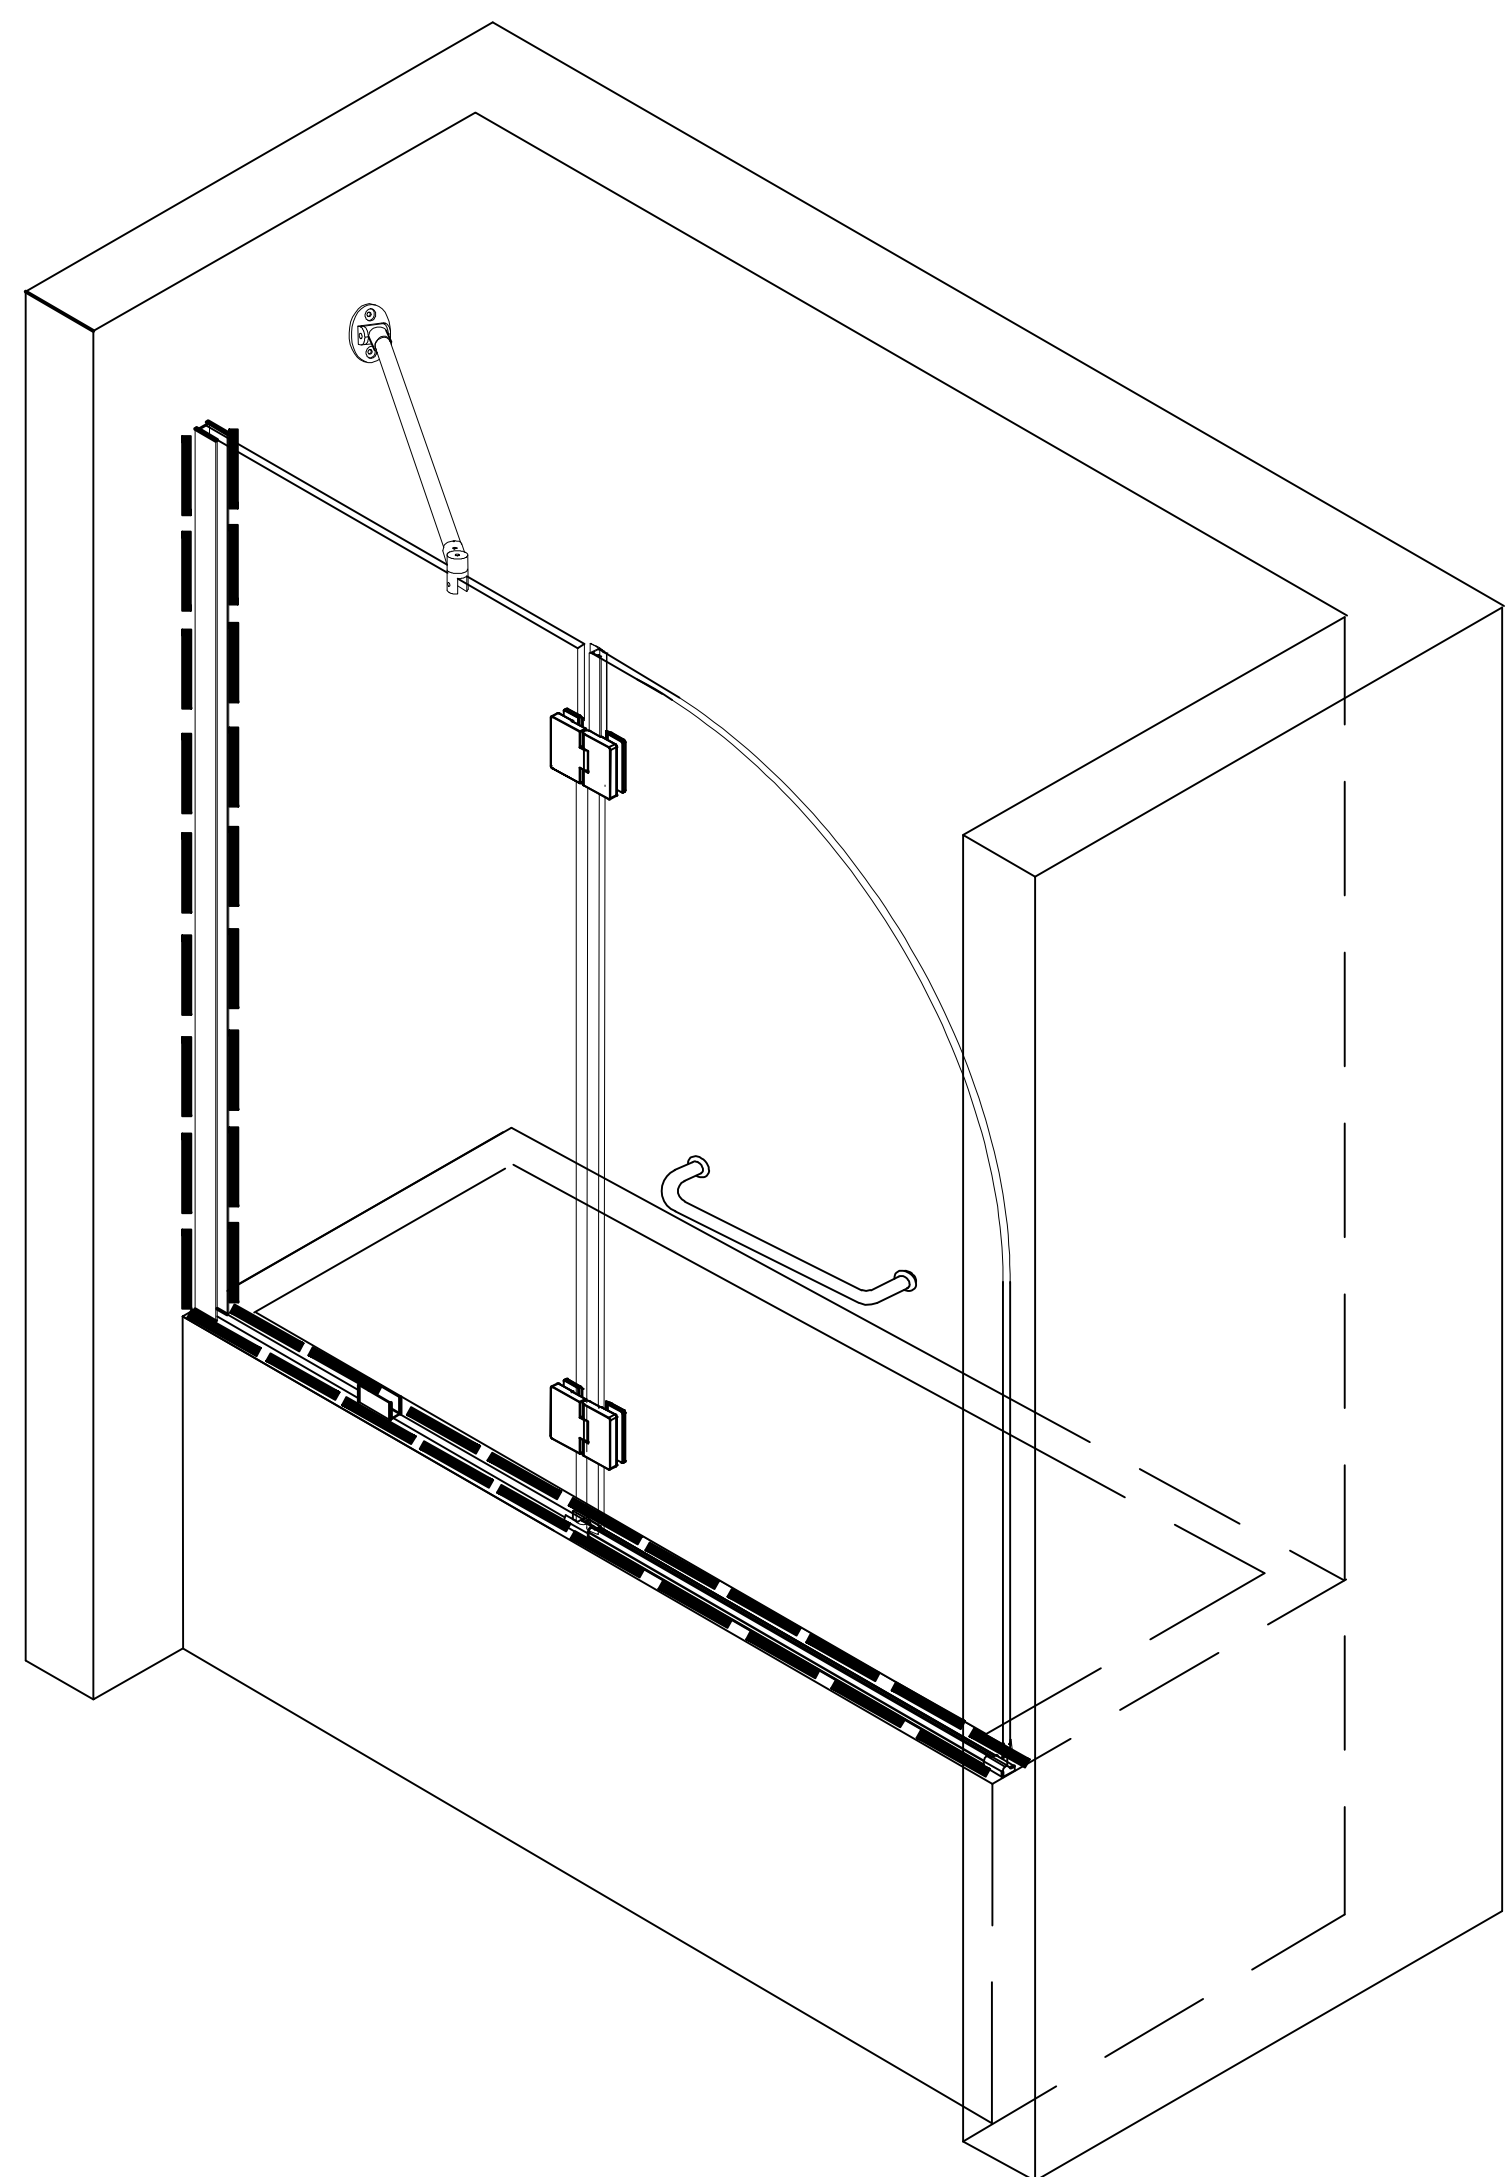

# Right Hand Assembly

## STEP 8

1. Apply qualified mildew resistant silicone along the sides of wall-mounted stabilizer strip for fixed panel(3), Aluminum strip(10) and fixed panel(5) base. Allow the silicone to dry for 24 hours before using the shower.

