

CONVENIENCE CONCEPTS

TV STAND WITH TWO CABINETS

39" MAXIMUM FLAT PANEL TELEVISION
80 LB. MAXIMUM CAPACITY



ASSEMBLY INSTRUCTIONS

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give you years of enjoyment .




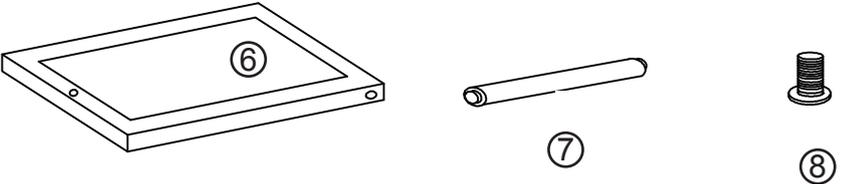


Please do not return to the store





Broken or missing parts?

Need help with assembly?

If you have any questions just call 1-800-468-6447 or email us at parts@convenience-concepts.com


Hardware List	Panel List		
<p>(A) </p>	 <p style="text-align: center;">Top Panel (1pc)</p>		
<p>(B) </p>			
<p>(C) </p>			
<p>(D) </p>	 <p style="text-align: center;">Middle Divider (1pc) Side Panel (2pcs)</p>		
<p>(E) </p>	 <p style="text-align: center;">Middle Panel (1pc) Bottom Panel (1pc)</p>		
<p>(F) </p>			
<p>(G) </p>	 <p style="text-align: center;">Plastic Doors (2pcs) Metal Tubes (4pcs) End Caps (8pcs)</p>		
<p>(H) </p>			
<p>(I) </p>	 <p style="text-align: center;">Back Panel (1pc)</p>		

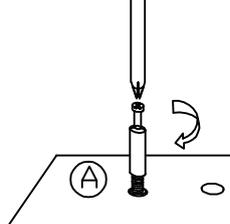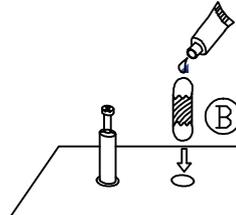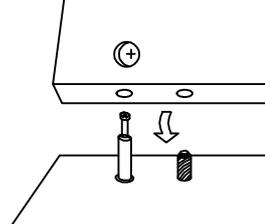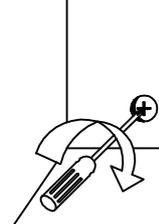Assembling the unit with cam and wood dowels.

			
<p>Gently screw cam dowel into the threaded anchor.</p>	<p>Lightly glue one end of the wood dowel and tap halfway into hole.</p>	<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>

step1

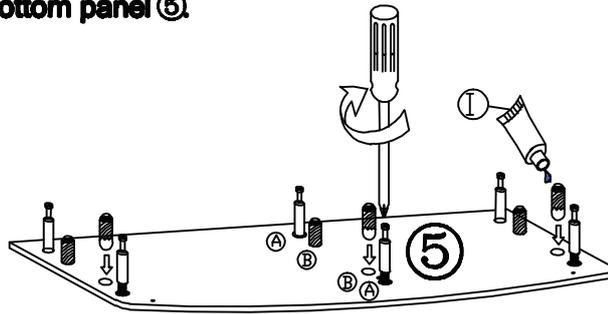Attach dowel hardware to bottom panel ⑤.
Apply glue to wood dowels.




* Refer to page 2 for dowel assembly


step2

Connect the middle divider ②
to the bottom panel ⑤,

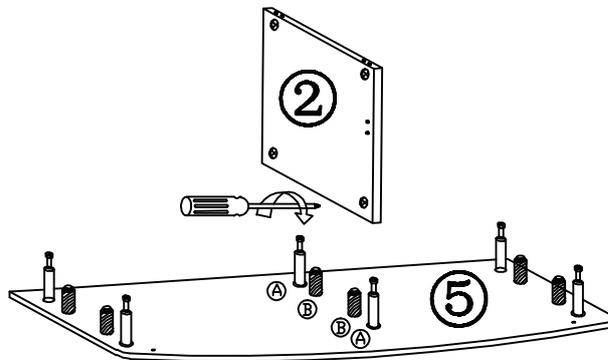Gently tighten camlocks.


**step3**

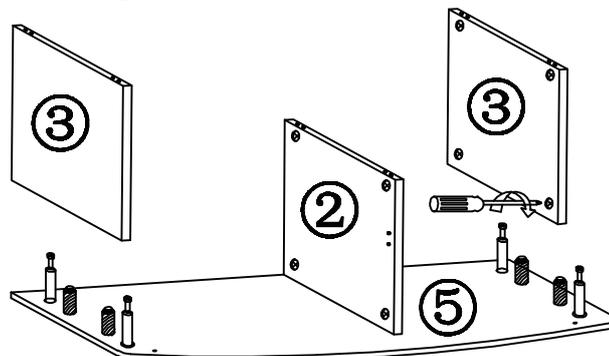Connect side panels ③ to the unit.
(Camlocks face inside with arrow pointing to hole.)
Gently tighten camlocks.



step4

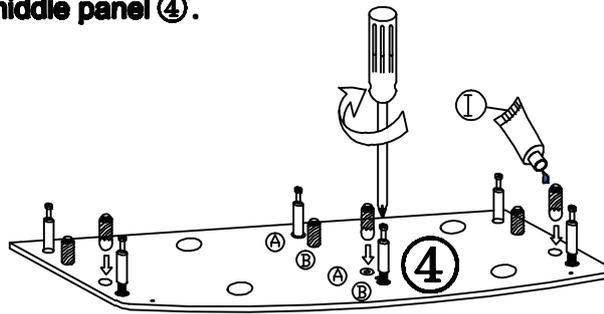
Attach dowel hardware to middle panel ④.
Apply glue to wood dowels.




* Refer to page 2 for dowel assembly

step5

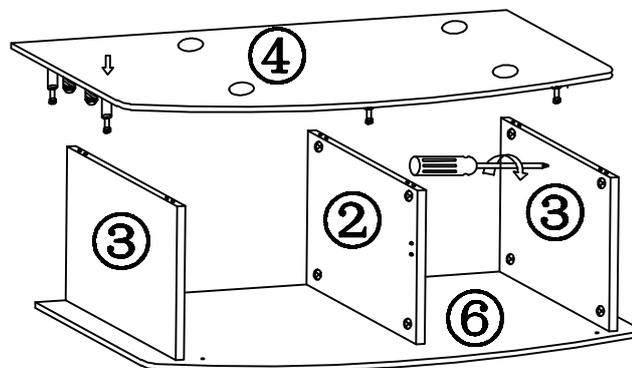Connect the middle panel ④
to the unit.
Tighten camlocks.
(Do not overtighten.)


**step6**

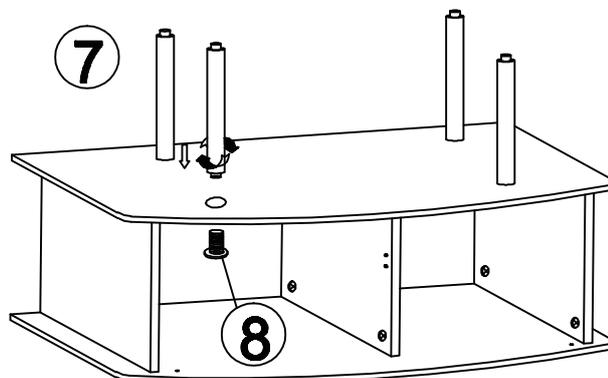Attach end caps ⑧ to the metal tubes ⑦
by turning in a clockwise direction.




step7

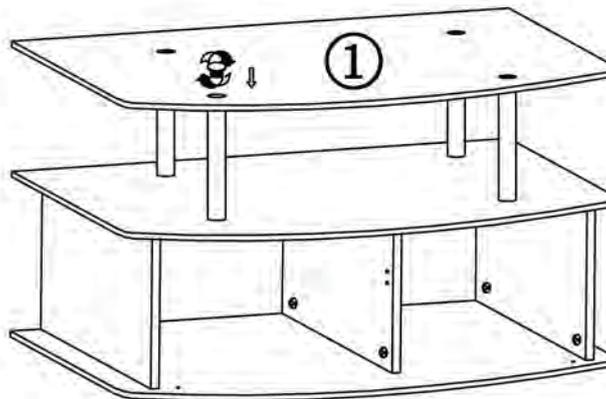Place top panel ① onto existing poles.
Attach end caps ⑧ to unit by turning in a clockwise direction.




step8

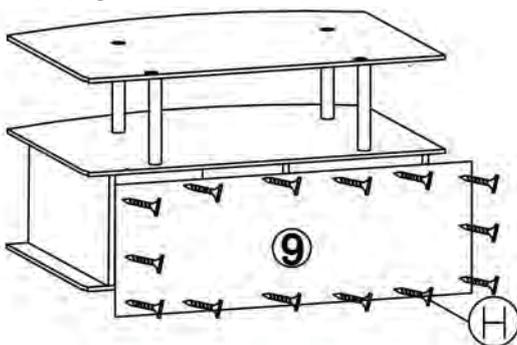Turn the TV stand around and attach the back panel ⑨ to the unit using the nails ④.




step9

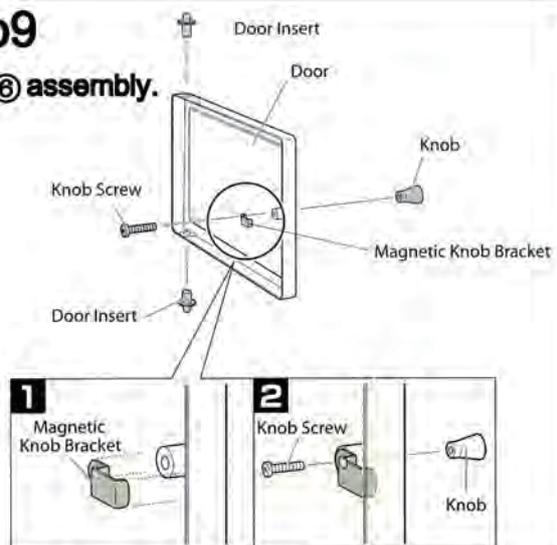Door ⑥ assembly.




step10

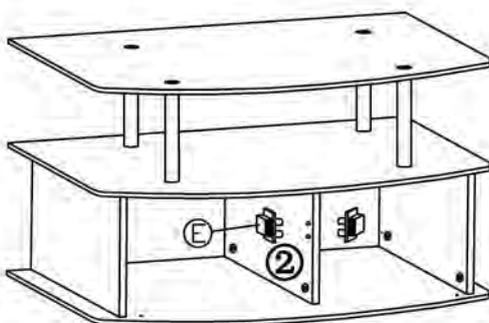Attach magnets ⑤ to the middle divider by inserting into pre-drilled holes.



step11

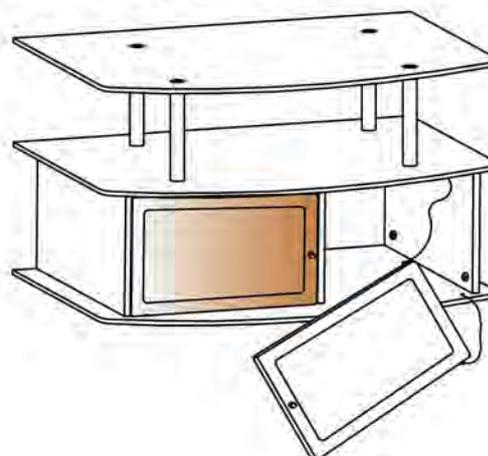Attach doors ⑥ to unit.



*Place one pin into either hole while gently compressing remaining pin with finger and sliding into remaining hole.