Assembly Instruction

LSF POWER RECLINING CHAIR W/ POWER HEADREST,USB PORT

ITEM NO.: 9509MGY-LRPWH

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.


COMPONENT LIST (CHAIR)


NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
В		1 PC	SEAT WITH POWER HEADREST WIRE

HARDWARE LIST

NO.	DRAWING	QTY	DESCRIPTION
1		1 PC	ADAPTOR
2		1 PC	PLUG WITH WIRE
3	26	1 PC	Y-CABLE

Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely. Connecting the wire from back rest to seat for power headrest.

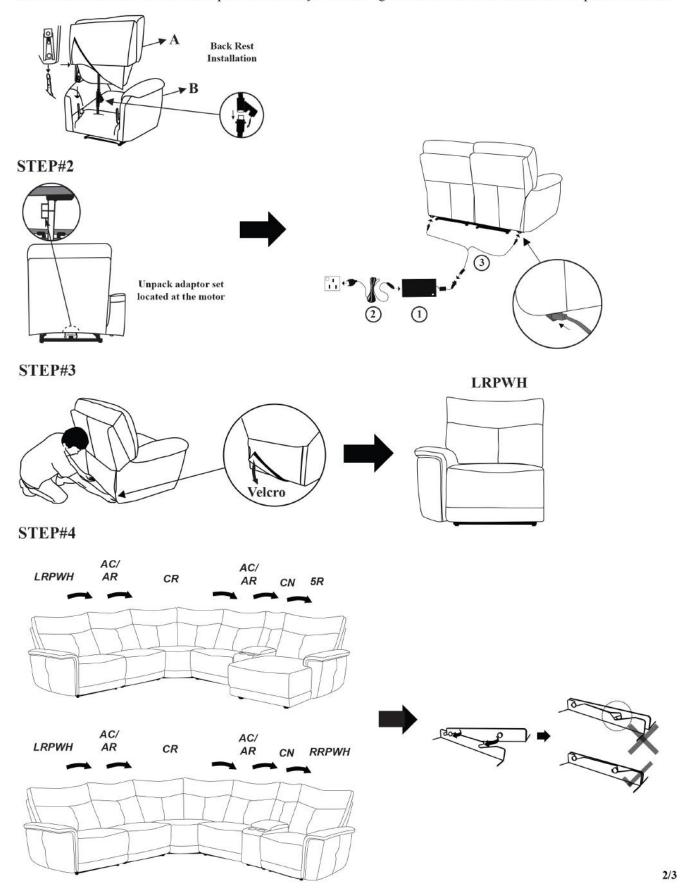

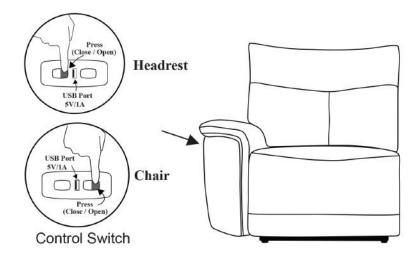

CARE INSTRUCTION FOR POLYESTER:

In order to maintain the original appearance of your polyester furniture, please follow below simple care procedure:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe polyester with professional cleanser.

MARNING

- Disconnect the electrical plug from the wall outlet before cleaning, moving, servicing or when not in use for an
 extended period of time.
- Plug directly into a wall outlet. Do not use an extension cord or adaptor.
- Check the condition of the power transformers, electrical cords, plugs and connectors monthly. Keeps the power adaptor and electrical cords away from heat sources. Never operate the unit with a damaged power adaptor, electrical cord, plug or connector.
- Before moving the product, please disconnect the electrical plug from the wall outlet and secure the mechanism to prevent unexpected opening or movement. Never move the product by the mechanism, legrest, handle, or reclining back.
- Do not attempt to disassemble or service the adaptor or motor. No serviceable parts are inside.
- Do not allow electrical cord to be pinched between moving parts or between the frame and the floor. Do not place cord under carpet or in location where it could become worn.
- Unplug the power cord immediately if you detect strange odors or fumes coming from the chair.


Assembly Instruction CONSOLE WITH STAINLESS STEEL CUPHOLDERS

ITEM NO.: 9509MGY-CN

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
В		1 PC	CONSOLE

Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

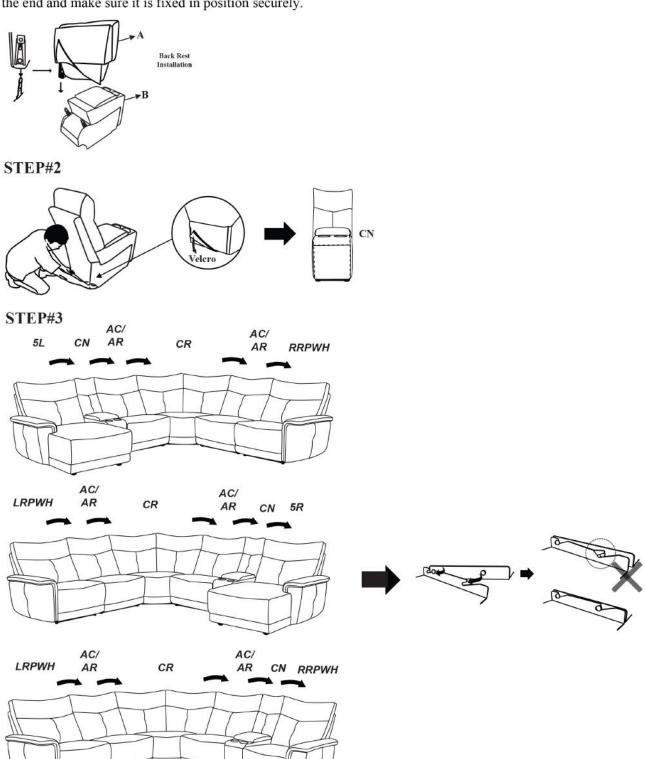

CARE INSTRUCTION FOR POLYESTER


- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe polyester with professional cleanser.

Assembly Instruction ARMLESS CHAIR ITEM NO.: 9509MGY-AC

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
В		1 PC	SEAT

Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

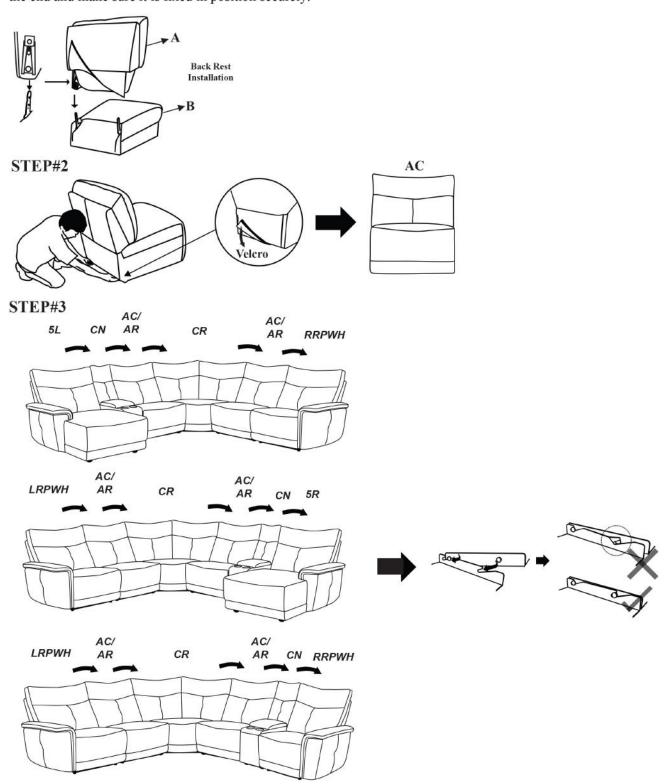

CARE INSTRUCTION FOR POLYESTER:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe polyester with professional cleanser.

Assembly Instruction

CORNER SEAT ITEM NO.: 9509MGY-CR


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

COMPONENT LIST (CHAIR)

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	LSF CORNER BACK REST
В		1 PC	RSF CORNER BACK REST
C		1 PC	CORNER SEAT


HARDWARE LIST

NO.	DRAWING	QTY	DESCRIPTION
1		1 PC	EXTENSION CORD
2	1	1 PC	WRENCH
3		1 PC	ALLEN KEY

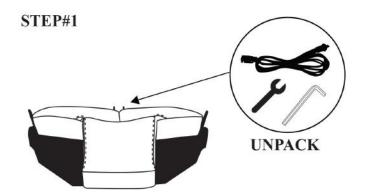





STEP#3

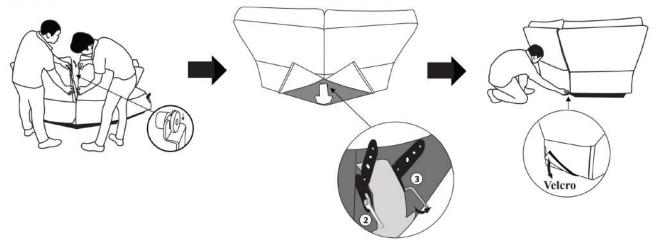


STEP#4

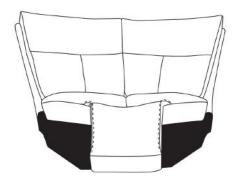




REMARK:

*Adaptor set is packed in 5L for sectional combination with RRPWH.




REMARK:

*Adaptor set and Y cable are packed in LRPWH for sectional combination with RRPWH.

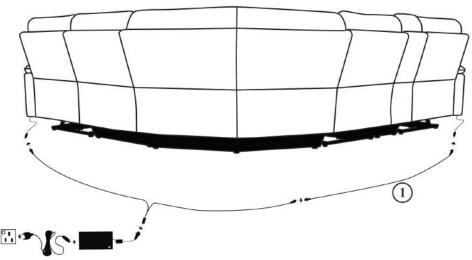

STEP#6

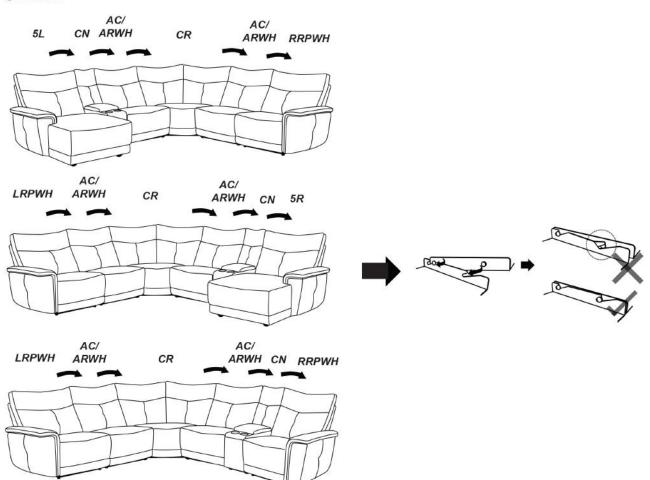

CARE INSTRUCTION FOR POLYESTER:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe polyester with professional cleanser.


Assembly Instruction


ARMLESS RECLINING CHAIR ITEM NO.: 9509MGY-AR

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.


NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
В		1 PC	SEAT WITH WIRE

Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

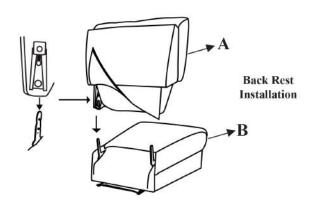

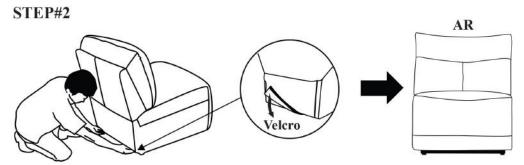

STEP#3

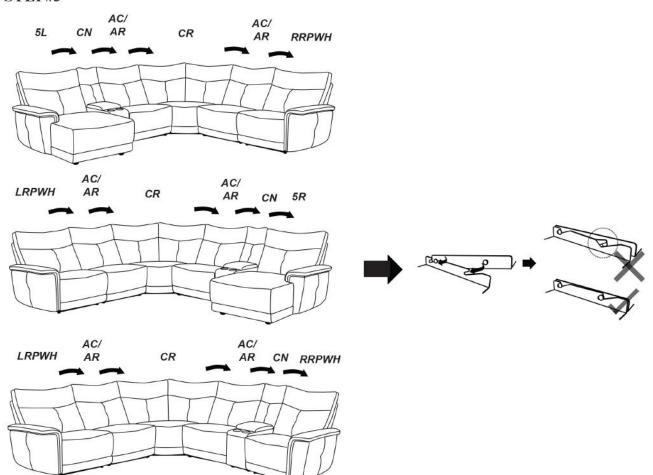



CARE INSTRUCTION FOR POLYESTER:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe polyester with professional cleanser.


Assembly Instruction RSF CHAISE

ITEM NO.: 9509MGY-5R


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
В		1 PC	SEAT

Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

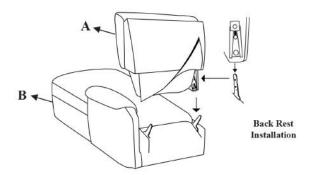

STEP#2

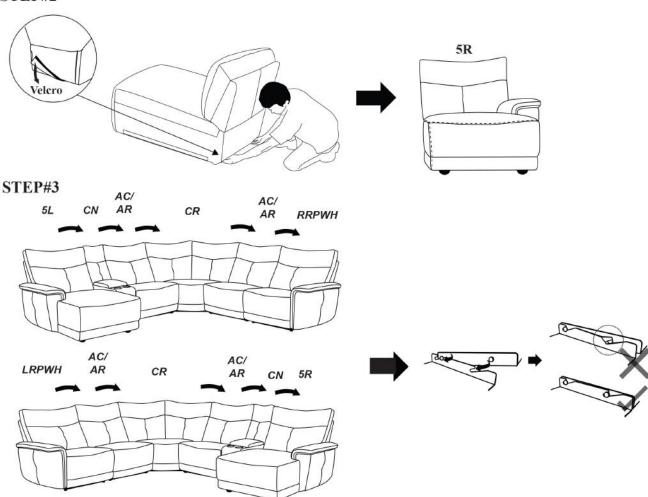

CARE INSTRUCTION FOR POLYESTER:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.
- Wipe polyester with professional cleanser.