








BUTLER

Assembly Instructions
Style Number 1214146

SPECIALTY COMPANY
8200 SOUTH CHICAGO AVE., CHICAGO, IL 60617



PACKAGED

- | | |
|--|--|
| (A) 1-  1pc | (C) 3-  $\frac{1}{8}$ "X1- $\frac{1}{4}$ " ALLEN BOLTS 8pcs |
| (B) 2-  1pc | (D) 4-  $\frac{1}{8}$ " LOCK WASHER 8pcs |
| | (E) 5-  $\frac{1}{8}$ "X16mm FLAT WASHER 8pcs |
| | (F) 6-  5MM ALLEN WRENCH 1pc |

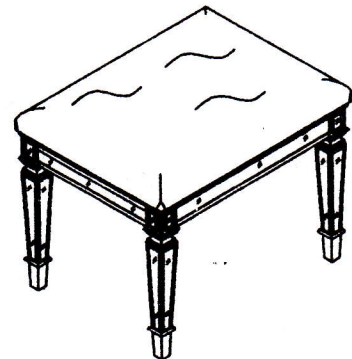


Read all instructions before starting assembly.


Step#1 Remove all the contents from the package checking that all of the components listed in "Packaged" are included. Prepare a flat, protected work surface where the product can be assembled.

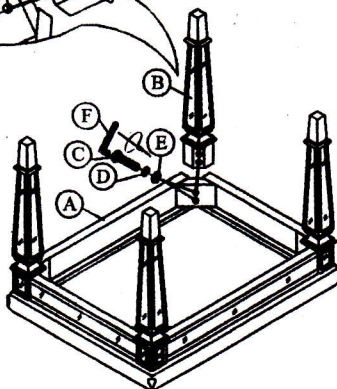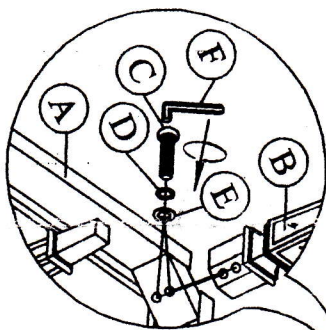

step#1

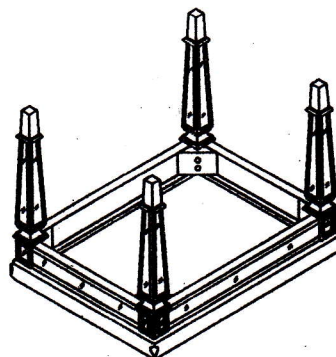

step#2

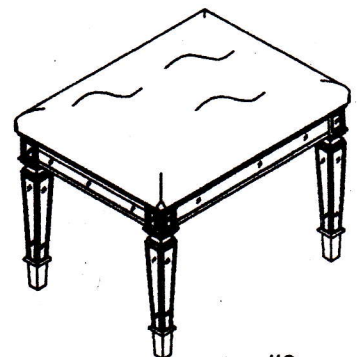

step#3

(*)Caution: DO NOT OVERTIGHTEN.

In any correspondence regarding this product, please include the complete Butler identification number located on