



Welland

Pentagon Corner Shelf


Package Content

2 x Corner Shelf 6 x drywall anchor 6 x Screws

Tools Needed

Hammer Power Drill Drill Bit Small Level

INSTRUCTION

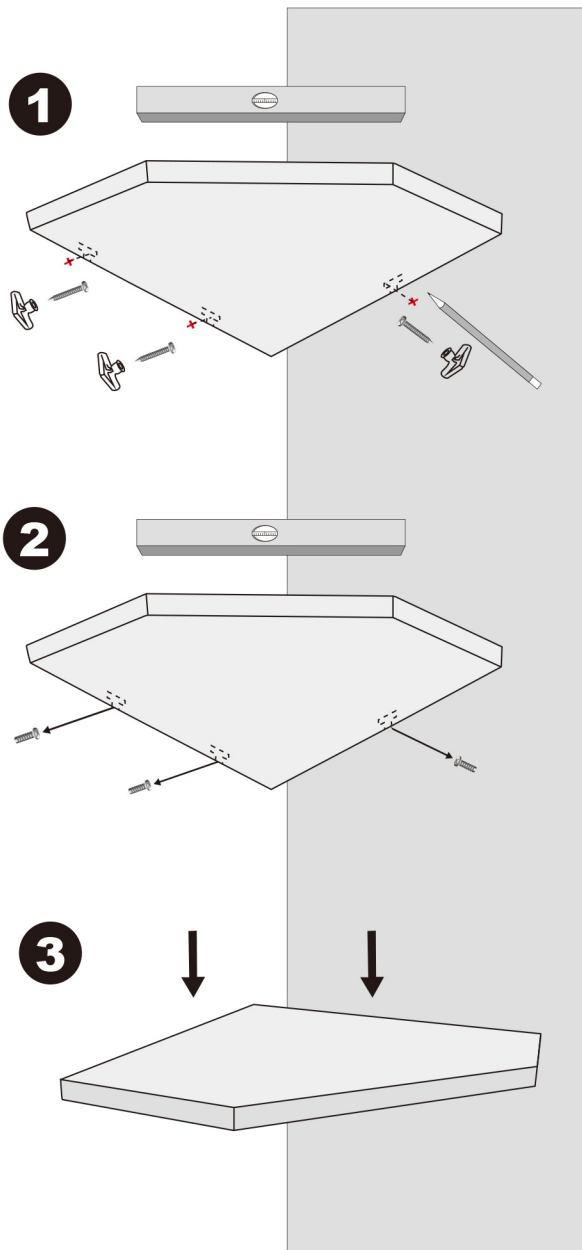

Decide where to hang your shelf. Hold the shelf against the wall and place the level on top of each shelf to make sure it is level. Mark holes with a pencil.

Use a screwdriver or power drill to drill holes into wall over pencil marks. Grab butterfly bolt and make it flat by pressing in on the center you're going to hold it and nail it into your wall. Put screws right to the center of butterfly bolt and screw it into the anchor holes until only about a 1/4" is outside of the wall.

Put shelf slots over screws and press slightly to secure it. Finish!

Please install according to the instruction. Welland LLC and its affiliates are not responsible for injury or damage resulting from improper installation or use.

Email us at customerservice@wellandllc.com

* The emission of the chemicals listed in Prop 65 in this product has been tested to meet the standard of CARB ATCM.