


PULSAR 09 Portable Outdoor Shower with Garden Hose Attachment


Installation Instructions

1

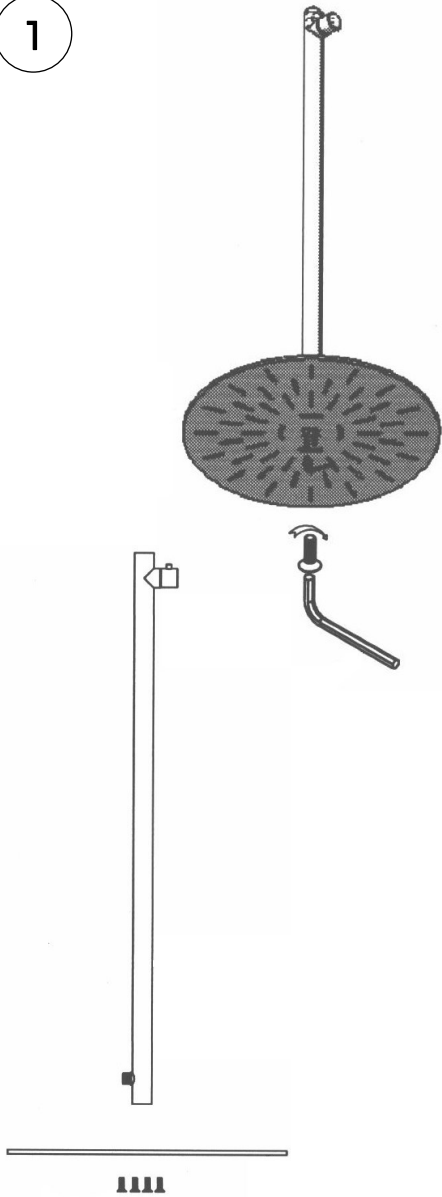


Mount the bottom shower tube to the base plate using the (4) screws.

2

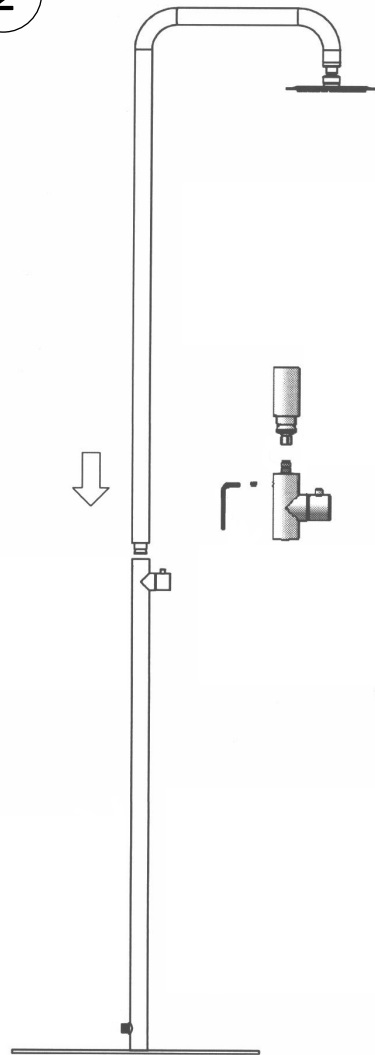


Assemble the shower by inserting the upper tube into the lower tube. Connect the water hose inside and tighten the set screw on the back.

3

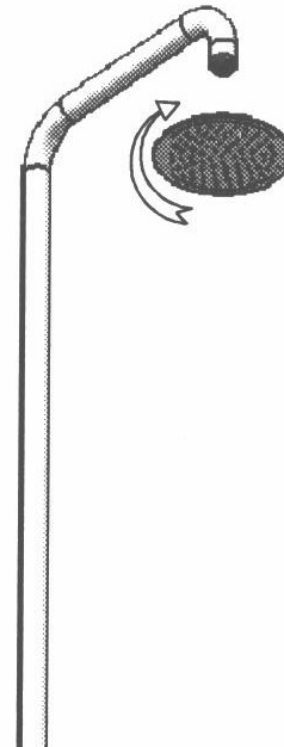

Install the rain shower head.

4

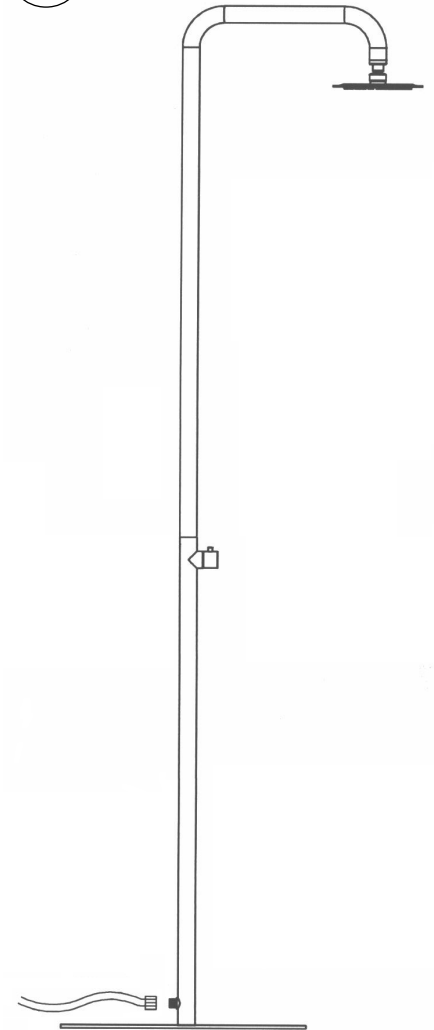

Connect your garden hose, using the included adapter if needed.