

Scan to watch the installation video  
<http://delivr.com/288f6>



# Blind Corner Swingout Installation Instructions for the BCSO2 Series



(Left Hand Illustrated)

## IMPORTANT:


Before you begin, make sure you familiarize yourself with all the parts and fully read the instructions.

## CUSTOMER SERVICE:

Toll free customer help line available weekdays between 7:00am and 6:00pm Central Time at 800-463-0660.

## TOOLS NECESSARY:

Screw gun, Phillips screwdriver, tape measure, square and torpedo level. NOTE: If screw gun has a clutch, set to lowest setting so as not to over tighten and/or strip screws.

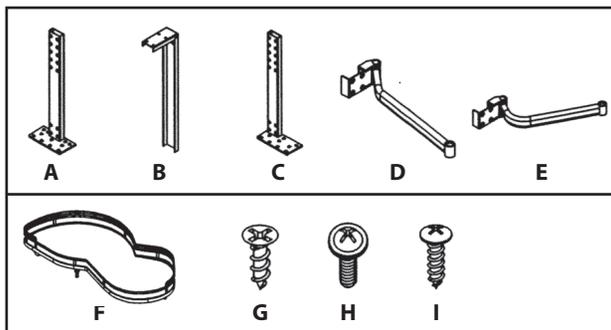

A	Center Support	1 X
B	Telescopic Support Extension	2 X
C	Corner Support	1 X
D	Center Support Arm	2 X
E	Corner Support Arm	2 X
F	Swingout Tray	2 X
G	#6 x 3/4" Flat Head Phillips Wood Screw	20 X
H	#10 x 5/8" Washer Head Phillips Machine Screw	20 X
I	#6 x 5/8" Pan Head Phillips Wood Screw	8 X

	STEP 1	STEP 2	STEP 3																																							
	<p>Slide both of the Telescopic Support Extensions into the top of the Center Support and Corner Support. Loosely secure in top two holes with (2) #10 x 5/8" washer head machine screws per support.</p>	<p>Install both Center Support Arms to the Center Support as show above with (4) #10 x 5/8" washer head machine screws per arm and tighten securely. The upper shelf has three possible shelf heights, make note of your selection and match it in step 3.</p>	<p>Install both Corner Support Arms to the Corner Support as show above with four (4) #10 x 5/8" washer head machine screws per arm and tighten securely. The Corner Support is marked with an L for left handed models and an R for right-handed models.</p>																																							
	STEP 4																																									
Face Frame	<table border="1"> <thead> <tr> <th>Faceframe</th> <th>A</th> <th>C</th> </tr> </thead> <tbody> <tr> <td rowspan="2">15"</td> <td>inch</td> <td>3/4" 18-1/2"</td> </tr> <tr> <td>mm</td> <td>19 470</td> </tr> <tr> <td rowspan="2">18"</td> <td>inch</td> <td>3/4" 21-1/2"</td> </tr> <tr> <td>mm</td> <td>19 546</td> </tr> <tr> <td rowspan="2">21"</td> <td>inch</td> <td>3/4" 24-1/2"</td> </tr> <tr> <td>mm</td> <td>19 622</td> </tr> </tbody> </table>		Faceframe	A	C	15"	inch	3/4" 18-1/2"	mm	19 470	18"	inch	3/4" 21-1/2"	mm	19 546	21"	inch	3/4" 24-1/2"	mm	19 622	<th>Frameless</th> <td colspan="2"> <table border="1"> <thead> <tr> <th>Frameless</th> <th>B</th> <th>C</th> </tr> </thead> <tbody> <tr> <td rowspan="2">15"</td> <td>inch</td> <td>5/16" 18-1/2"</td> </tr> <tr> <td>mm</td> <td>8 470</td> </tr> <tr> <td rowspan="2">18"</td> <td>inch</td> <td>5/16" 21-1/2"</td> </tr> <tr> <td>mm</td> <td>8 546</td> </tr> <tr> <td rowspan="2">21"</td> <td>inch</td> <td>5/16" 24-1/2"</td> </tr> <tr> <td>mm</td> <td>8 622</td> </tr> </tbody> </table> </td>	Frameless	<table border="1"> <thead> <tr> <th>Frameless</th> <th>B</th> <th>C</th> </tr> </thead> <tbody> <tr> <td rowspan="2">15"</td> <td>inch</td> <td>5/16" 18-1/2"</td> </tr> <tr> <td>mm</td> <td>8 470</td> </tr> <tr> <td rowspan="2">18"</td> <td>inch</td> <td>5/16" 21-1/2"</td> </tr> <tr> <td>mm</td> <td>8 546</td> </tr> <tr> <td rowspan="2">21"</td> <td>inch</td> <td>5/16" 24-1/2"</td> </tr> <tr> <td>mm</td> <td>8 622</td> </tr> </tbody> </table>		Frameless	B	C	15"	inch	5/16" 18-1/2"	mm	8 470	18"	inch	5/16" 21-1/2"	mm	8 546	21"	inch	5/16" 24-1/2"	mm	8 622
Faceframe	A	C																																								
15"	inch	3/4" 18-1/2"																																								
	mm	19 470																																								
18"	inch	3/4" 21-1/2"																																								
	mm	19 546																																								
21"	inch	3/4" 24-1/2"																																								
	mm	19 622																																								
Frameless	B	C																																								
15"	inch	5/16" 18-1/2"																																								
	mm	8 470																																								
18"	inch	5/16" 21-1/2"																																								
	mm	8 546																																								
21"	inch	5/16" 24-1/2"																																								
	mm	8 622																																								
	<p>Using the chart and diagram, with tape measure and square, lightly mark mounting locations inside the cabinet for the appropriate tray size ordered. For face-framed cabinets the supports are designed to be pulled up tight behind the face-frame.</p>																																									

# Blind Corner Swingout

## Installation Instructions for the BCSO2 Series

### STEP 5




Firmly secure the Center Support on the open side of cabinet using (10) #6 x 3/4" flat head Philips wood screws.

### STEP 6



Firmly secure the Corner Support on the hinge side using (10) #6 x 3/4" flat head Philips wood screws.

### STEP 7

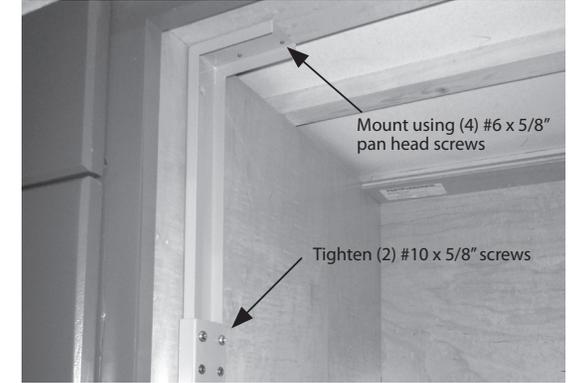


Lift the Telescopic Support Extensions until they are firmly against the bottom of the counter top or cabinet supports and tighten the (2) #10 x 5/8" washer head machine screws in the middle of the arms. Level arms and mark mounting locations. Then firmly secure using (4) #6 x 5/8" pan head wood screws in each top mounting frame bracket.


### STEP 8



Position the lower swing arms outside the cabinet and install bottom tray into the pivots in each arm as shown above. Repeat for top tray and test motion of trays.

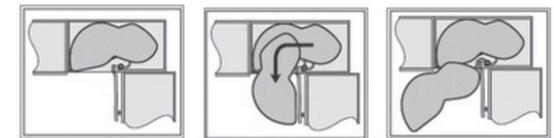

Left Swing

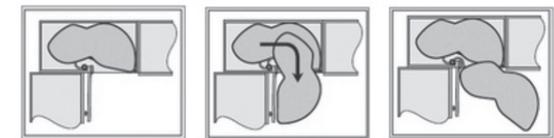

Right Swing