

## **Assembly Instruction**


INSTRUCTION DE MONTAGE MONTAGEANLEITUNG SAMLEVEJLEDNING

MAKE SURE THE LETTERS MATCH BEFORE ASSEMBLING NEED ASSEMBLY ASSISTANCE? CALL US AT 866-814-8325


Code

**SST 45** 




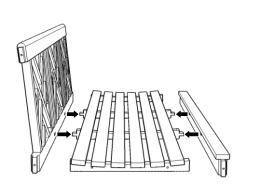

2

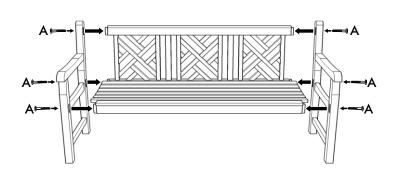

Hardware




BOLT 2,36' (6 Pcs)






SCREW (4 Pcs)


3

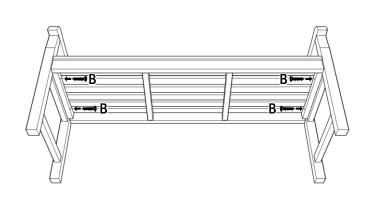

4

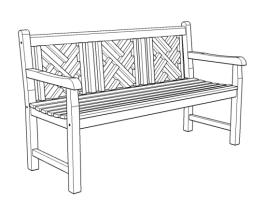

Tool



Socket Wrench 4m

**Total Section** 

5 Section

Make sure to use Gorilla Glue (Included) on all wood joints before assembly