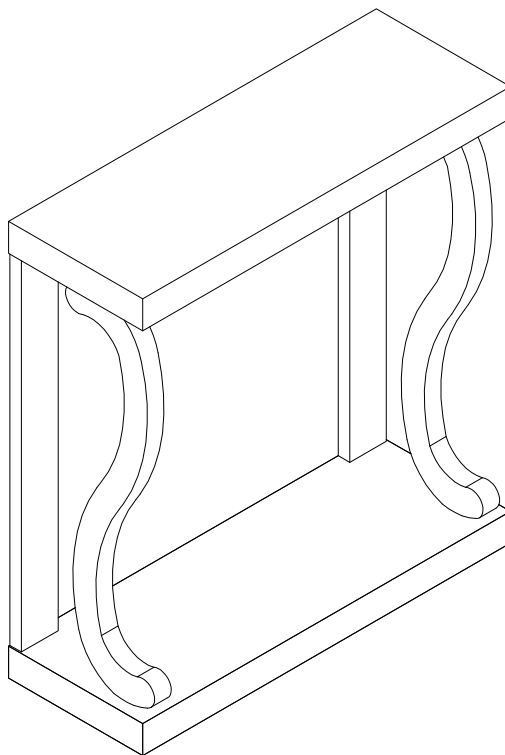


CONVENIENCE CONCEPTS

121809 121809W 121809MG

NEWPORT GRAMERCY CONSOLE TABLE



Assembly instructions

We have designed our furniture with you, the customer in mind. Our clear space easy to follow, step by step instructions will guide you through the project from start to finish.

Feel confident that this will be a fun and rewarding project. The final product will be a quality **piece** of furniture that will go together smoothly and give you years of enjoyment.



Please do not return to the store

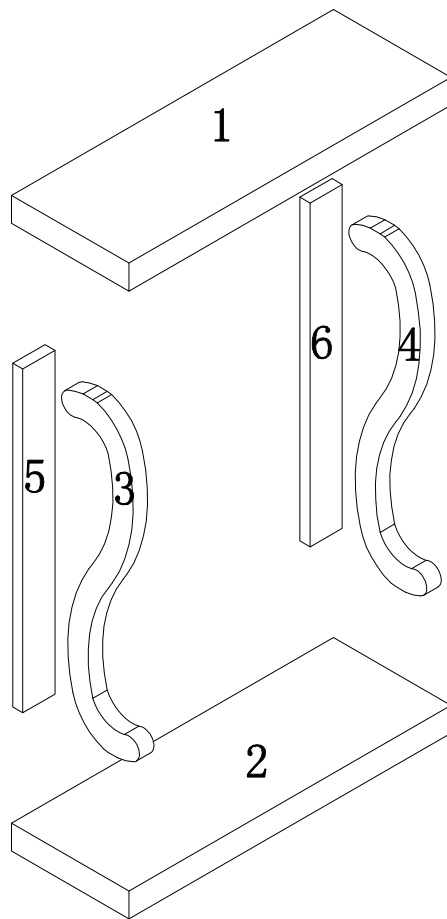
Broken or missing Hardware?

Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at parts@convenience-concepts.com

PARTS IDENTIFICATION

ITEM#:121809 121809W 121809MG



















Please count and verify all parts before assembly



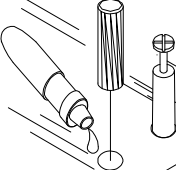
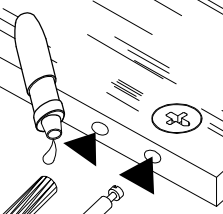
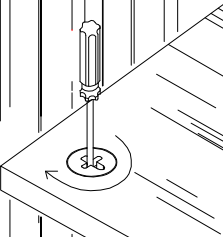
(1) Top Panel	1pc	(5) Left Support	1pc
(2) Bottom Panel	1pc	(6) Right Support	1pc
(3) Left Leg	1pc		
(4) Right Leg	1pc		

HARDWARE IDENTIFICATION

ITEM#:121809 121809W 121809MG

A		Allen Wrench	M4	1pc
B		Allen Bolt	ϕ6x85	4pcs
C		Barrel Nut	ϕ10x15	4pcs
D		Full thread Rod	ϕ8x60	4pcs
E		Jam Washer	M8	4pcs
F		Nut and Washer	M8	4pcs
G		Dowel	ϕ8x25	8pcs
H		Wrench	M13	1pc
I		Bracket		1pc
J		Screw	ϕ4x25	1pcs
K		Wall Screw	ϕ5x40	1pc
L		Plastic Anchor	ϕ8x40	1pc
M		Small Sticker	ϕ20	4pcs
N		Large Sticker	ϕ45	4pcs
O		Foot Pin		4pcs
P		Glue	Glue: For securing please apply to wood dowel first before inserting into panel	1pc

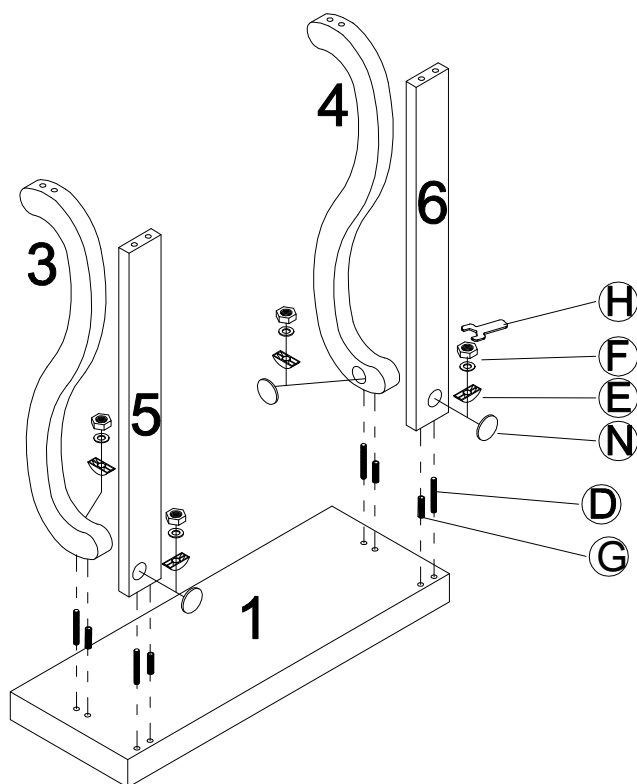
Assembling the unit with camlocks and wood dowels.

				
Insert camlock, camlock must face bolt hole	Gently screw cam dowel into the threaded anchor	lightly glue one end of wood dowel and tap into hole.	lightly glue dowel and connect to second panel by inserting dowels into holes	Gently screw the cam clockwise into locked position. Do not overtighten.

Step1

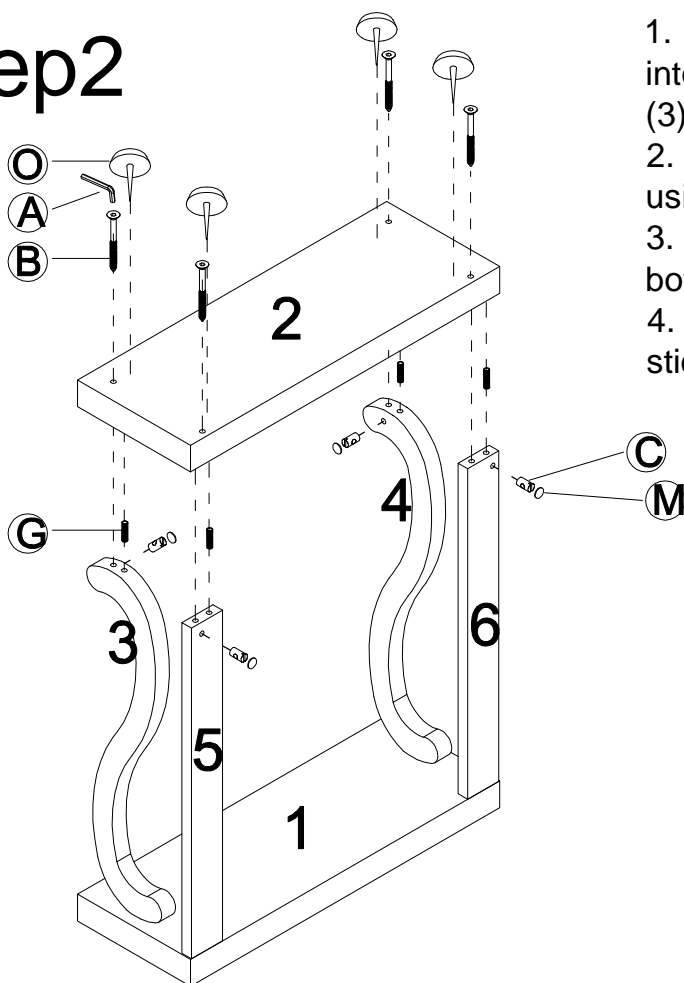
PAGE: 4 of 5

Note: * Place item on a soft surface such as carpet or a towel.



1. Insert dowels(G) and screw full threaded rod(D) into top panel(1).
2. Screw jam nut(E) and nut and washer(F) onto full threaded rod(D) using wrench(H). This will be done with left and right supports(5) and (6) along with left and right legs(3) and (4).
3. Cover holes with large stickers(N).

Step2



1. Insert barrel nuts(C) and dowels(G) into back supports(5) and (6), and legs (3) and (4) with thread facing holes.
2. Connect bottom panel(2) to assembly using allen bolt(B) and allen wrench(A).
3. Gently tap foot pins(O) into bottom of bottom panel(2).
4. Cover barrel nuts with small stickers(M).

Step3

PAGE: 5 of 5

*Optional: Recommended mark hole before screwing into wall to ensure proper placement

1. Attach bracket (I) to top panel (1) using screws (J) as shown.
2. Place unit against wall and mark bracket hole location. Drill hole and tap in anchor (L).
3. Attach wall screw (K) through bracket (I) into plastic anchor (L).

Enjoy your console table!

