




Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325

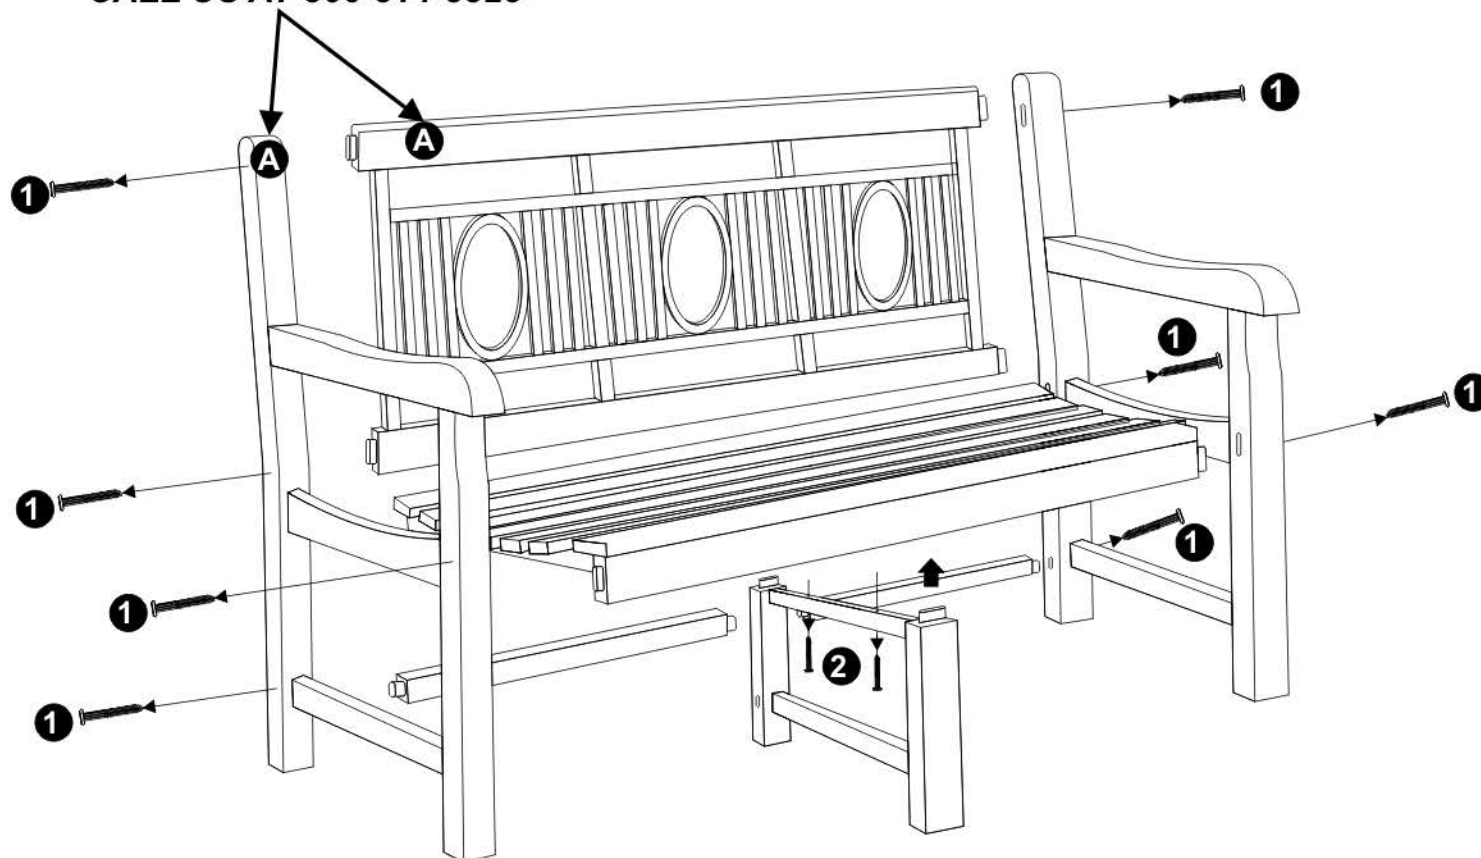

*Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly*

Code

WJ130

Hardware



1.F.bolt 55mm (8 Pcs)
2.F.bolt 90mm (2 Pcs)

Tool



Socket Wrench 4m/m Ht

Total Section

7 Section