



ASSEMBLY INSTRUCTION

Corner Desk w/Storage Credenza


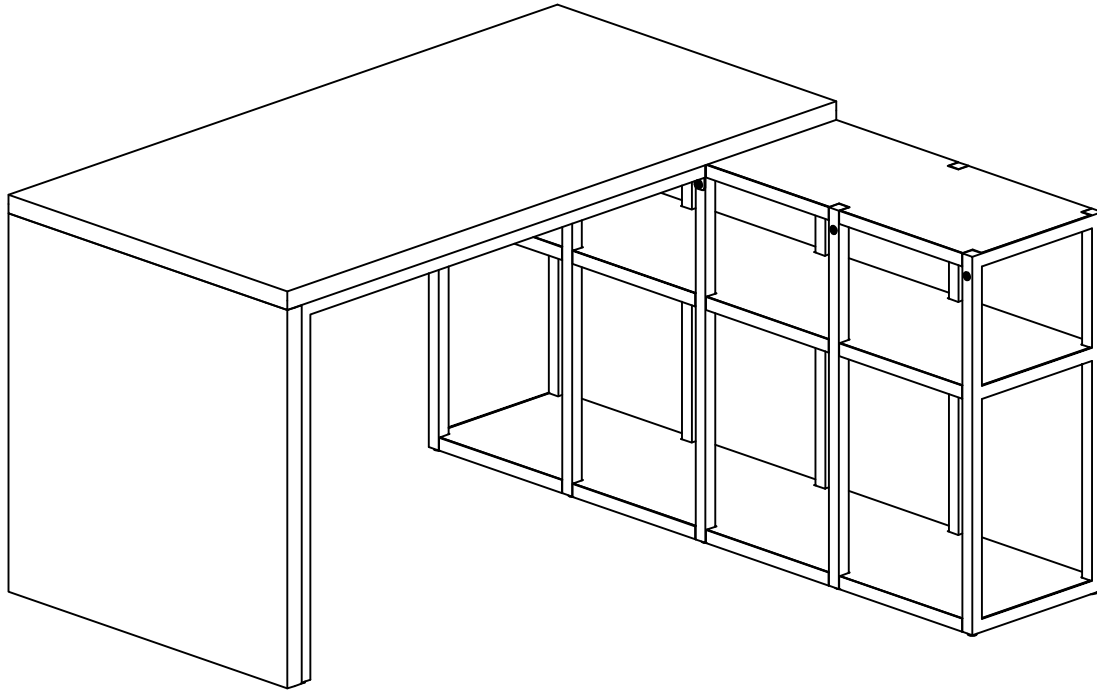


REPLACEMENT PARTS



Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at " www.boltonfurniture.com "

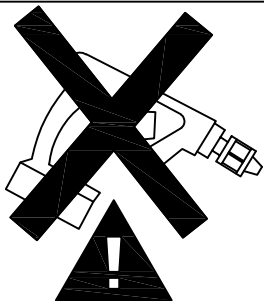

. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
. Please assemble on a clean soft surface to avoid damage.

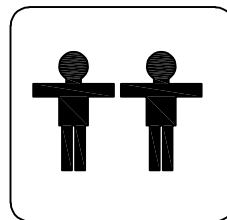


Tools Required

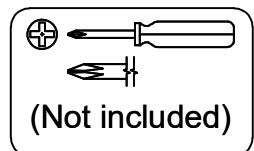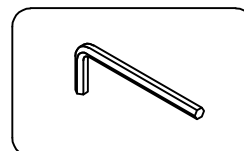


www.boltonfurniture.com


Part list - Corner Desk w/ Storage Credenza

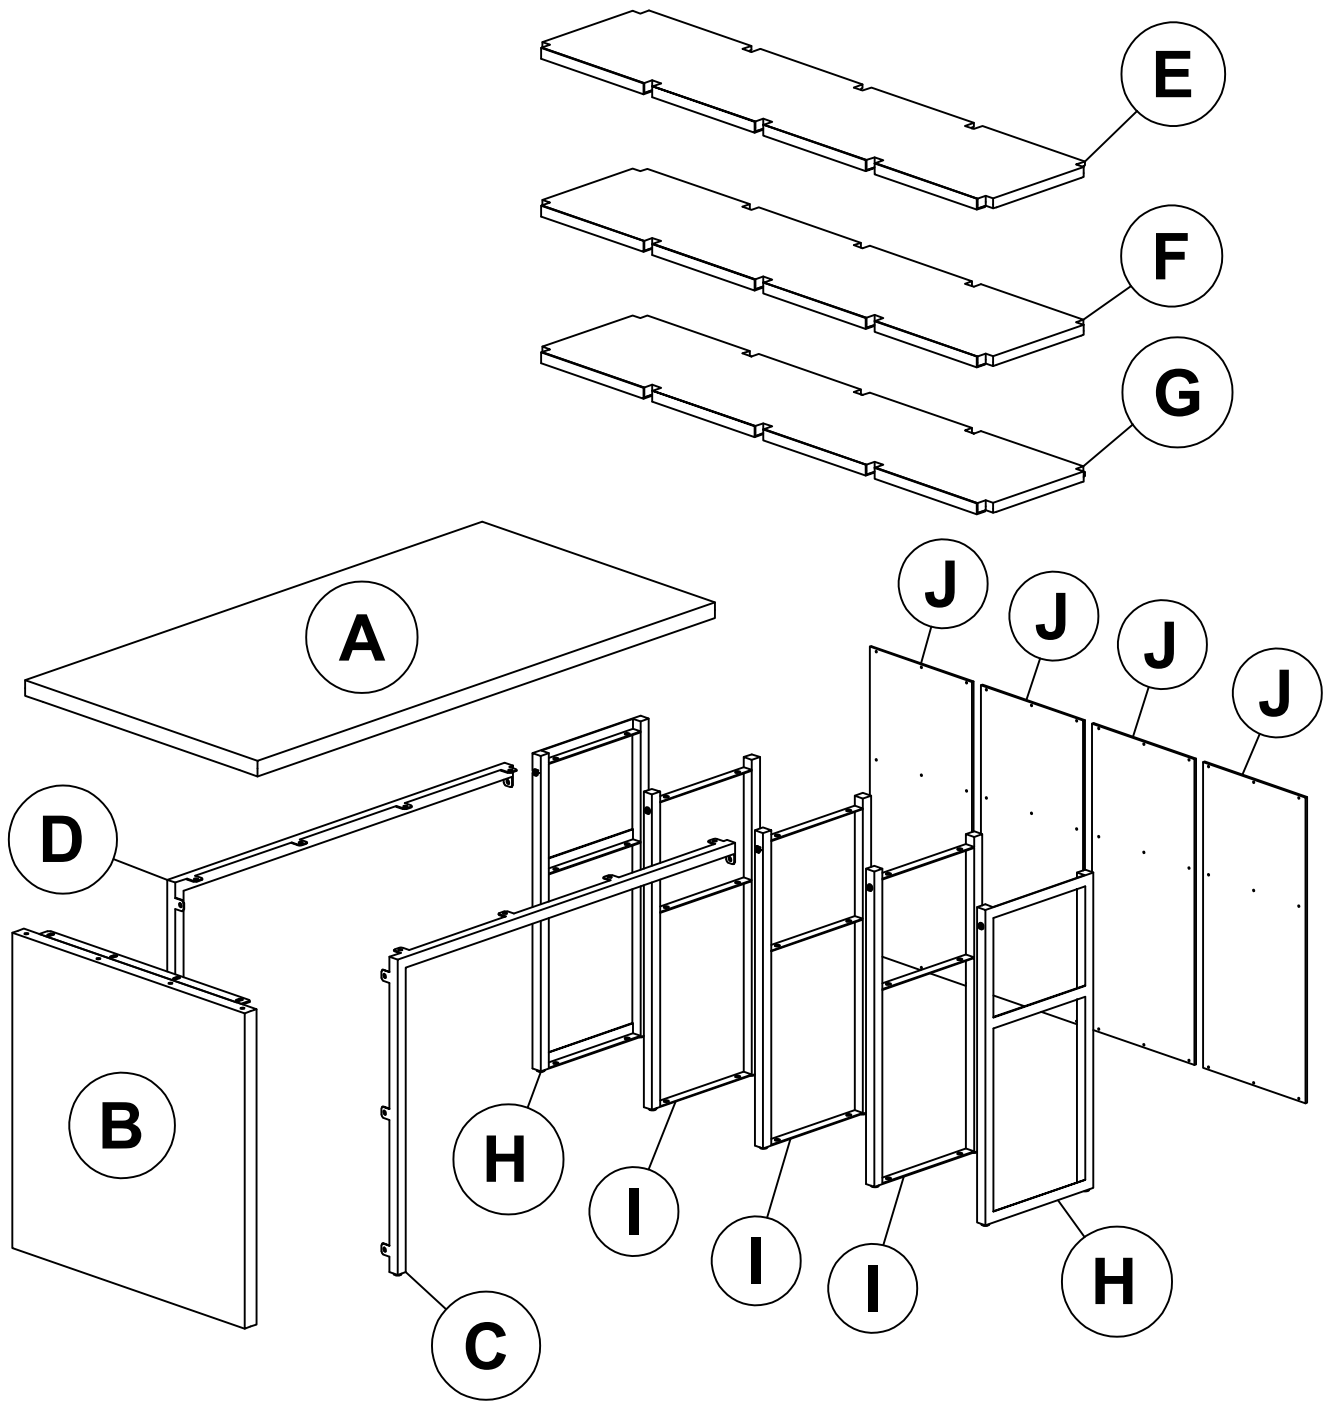



Identifying the hardware-Identify the hardware using the illustrations below


K  **34**
M6*20mm Bolt

L  **14**
M6*20mm Hanger Bolt

M  **04**
Ø10*40


N  **36**
Ø4*15mm

O  **02**
Ø4*15mm


P  **02**

www.boltonfurniture.com

Step 01

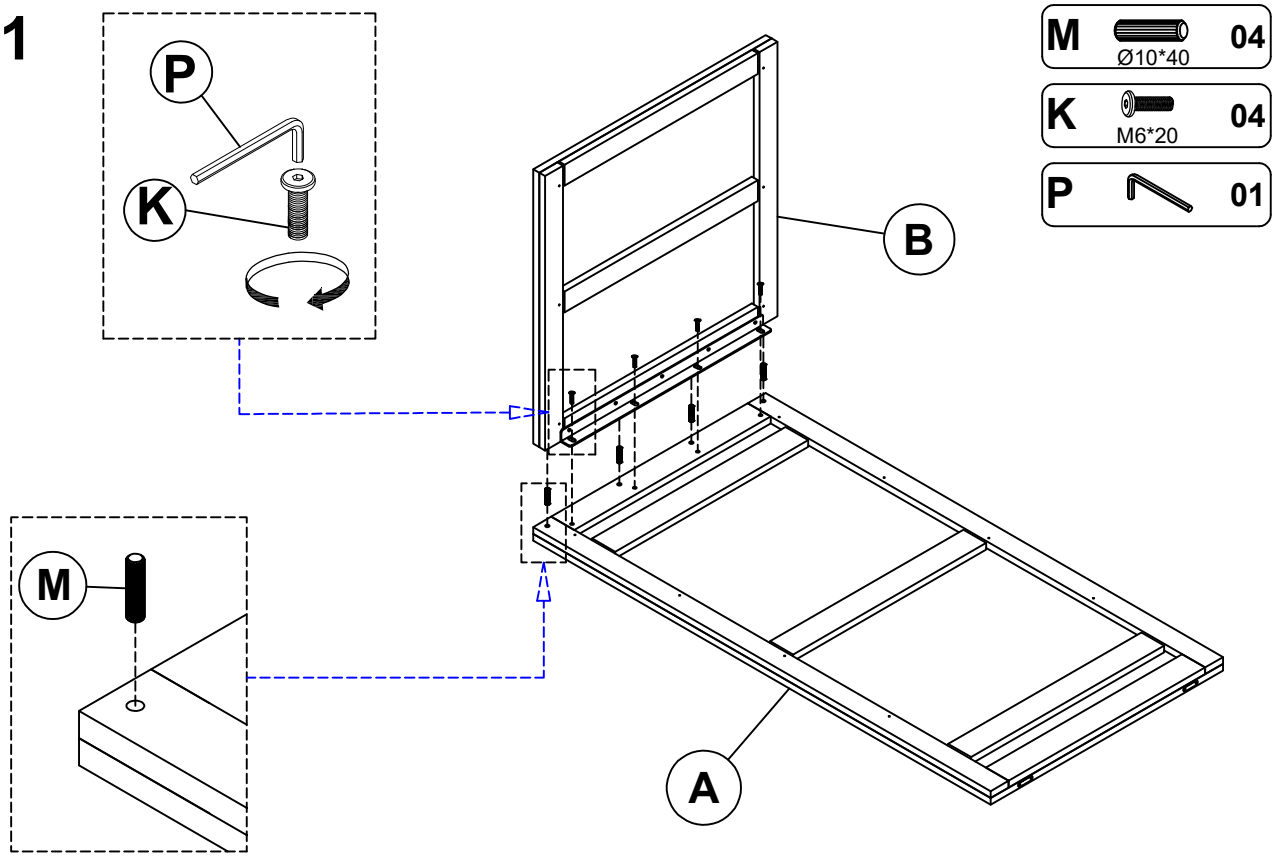


Step 02

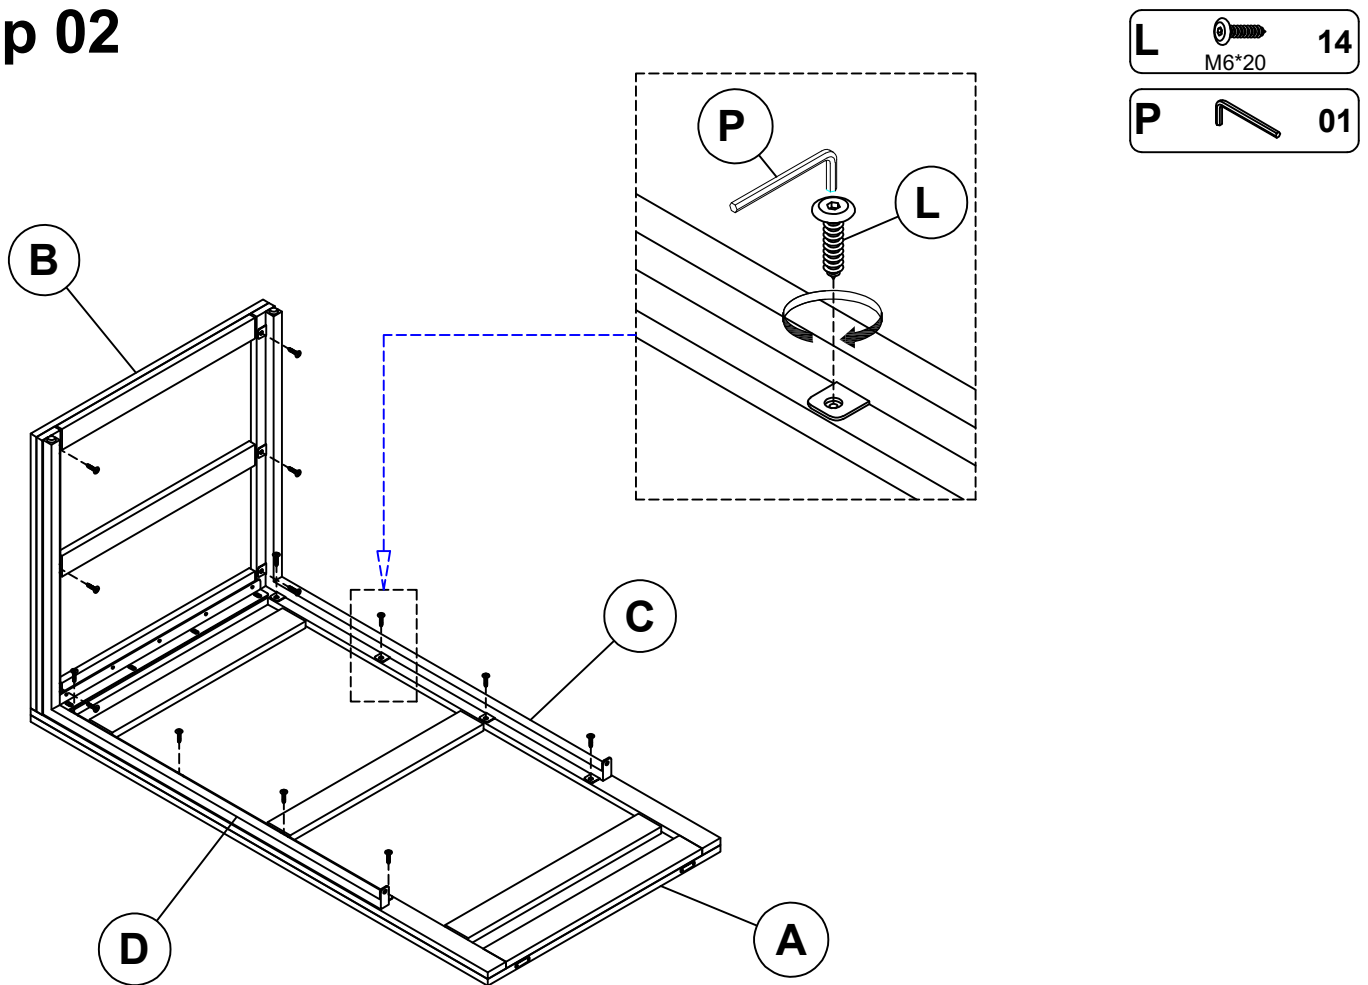

Step 03

K  **08**
M6*20


P  **01**

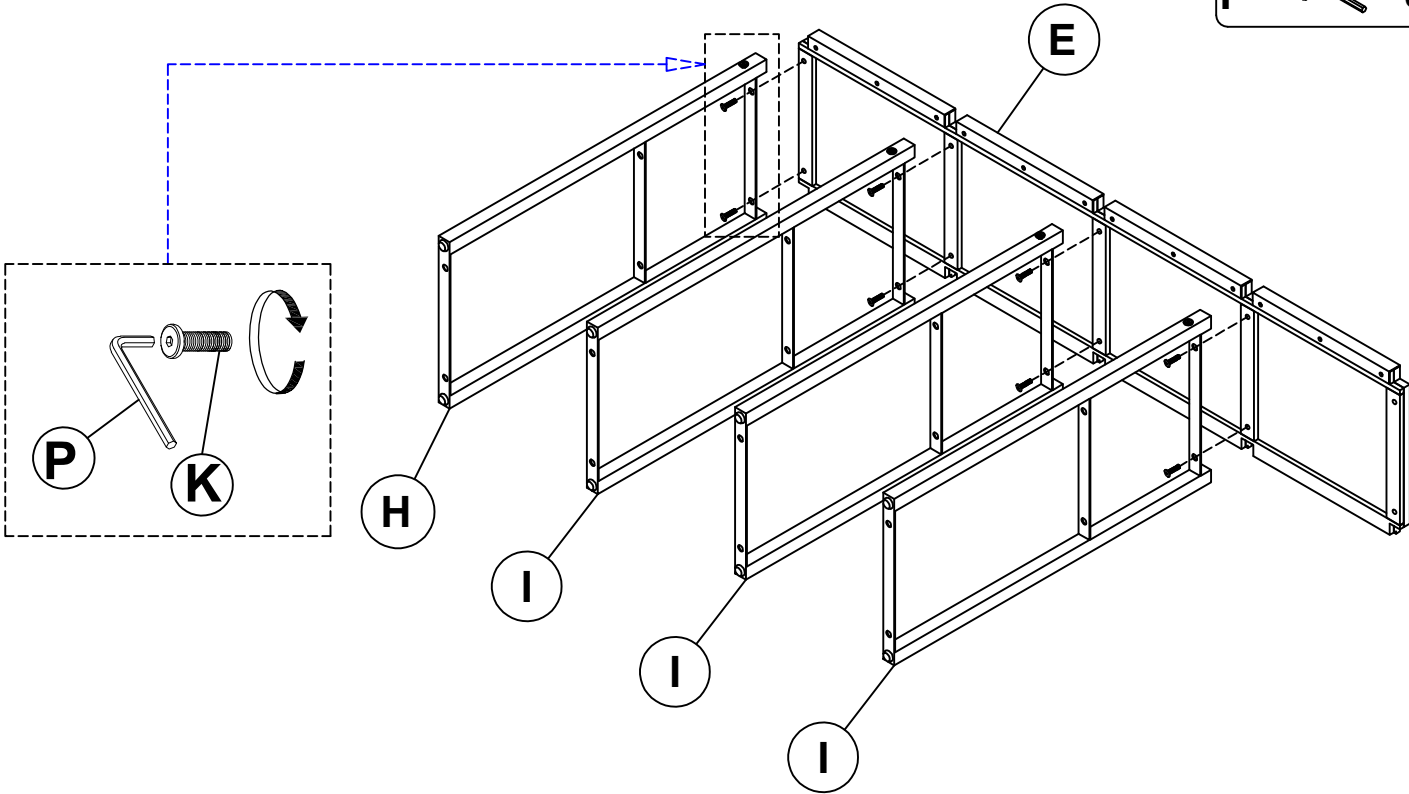


Step 04

K  **08**
M6*20


P  **01**

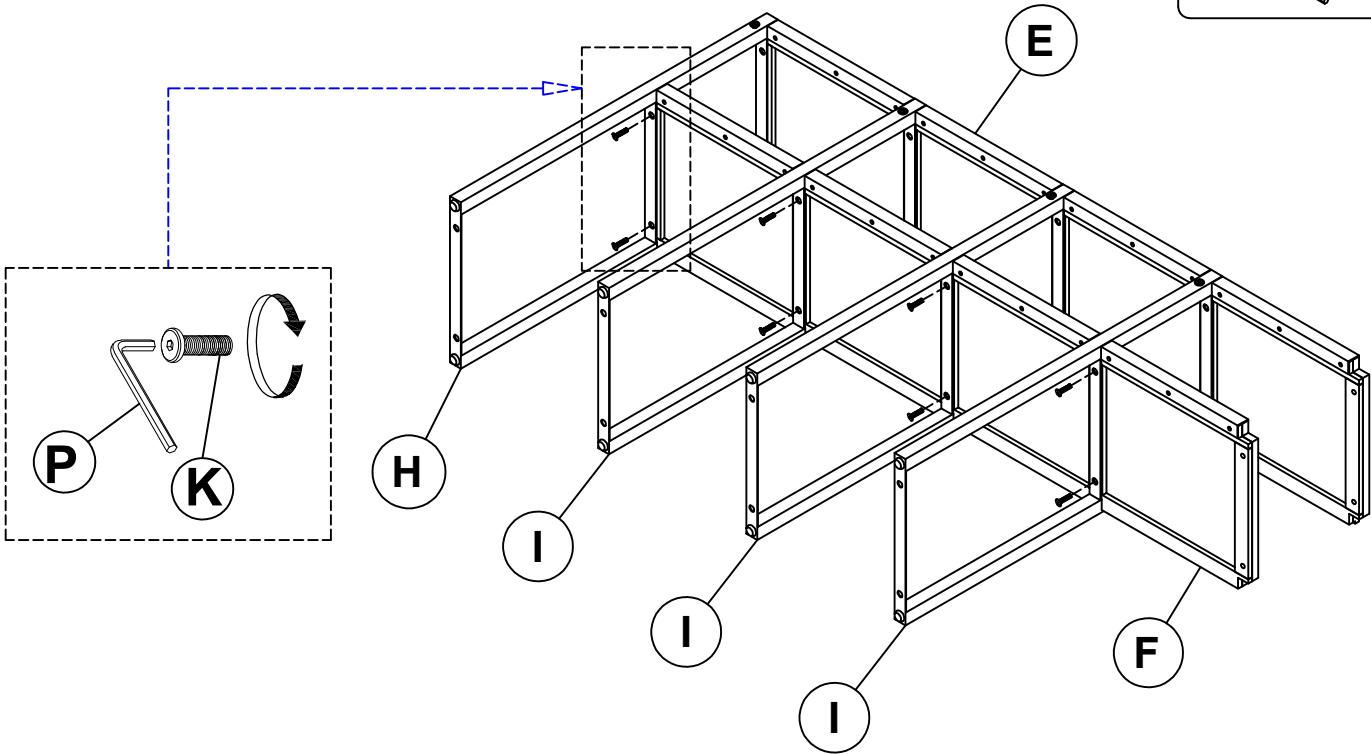


Step 05


K  **08**
M6*20


P  **01**

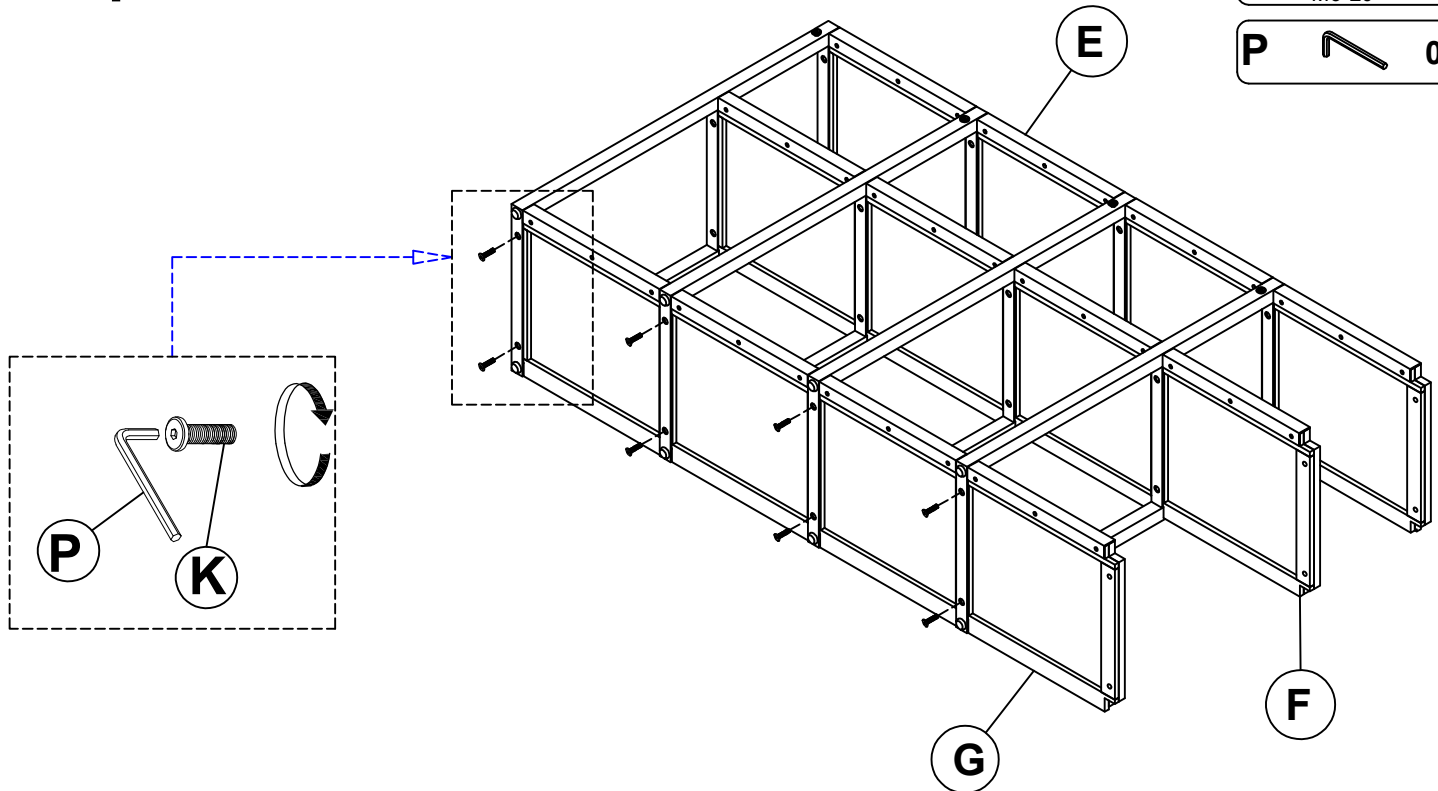


Step 06


K  **06**
M6*20


P  **01**

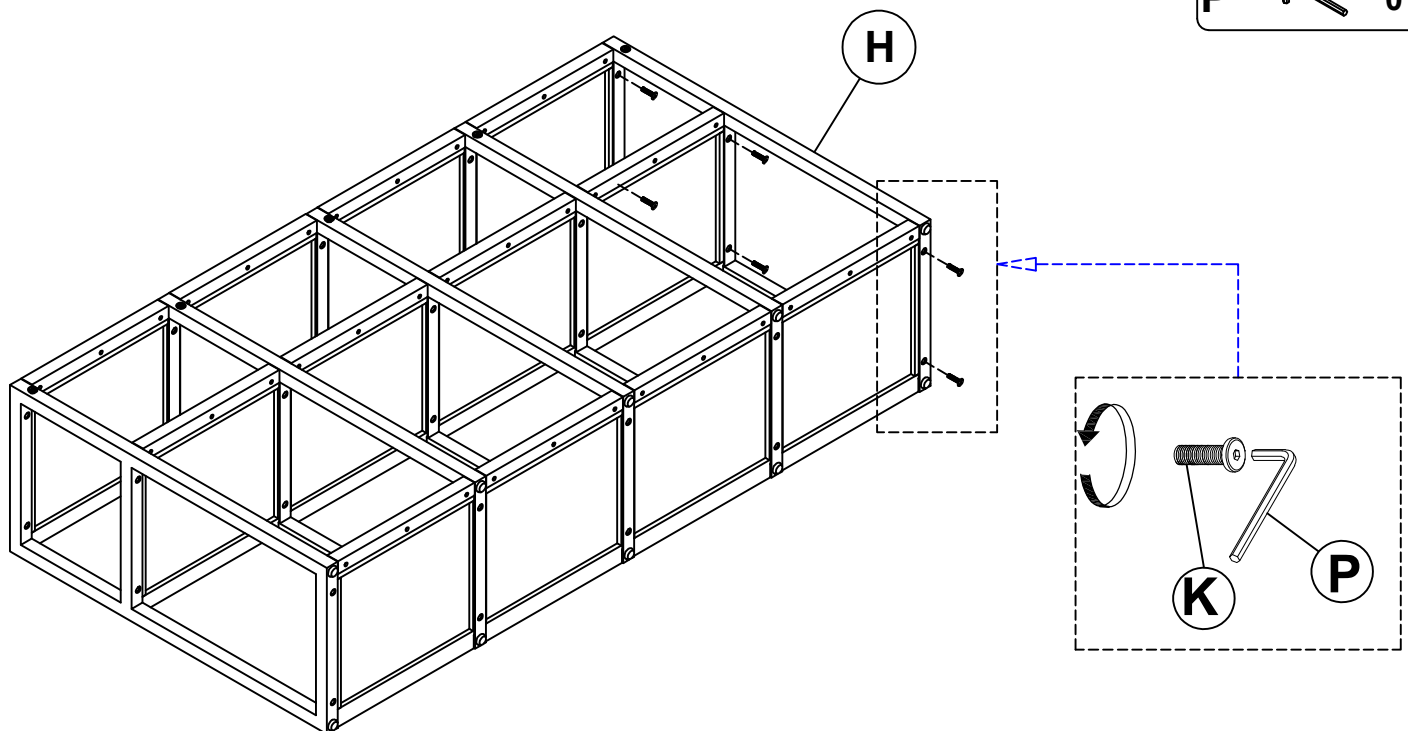

Step 07


N  **36**
Ø4*15

 **01**
(Not included)

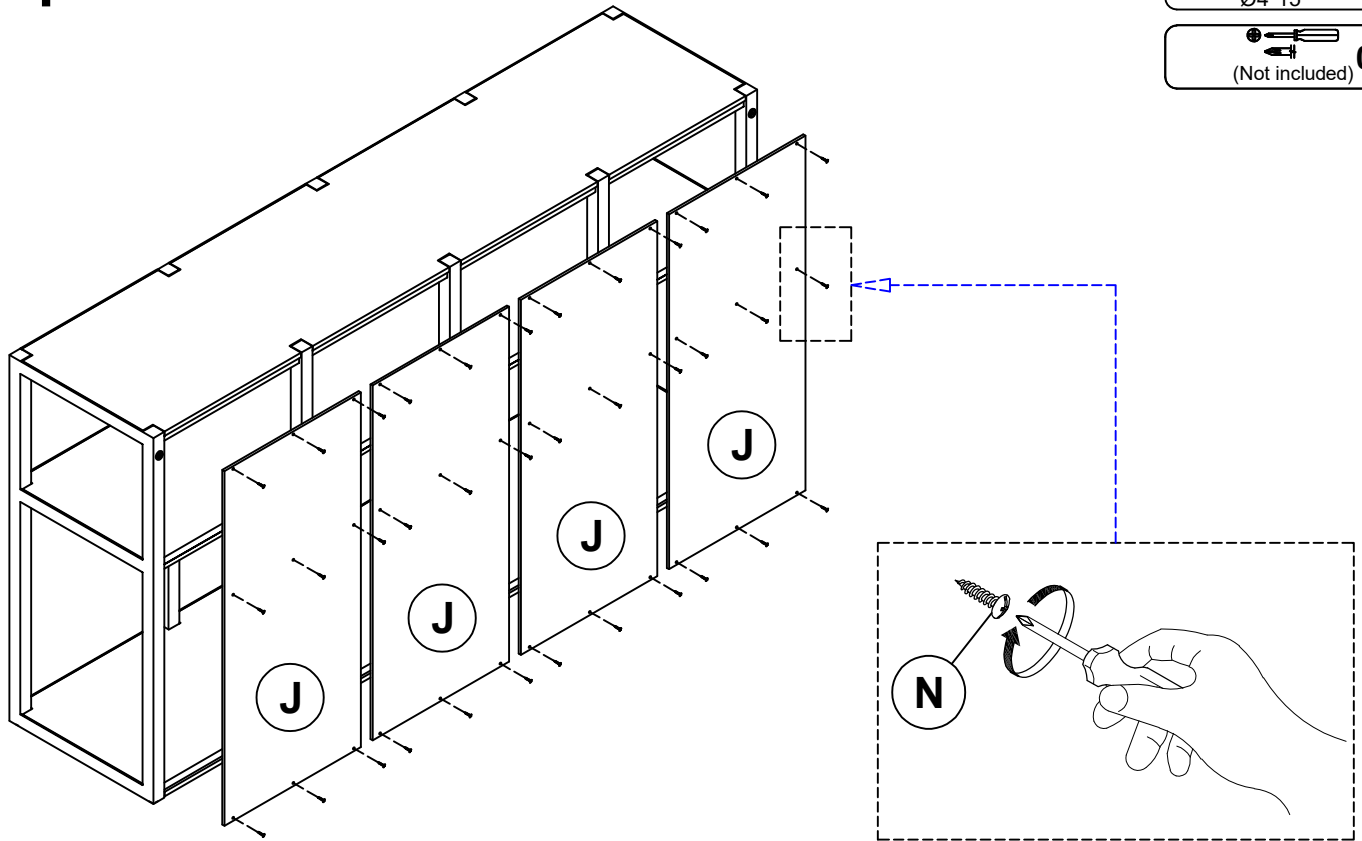



Step 08

P  **01**

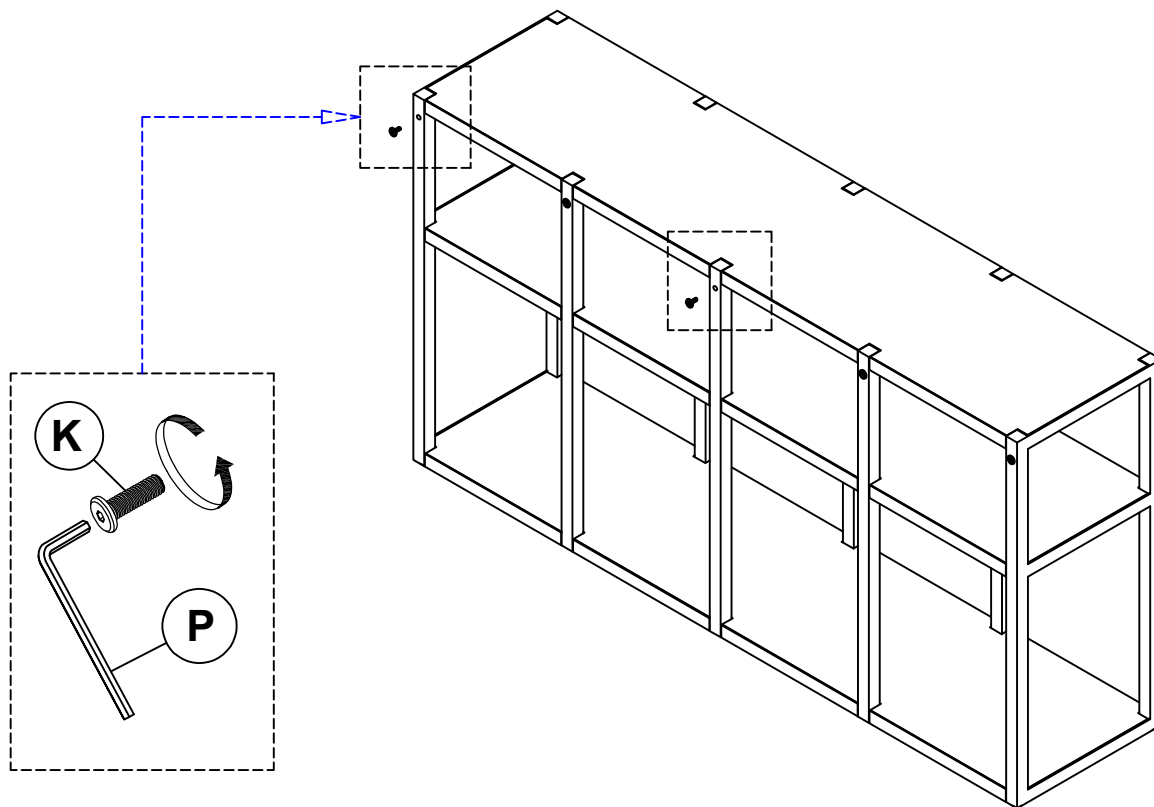



Step 09

P  01

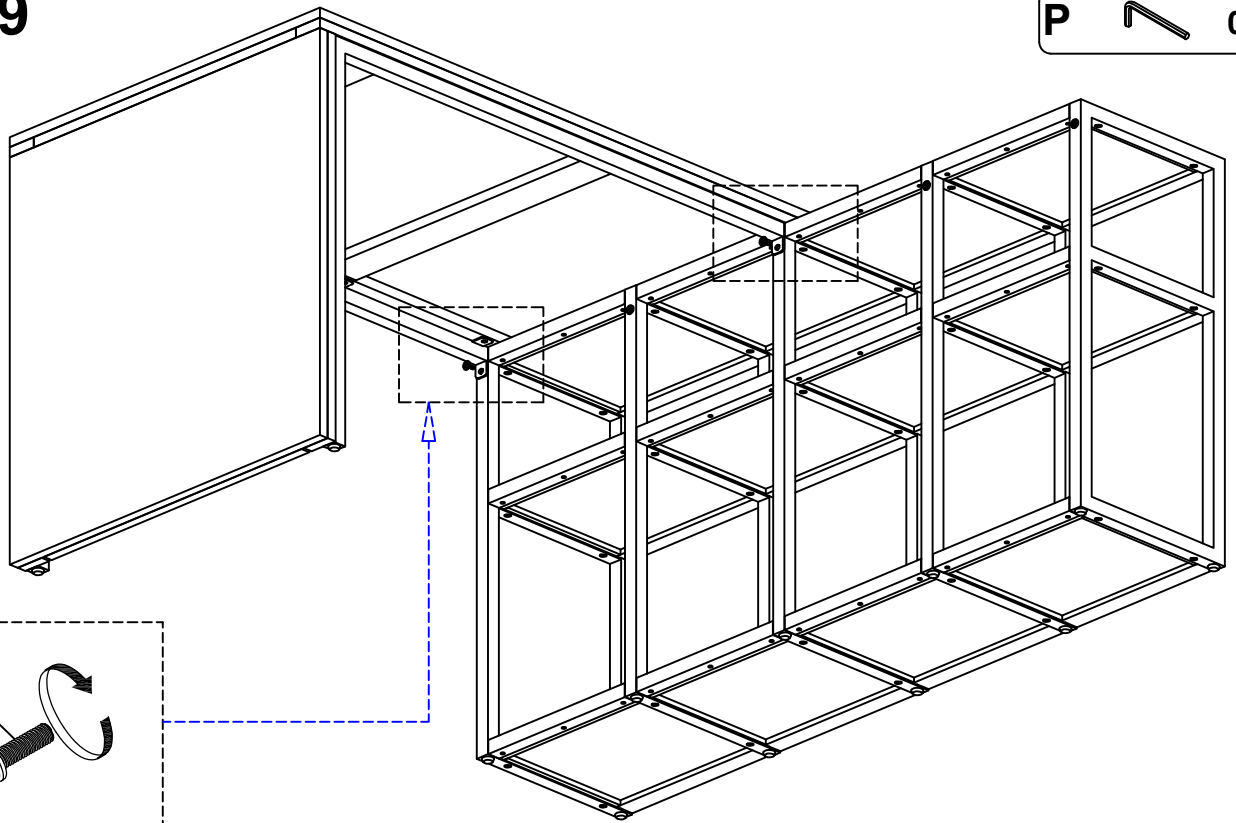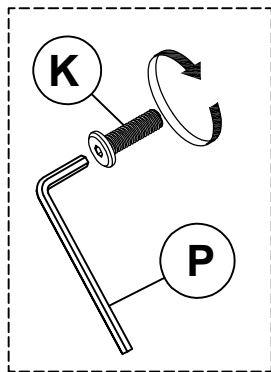

Step 10

O  02
Ø4*15

 01
(Not included)

