

WALKER EDISON
TM

Annette Contemporary 3-Drawer Wood Nightstand

SKU# WEANN013D1



For Residential Use Only


Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com



Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check that you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly

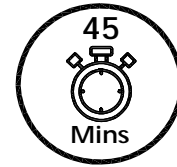

People recommended for assembly


Make it a team effort! Grab a friend for quicker, easier assembly.

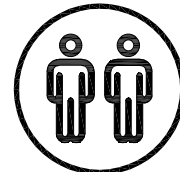

2 People Build


Tools Needed

Grab a Phillips head screwdriver to conquer this assembly

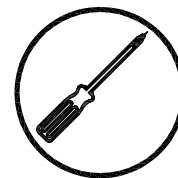


Use power tools with caution

You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.

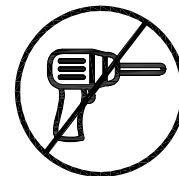

Glue is provided to secure wood dowels in place

When inserting dowels, locate the appropriate hole, place a small amount of glue in the hole, and then insert the dowel. Wipe away excess glue immediately.

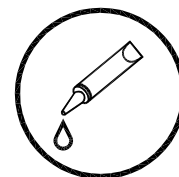


Annette

Scan to get assembly tips and help!





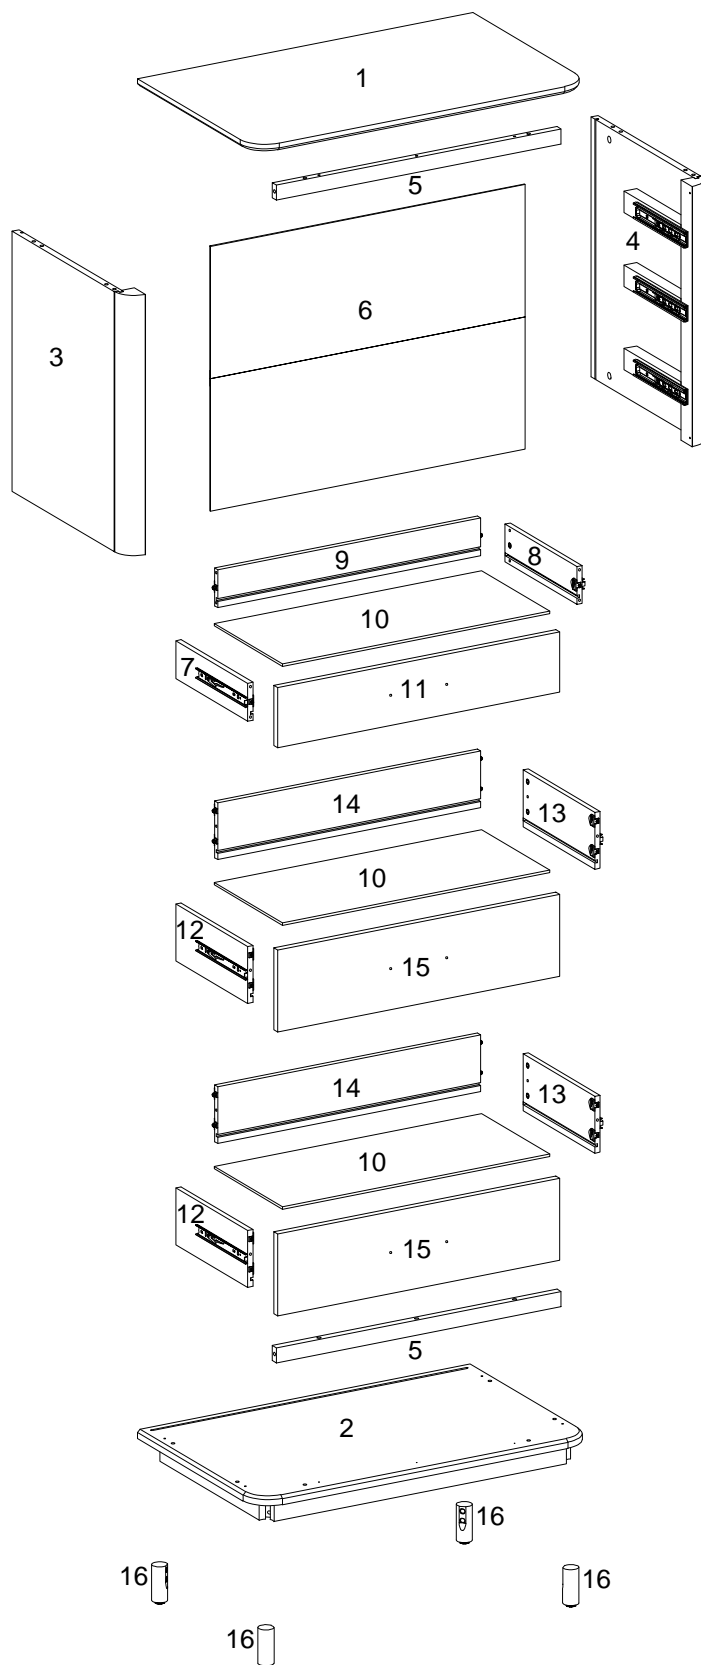










WE Parts List

Part Number	Description	Quantity
1	Top Panel	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Front Rail	2
6	Back Panel	1
7	Top Drawer Left Side Panel	1
8	Top Drawer Right Side Panel	1
9	Top Drawer Back Panel	1
10	Drawer Bottom Panel	3
11	Top Drawer Front Panel	1
12	Lower Drawers Left Side Panel	2
13	Lower Drawers Right Side Panel	2
14	Lower Drawers Back Panel	2
15	Lower Drawers Front Panel	2
16	leg	4






Hardware List

Part	Size	Name	Quantity
A	 8x30mm	Wooden dowel	12
B	 6x35mm	Cam bolt	12
C	 15x11mm	Cam lock	12
D	 30mm	Sticker	12
E	 1/4"x50mm	Bolt	8
F	 1/4"mm	Lock washer	8
G	 1/4"x16mm	Washer	8
H	 M 4mm	Hex key	1
K	 4x38mm	Screw	6
L		Plastic wedge	8
M	 3x17mm	Screw	8
N		Handle	3
O	 5/32"x19mm	Handle screw	6
P	 6x30mm	Wooden dowel	16
Q		Glue tube	2

*The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.*


Step 1

Let's get started! Screw four Cam bolts (B) into the Top Panel (1).

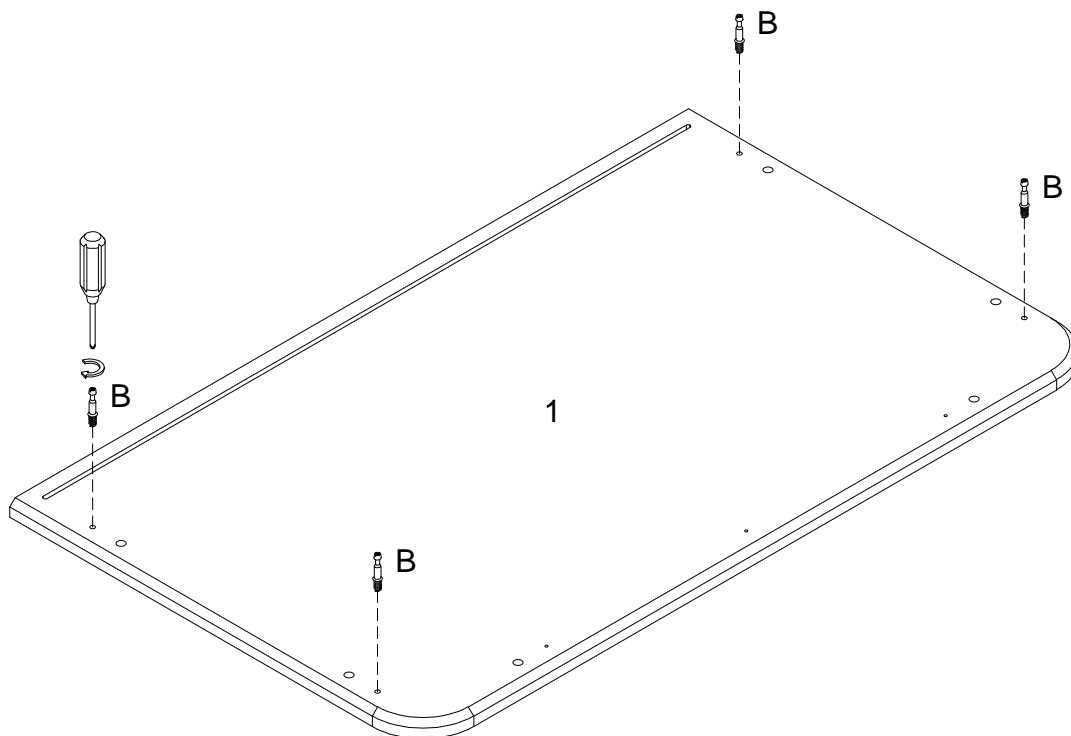


Step 2

Next, attach the Legs (16) to the Bottom Panel (2) using the Bolts (E) with a Lock washer (F) and washer (G).

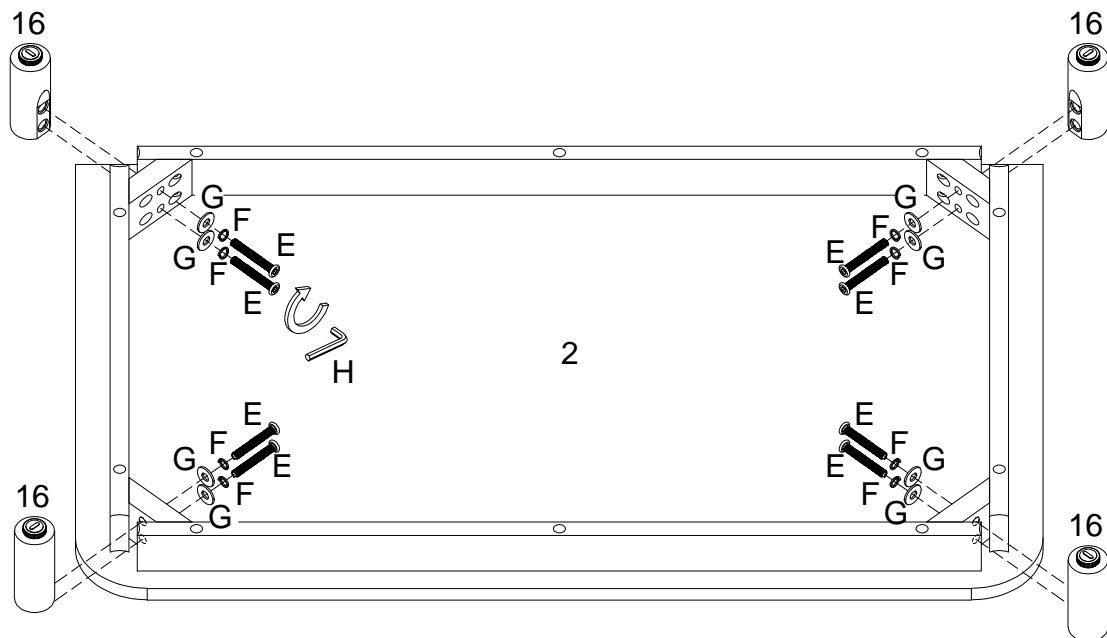




Step 3

Turn the Bottom Panel (2) over and screw in the Cam bolts (B).

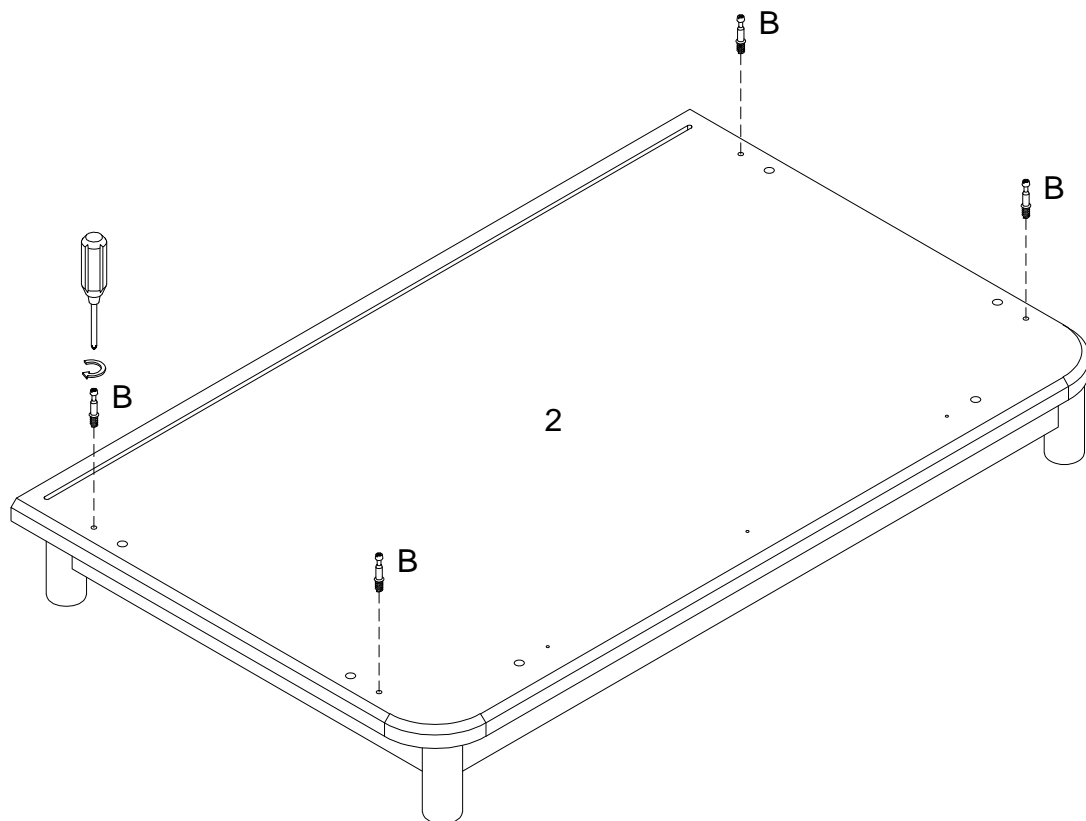

Step 4

Insert Wooden dowels (A) into the top and bottom of the Left and Right Side Panels (3 & 4) then screw in Cam Bolts (B) to the front corners of the panels.

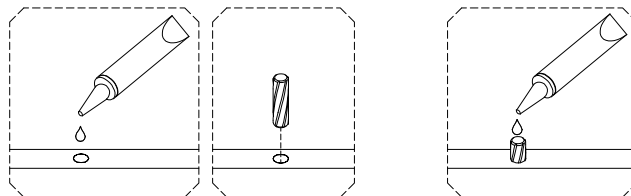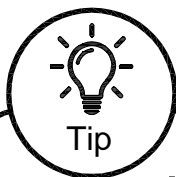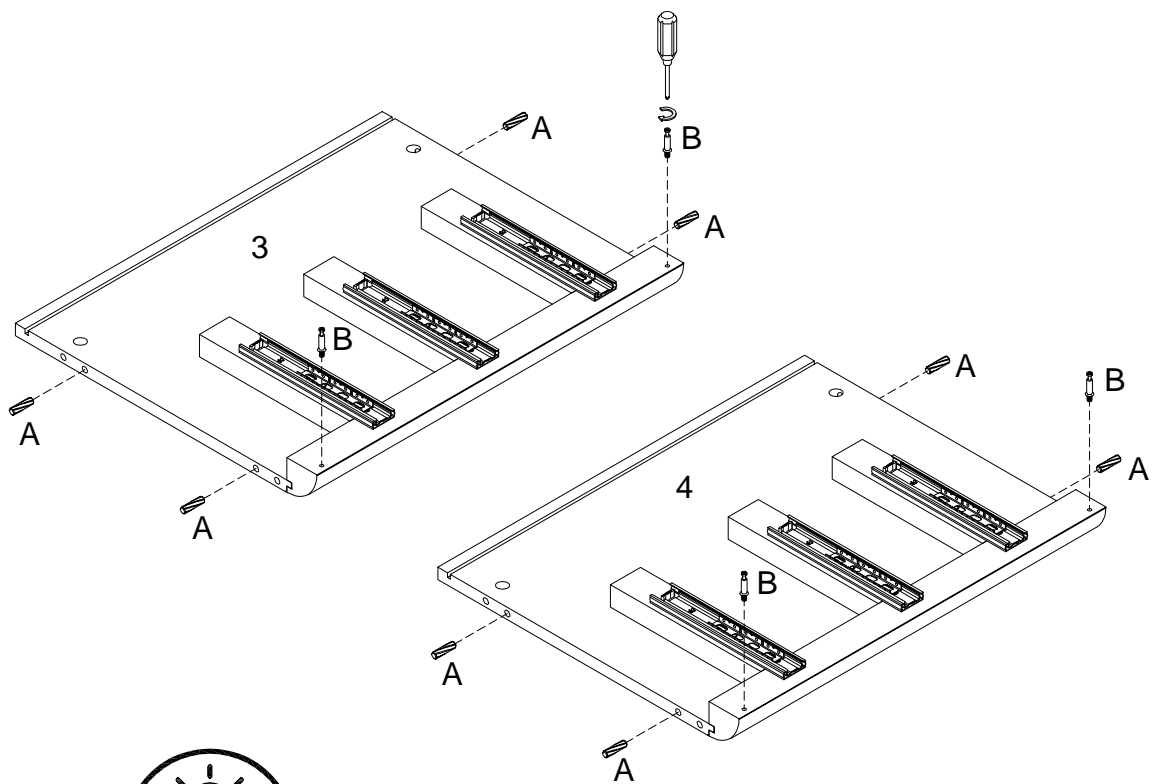


1: The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

2: In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.

Step 5



Insert Wooden dowels (A) into the two Front Rails (5).

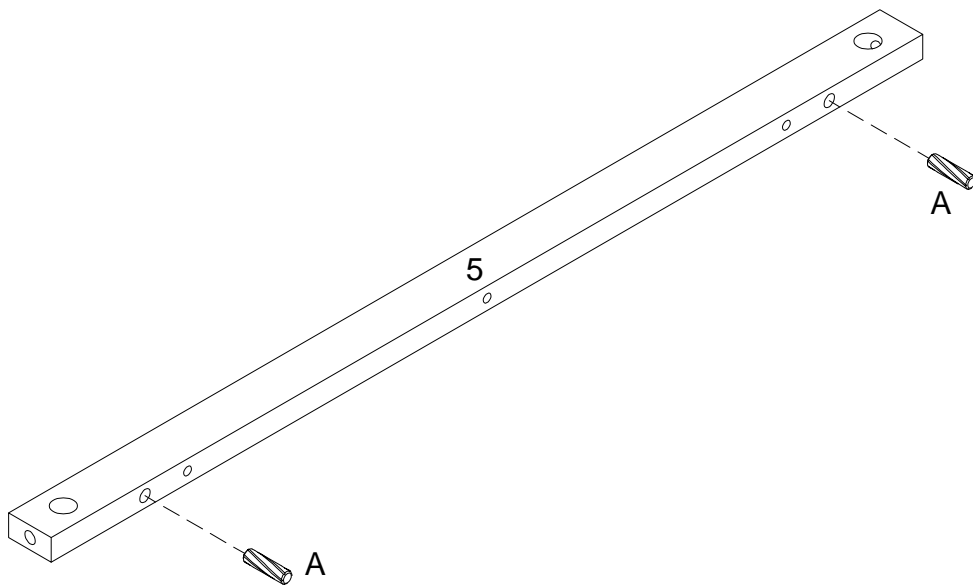

x 2

Step 6


Secure the Front Side Rails (5) to the Right Side Panel (4) with Cam locks (C) then repeat on the Left Side Panel (3).

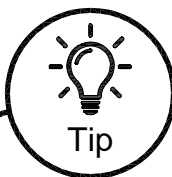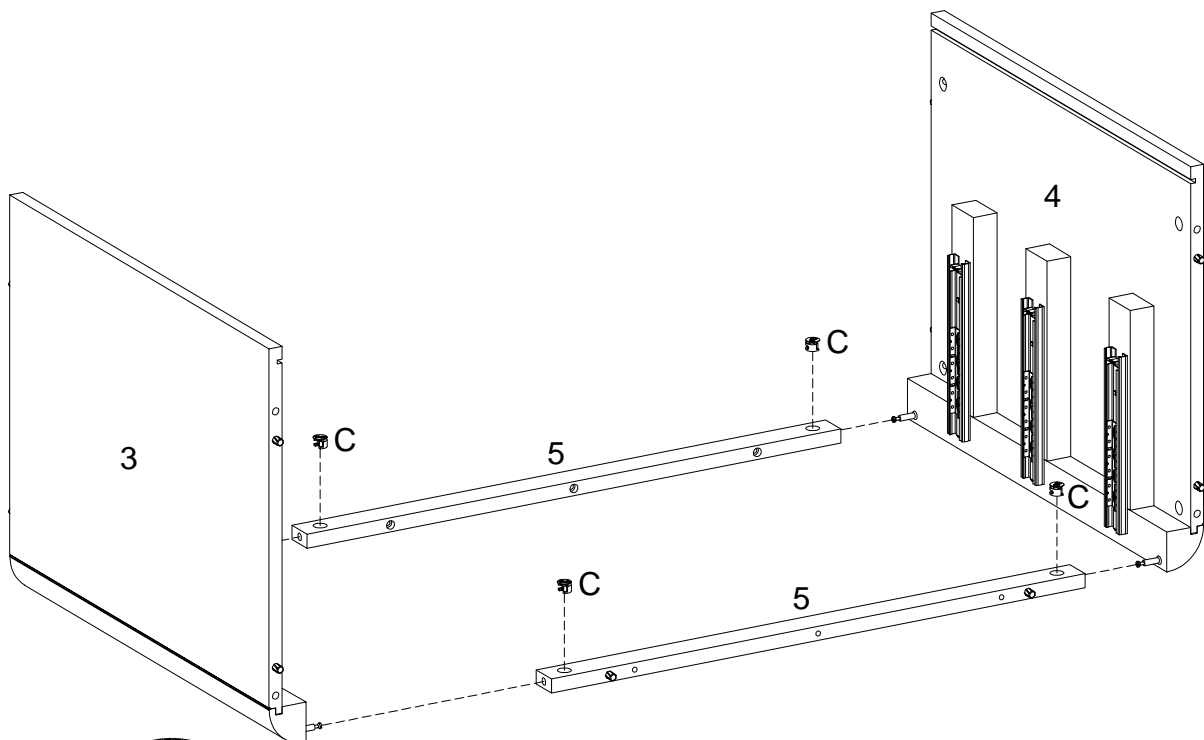


Tip

Cam Locks


Cam Locks help securely join two pieces together.
Follow these easy steps.

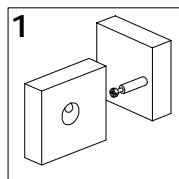

1: Insert Cam Bolt into bolt holes on the flat side. Don't over tighten!

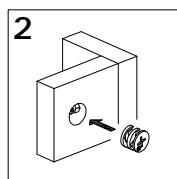


2: Fit the proper holes on the edge of the other part over the Cam Bolts. You should be able to see the cam bolts through the larger hole on the side.

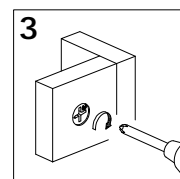

3: On the back of the Cam Lock will be a "C" shape. Insert the Cam Lock so the opening of the "C" fits over the Cam Bolt. Tighten with the screwdriver.


Step 7

Attach the Bottom Panel (2) to the Side Panels (3 & 4) using Cam locks (C).

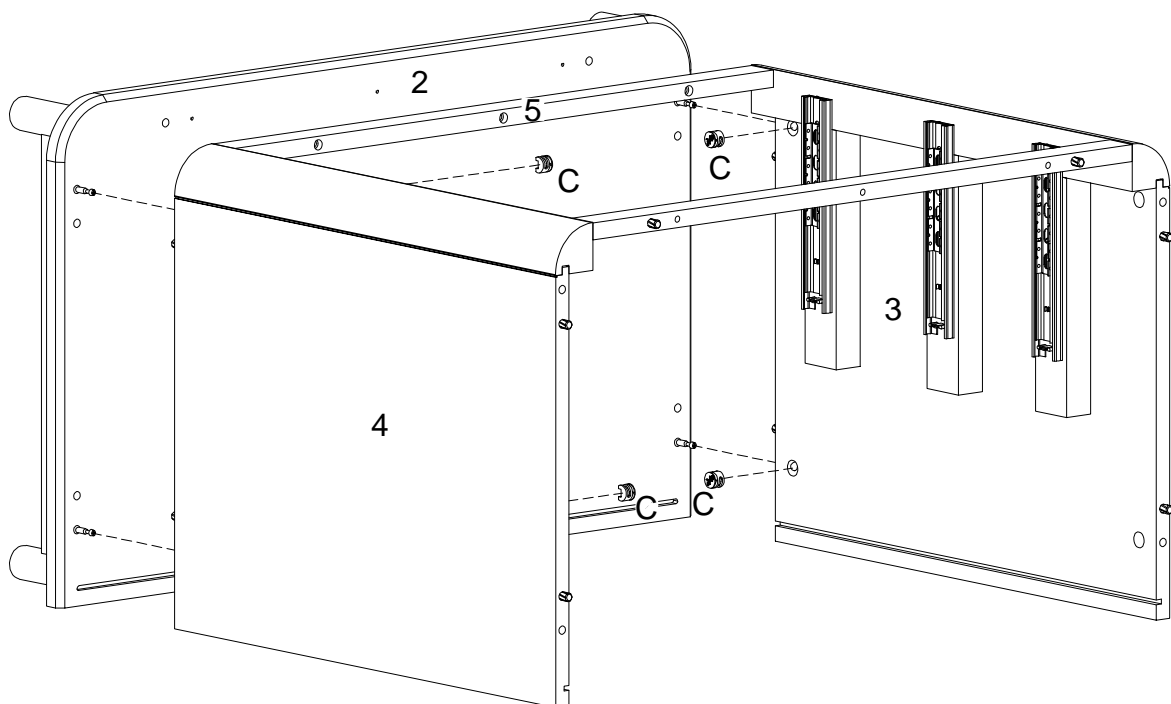


Step 8

Secure the Front Rail (5) to the Bottom Panel (2) with Screws (K).

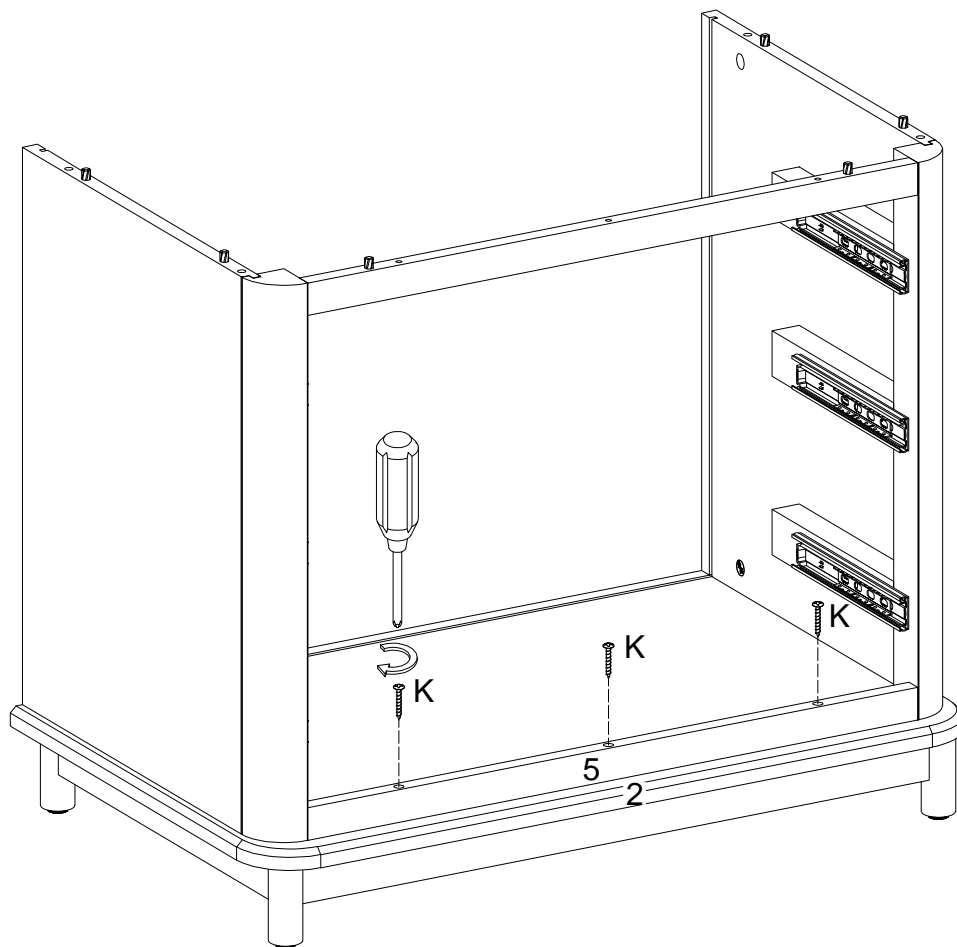


Step 9

Slide the Back Panel (6) into the grooves of the Side Panels (3 & 4) down to the Bottom Panel (2).

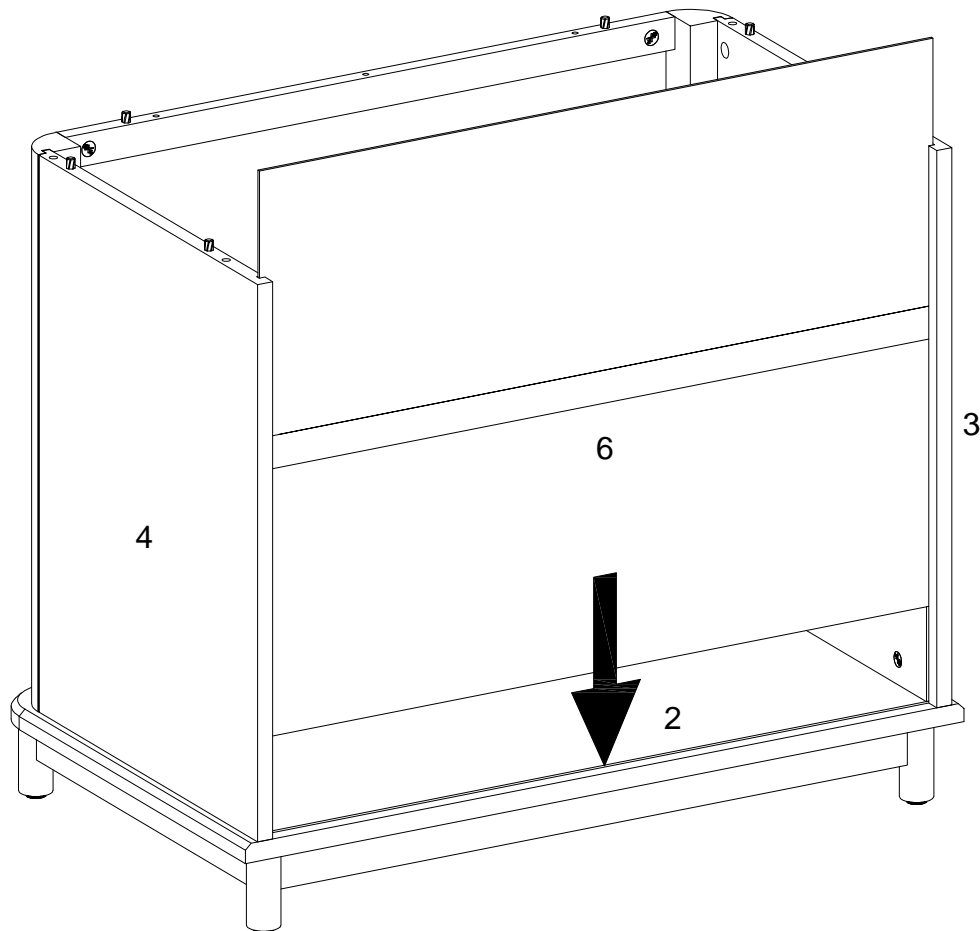


Step 10

Attach the Top Panel (1) to the Side Panels (3 & 4). Secure with Cam locks (C).

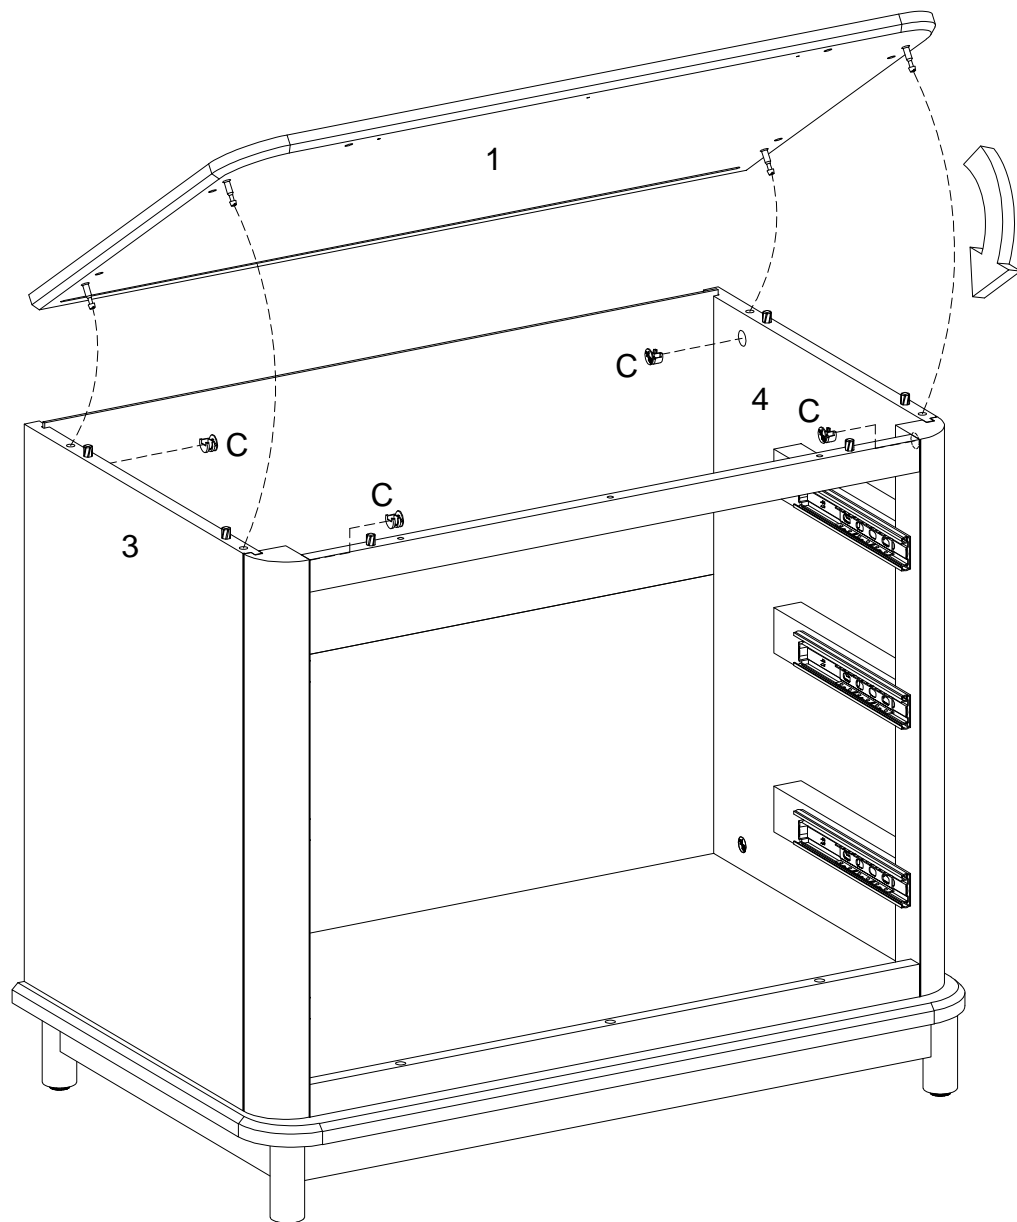


Step 11

Secure the Front Rail (5) to the Top Panel (1) with Screws (K).

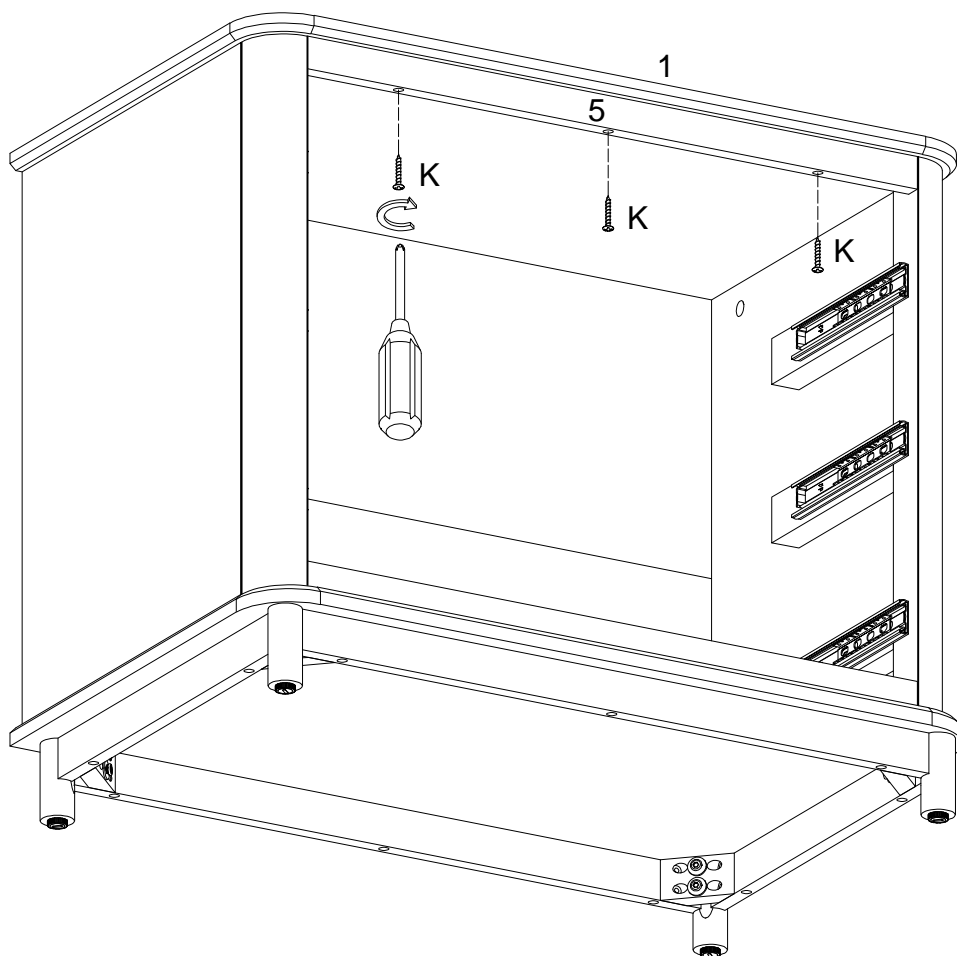




Step 12

Just a few cosmetic touches now, place the Stickers (D) over the visible Cam locks (C).

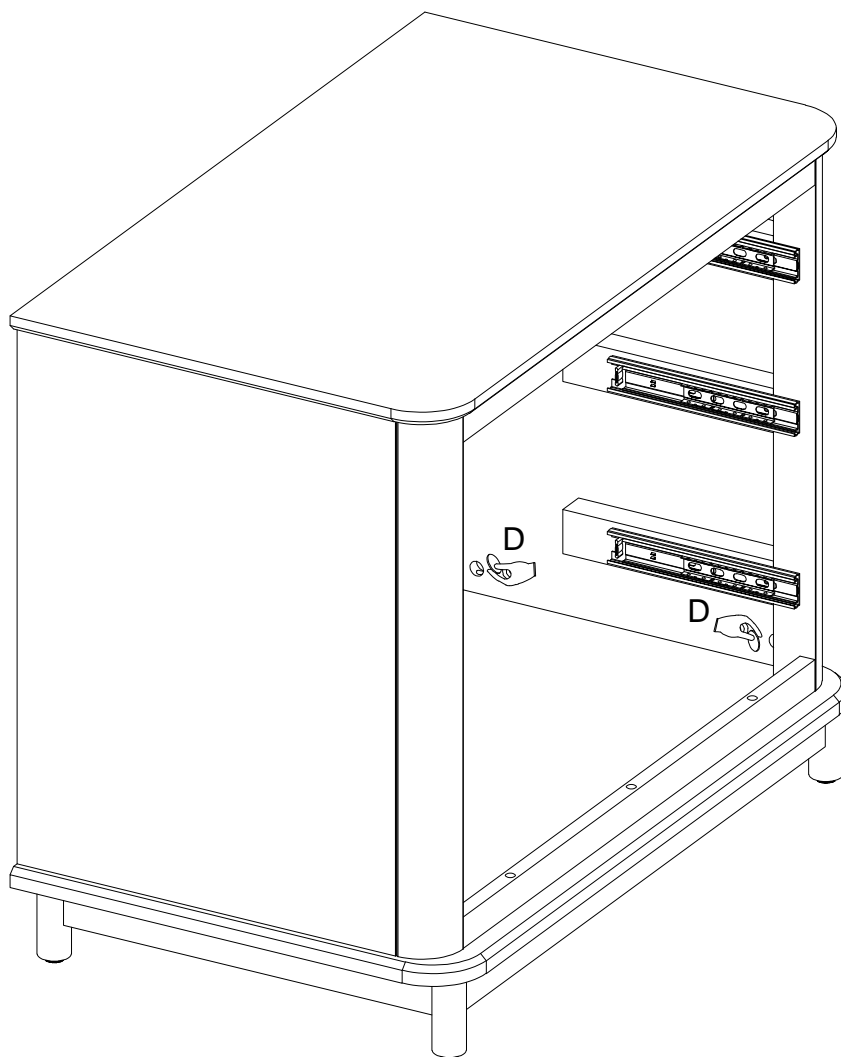


Step 13

Secure the Plastic Wedges (L) with the Screws (M) against the Back Panel (6). This will eliminate racking and make the Nightstand extra strong!

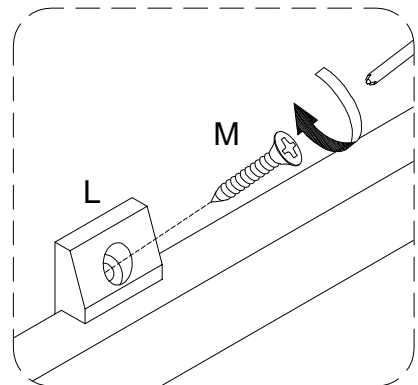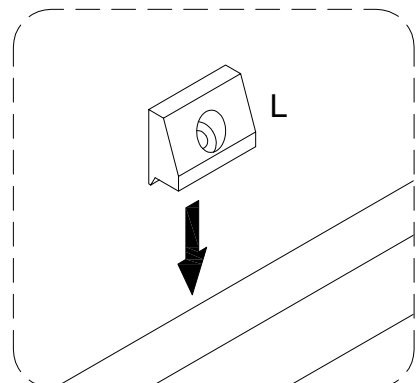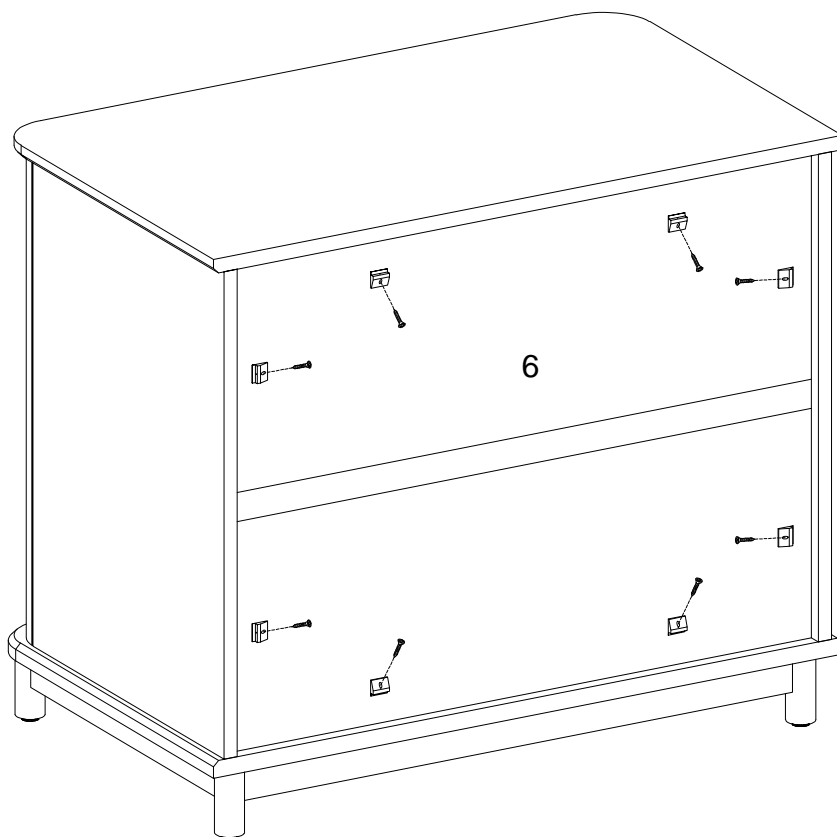


Step 14

Attach the Handles (N) to the Drawer Front Panels (11 & 15) with the Handle Screws (O).

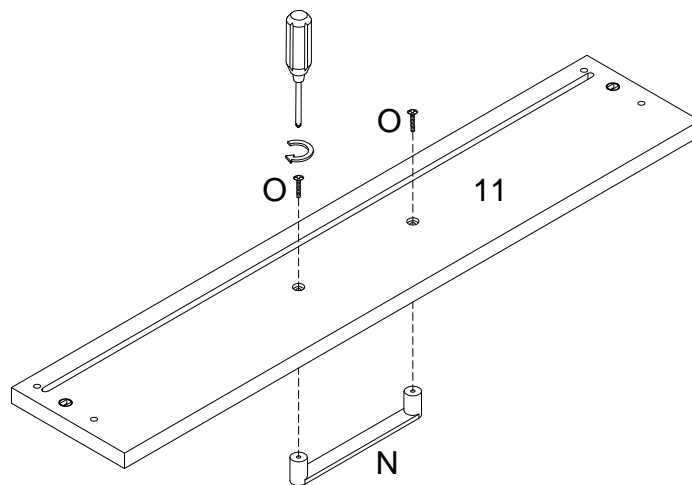


2 x

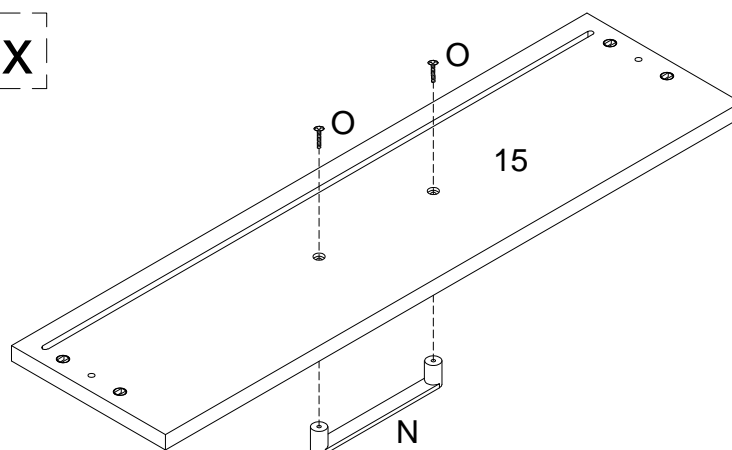



Step 15

Insert the Wooden Dowels (P) into the Top Drawer pieces (7, 8, & 9).

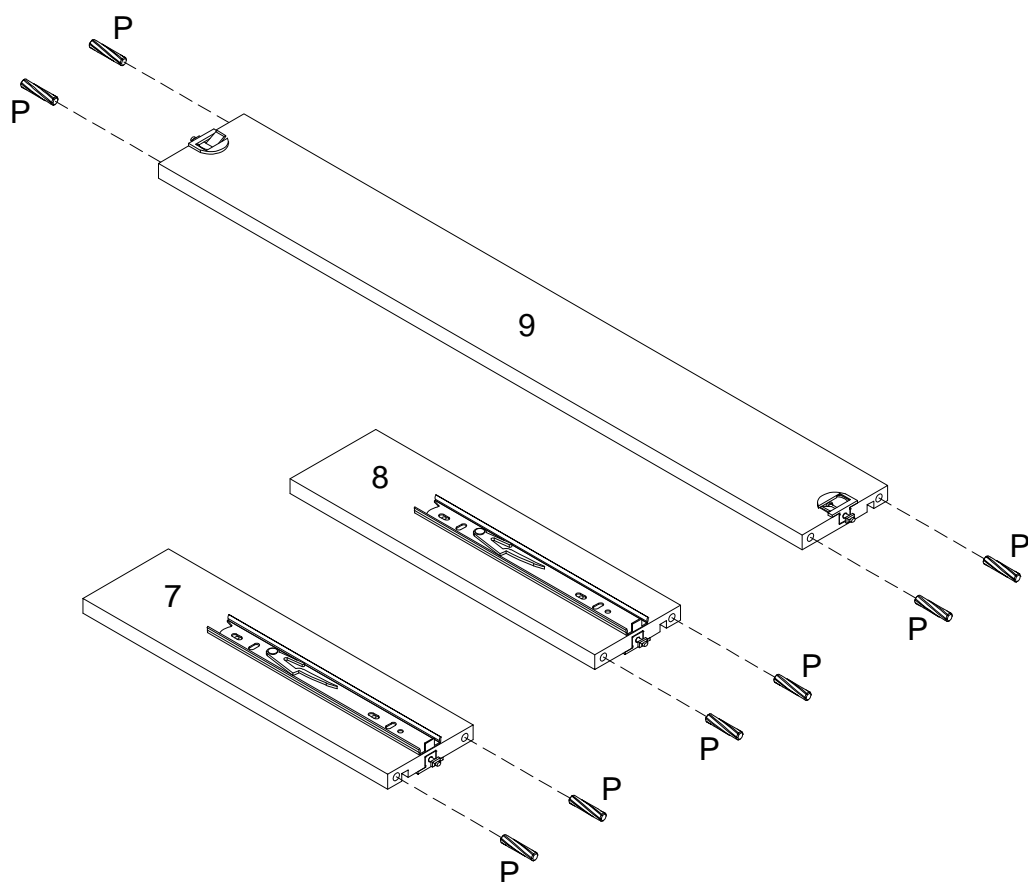


Step 16


Line up the dowel and pin holes then flip the tabs on the backside of the Drawer Back Panels (9) to secure.

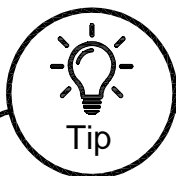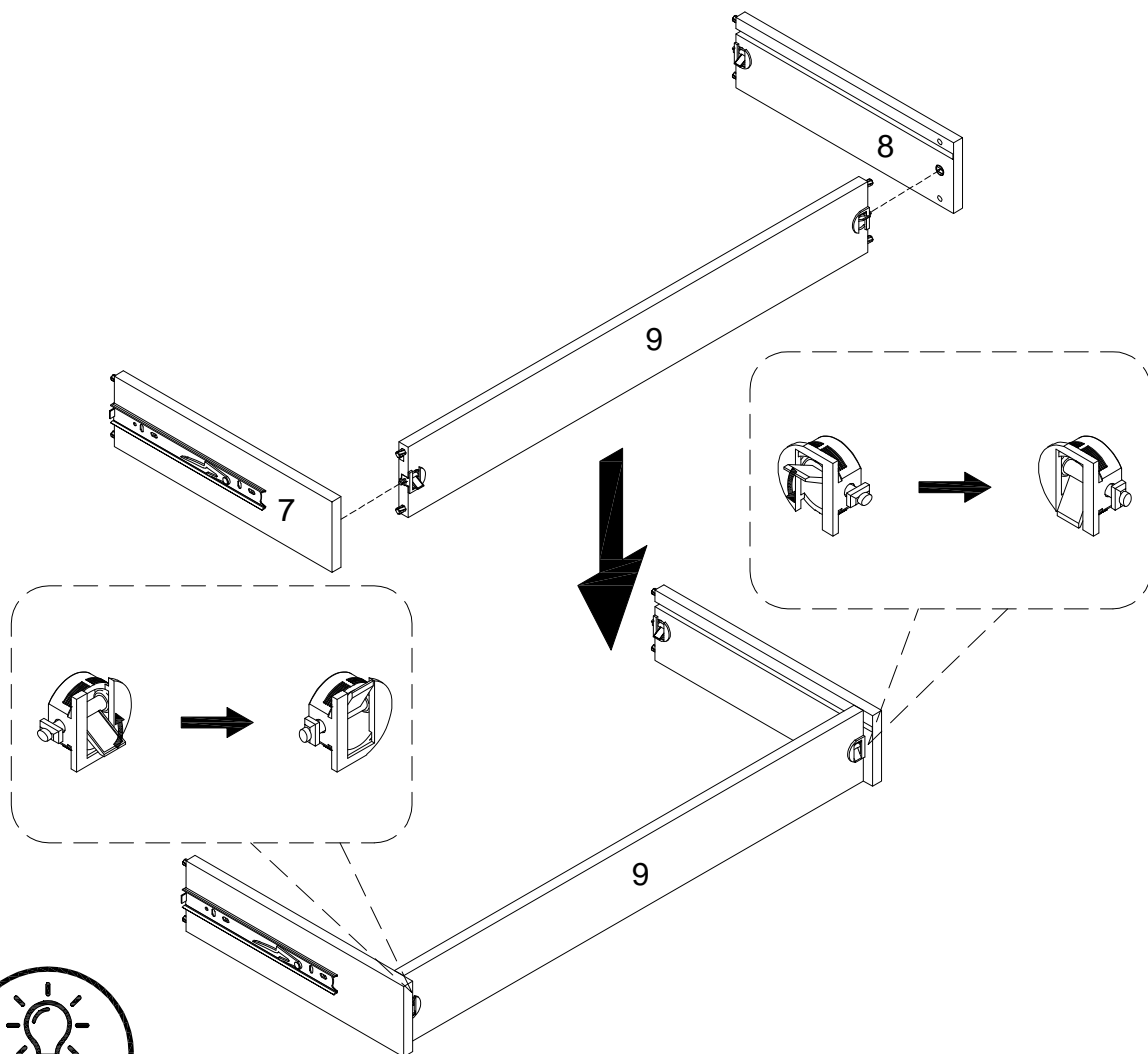

Quick Assembly Drawers

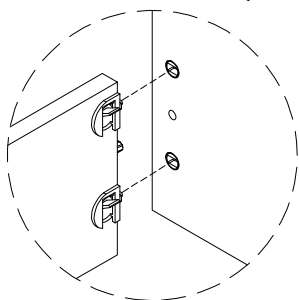


1. Make sure the quick assembly drawer pin is aligned with the corresponding hole.

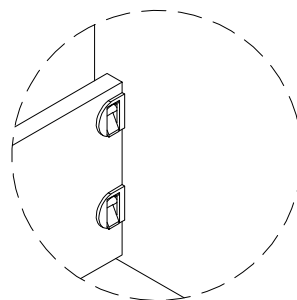

2. Once the pin is inserted correctly, flip the metal lever in the opposite direction to ensure the panels are firmly locked together.


Step 17

Slide the Bottom Drawer Panels (10) into the grooves of the top drawer.

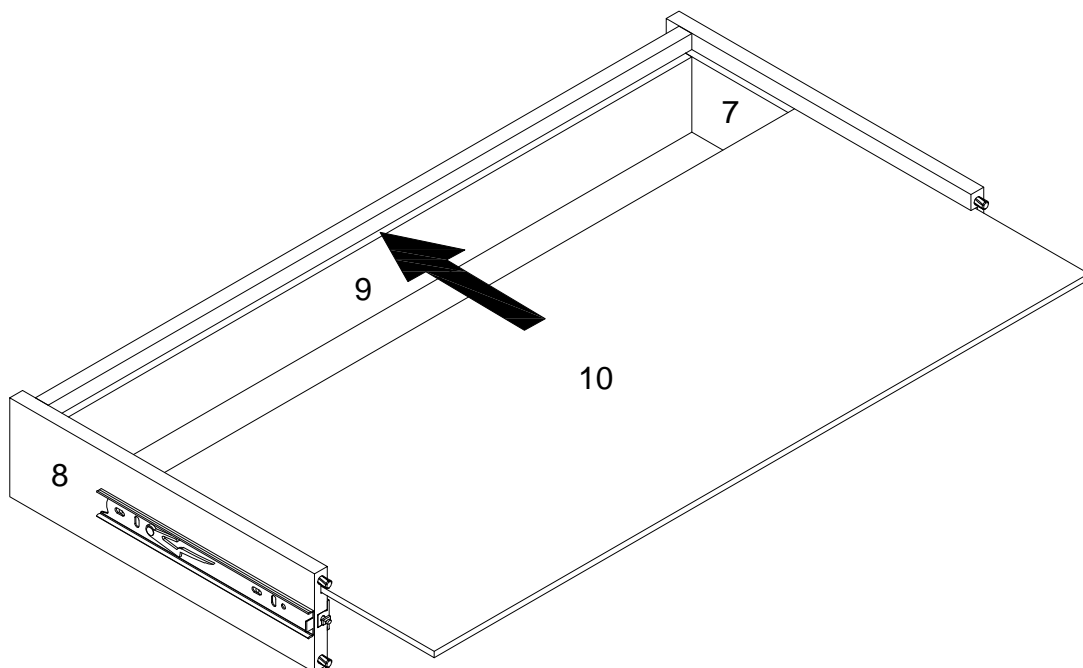


Step 18

Attach the Top Drawer Front Panel (11) to the Drawer Sides (7 & 8) by aligning the dowels and flipping the pin.

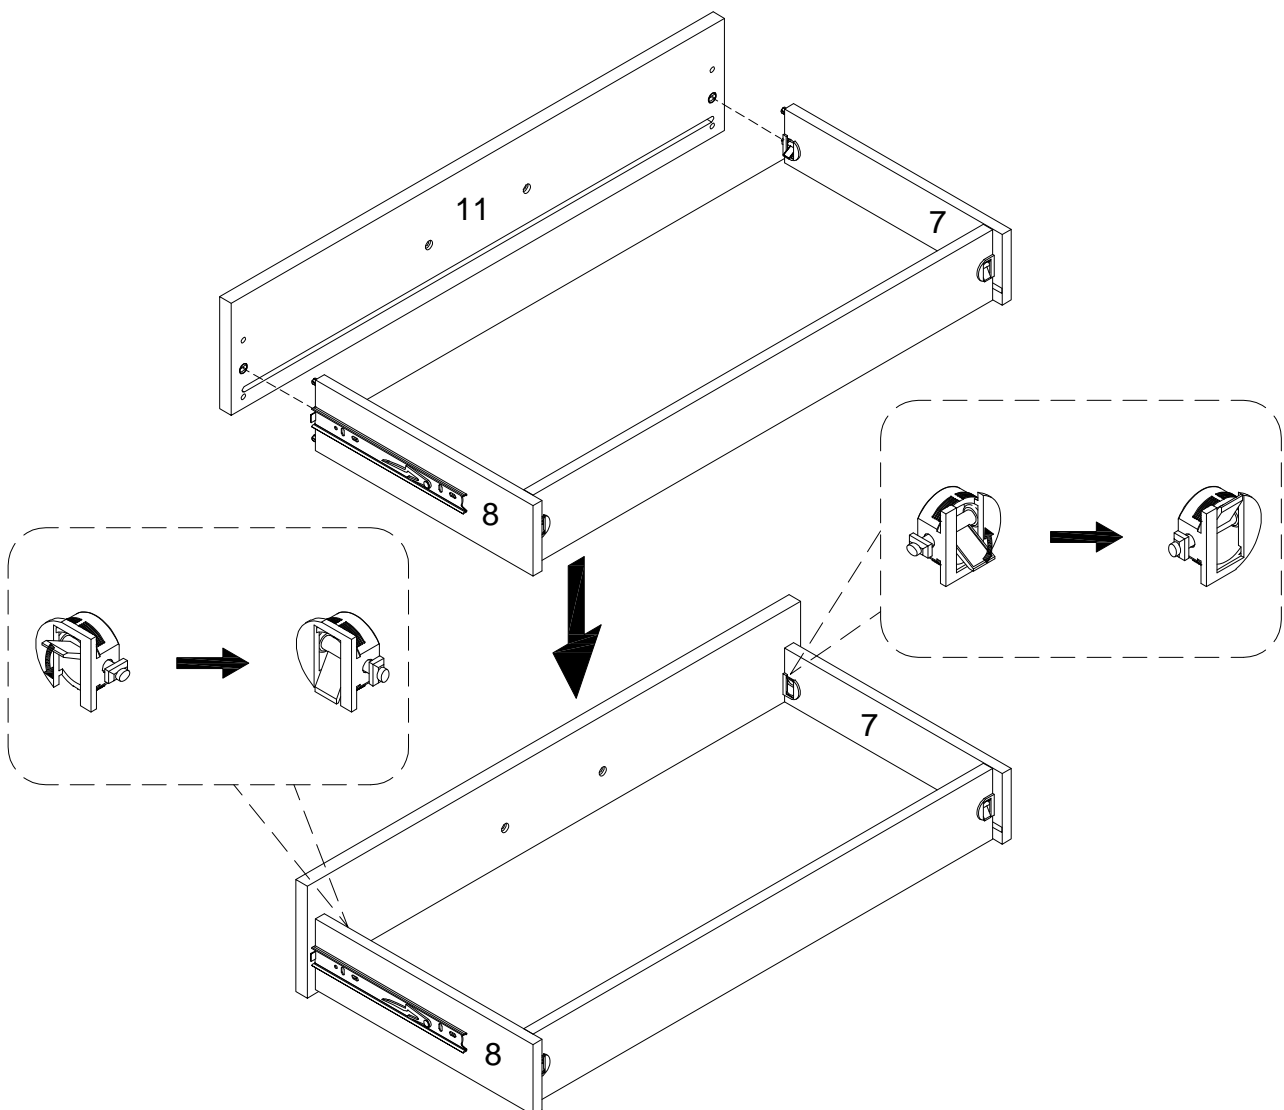


Step 19

Insert the Wooden dowels (P) into the Lower Drawer pieces (12, 13, & 14).

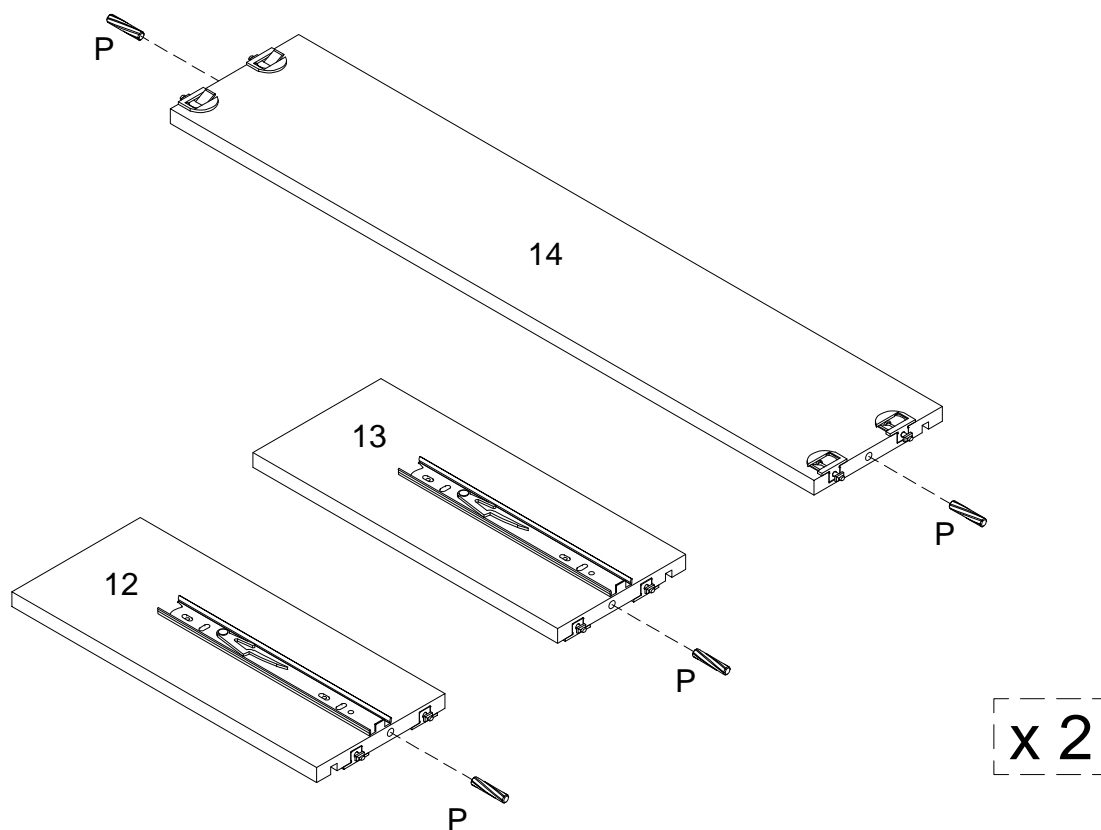


Step 20

Line up the dowel and pin holes then flip the tabs on the backside of the Drawer Back Panels (14) to secure.

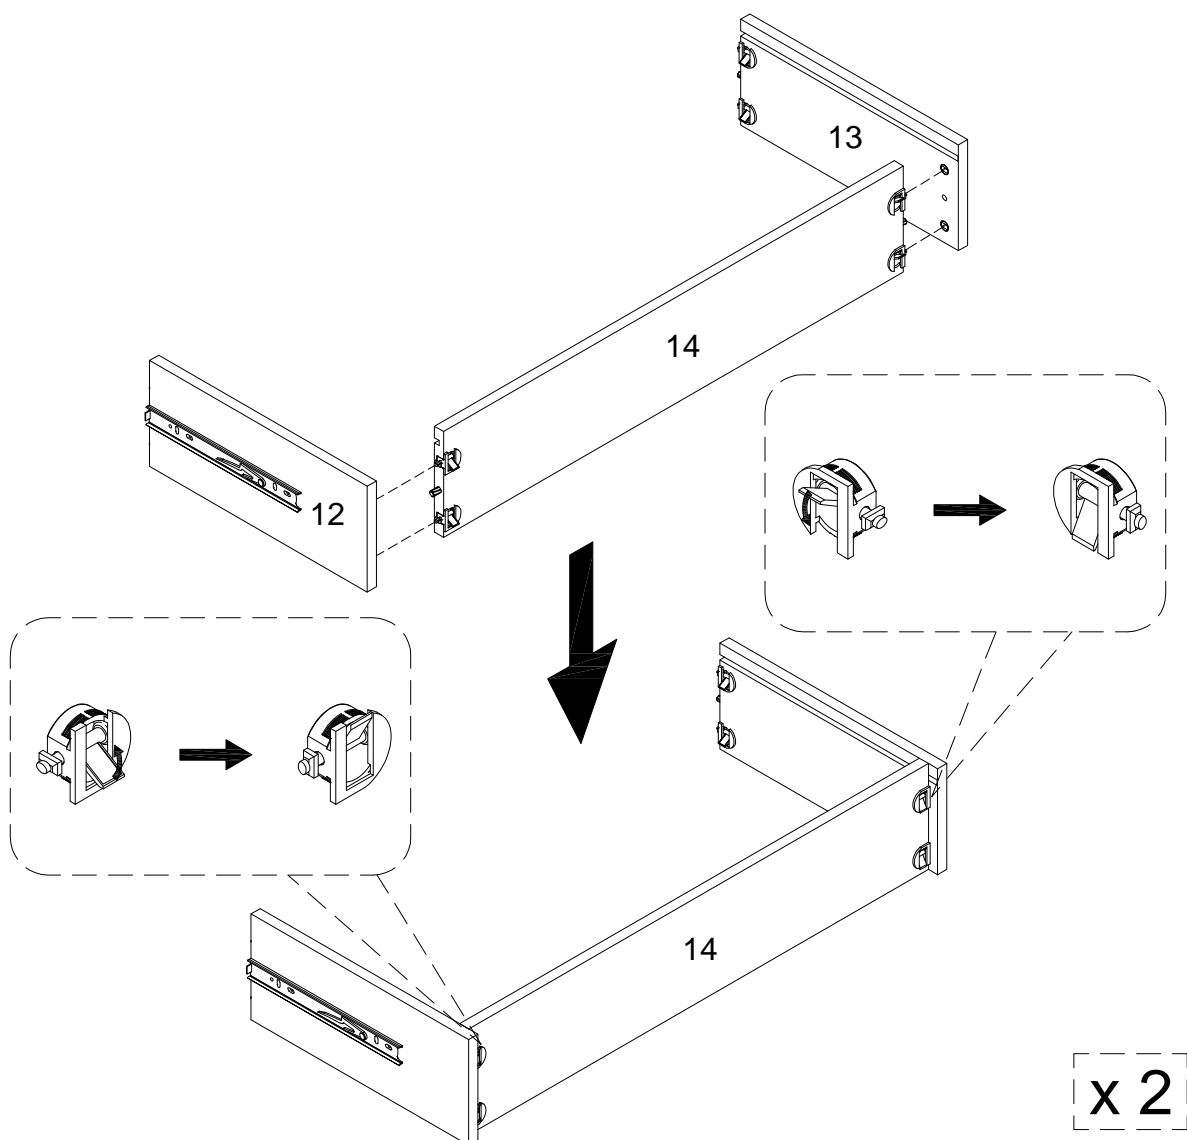

Step 21


Slide the Lower Drawer Panels (10) into the grooves of the bottom drawers.

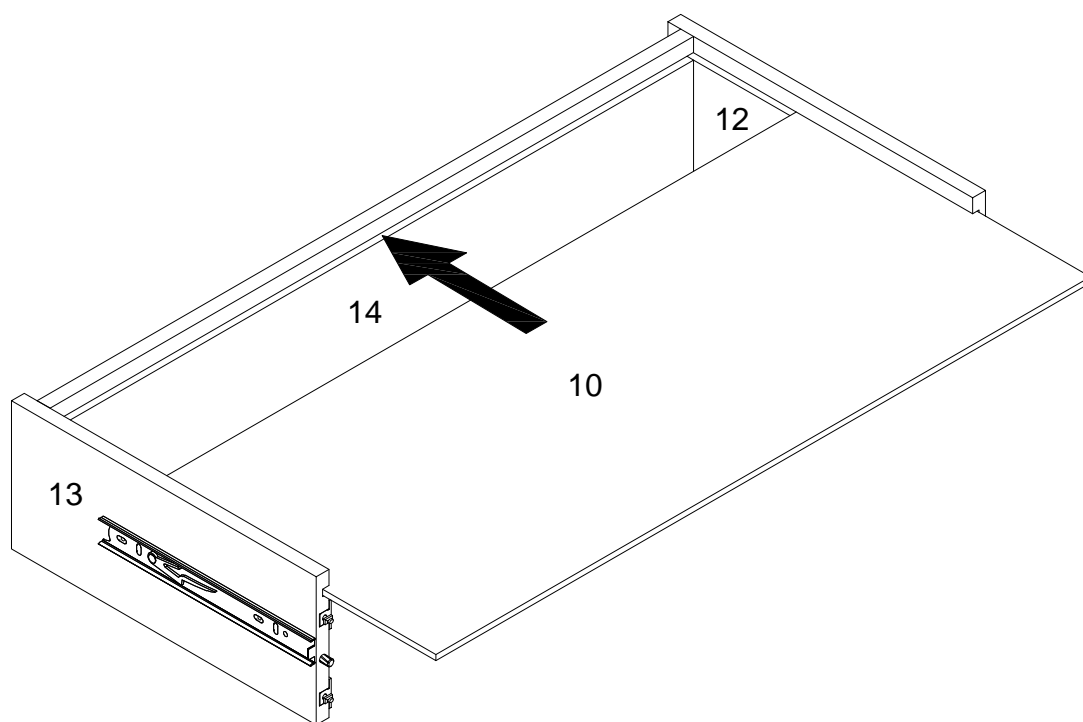

x 2



Step 22

Attach the Lower Drawer Front Panels (15) to the drawer sides (12 & 13) by aligning the dowels and flipping the pin.

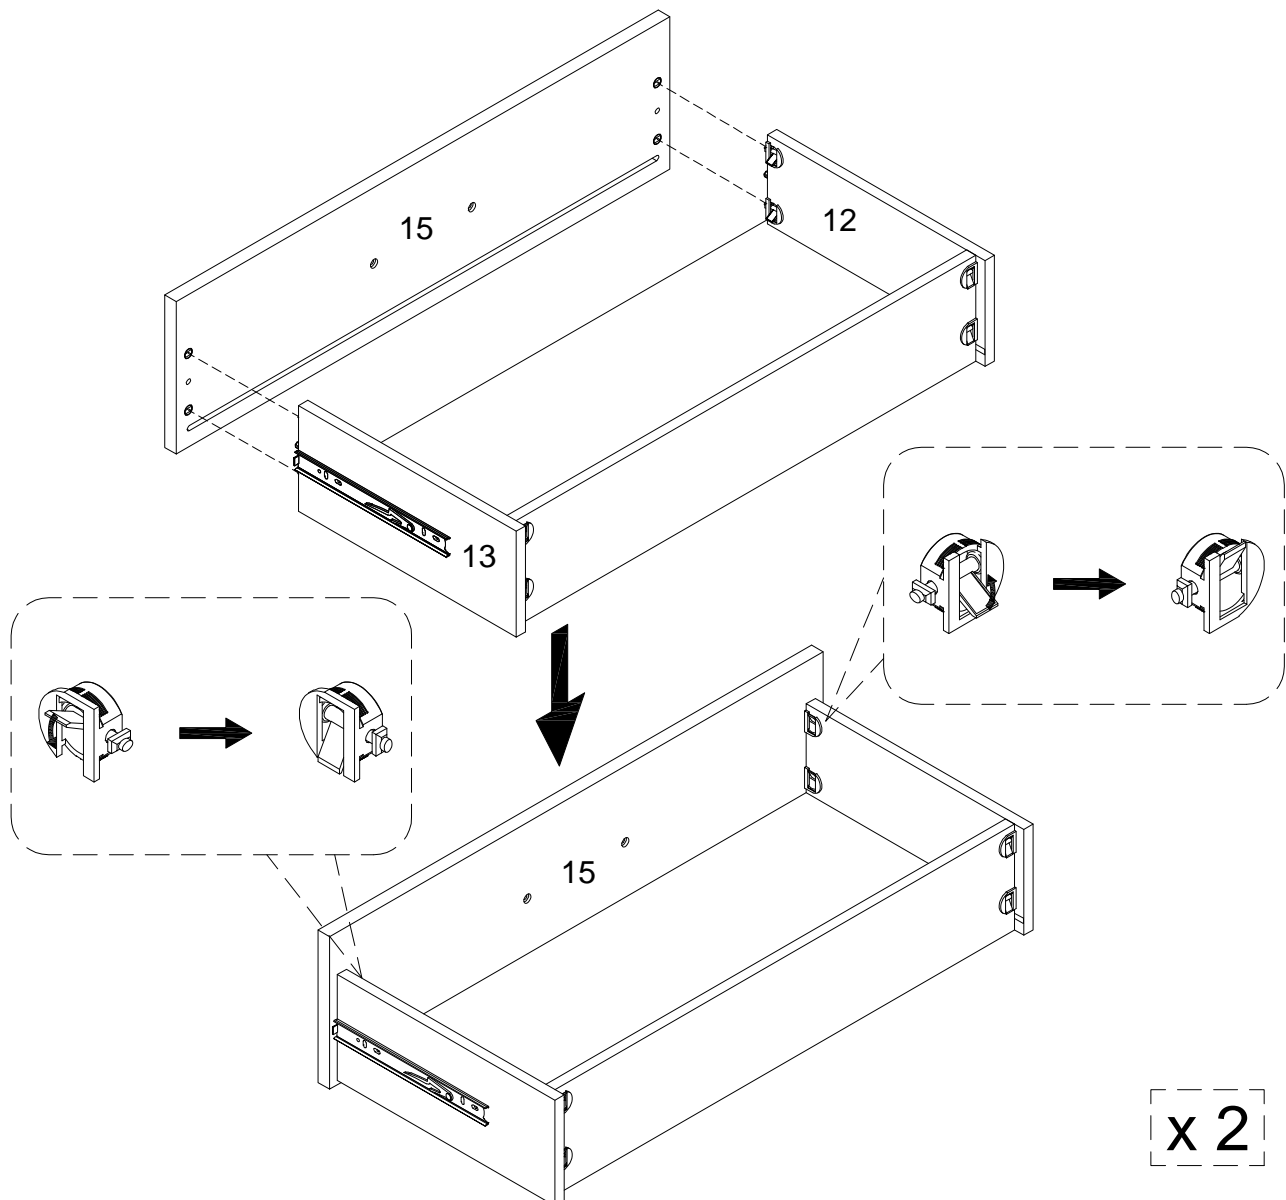

Step 23


Line up the drawer member with the cabinet member and slide in the drawers to complete your new nightstand!

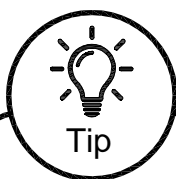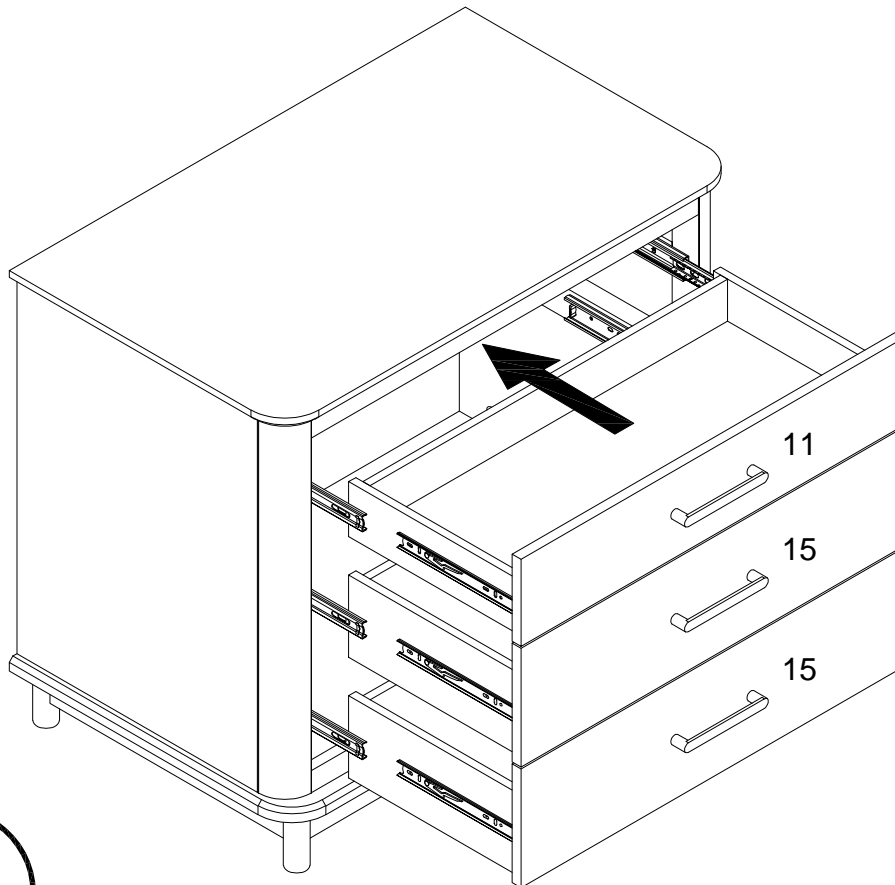

Tip


Reinserting your Cabinet Glides together

Line up the Drawer Member so it is inside the guides of the Cabinet Member. Once the connection is made, push the drawer into place entirely. It may not be a smooth glide on your first try, but will improve after it's fully inserted.

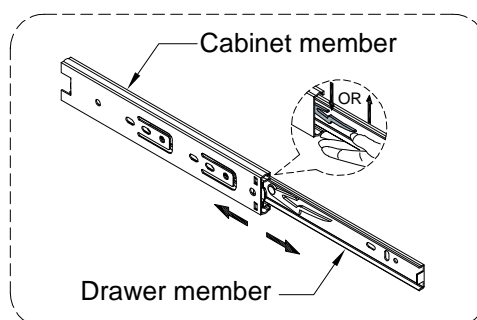

Step 24

Adjust the levelers on the legs to make sure the dresser is sturdy.

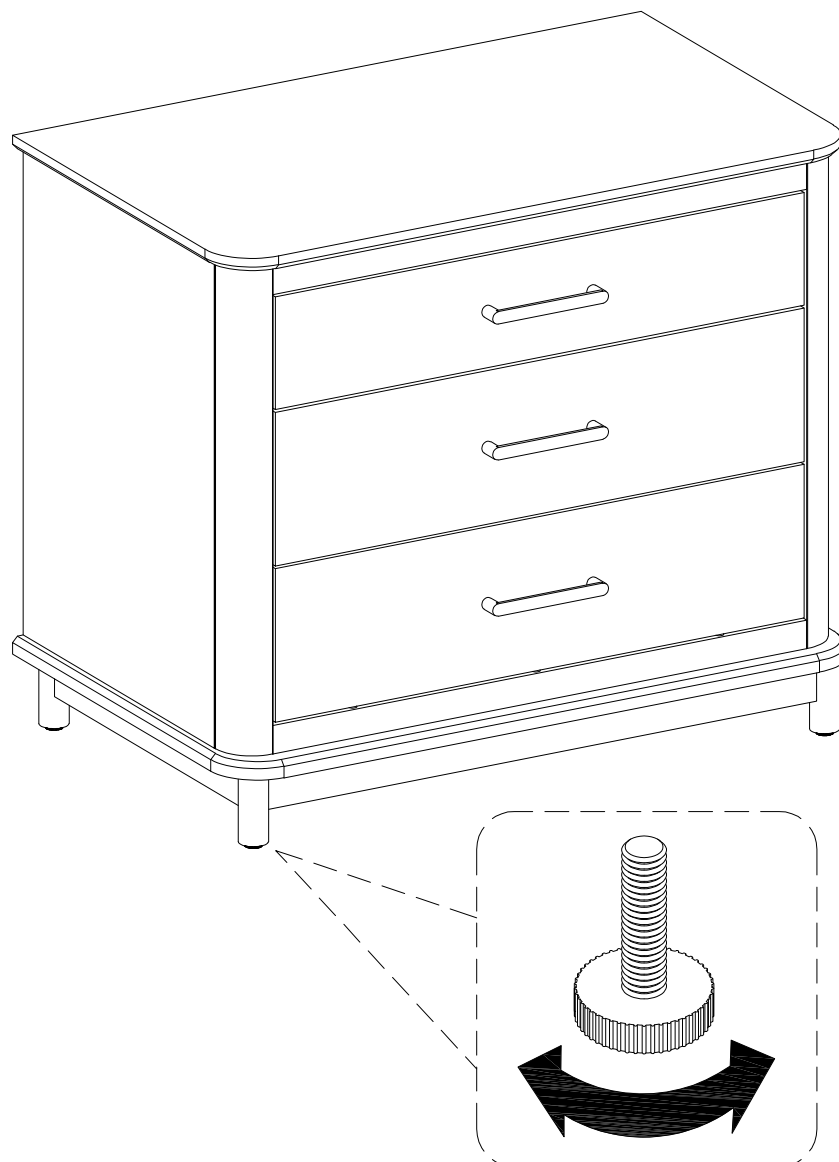

Final Assembly



Congratulations on your new piece of furniture!

We would love to hear about it and see it.
Please leave us a review or post a picture with
#mywalkerredisonhome

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at service@walkeredison.com

Visit our Customer Service website at
walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday
8am-3pm MST

For details on Assembly Videos, Assembly Instructions,
Replacement Parts, and Customer service,
SCAN HERE

