

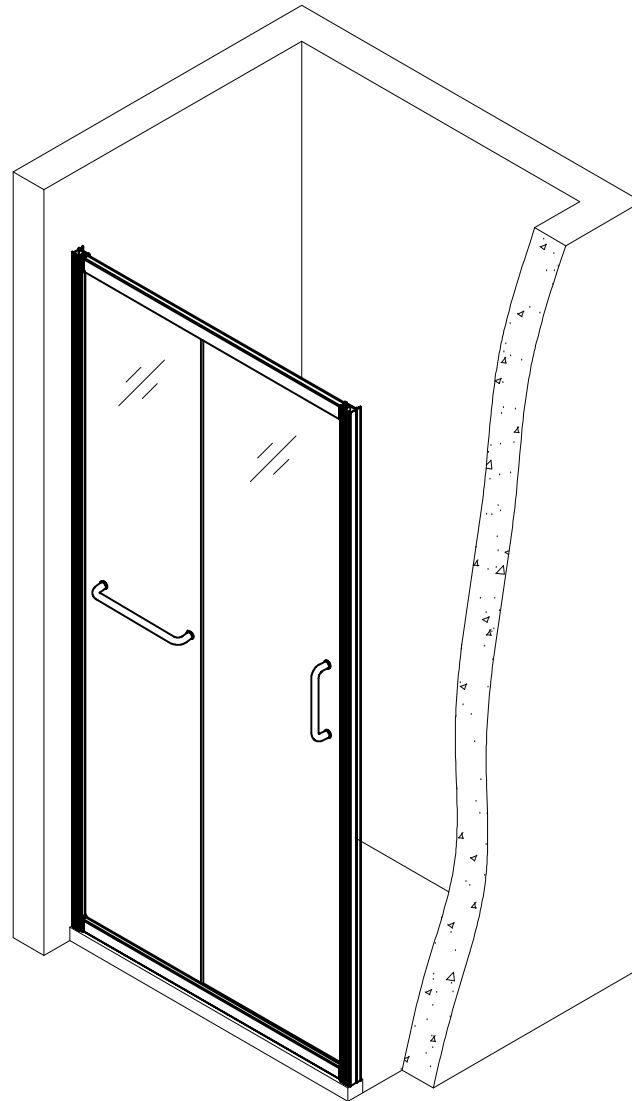
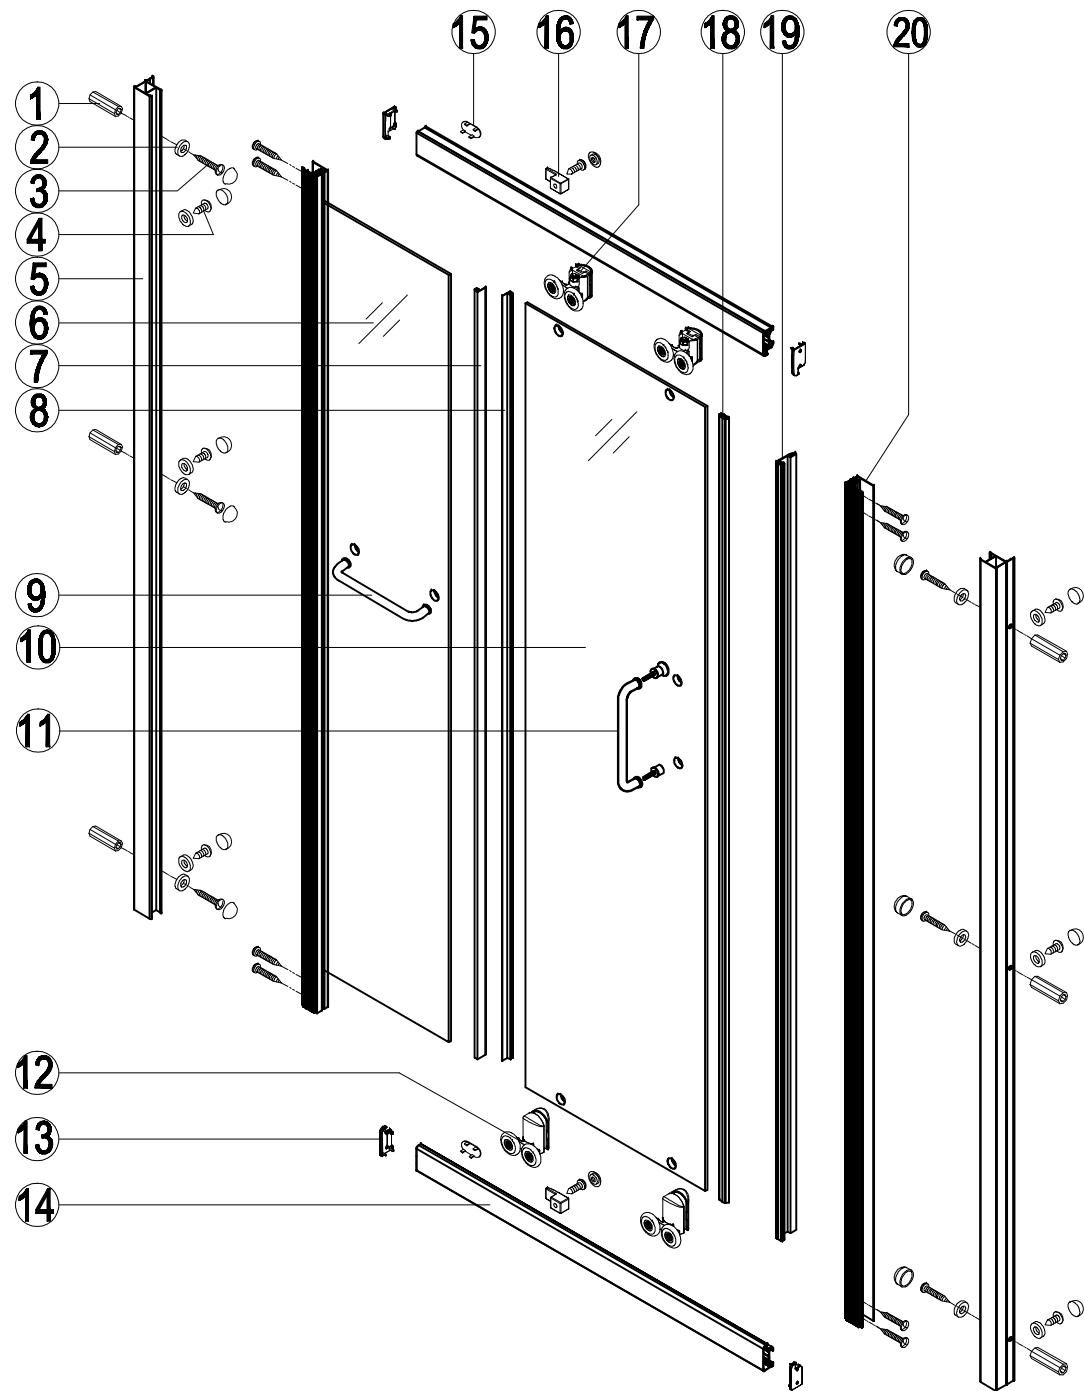



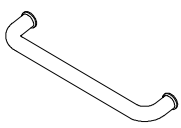


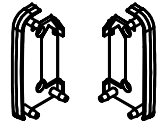
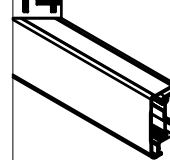

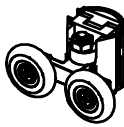



INSTALLATION MANUAL





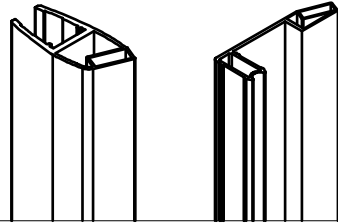




1  6Pcs	2  12Pairs	3  14Pcs	4  8Pcs	5  2Pcs	6  1Pc	7 1730mm  1Pc	8 1795mm  1Pc
9  1Pc	10  1Pc	11  1Pc	12  2Pcs	13 L R  2Pairs	14  2Pcs	15  2Pcs	16  2Pcs
17  2Pcs	18 + 19  1Pair	20  1Pc	Tools:				

Ø6mm 

Ø3.2mm 

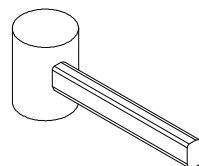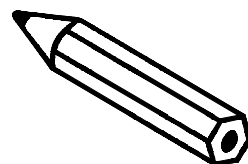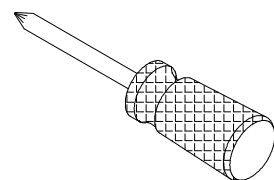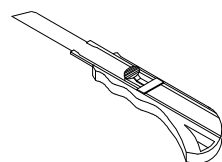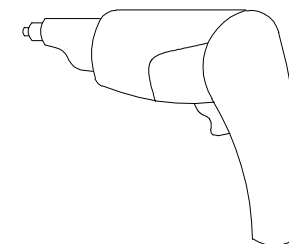




2 mm




2.5mm



4 mm

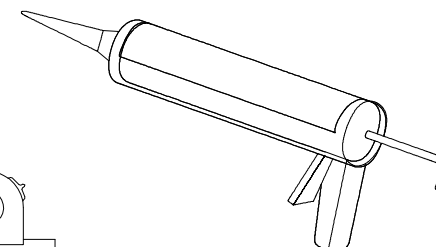

1

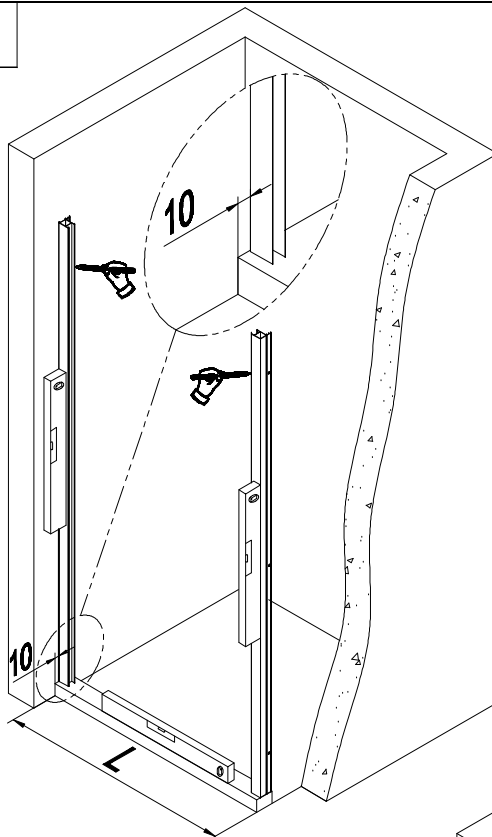

1219



L

1179-1219


1524

1484-1524


The top and bottom rail
can be cut short
according to the actual
situation when the
installation space is
less than 1179 or 1484mm

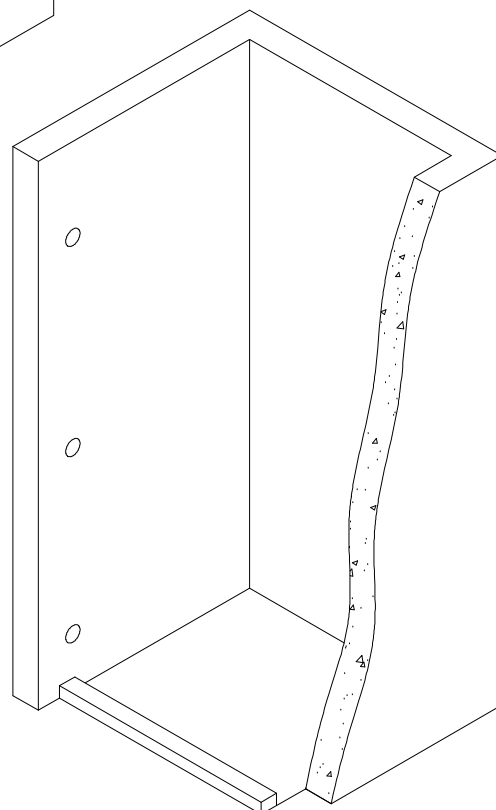


1-1




1-2




1-3




2

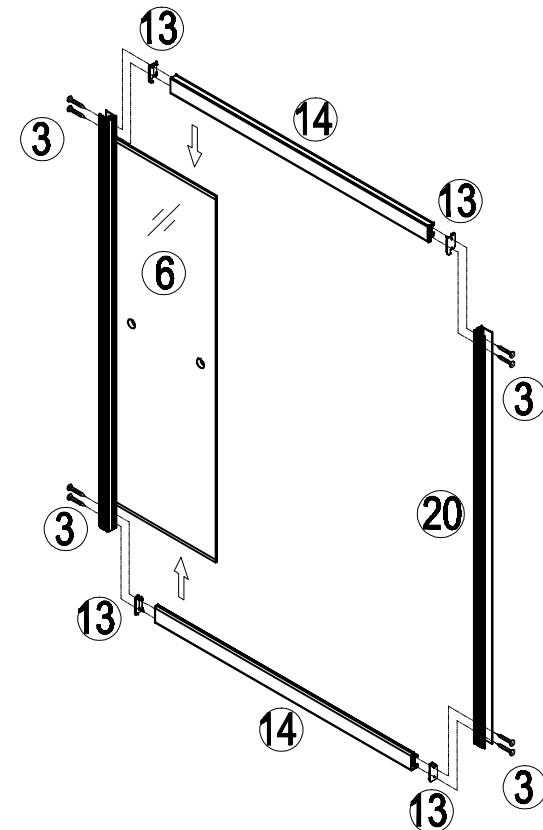




2-1

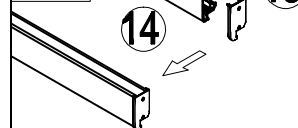


2-2

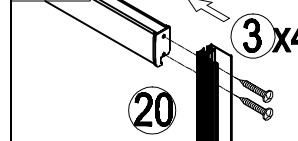


2-3

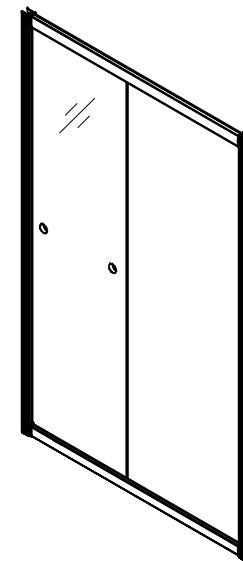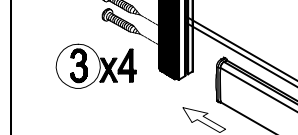


3

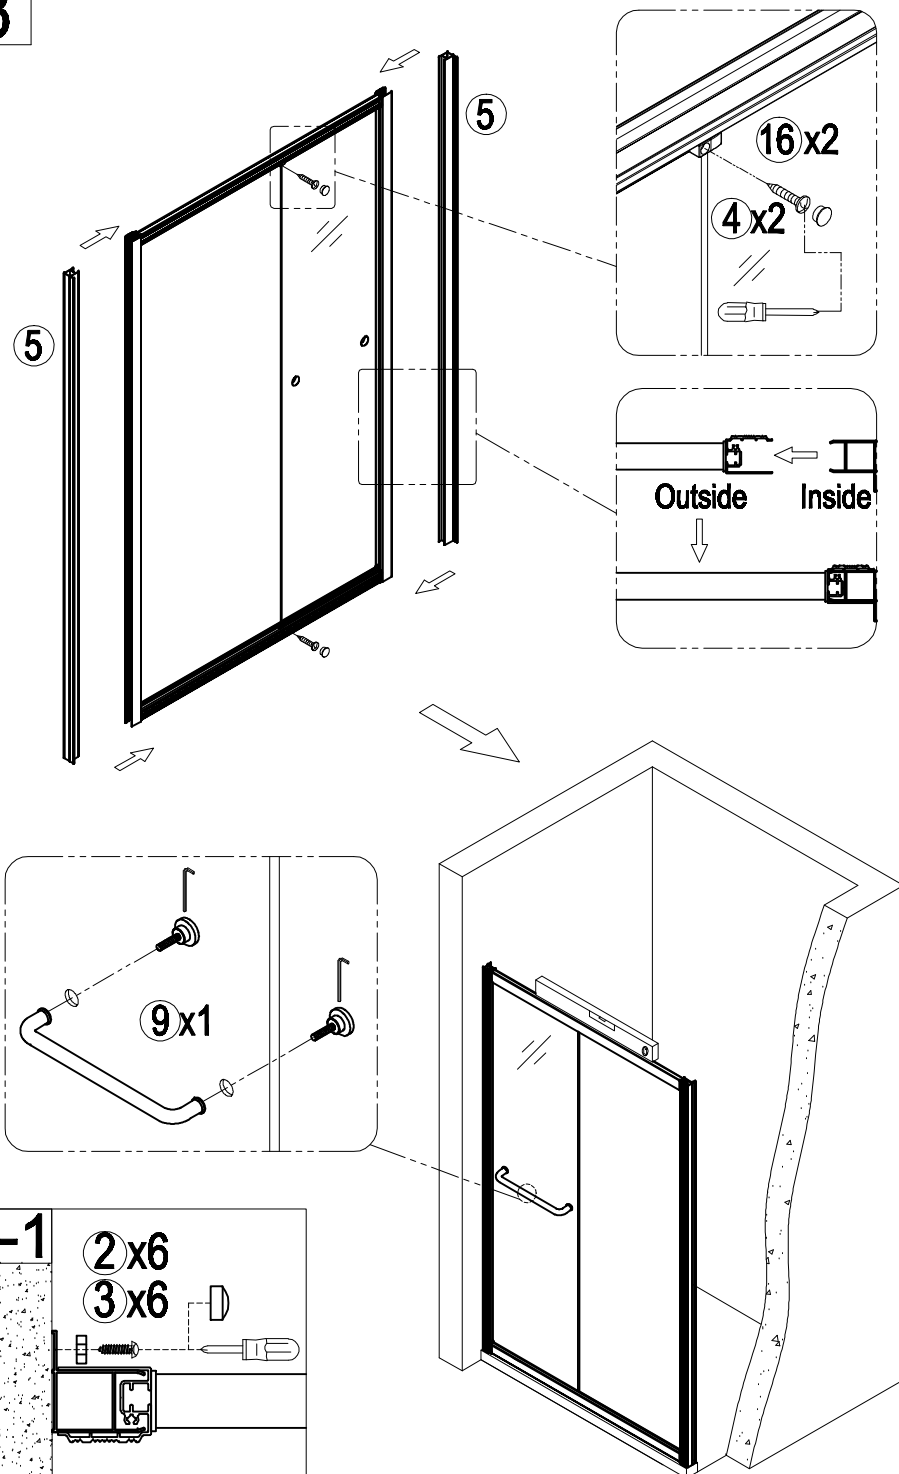


4

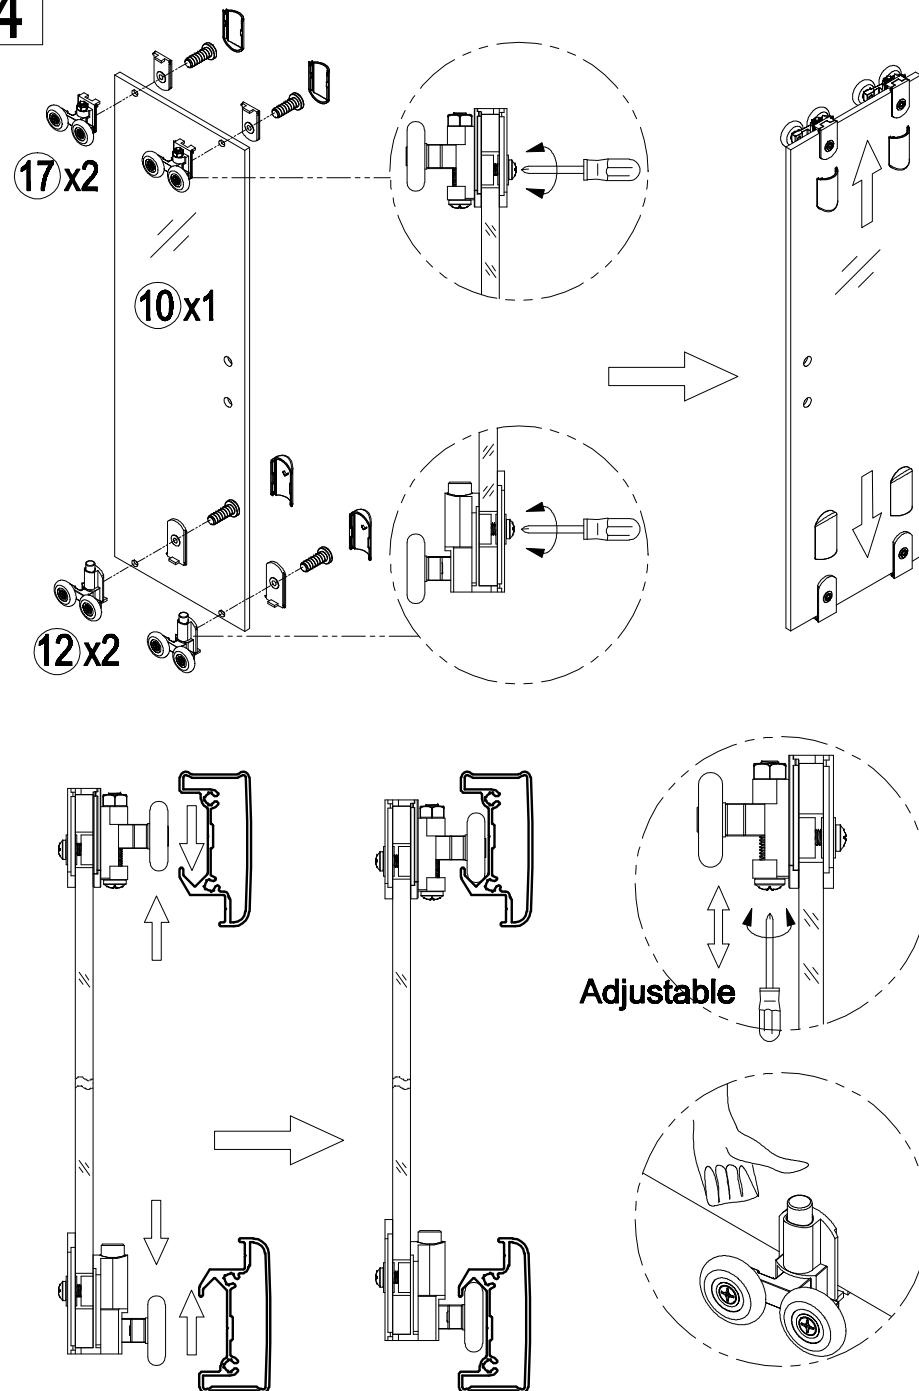

5

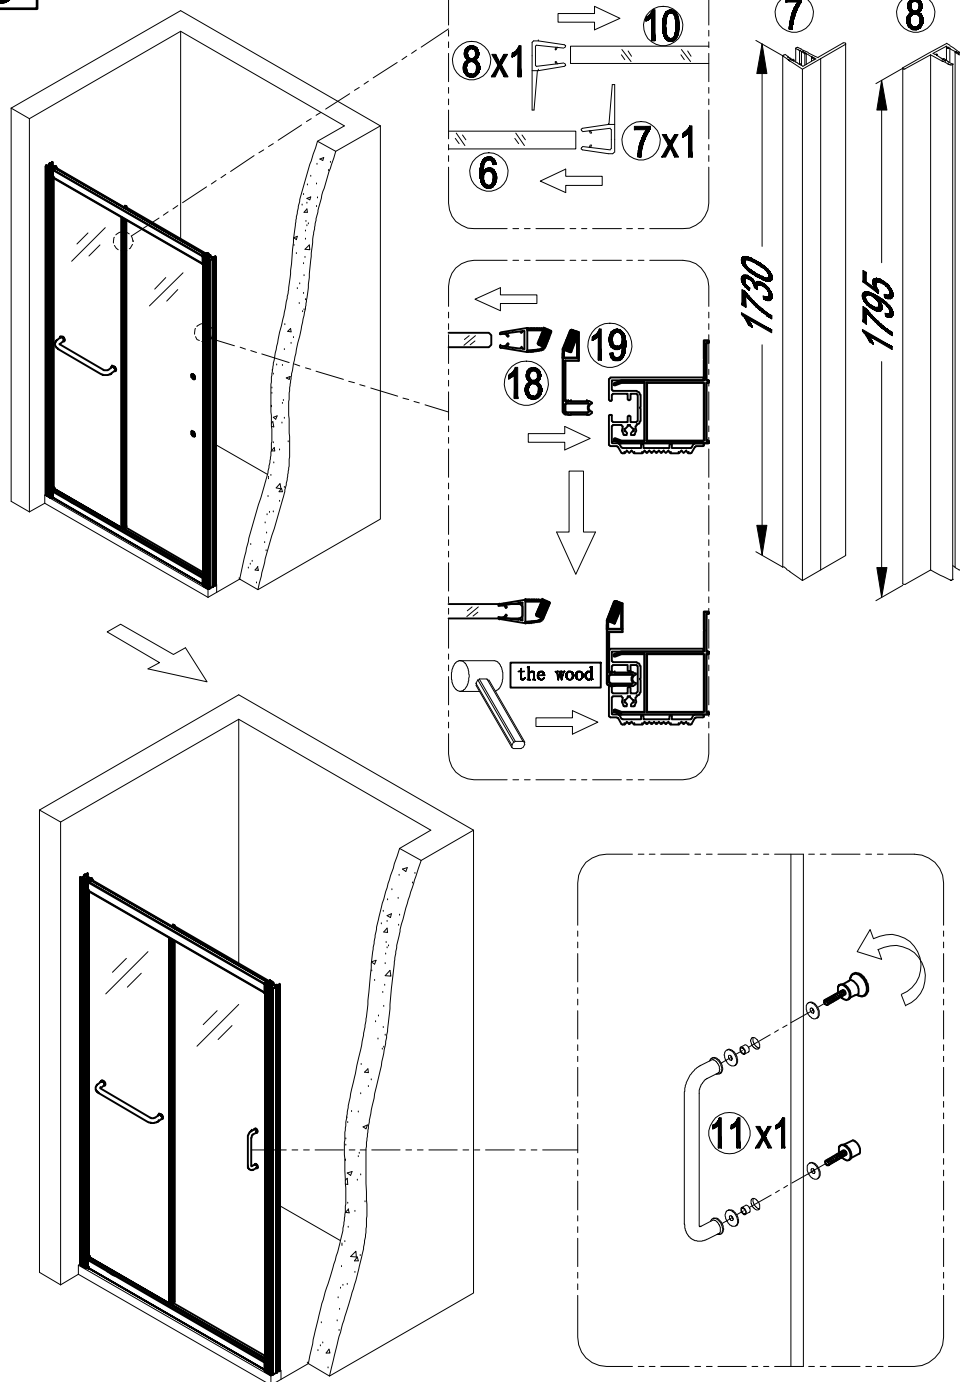

6

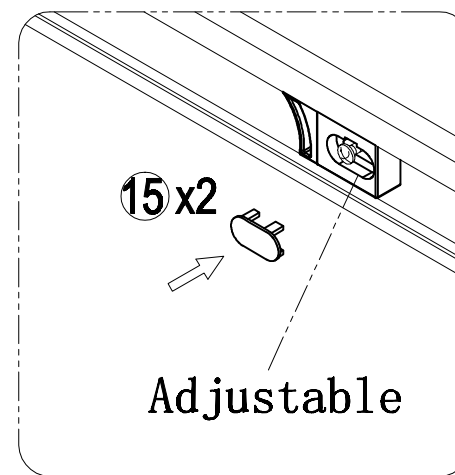


6-1

Ø3.2mm
0-20mm adjust

6-2

2x6
4x6

6-3

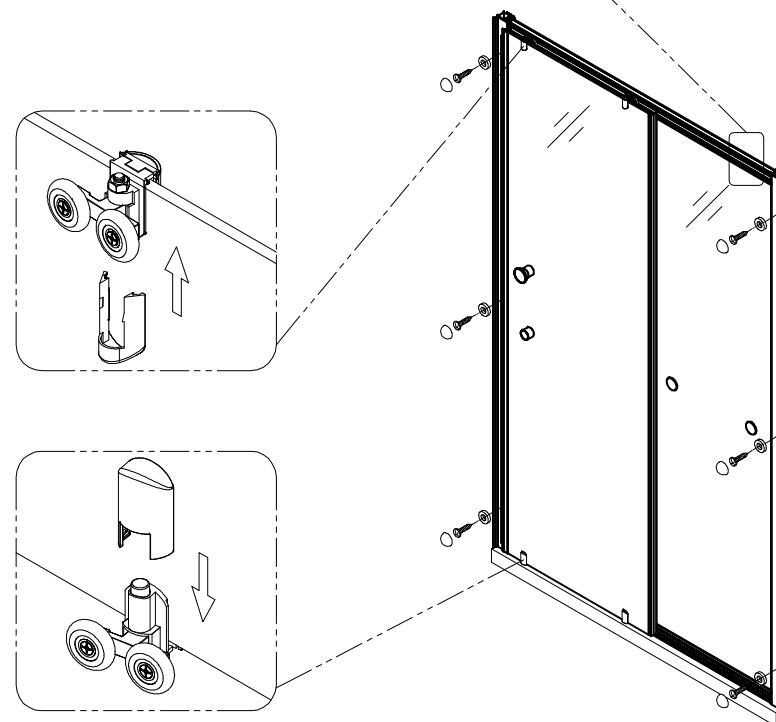

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly .
Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

