




Item # : W52BOSD  
Assembly Instructions

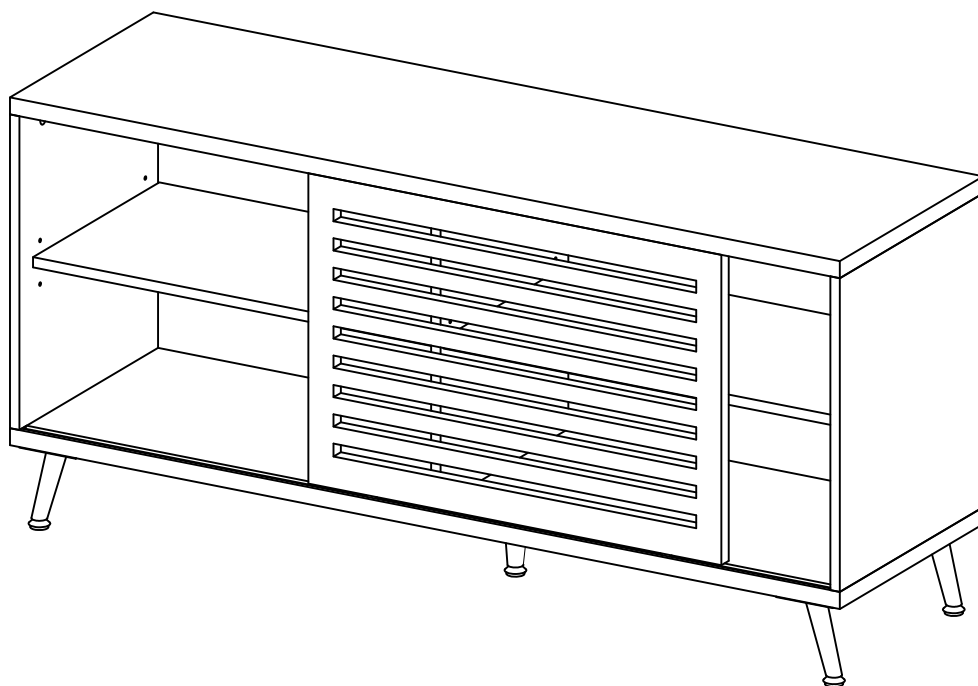


*Please visit our website for the most current instructions, assembly tips, report damage, or request parts. **[www.walkeredison.com](http://www.walkeredison.com)***


Revised 12/2017

# General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

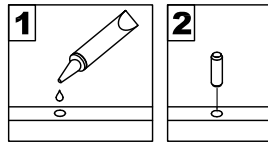


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

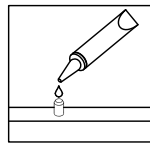


- VI. A Phillips head screwdriver is required for the assembly of this product .

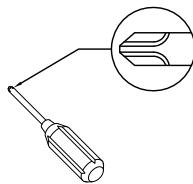








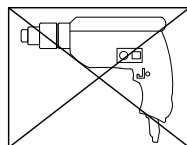






- VII. Power tools should not be used to assemble this product .

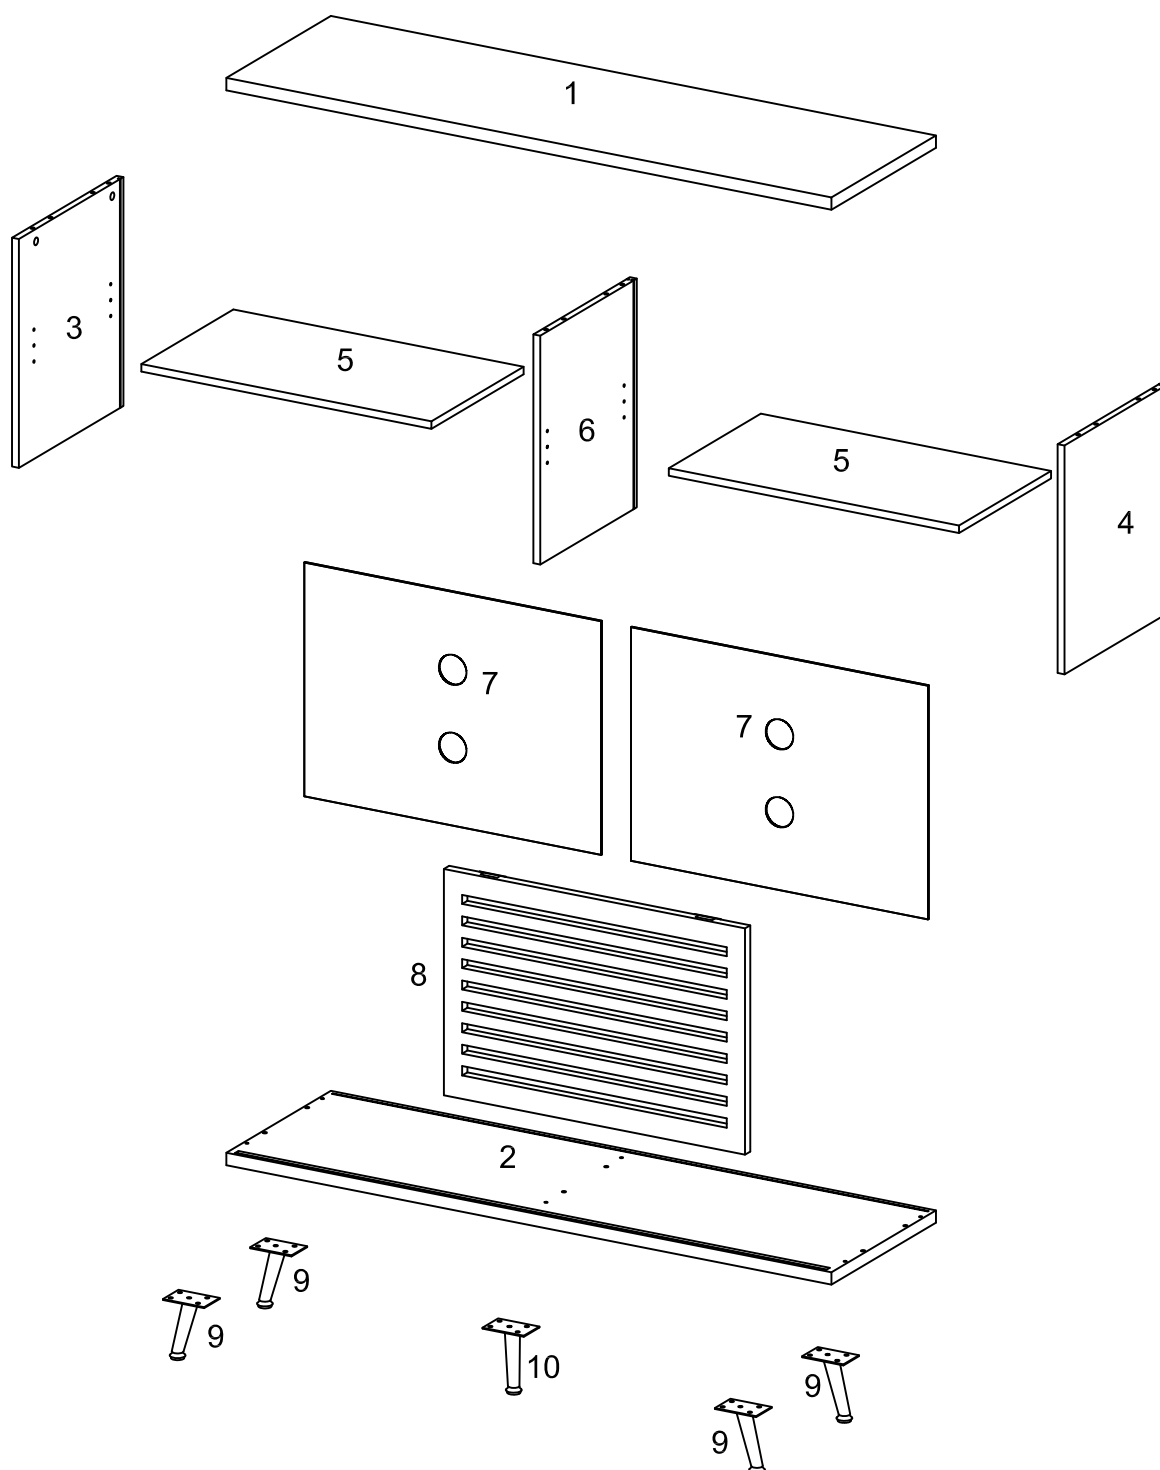


# Parts List



# Hardware List


A		Ø8x30mm	Wooden dowel	12 pcs
B		Ø6x35mm	Cam bolt	6 pcs
C		Ø15x11mm	Cam lock	6 pcs
D		Ø6x50mm	Bolt	6 pcs
E		Ø8x5x16mm	Shelf support pin	8 pcs
F		M4	Wrench	1 pc
G		Ø6x12mm	Screw	20 pcs
H		Ø3x12mm	Screw	16 pcs
J		Ø30	Sticker	6 pcs
K			Glue tube	1 pc
M			Plastic wedge	8 pcs
N		Ø3x17mm	Screw	8 pcs
P			Hinge	2 pcs
Q			Hinge	2 pcs

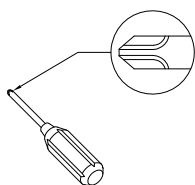

Philips head screwdriver required for assembly  
(not included)


*The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.*

## Step 1

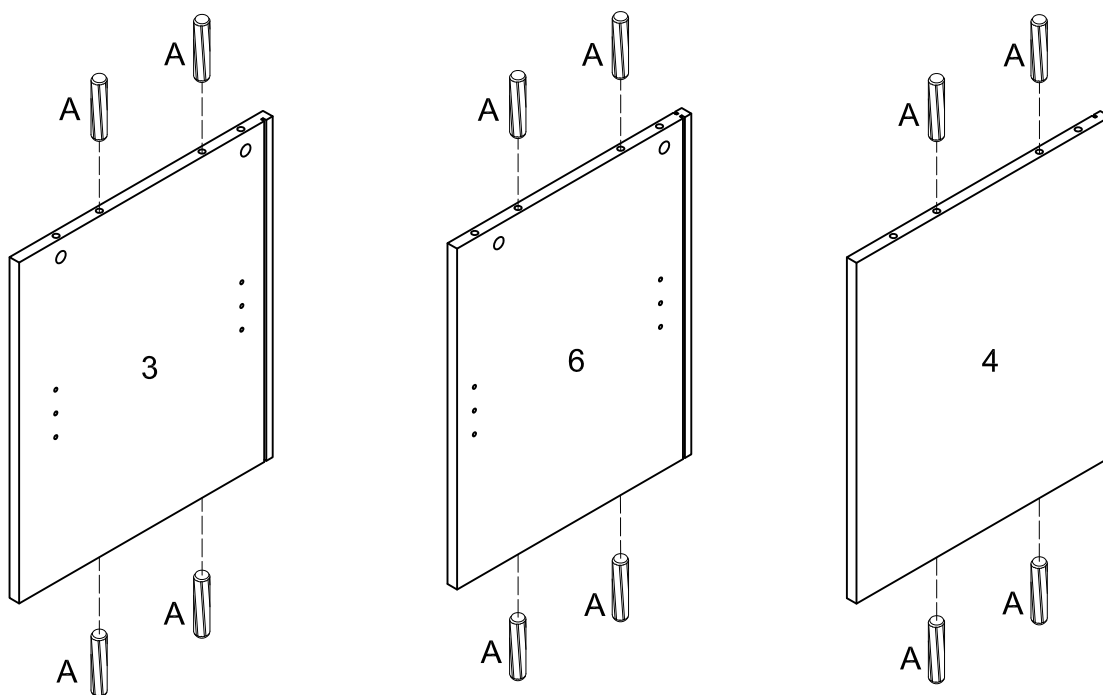


Insert wooden dowel (A) into side panel (3,4,6).

## Step 2

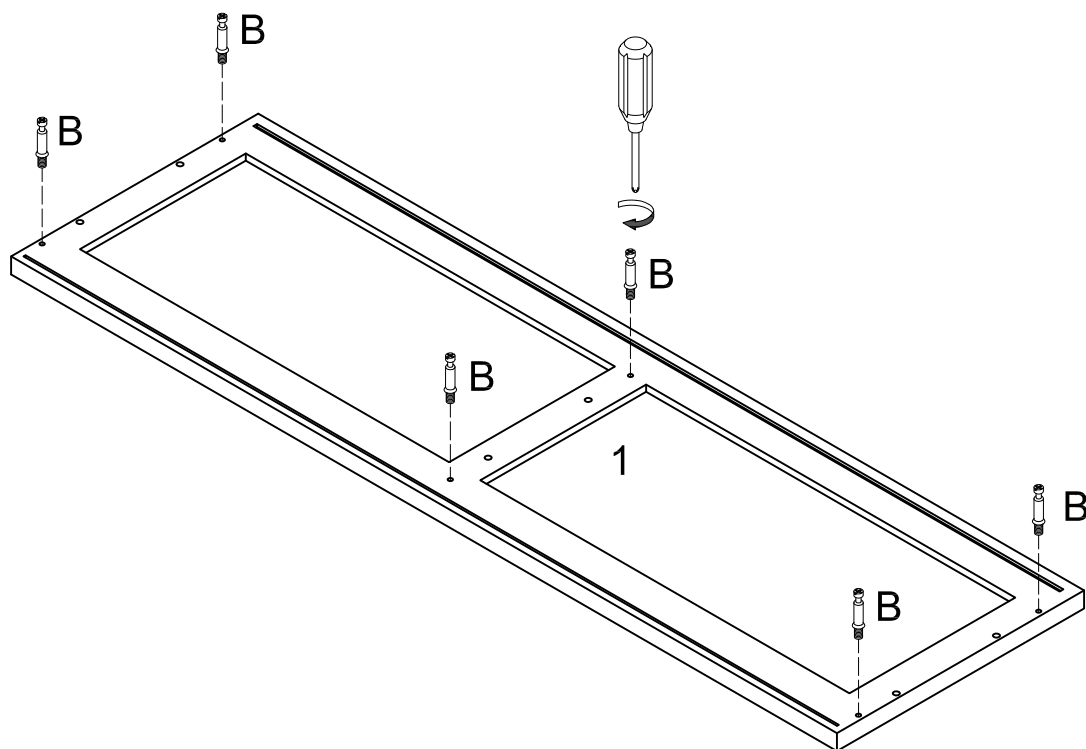


Secure cam bolt (B) to top panel (1).

## Step 3

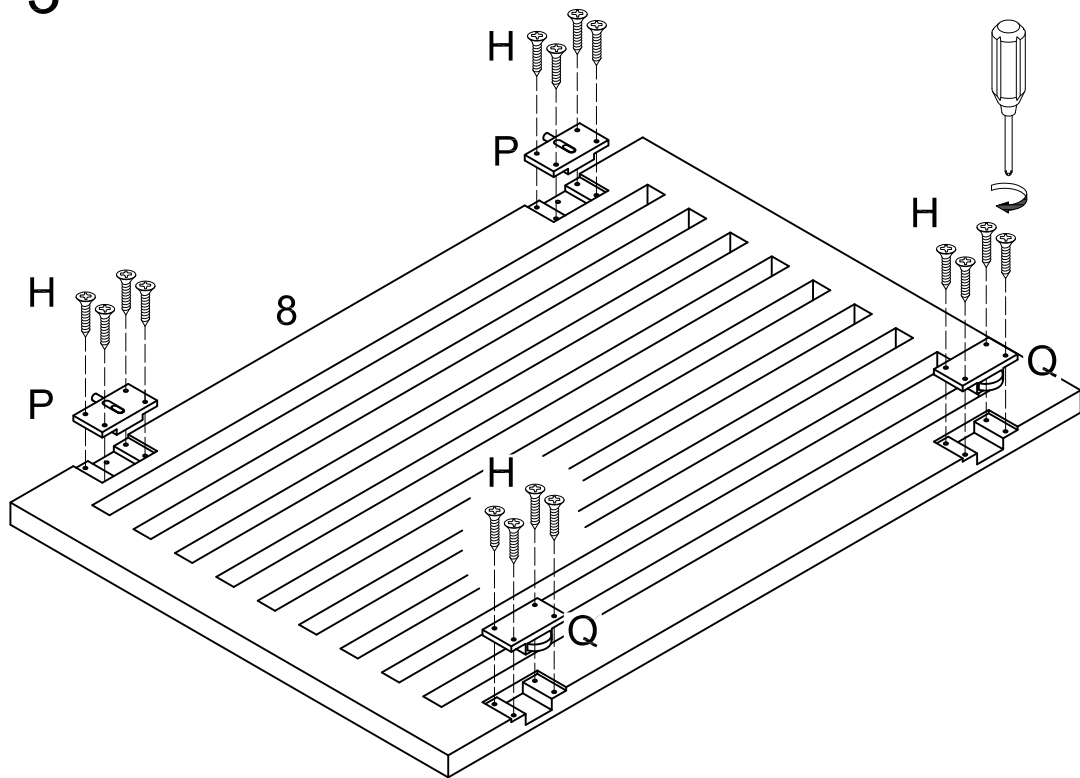


Secure hinge (P,Q) to door (8) with screw (H).

## Step 4

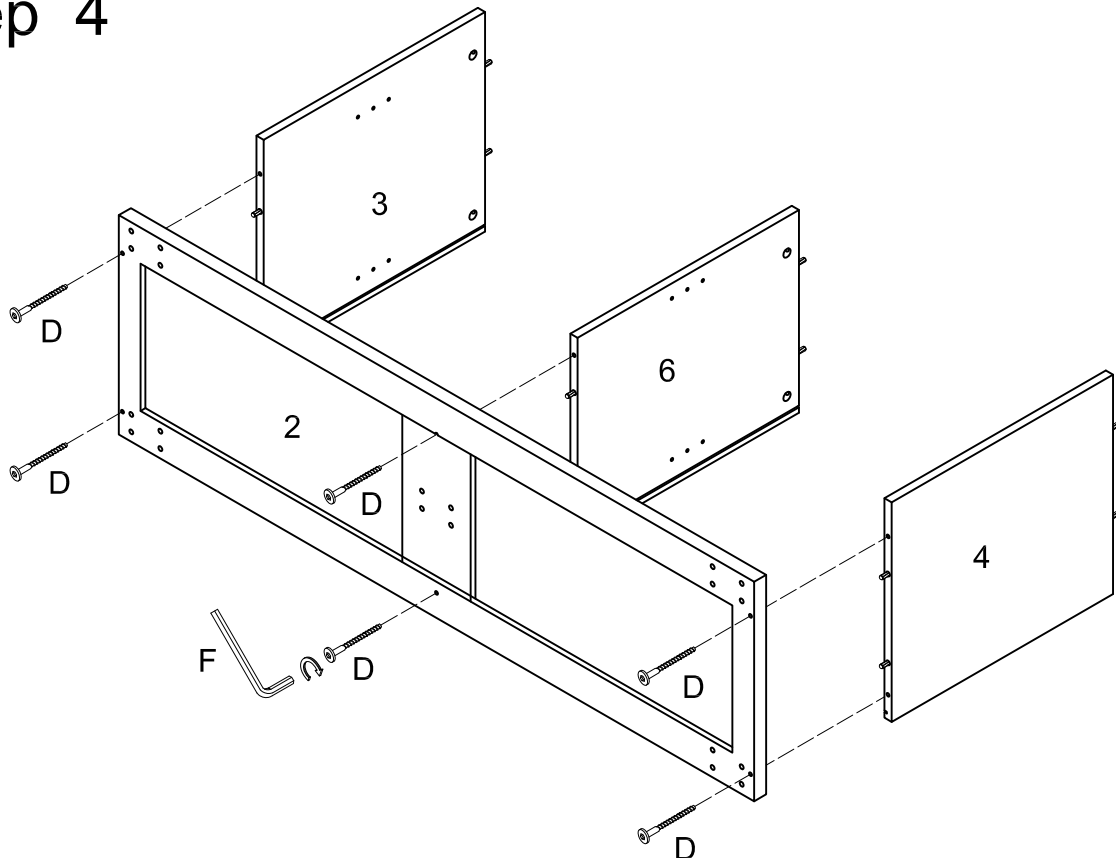


Insert side panel (3,4,6) into bottom panel (2), use wrench (F) to secure them with bolt (D).

## Step 5

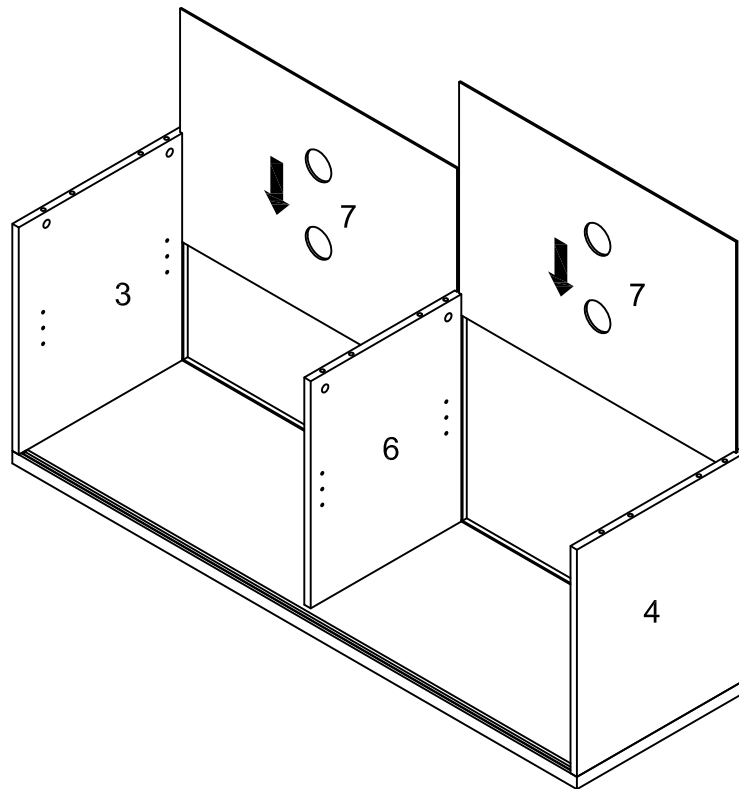


Slide back panels (7) into grooves.

## Step 6

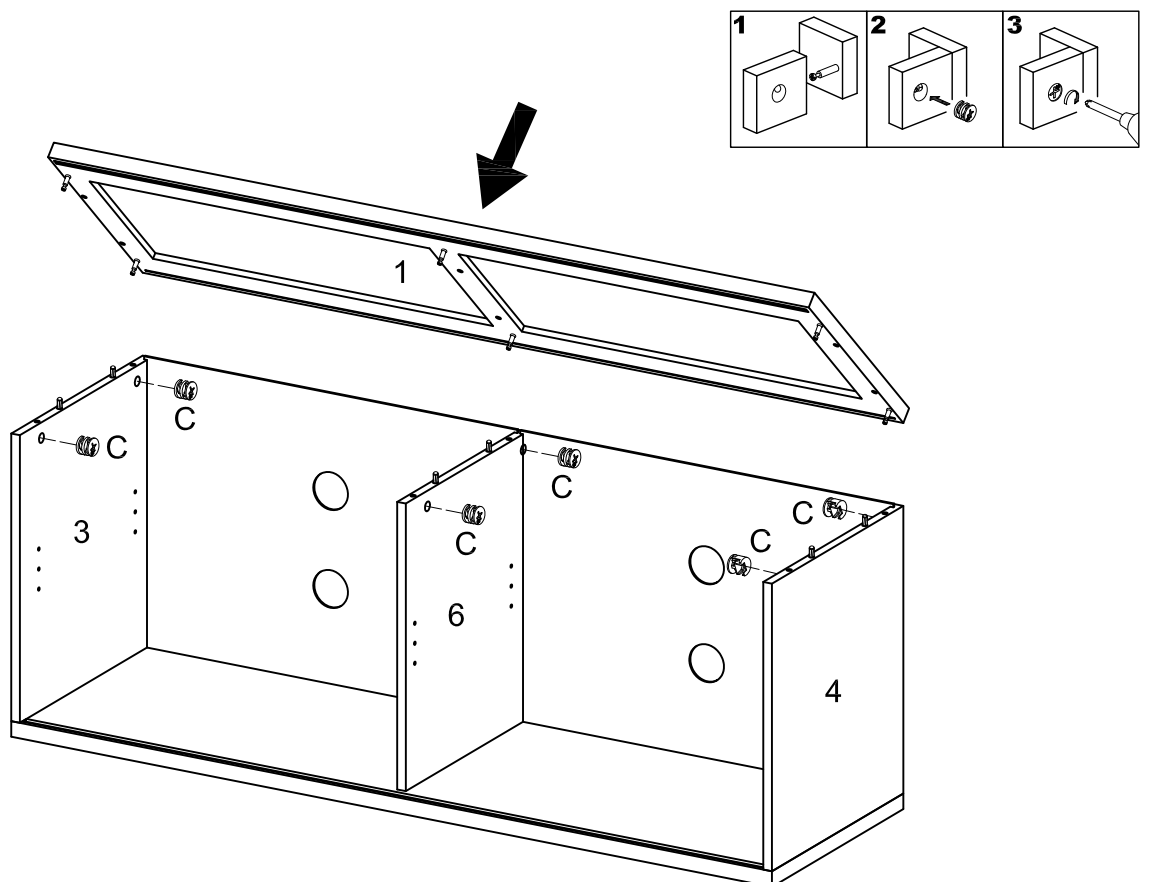


Insert top panel (1) into side panel (3,4,6), then insert and secure cam lock (C) to side panel (3,4,6) to lock it.

## Step 7

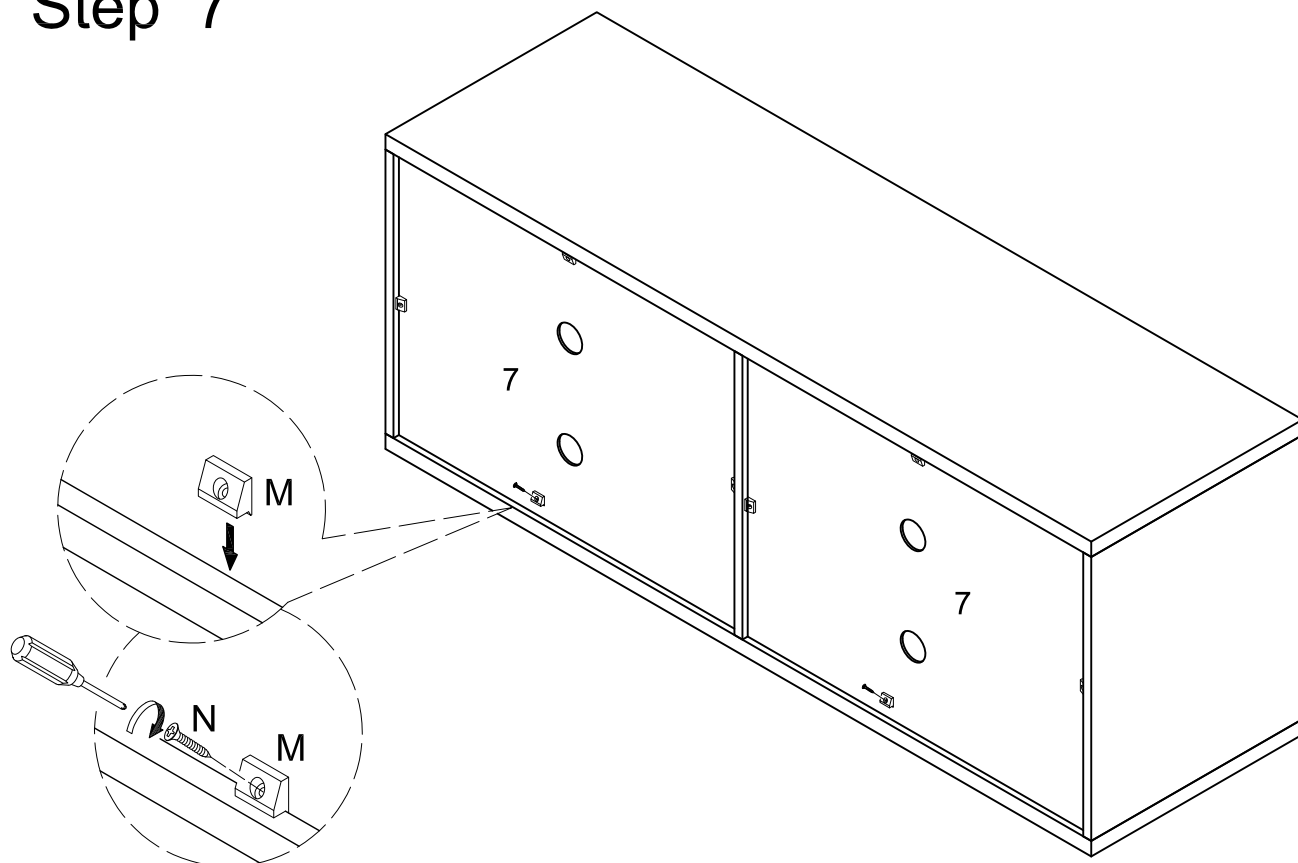

Secure plastic wedge (M) to back panel (7) with screw (N).


## Step 8

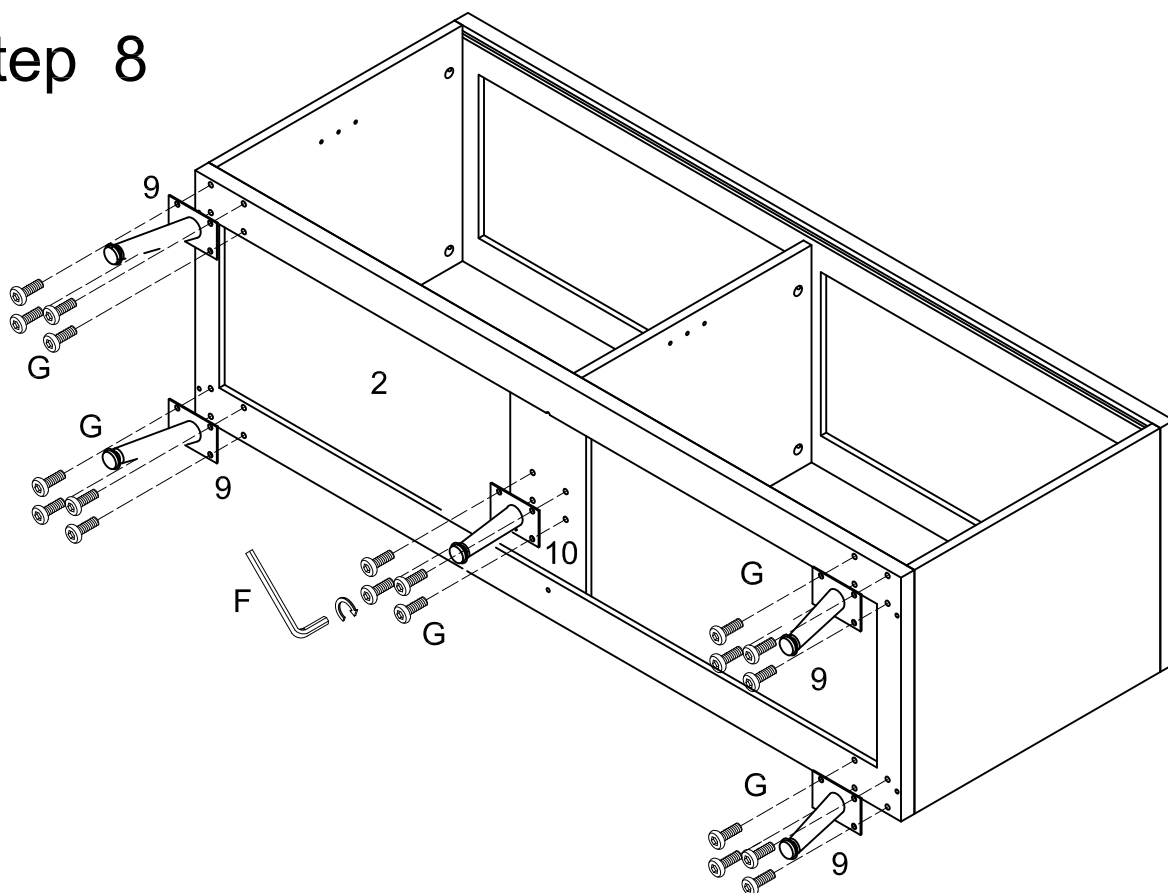

Use wrench (F) to secure legs (9,10) to bottom panel (2).




## Step 9

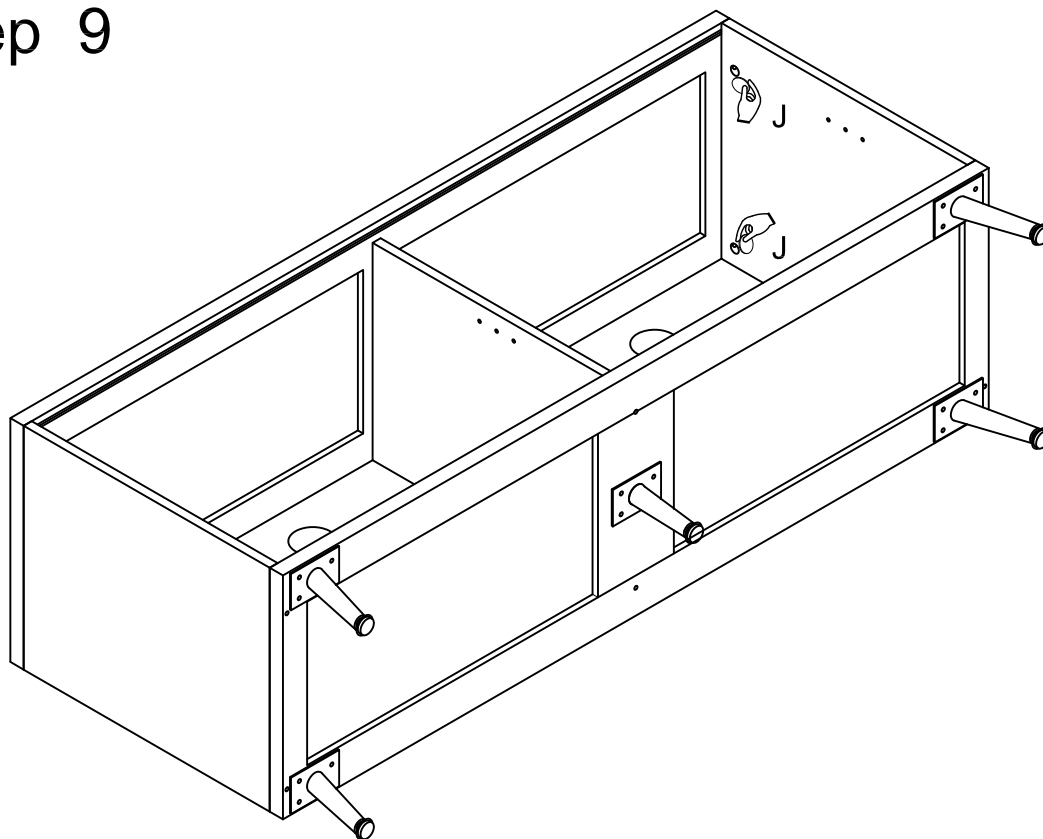


Place sticker (J) over holes as per diagram.

## Step 10

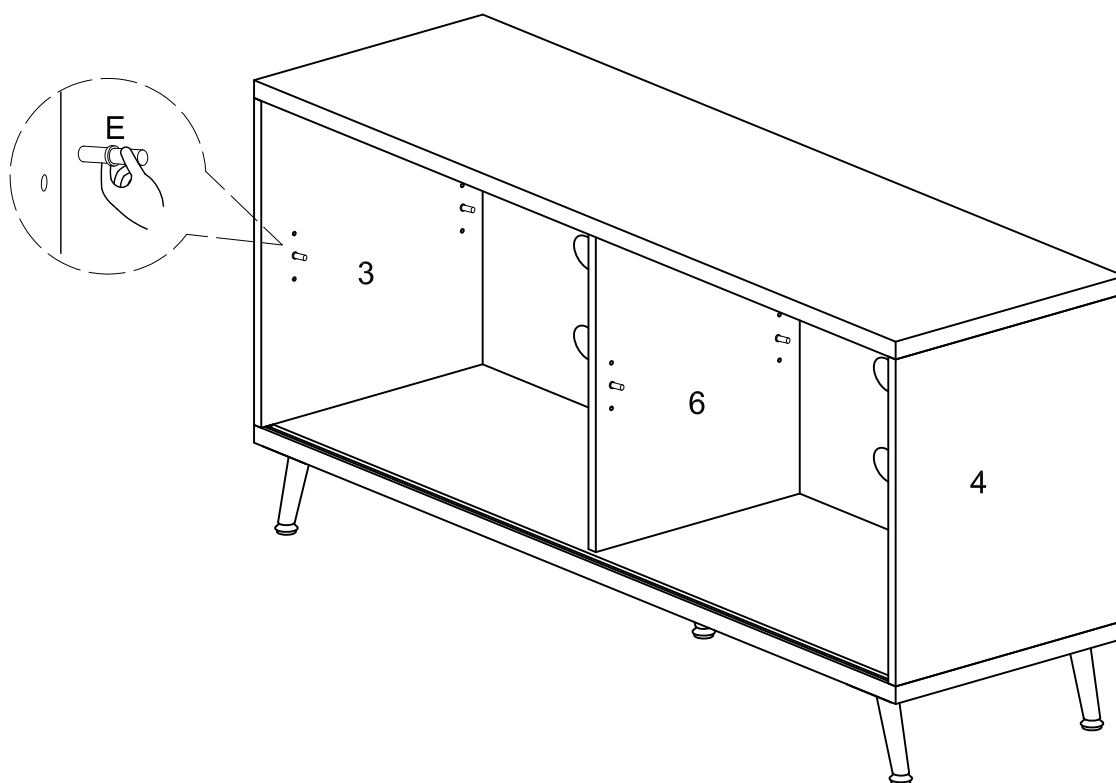


Assemble shelf support pin (E) to side panel (3,4,6).

## Step 11

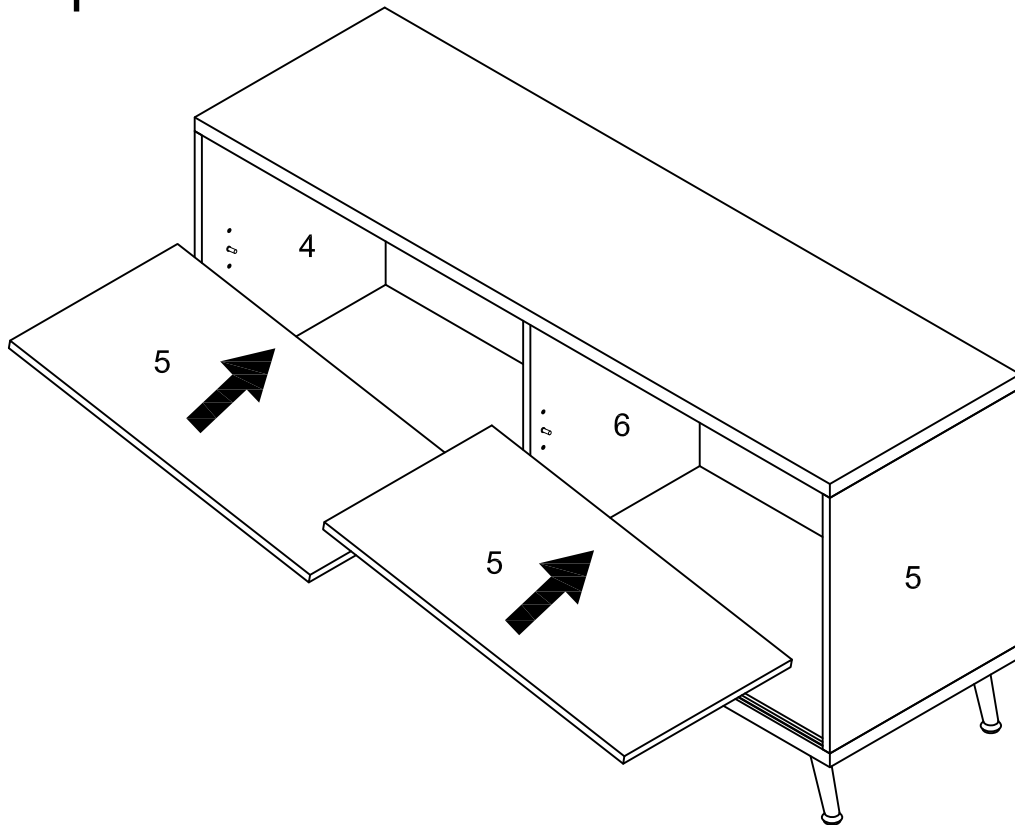


Place shelf (5) on top of support pin.

## Step 12

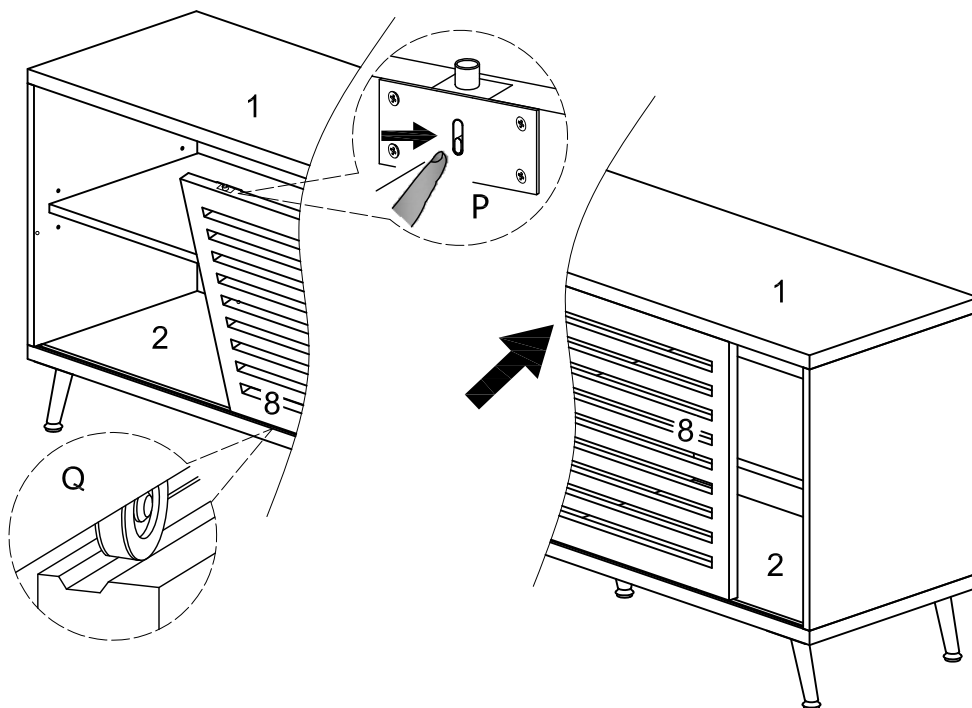

Place door caster into grooves, then press the door lock and click into holes to hold the door.

## Step 13

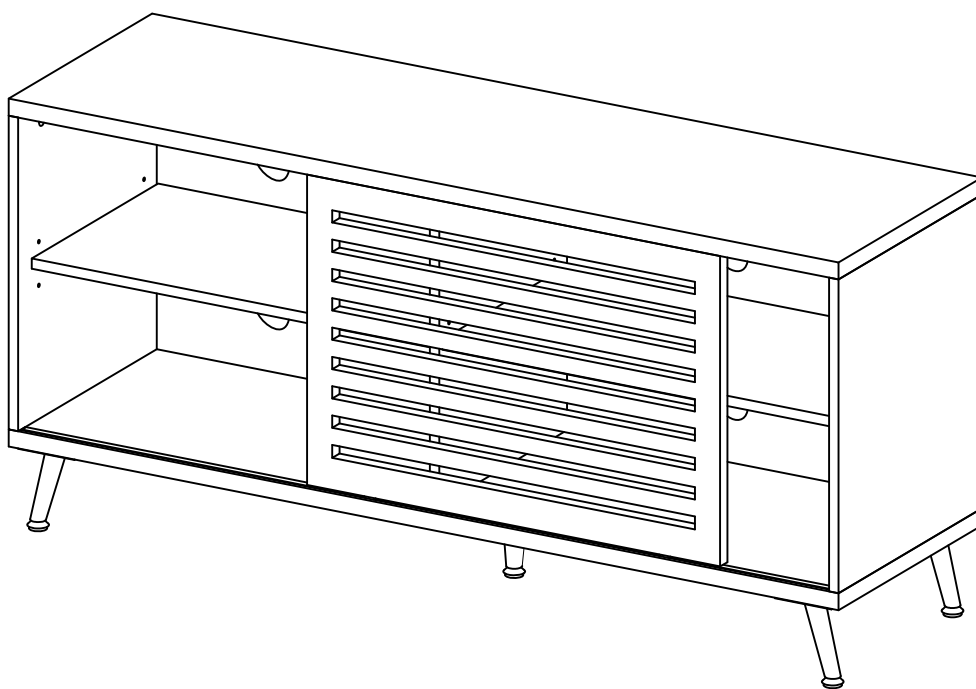

Final Assembly