



ASSEMBLY INSTRUCTIONS

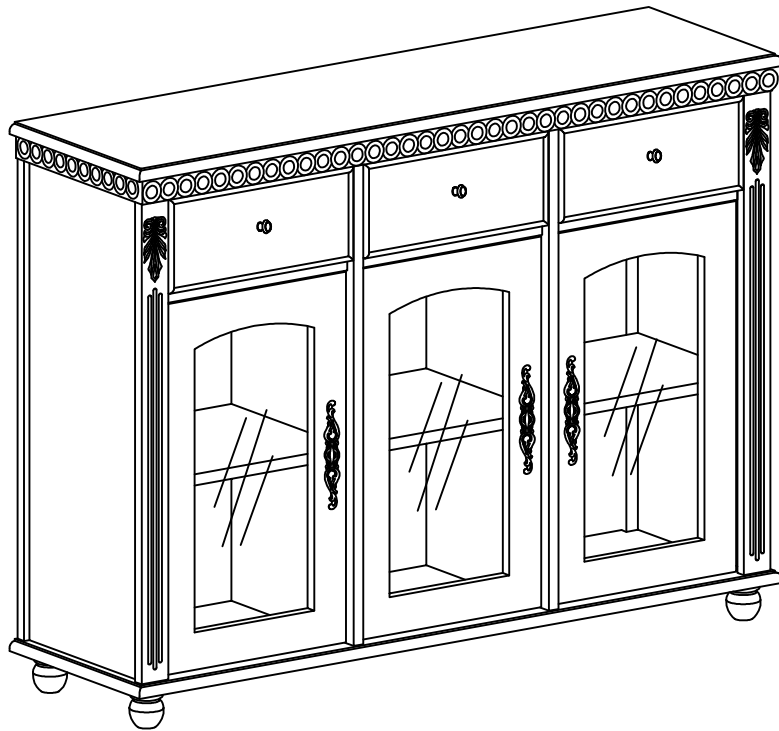

NOTE TO CUSTOMERS:


- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

ASSEMBLY TOOLS REQUIRED(NOT INCLUDED)

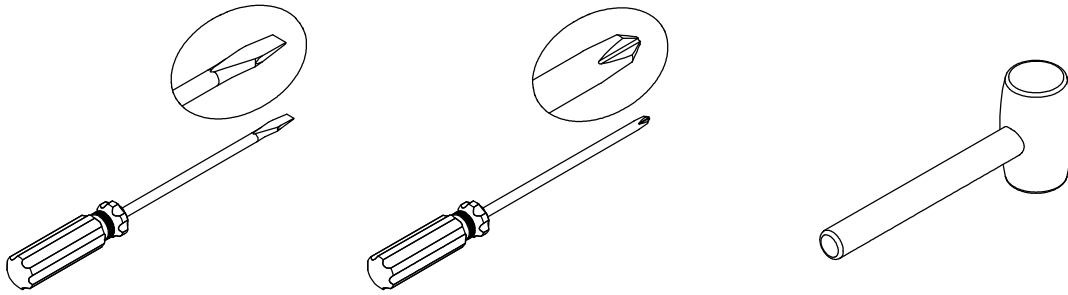


WOOD DOWEL INSTALLATION PROCEDURE


- 1).FILL HOLE 1/4 FULL GLUE.
- 2).GENTLY TAP DOWEL INTO HOLE WITH RUBBER MALLET.
- DO NOT USE HAMMER.
- 3).WIPE AWAY EXCESS GLUE.

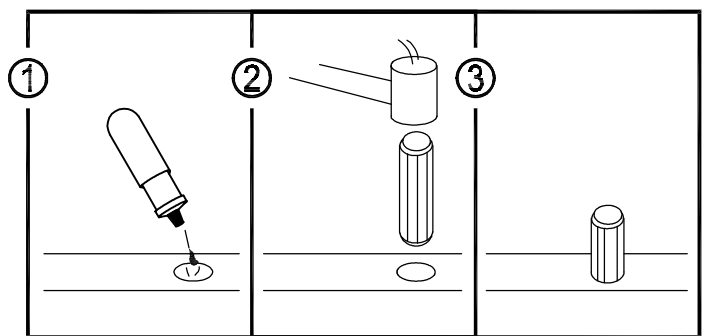







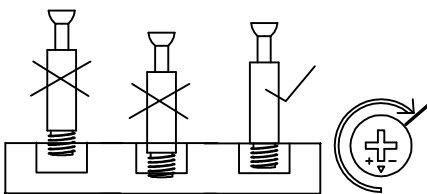







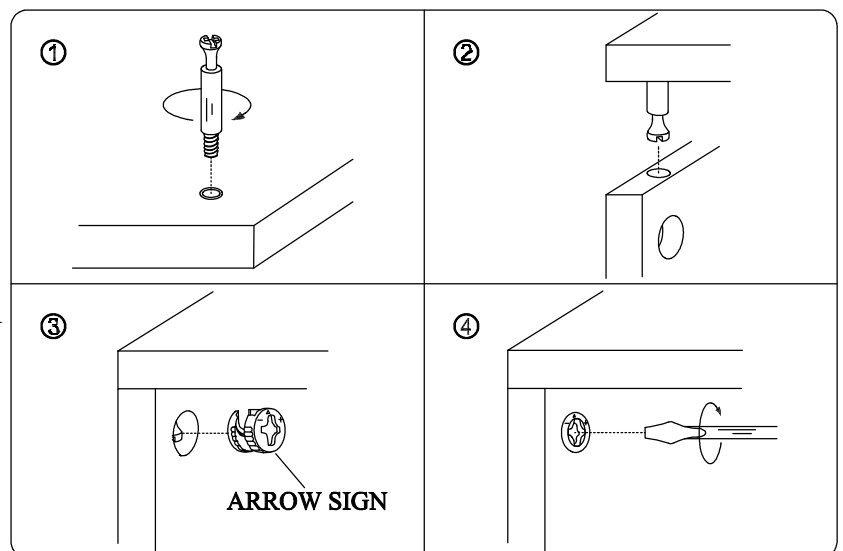








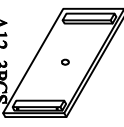






HIDDEN CONNECTOR----ASSEMBLY TECHNIQUES



Note: Please don't over tighten the cam screws. Assure the cam screws fits into the plastic threaded insert. Otherwise the cam nut might not be able to catch the cam screws.




Part List:

			
A1 1PC Left Divider	A2 1PC Right Divider	A3 1PC Middle Shelf	A4 1PC Left Side Panel
			
A5 1PC Right Side Panel	A6 1PC Top Panel	A7 1PC Bottom Panel	A8 2PCS Back Panel
			
A9 1PC Back Panel	A10 2PCS Left Door	A11 1PC Right Door	A12 3PCS Drawer Front Panel
			
A13 6PCS Drawer Side Panel	A14 3PCS Drawer Back Panel	A15 3PCS Drawer Bottom Panel	A16 2PCS Adjustable Shelf
			
A17 1PC Middle Adjustable Shelf	A18 4PCS Leg	A19 1PC Middle Leg	Glue
Hardware :			
			
B1 20SETS Camlock	B2 10PCS Wood Dowel	B3 24PCS Screw	B4 24PCS Screw
			
B5 12PCS Screw	B6 3SETS Drawer Knob		
			
B7 12PCS Shelf Support	B8 3SETS Magnet	B9 3SETS Door Knob	B10 3SETS Stopper

Step 1


B10:  3SETS

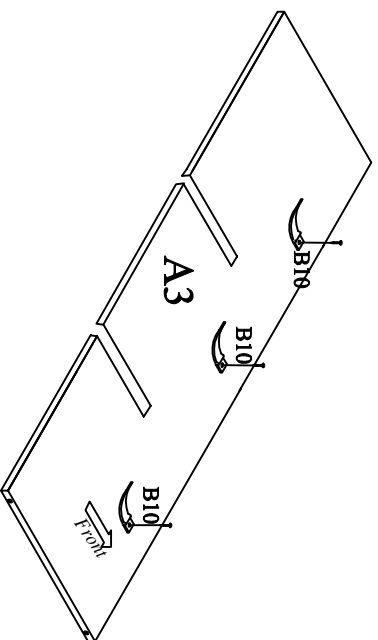

Attach Stoppers B10 to Middle Shelf A3 using included Screws.



Step 2

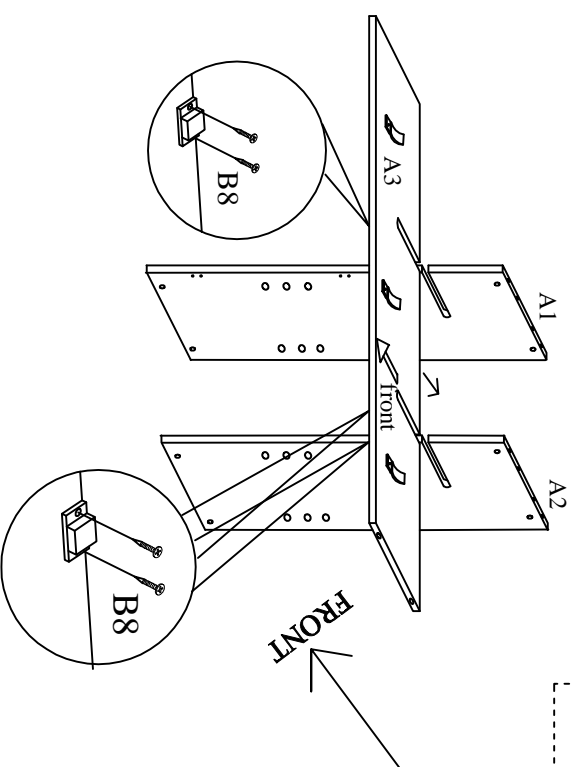
B8:  3SETS



1. Attach Magnets B8 to the bottom of Middle Shelf A3 using included Screws.
2. Attach Middle Shelf A3 to Dividers A1&A2 as above drawing shown.


Step 3

B1:  4SETS
B2:  2PCS

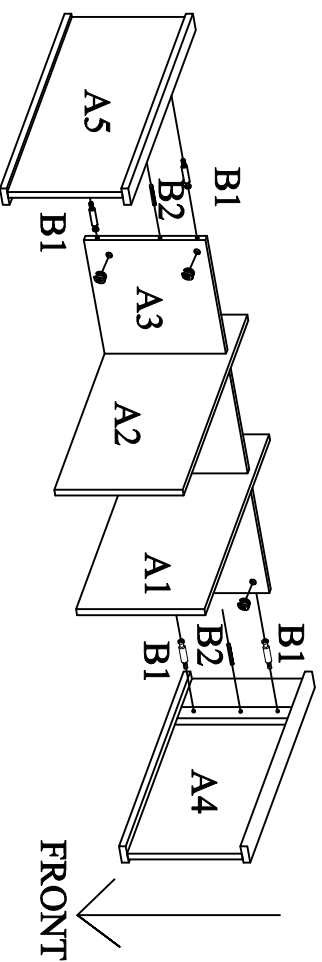



Assemble Side Panels A4&A5 to Middle Shelf A3 using Wood Dowels B2 and Camlocks B1.

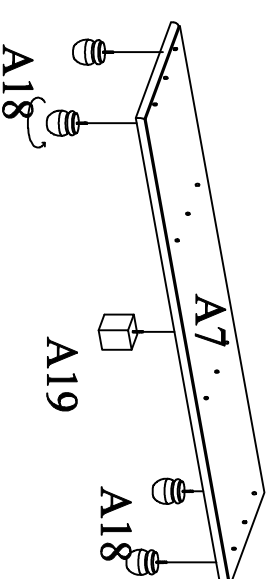
Step 4



Attach Legs A18&A19 to the bottom of Bottom Panel A7 as above drawing shown.



Step 5

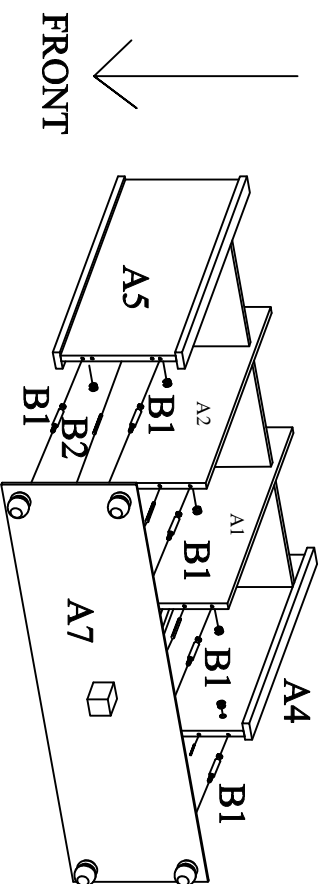
B1:		8SETS
B2:		4PCS



Assemble Bottom Panel A7 to Side Panels A4&A5 and Dividers A1&A2 using Wood Dowels B2 and Camlocks B1.

Step 6


B1:		8SETS
B2:		4PCS

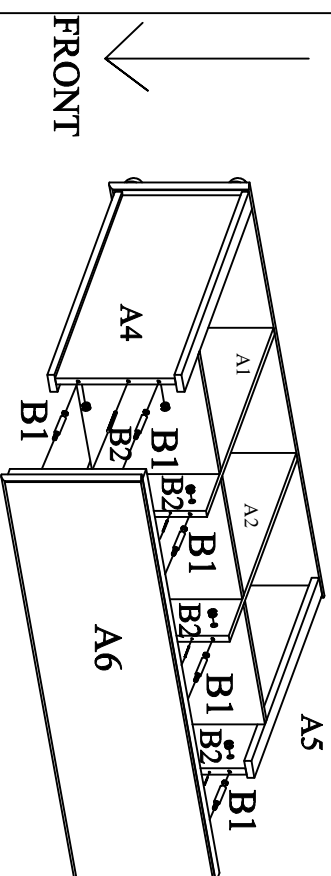

Assemble Top Panel A6 to Side Panels A4&A5 and Dividers A1&A2 using Wood Dowels B2 and Camlocks B1.


Step 7


B3:		24PCS
-----	---	-------

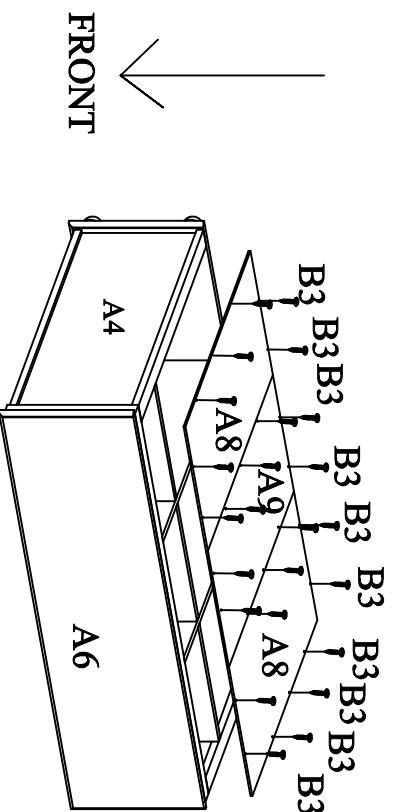

Attach Back Panels A8&A9 to the back of this unit using Screws B3.


Step 8

B7:		12PCS
-----	---	-------

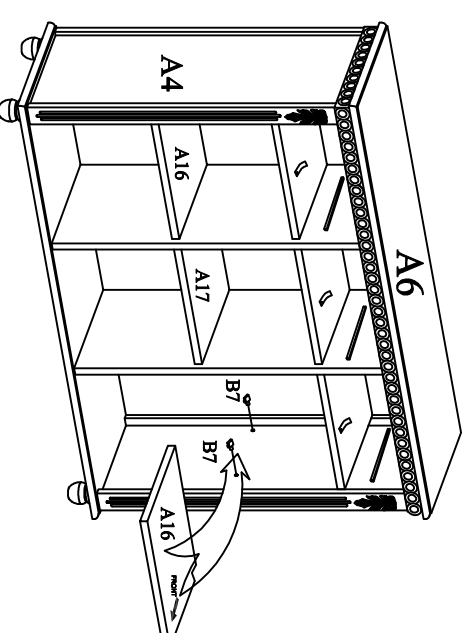


1. Insert Shelf Supports B7 into the holes on Side Panels A4&A5 and Dividers A1&A2.
2. Place Shelves A16&A17 on top of Shelf Supports B7.

Step 9

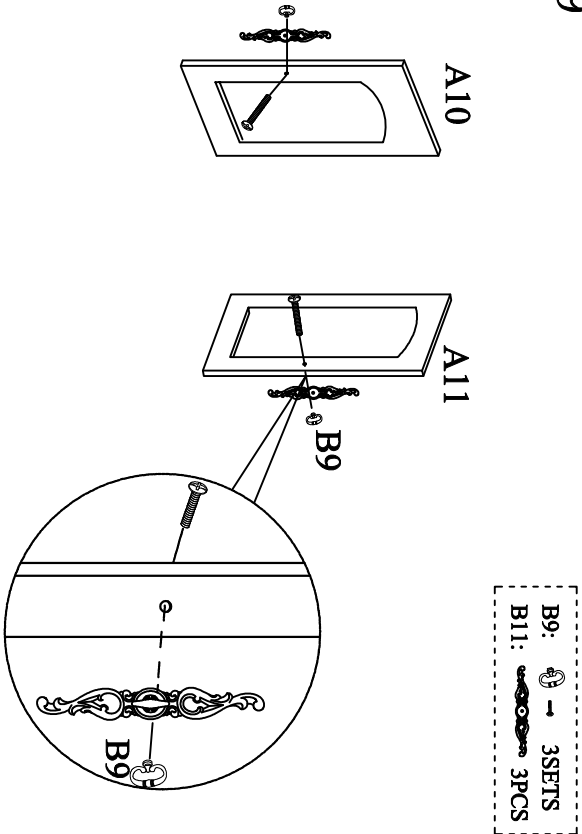


Attach Knobs B9 to Doors A10&A11 using included Bolts.

Step 10

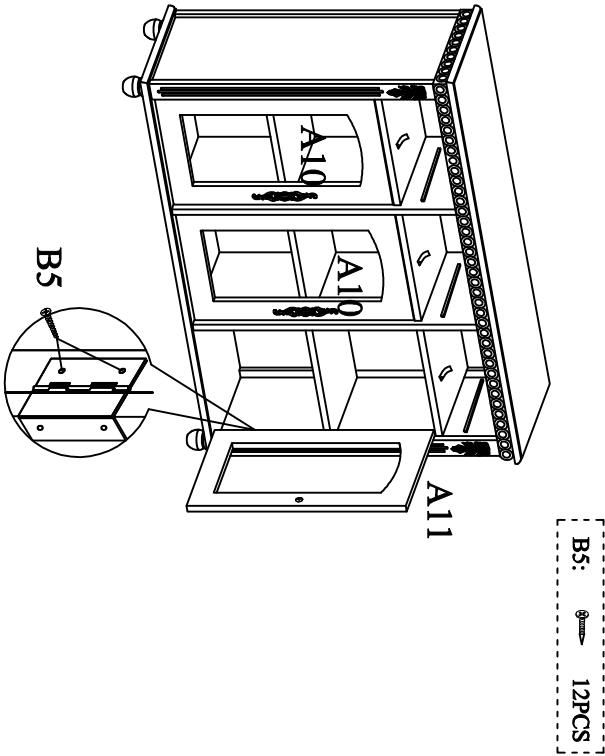

Attach Hinges on Doors A10&A11 to Side Panels A4&A5 and Divider A1 using Screws B5.

Step 11

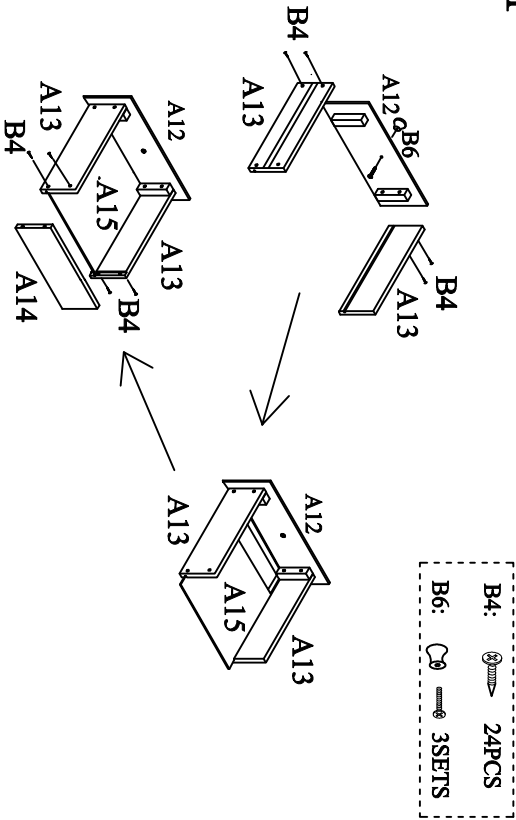

1. Attach Drawer Knob B6 to Drawer Front Panel A12 using included Screw.
2. Assemble Drawer Side Panels A13 to Drawer Front Panel A12 using Screws B4.
3. Insert Drawer Bottom Panel A15 into the grooves on Drawer Side Panels A13 and Drawer Front Panel A12.
4. Assemble Drawer Back Panel A14 to Drawer Side Panels A13 using Screws B4.

Step 12

