


PILASTER UPRIGHT DRAWER BOX TEMPLATE - RIGHT SIDE CABINET WALL

SIDE VIEW OF SLIDE

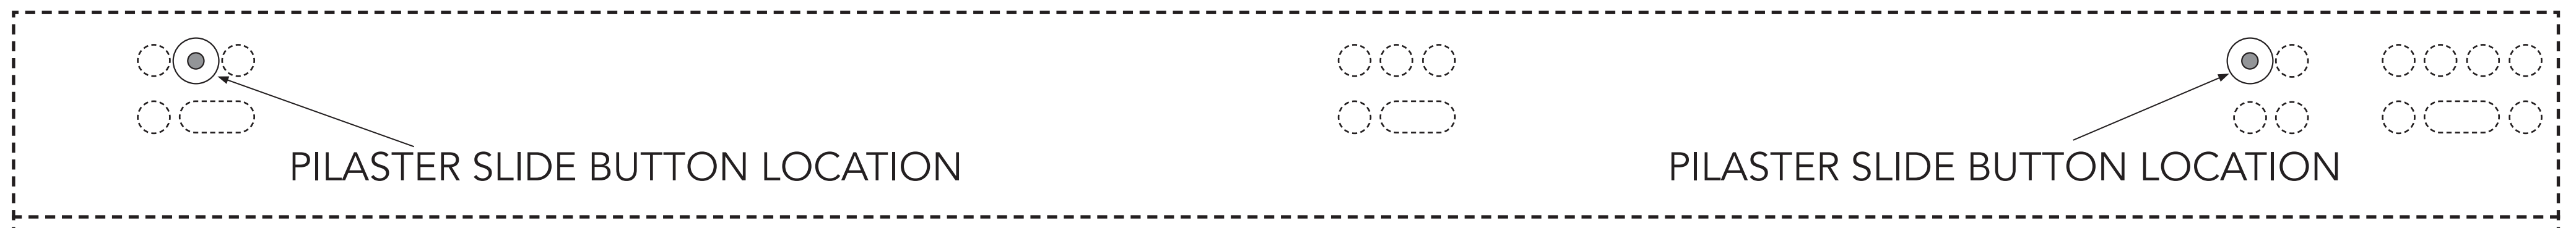

17-9/32"

LEGEND

BRACKET IN XL POSITION ADJUSTS FROM 1-1/2" TO 2" FROM INTERIOR CABINET WALL

BRACKET IN STANDARD POSITION ADJUSTS UP TO 1-3/8" FROM INTERIOR CABINET WALL

BRACKET IN XL POSITION

BRACKET IN STANDARD POSITION

ADJUSTS FROM 1-1/2" TO 2"

ADJUSTS UP TO 1-3/8"

DETERMINE YOUR APPLICATION FROM THE LEGEND AND PUNCH FOR #8 x 1/2" TRUSS HEAD SCREWS

DETERMINE YOUR APPLICATION FROM THE LEGEND AND PUNCH FOR #8 x 1/2" TRUSS HEAD SCREWS


DETERMINE YOUR APPLICATION FROM THE LEGEND AND PUNCH FOR #8 x 1/2" TRUSS HEAD SCREWS

DETERMINE YOUR APPLICATION FROM THE LEGEND AND PUNCH FOR #8 x 1/2" TRUSS HEAD SCREWS

PLACE AT 2-3/8" FROM INSIDE OF CABINET'S FACE FRAME TO AVOID SLIDE OBSTRUCTING CABINET DOOR FROM CLOSING PROPERLY. FOR FRAMELESS CABINETS, PLACE AT 2-3/8" FROM BACK SIDE OF CLOSED CABINET DOOR.

2-3/8"

RIGHT SIDE

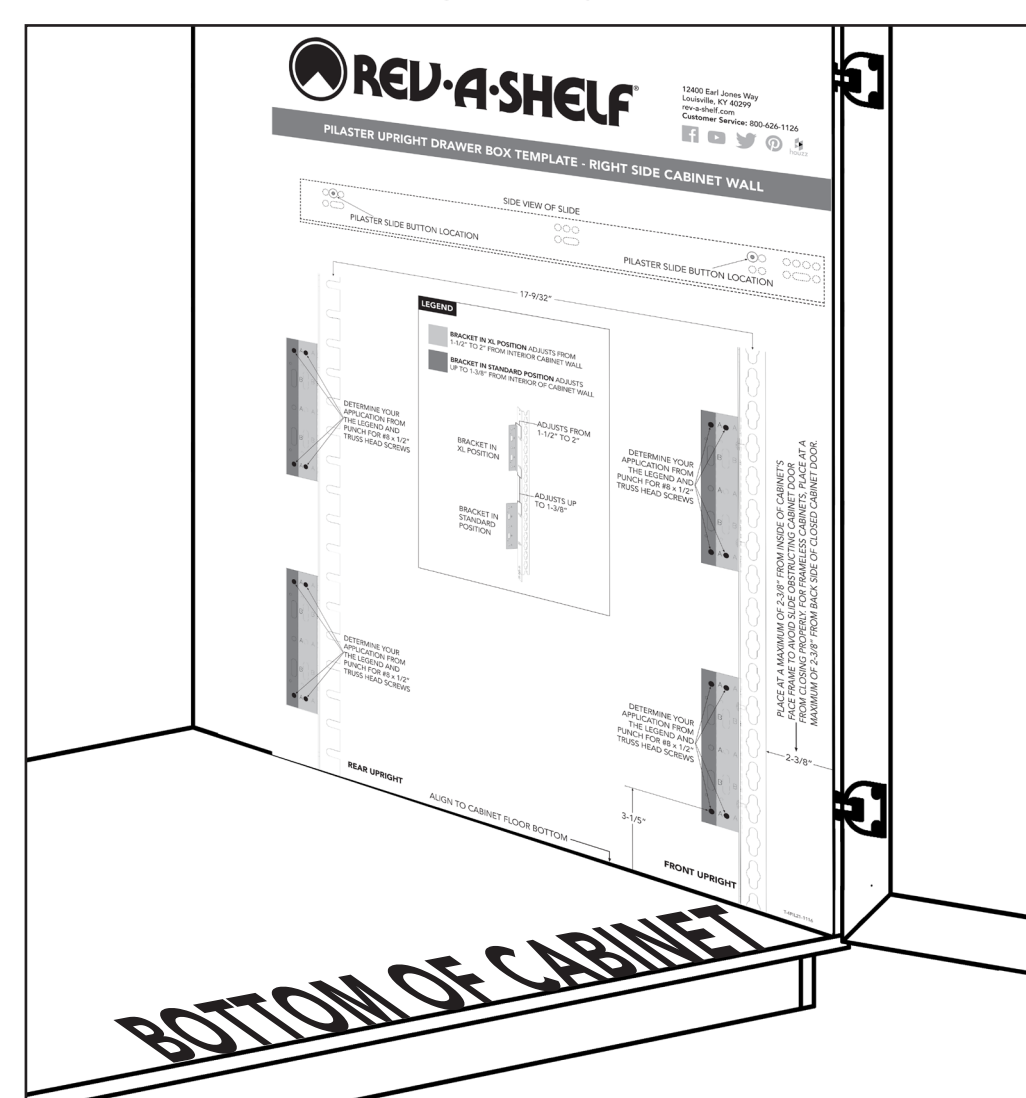

REAR UPRIGHT

FRONT UPRIGHT

PILASTER UPRIGHT DRAWER BOX TEMPLATE - LEFT SIDE CABINET WALL

SIDE VIEW OF SLIDE

