



ASSEMBLY INSTRUCTION **VIDEO**

SKU: VEB

VIEW ON SMARTPHONE



1. Open Camera app



2. Position camera to the QR code



3. Click on the pop-up link


VIEW ON COMPUTER



ASSEMBLY INSTRUCTIONS

SKU : VEB


EAST WEST
FURNITURE, LLC
175 Southbelt Industrial Dr,
Houston, TX 77047
Email : info@eastwestfurniture.net

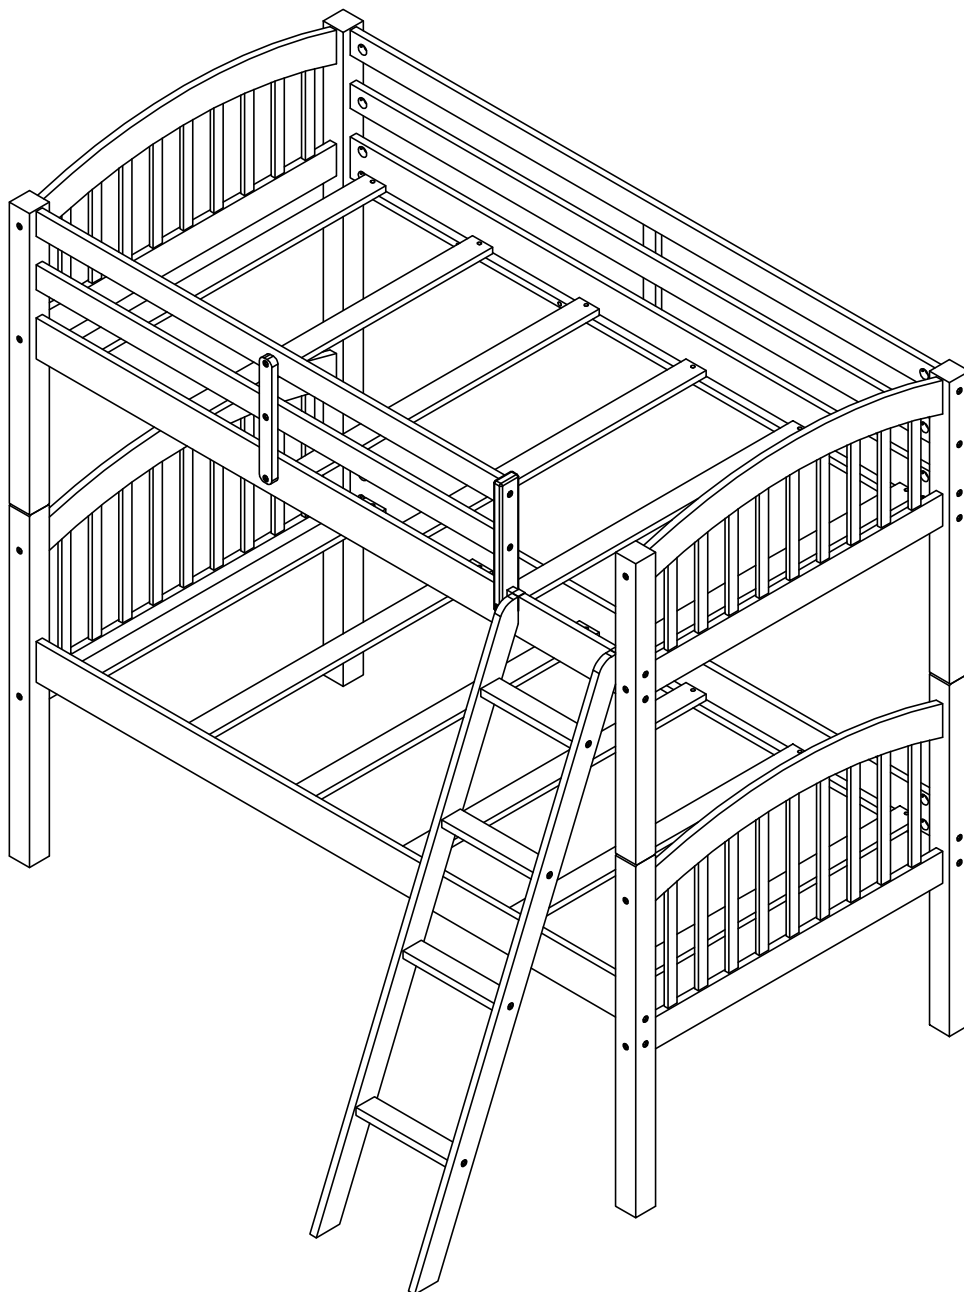

Description : Verona Twin Bunk Bed
Dimension : 2060 x 1590 x 1587 Hmm

Verona Twin Bunk Bed

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.














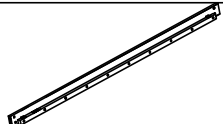

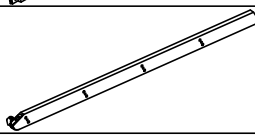

Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Please separate, identify, and count all parts and metal hardware. Compare with part list to be sure all parts are present.

If hardware is missing or you have difficulty assembling this product, please call for us.

IMPORTANT NOTE:






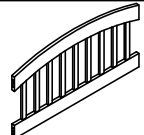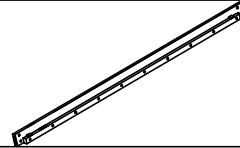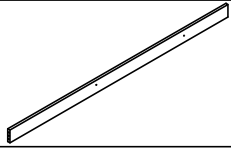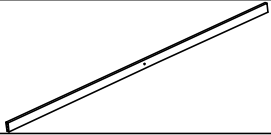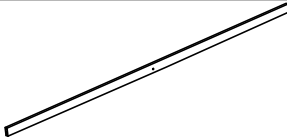






- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

PART LIST

| NO | Description | Q'Ty | Sketch | NO | Description | Q'Ty | Sketch |
|-------------------------------|----------------------|------|---|----|-----------------------|------|---|
| BOX A : A +B+C+D+ M+N | | | | | | | |
| A | Upper left post | 2 |  | B | Upper right post | 1 |  |
| C | Upper right post | 1 |  | M | Lower right post | 2 |  |
| D | Head/foot board | 4 |  | N | Lower left post | 2 |  |
| BOX B : E+F+G+H+J+K+L+P+R+S+T | | | | | | | |
| E | Upper back side rail | 1 |  | F | Upper front side rail | 1 |  |
| G | Slats | 12 |  | H | Front guard rail | 2 |  |
| J | Back guard rail | 2 |  | K | Guard rail support | 2 |  |
| L | Head Guard rail bar | 1 |  | P | Lower side rail | 2 |  |
| R | Ladder rungs | 4 |  | S | Left ladder | 1 |  |
| T | Right ladder | 1 |  | | | | |



Verona Twin Bunk Bed

HARDWARE LIST

| NO | Description | Q'Ty | Sketch | NO | Description | Q'Ty | Sketch |
|----|--------------------------------|------|---|----|-------------------------------|------|---|
| 1 | Head hex bolts 1/4" x 100mm | 22 |  | 2 | Head hex screws M7 x 30mm | 8 |  |
| 3 | Head hex screws M7 x 50mm | 8 |  | 4 | Head hex bolts 1/4" x 65mm | 2 |  |
| 5 | Wood dowels ø8 x 30mm | 64 |  | 6 | Dowel nuts 1/4"xø10x12mm | 24 |  |
| 7 | Wood dowels ø15 x L90mm | 4 |  | 8 | Wood screws M4 x 35mm | 24 |  |
| 9 | Wood screws M4 x 15mm | 2 |  | 10 | Allenkey 4mm | 1 |  |
| 11 | Head hex bolts 1/4" x 85mm | 16 |  | 12 | Hooks bracket | 2 |  |

Upper Post x 4

Lower Post x 4

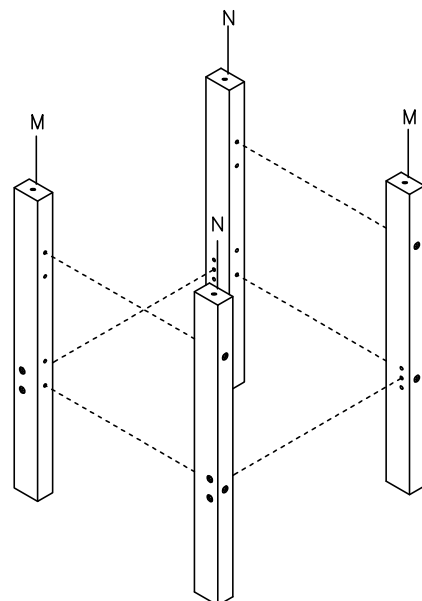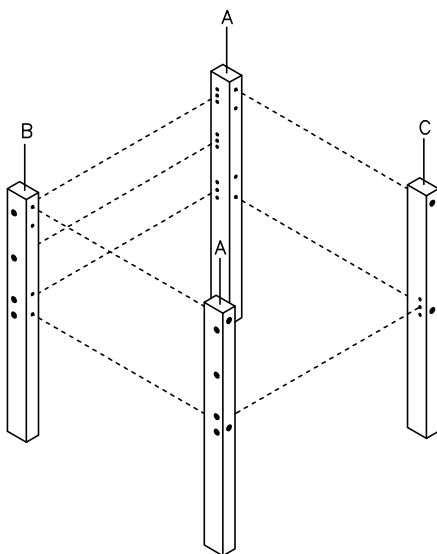


A – Left Front & Right Back Upper Post x 2
 B – Left back Upper Post x 1
 C – Right Front Upper Post x 1

M – Left Back & Right Front Lower Post x 2
 N – Left Front & Right Back Lower Post x 2

Verona Twin Bunk Bed


STEP 1 : Assembly head/foot assy

LOWER BUNK ASSEMBLY : Use alenkey (10) assembly head board & foot board (D) with lower post (M&N) by bolts (11).

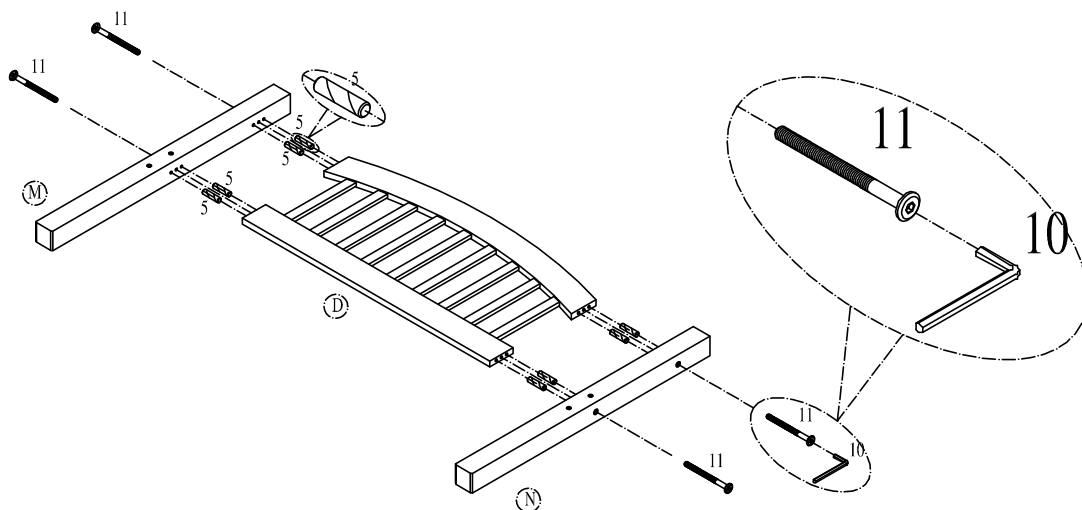


STEP 2 : Lower bed assembly

LOWER BUNK ASSEMBLY : Use alenkey (10) assembly lower head board assy with lower side rails (P) by bolts (1) & nuts (6)

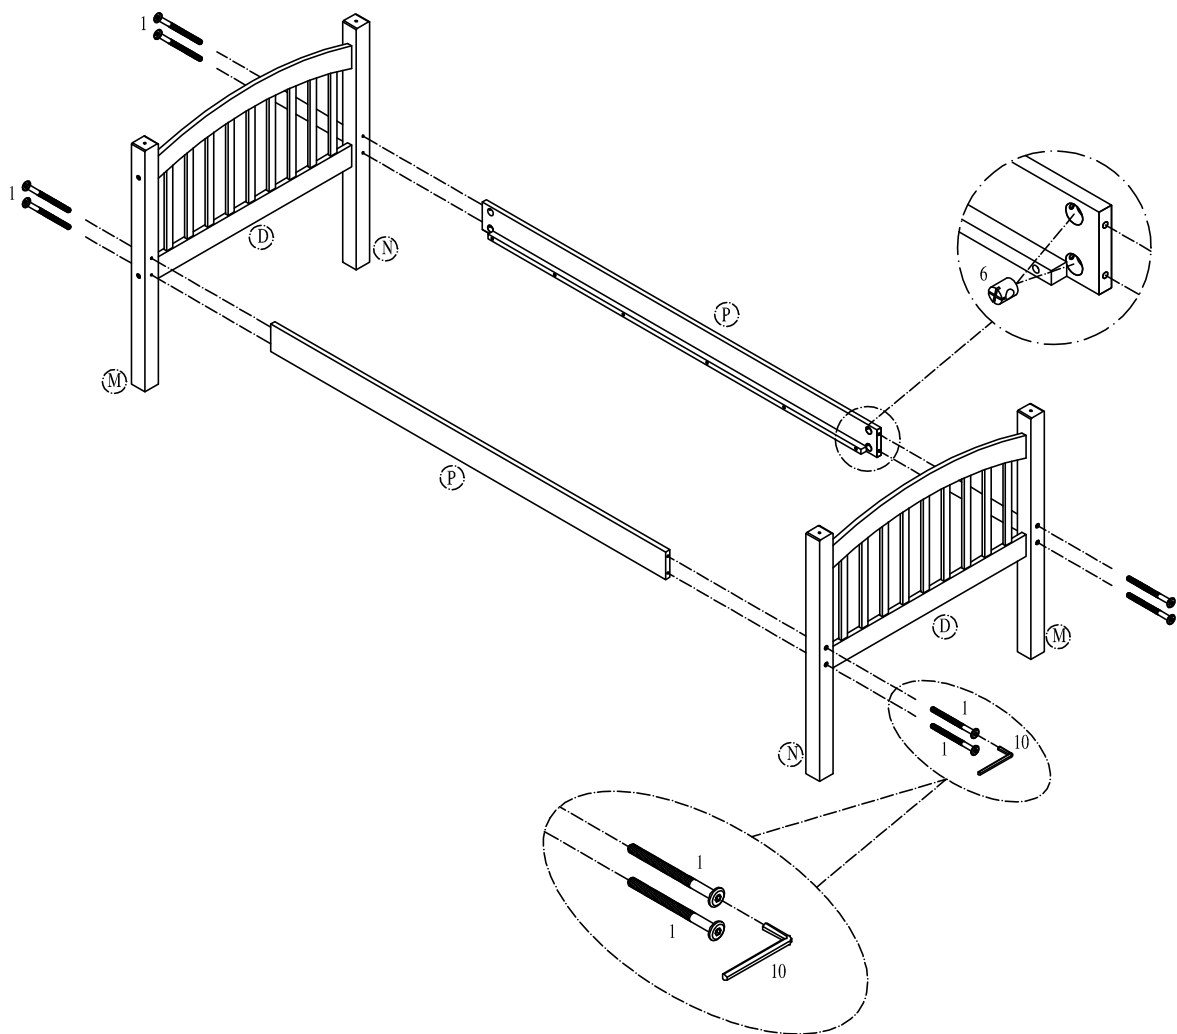


STEP 3 : Fix slats

LOWER BUNK ASSEMBLY : Use screwdriver fix each slats (G) with lower side rails (P) by screws (8)

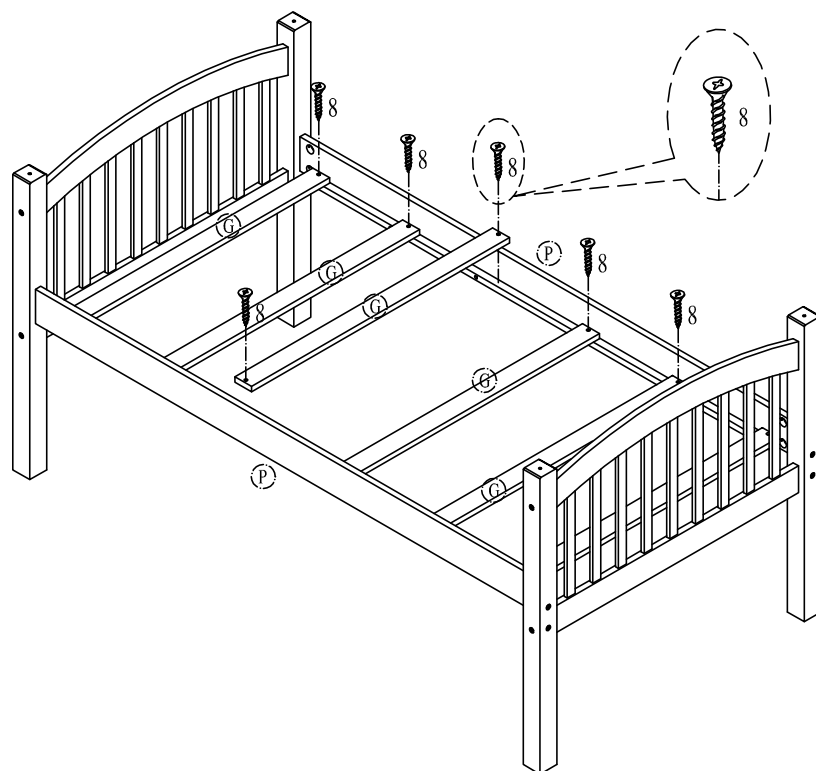


STEP 4 : Assembly head/foot upper assy

UPPER BUNK ASSEMBLY : Use allenkey (10) assembly head board & foot board (D) with upper post (A,B&C) by bolts (11) .

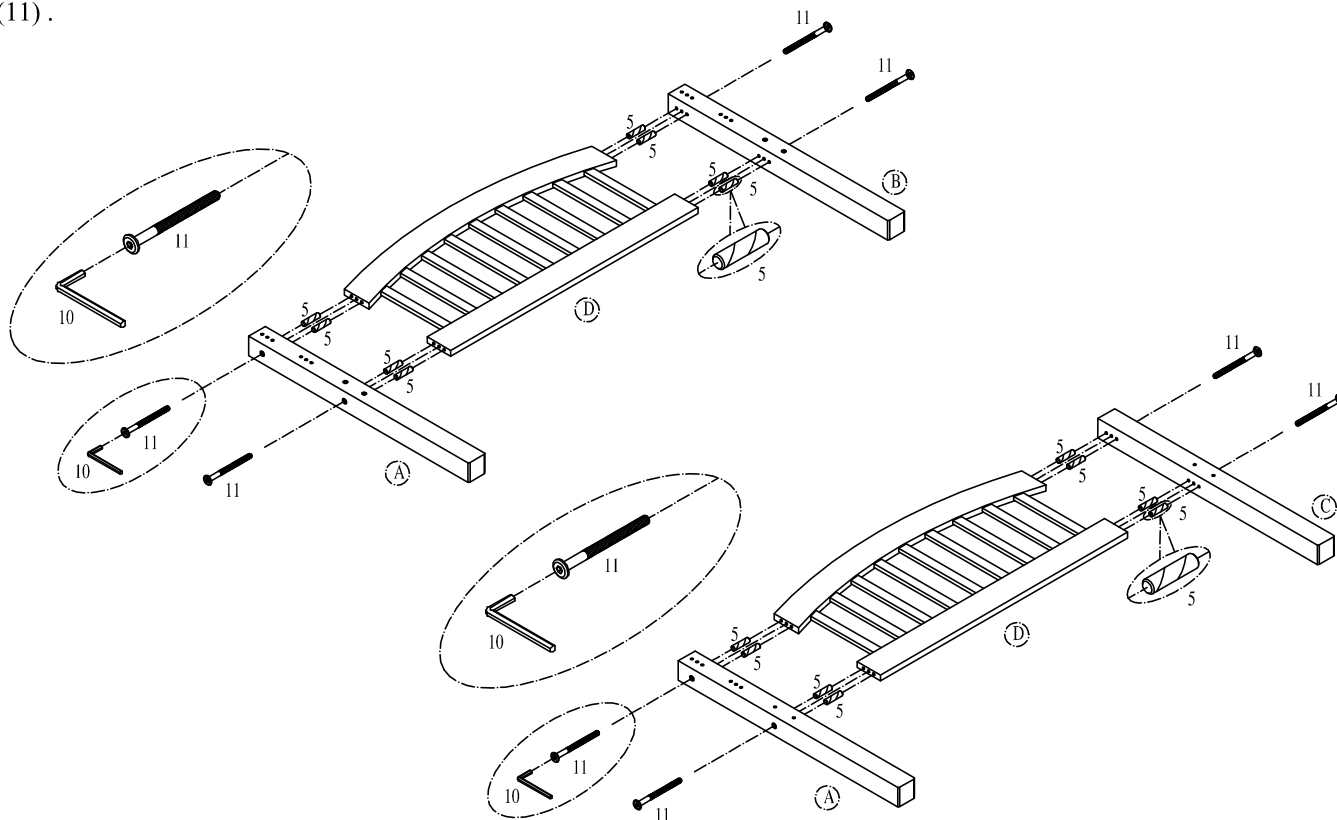

STEP 5 : Upper bunk assembly


UPPER BUNK ASSEMBLY : Use allenkey (10) assembly upper head board assy with upper side rails (E&F) and guard rail (H&J) by bolts (1) & nuts (6). Next , fix guardrail support (K) on guard rails & side rails by wood screws (5). Assembly head guard rails bar (L) with guard rails (H) by head hex screw (2).

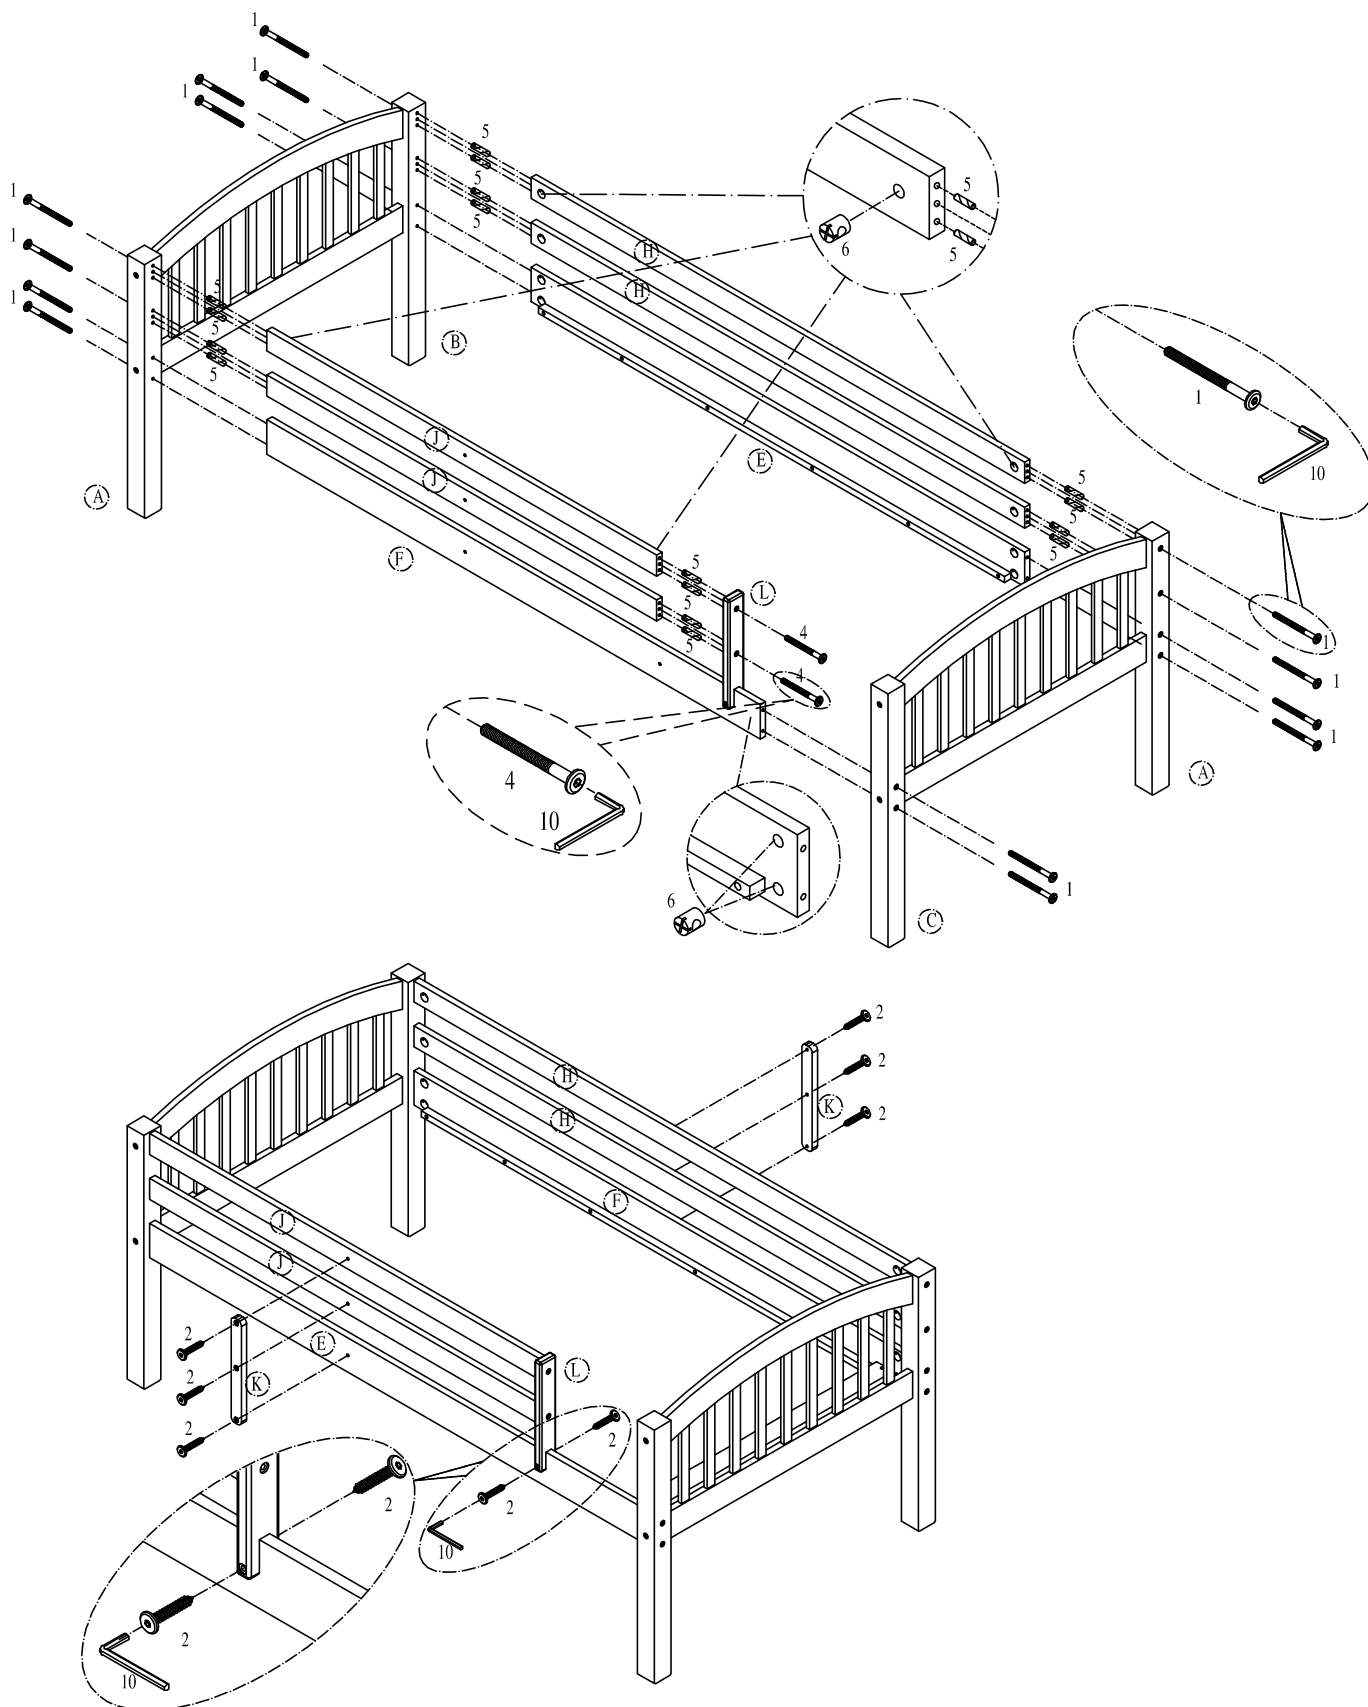

Verona Twin Bunk Bed


STEP 6 : Fix slats

UPPER BUNK ASSEMBLY : Use screwdriver fix each slats (G) with lower side rails (P) by screws (8)

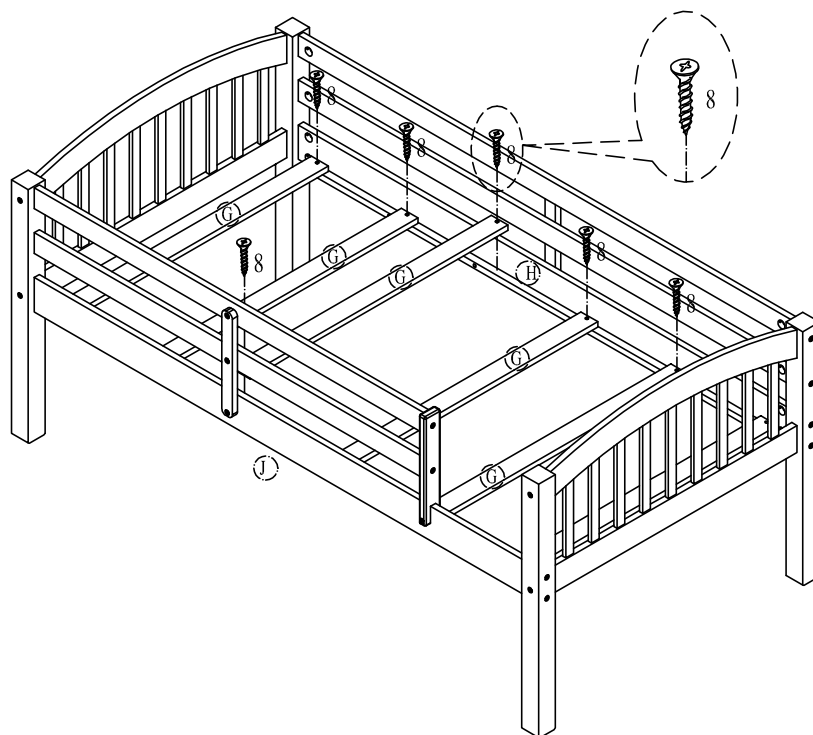

STEP 7 : Bunk bed assembly


BUNK BED ASSEMBLY : Put upper bunk on lower bunk follow dowel (7)

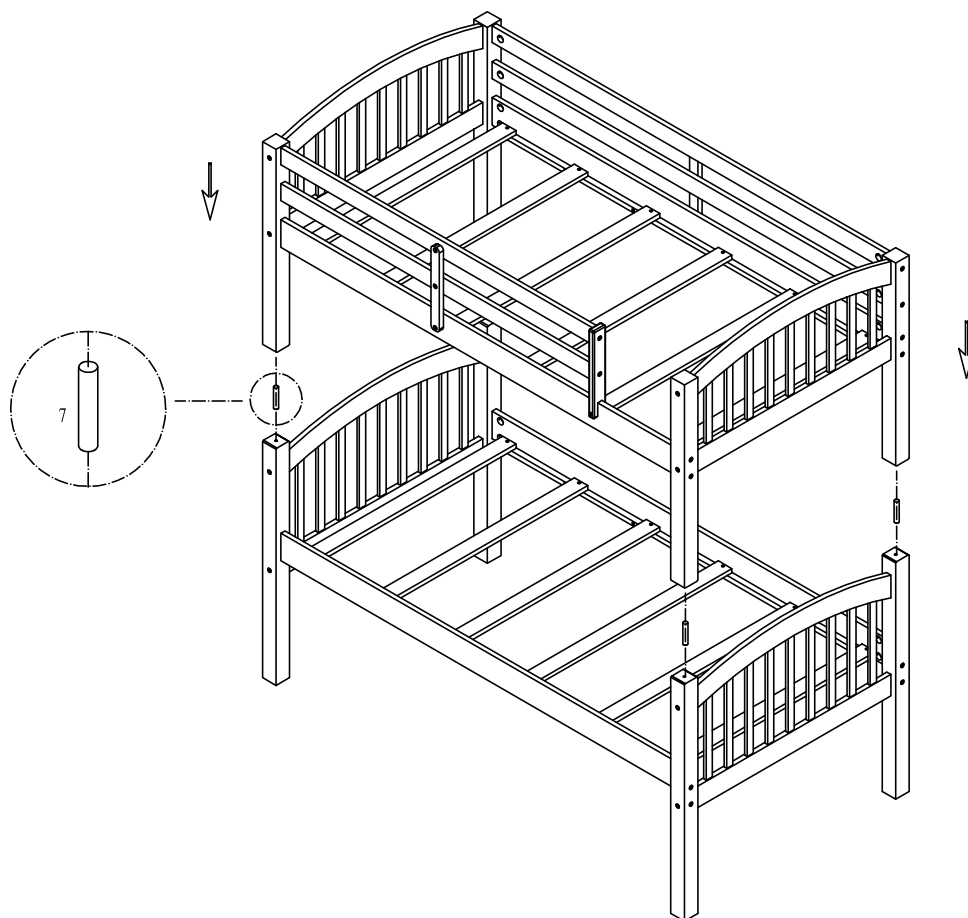

Verona Twin Bunk Bed


STEP 8 : Ladder assembly

LADDER ASSEMBLY : Put 2 ladder (S&T) parallel and assembly ladder rungs (R) by screws (3) . Fix hooks bracket (12) by screws (9)

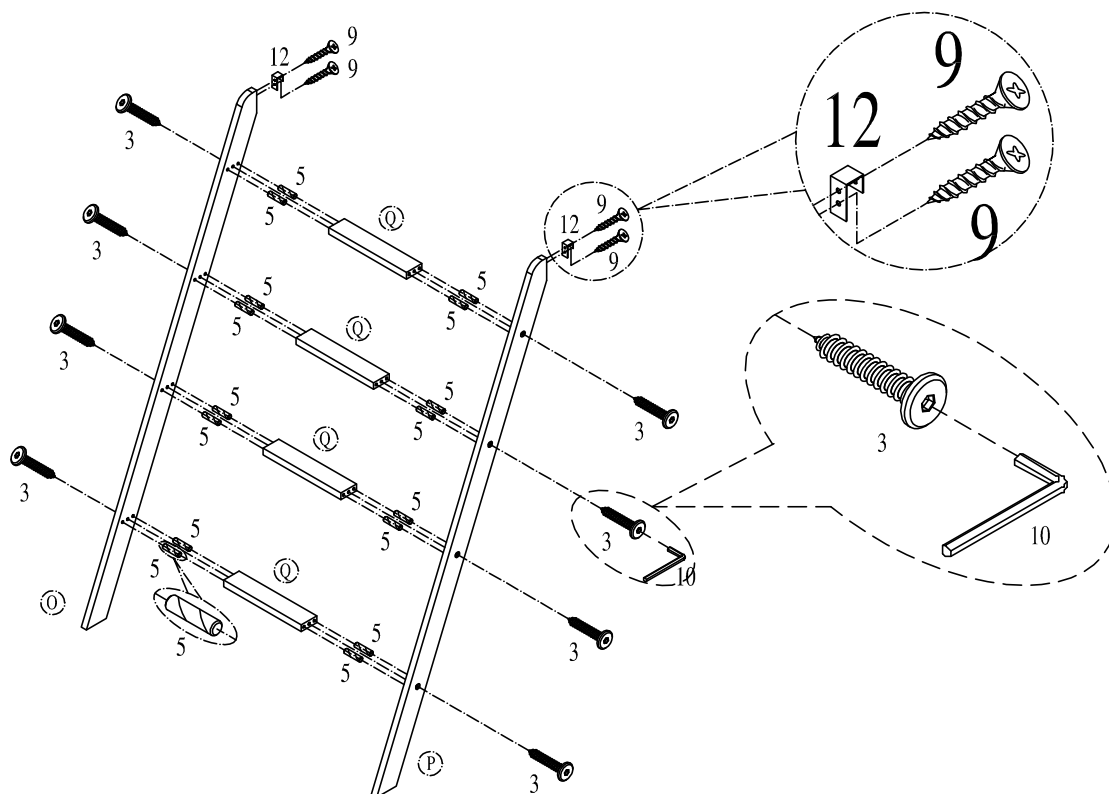

STEP 9 : Ladder assembly

LADDER ASSEMBLY : Fix ladder on upper bunk by screws (9)

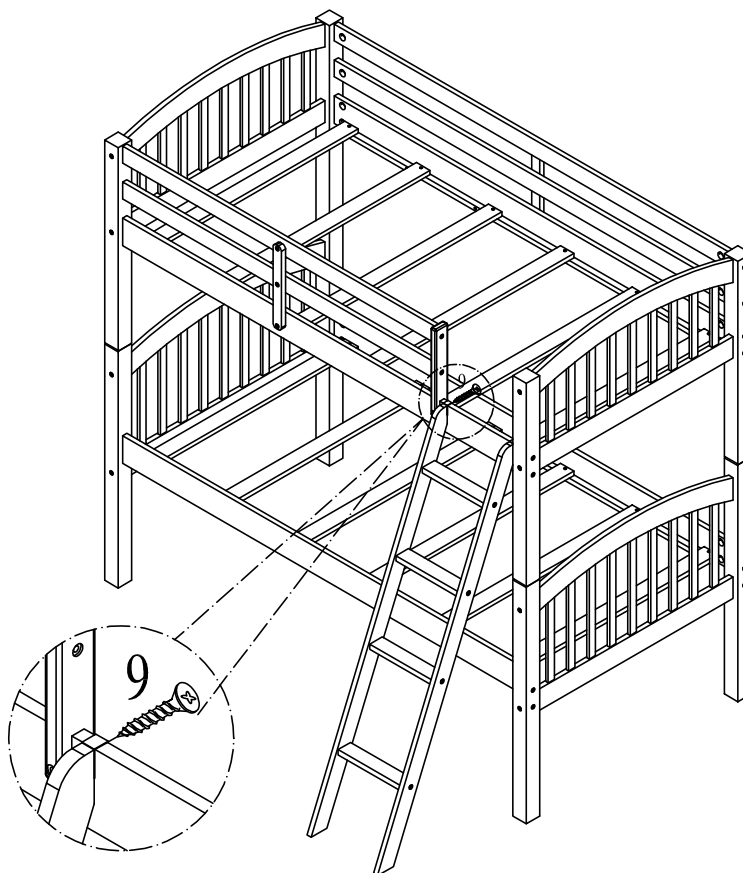


Verona Twin Bunk Bed

ASSEMBLY INSTRUCTIONS

SKU : AYU/VEU/ODU


EAST WEST
FURNITURE, LLC
175 Southbelt Industrial Dr,
Houston, TX 77047
Email : info@eastwestfurniture.net

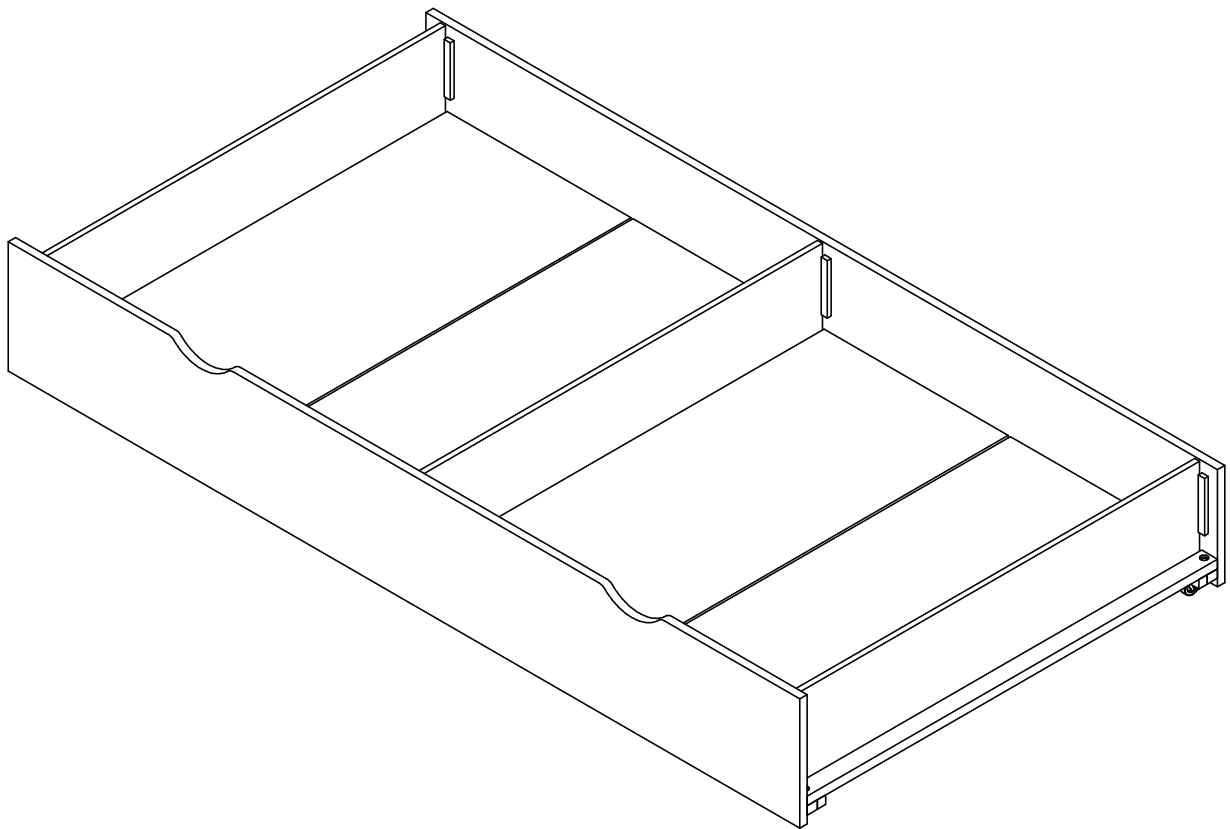

Description : Bunk Bed Convertible Trundle & Drawer

Dimension : 1910 x 1026 x 220 Hmm

NOTE : *Only use for mattress 6 inches.*

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.







Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Please separate, identify, and count all parts and metal hardware. Compare with part list to be sure all parts are present.

If hardware is missing or you have difficulty assembling this product, please call for us.






IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

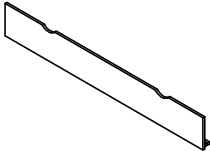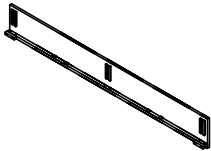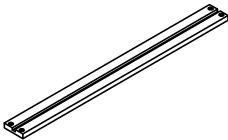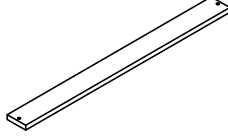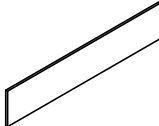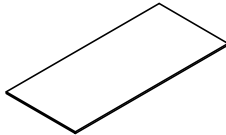PART LIST


| NO | Description | Q'Ty | Sketch | NO | Description | Q'Ty | Sketch |
|----|-------------|------|---|----|--------------|------|---|
| A | Front panel | 1 |  | B | Back panel | 1 |  |
| C | Slats 1 | 3 |  | D | Slats 2 | 2 |  |
| E | Side panel | 3 |  | F | Bottom panel | 4 |  |

HARDWARE LIST

| NO | Description | Q'Ty | Sketch | NO | Description | Q'Ty | Sketch |
|----|-------------------------------|------|---|----|--------------------------|------|---|
| 1 | Head hex bolts 1/4" x 35mm | 12 |  | 2 | Wood screws ø8 x 30mm | 4 |  |
| 3 | Wheels 28mm | 6 |  | 4 | Wood screws ø6 x 15mm | 12 |  |
| 5 | Allenkey 4mm | 1 |  | | | | |


STEP 1: Assembly wheels

Use screwdriver fix wheels (3) with front and back panel (A & B) by screws (4)

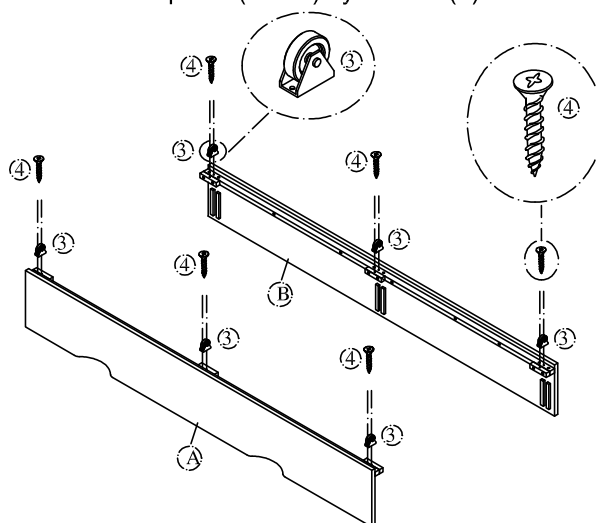

STEP 2: Fix slats

Use allen key (5) assembly slats (C) with front & back panel (A&B) by bolts (1). Fix slats (D) with front & back panel (A&B) by screws (2)

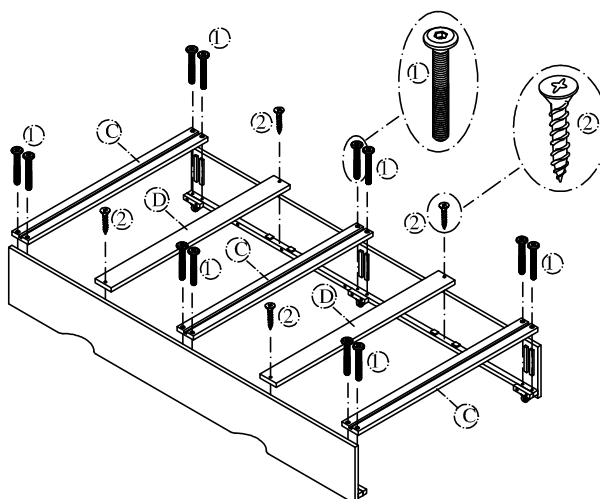

STEP 3: Assembly trundle

Push side panel (E) follow narrow direction. Attach bottom panel on slats.

