
## A ssembly Instruction for 92305&92310&92315&92320

- 1.Place track over outlet box and mark position of track mounting holes on ceiling or wall. On wallboard or plaster, drill "5/8" mounting holes.
- 2.Plain underside of track faces ceiling or wall and slotted side of track faces out to accept lights.
- 3.Install track to ceiling or wall using toggle bolts(fumished). On wood surfaces use standard #10 wood screws (not furnished).

CAUTION-Turn off switch at main power source before installing any track or fitting.

- 1.Pull down the locking lever and insert "Adaptor contact" into the slot in the track.
- 2.Rotate adaptor 1/4 turn 90° to locked positioon.NOTE: Polarity line of lampholder(Grounding tab, polarity side of two fingers) must point to track debossed polarity line so that the debossed polarity line of the track can be aligned with the polarity line (side) of adaptor.
- 3. To remove, depress the locking lever and turn 90°

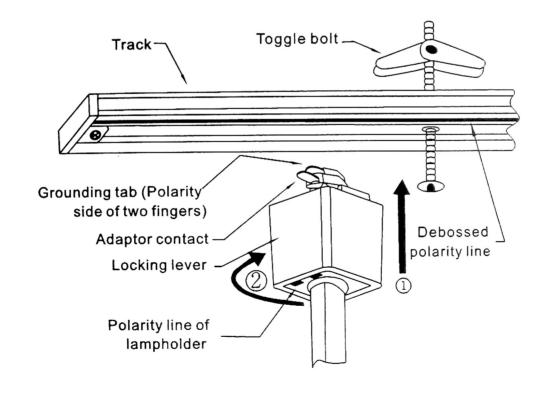

## CAUTION-Turn off s witch at main power source before installing any track or fitting.

- 1. Fasten mounting strap to outlet box. Connect ground wire.
- 2.Locate track below outlet box in desire position then:
  - a)Rotate ground clip to accept track and pushtrack into clip.
  - b)Fasten track to ceillg following instructions supplied with the track section.
  - c)Tra ck ends must be terminated with either a dead end or a connector.
- 3.Insert electrical adaptor White wire into track,rotate90 ° to locked position to make electrical contact.NOTE:
  - a)Polarity side of electrical adaptor(The side of grounding tab or marked "N" )must point to track debossed polarity line.
  - b)Center line of electrical adaptor must be set on center line of outlet box.
- 4. Pull positive(Black)wire from outlet box and attach to brass screw trrminal marked "P" .Pull neutral (White)wire, on opposite of track, and attach to nicklrd-plated screw terminal marked "N" .Push excess wire beck into outlet box-wire must hug track side.

Outlet box

Green wire
(groundinng wire)

Mounting strap
Ground Clip

Outlet box screws(Not provided)

Debossed polarity line

White wire (Neutral)

Brass terminal(p)

Nicklrd-piate terminal(N)

Black wire(Hot)

Canopy cover