


### SUGGESTED TOOLS AND MATERIALS




Sealant



Tape Measure


### VANITY TOP INSTALLATION

1

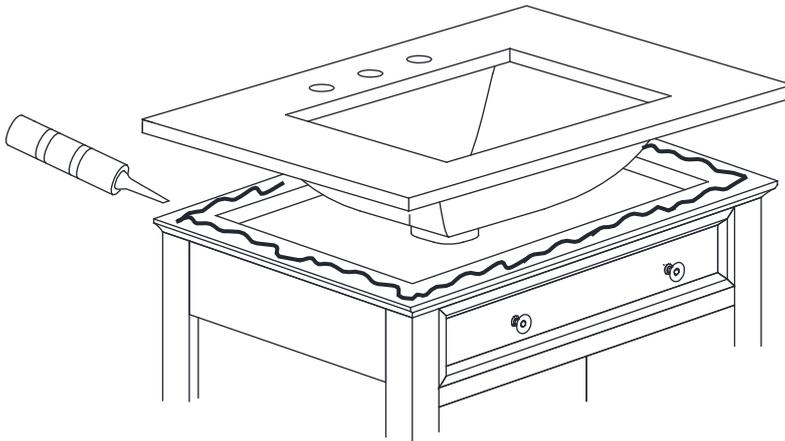


Apply bead of quality sealant evenly along the top of the vanity.

2

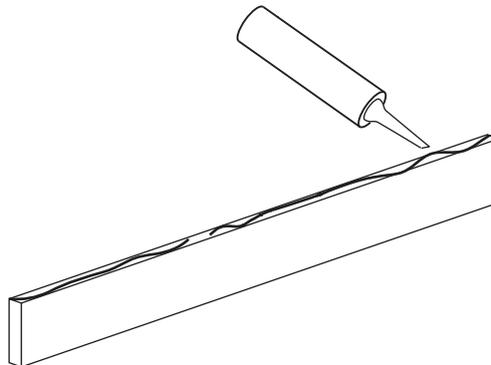

Apply silicone sealant evenly along the bottom and backside of back splash.

3

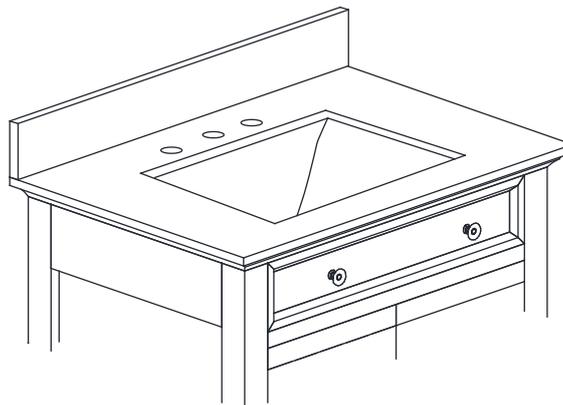

Finally, place the bottom side of back splash with sealant onto the countertop and check alignment of back splash. Adjust the leg levelers as needed