
## EASY TO INSTALL



 Clean the surface to be covered using a cleaning agent. Nettoyer la surface à couvrir avec un produit dégraissant.

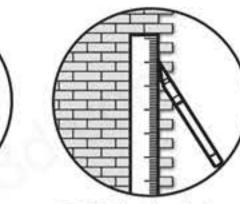

2 Draw a leveled guide line. Dessiner une ligne guide à niveau.



3 Make the first cut. Couper la tuile.




5 Align the adhesive tile. Aligner la tuile that the adhesive remains



6 Install the tile.

Overlap grout lines. Coller en superposant les lignes des joints.

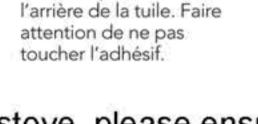


back of the tile. Ensure

Retirer la pellicule à


untouched.

IMPORTANT: For the installation around a gas stove, please ensure that the following instructions are followed in order to avoid any direct contact between the tiles and the flames. If your stove does not have a back panel or metal cover, It is important to leave a space free of tiles. Do not install tiles less than 16 inches away from the top of the stove.

- · Do not use these tiles in a shower enclosure, as this will affect the adhesive components of the tiles.
- · Do not touch the adhesive on the back of the tiles, as this might weaken its performance.
- Do not use these as a countertop covering surface.

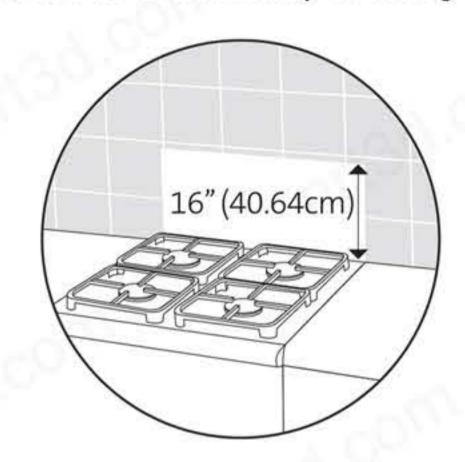

Gas stove WITH NO back control panel or metal cover.

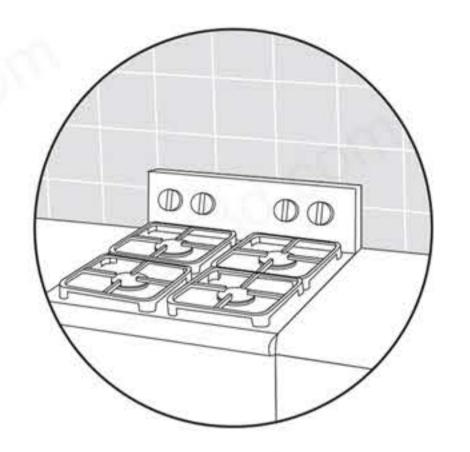

Gas stove WITH back control panel or metal cover.

## WARNING:

We analyzed and found that over 95% of complains about peeling off are from latex wall or repainted wall.




For latex / repainted walls, please follow the instruction:







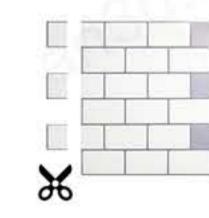


2 Clean the w

3 Wait until the wall is totally dry


Spay the adhesive more on the joint area on both wall and stickers


5 Be careful of the first cut and apply the cut edge to the corner of the

It is very important to make your first cut and apply the cut edge to the corner of the wall.

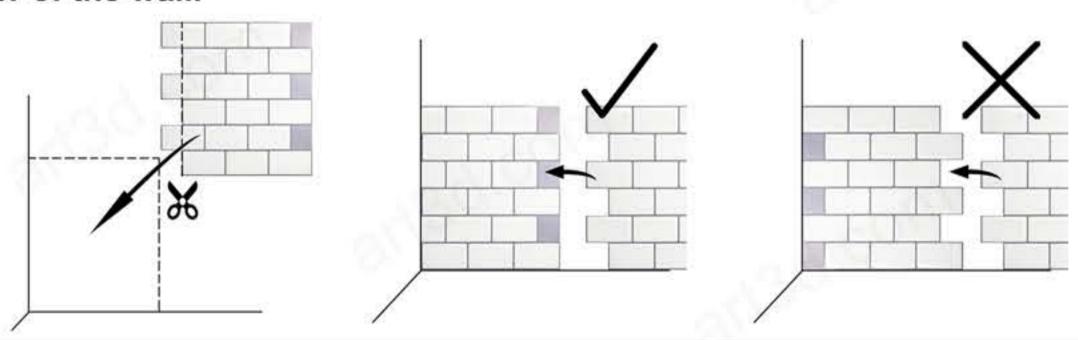

## Recommended Surface

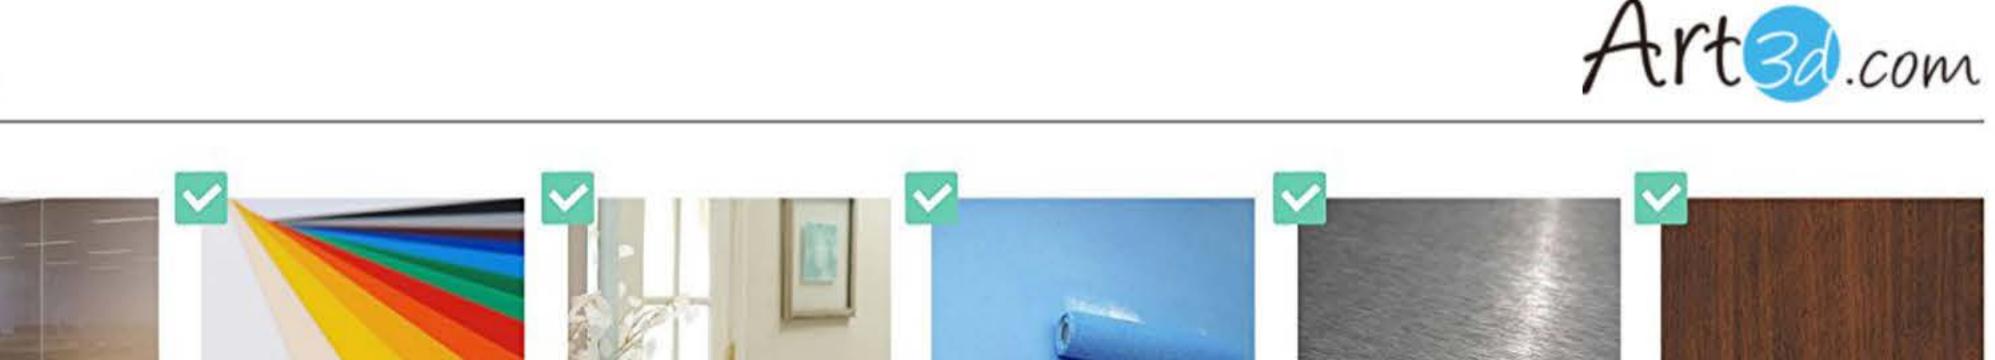

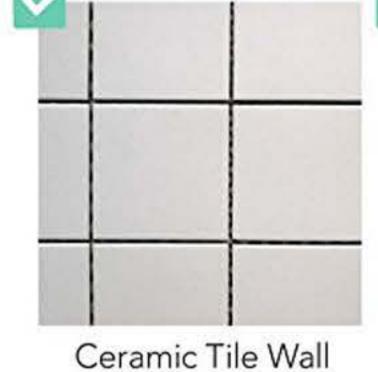







Painted Gypsum





Non Recommended Surface



Brick Wall

Stone Wall

Gypsum Wall

Stucco Wall

Plywood Wall

Not in the Shower

Oily Wall