


*ASSEMBLY INSTRUCTIONS*


83895

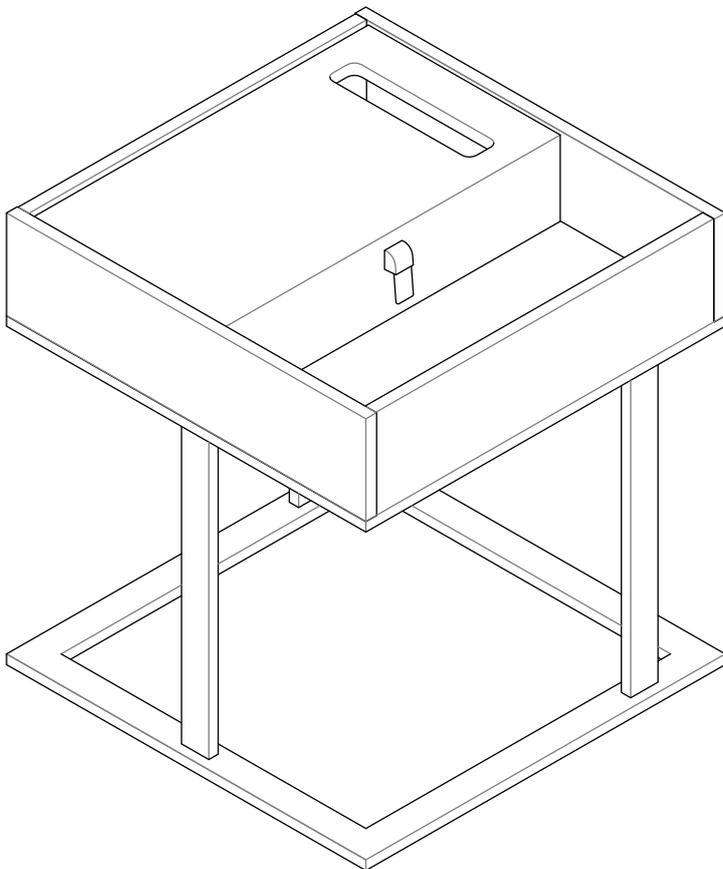

**SIDE TABLE**

# SIDE TABLE

83895

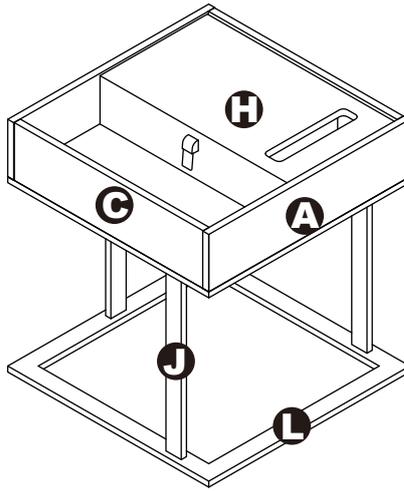


## DIMENSIONS


Width - 19.69"  
 Depth - 19.69"  
 Height - 21.59"

## PARTS LIST


**A** X1

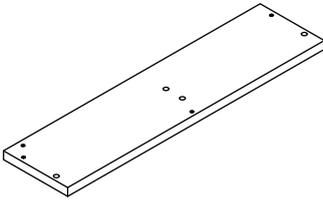


**E** X1

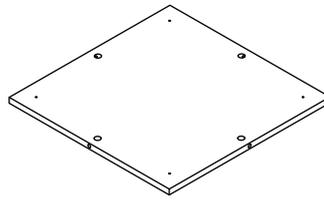


**I** X1

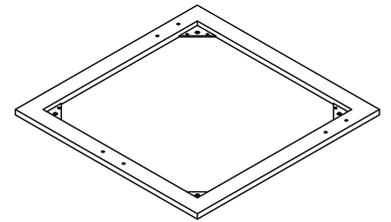


**B** X1

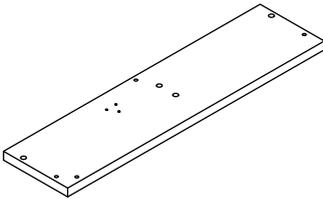


**F** X1

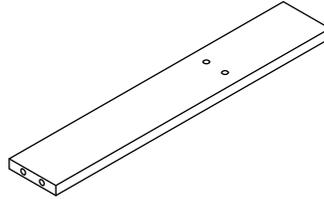


**J** X3

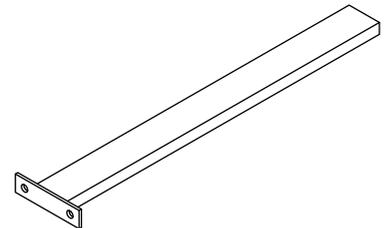


**C** X1

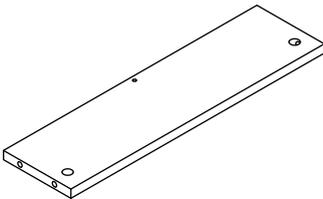


**G** X1

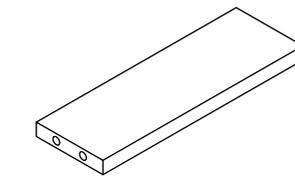


**K** X1

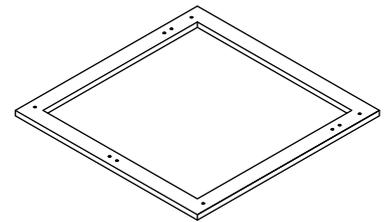

**D** X1

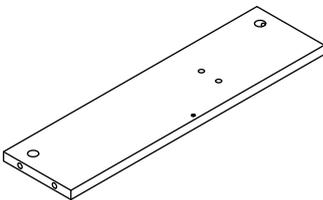

**H** X1

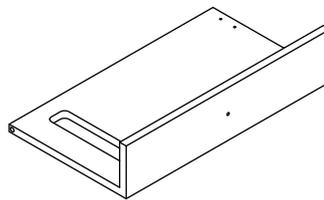

## HARDWARE LIST

**1** X8



**2** X8




**3** X12



**4** X4



**5** X1




**6** X1



**7** X1



**8** X1



X5

**9** X6



**10** X6




**11** X4




# ASSEMBLY INSTRUCTIONS

## Step 1.




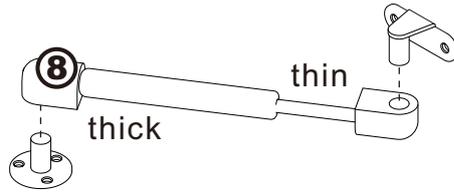


Assemble the hardware, please follow the illustration direction.

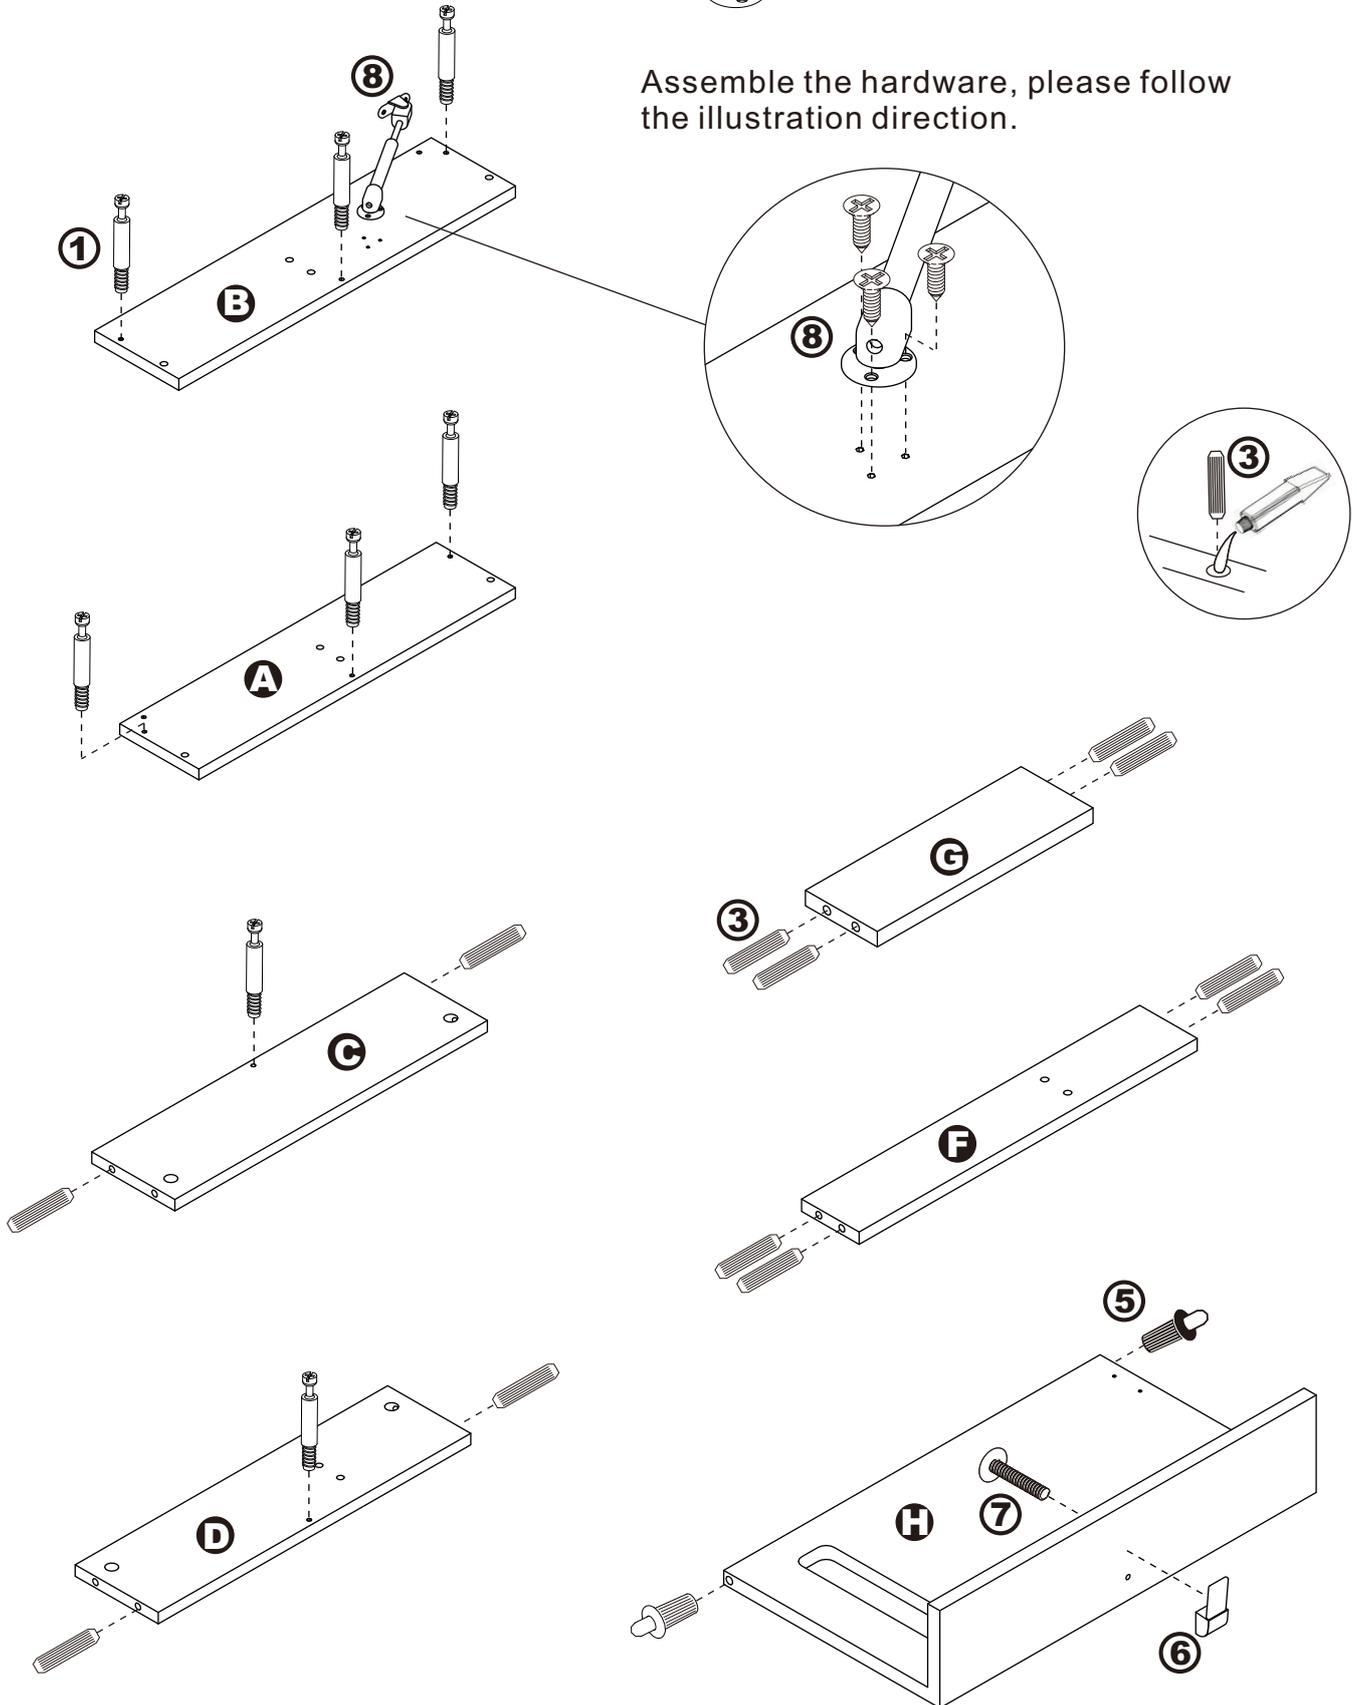





# ASSEMBLY INSTRUCTIONS

## Step 2.

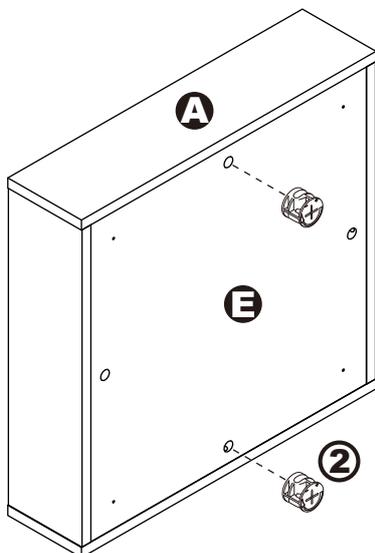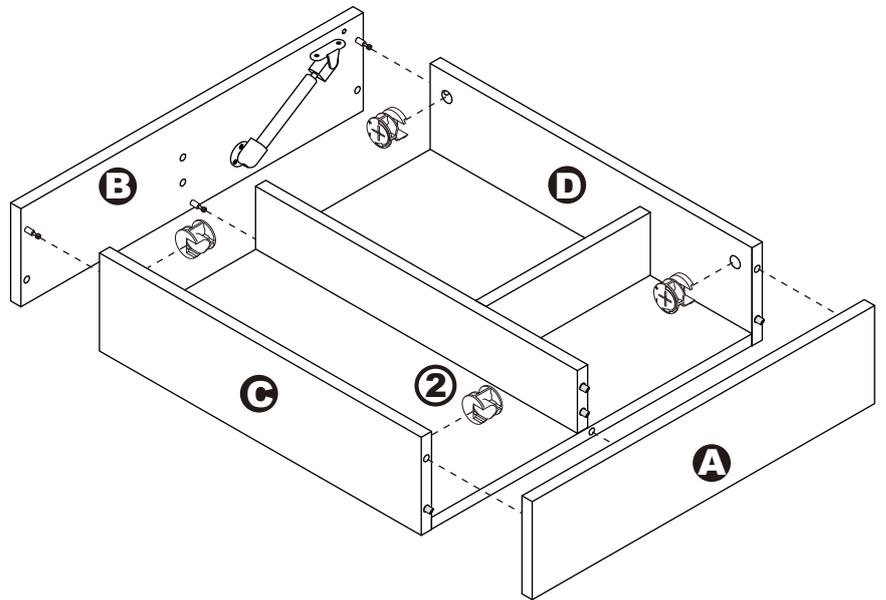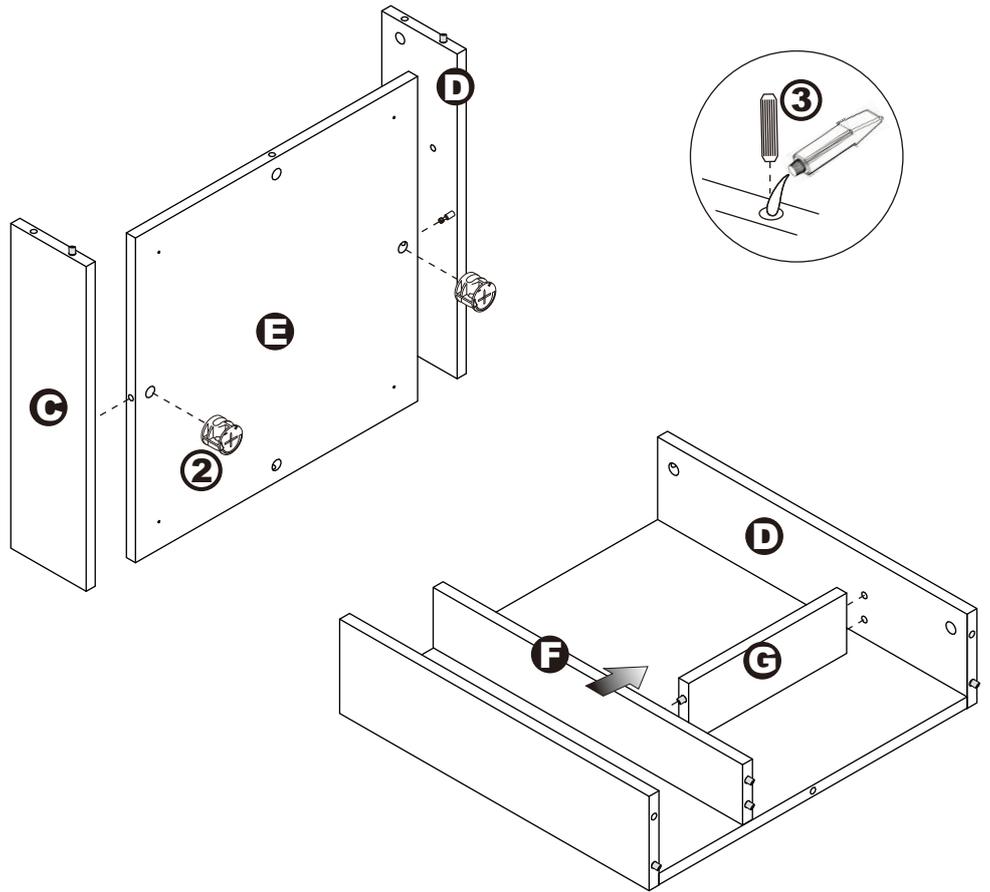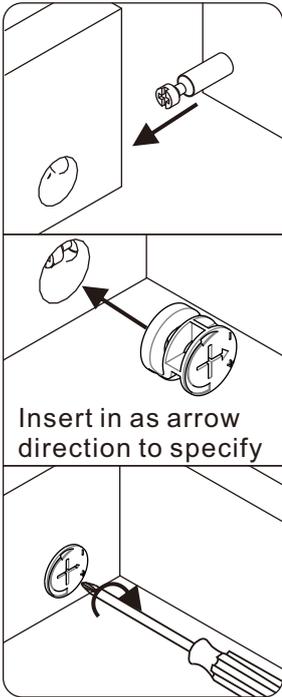




# ASSEMBLY INSTRUCTIONS

## Step 3.

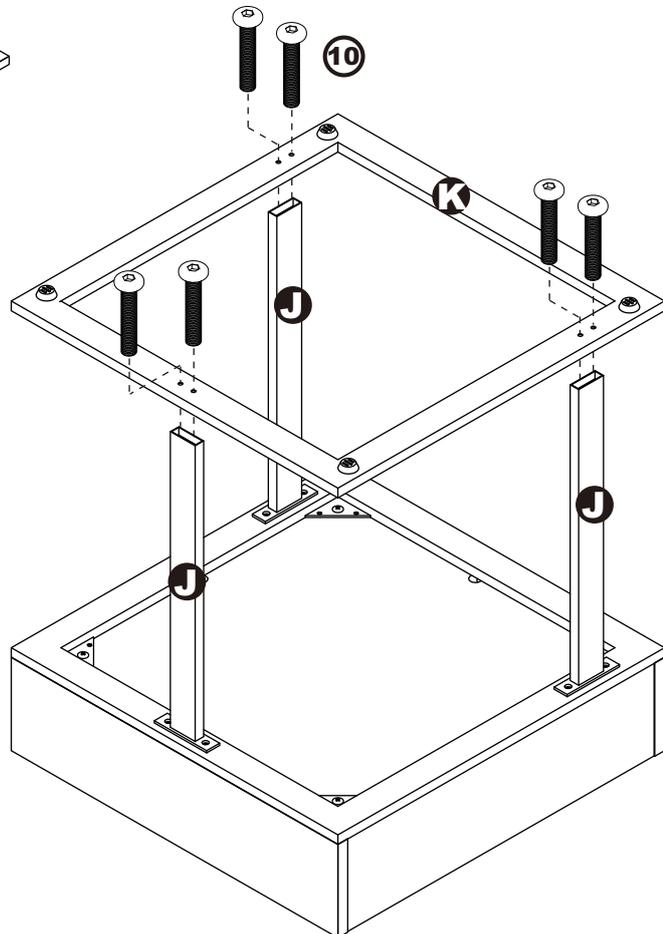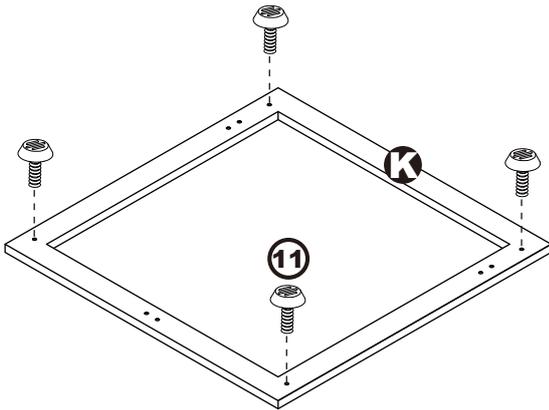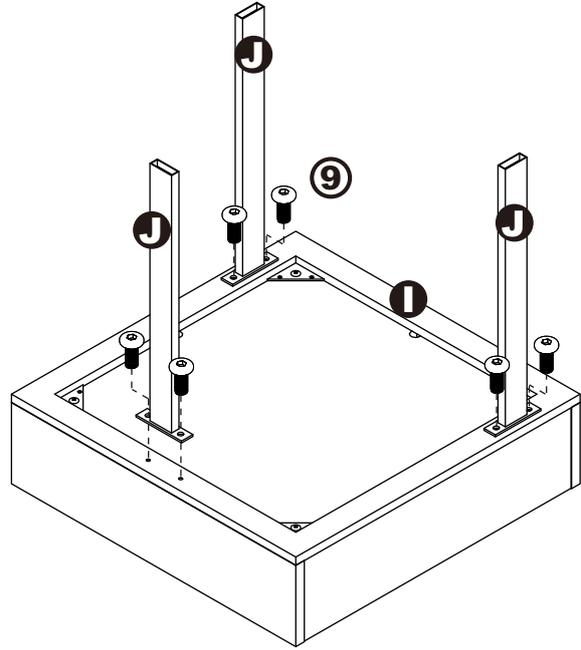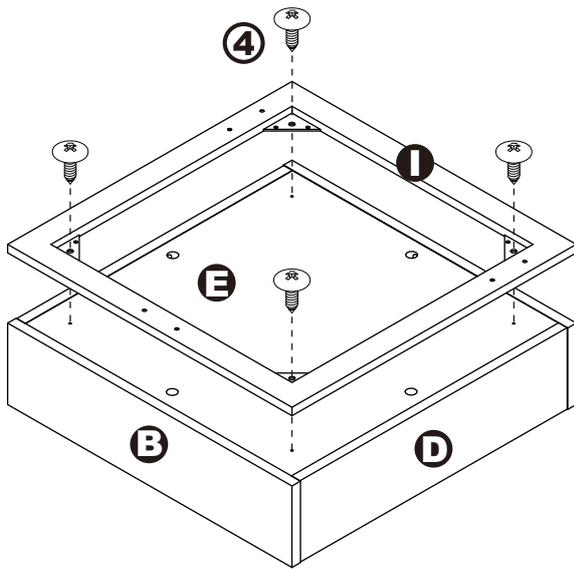

# ASSEMBLY INSTRUCTIONS

## Step 4.

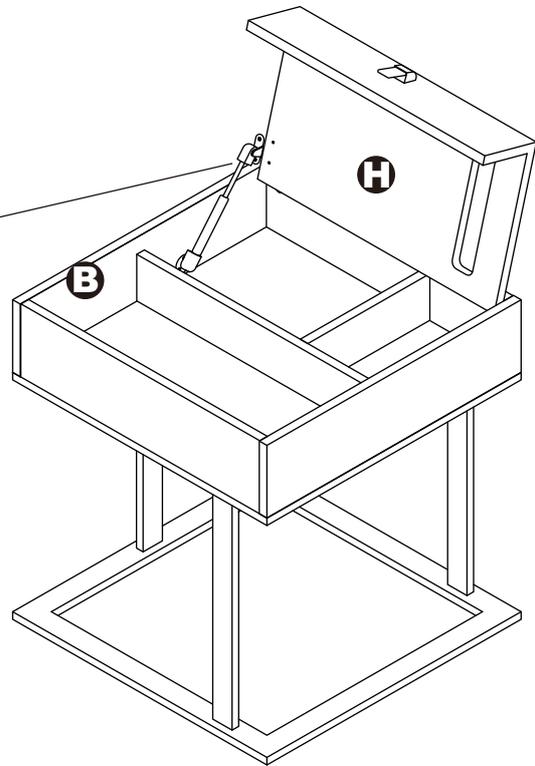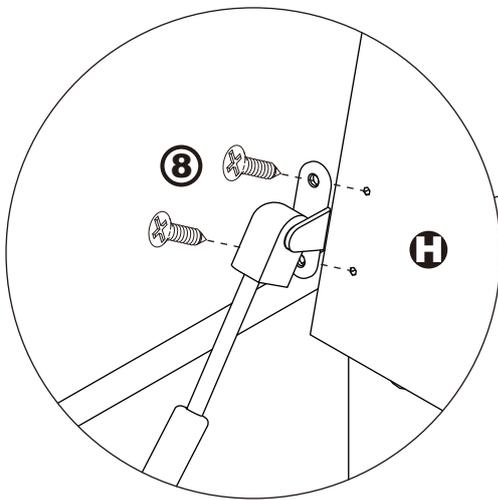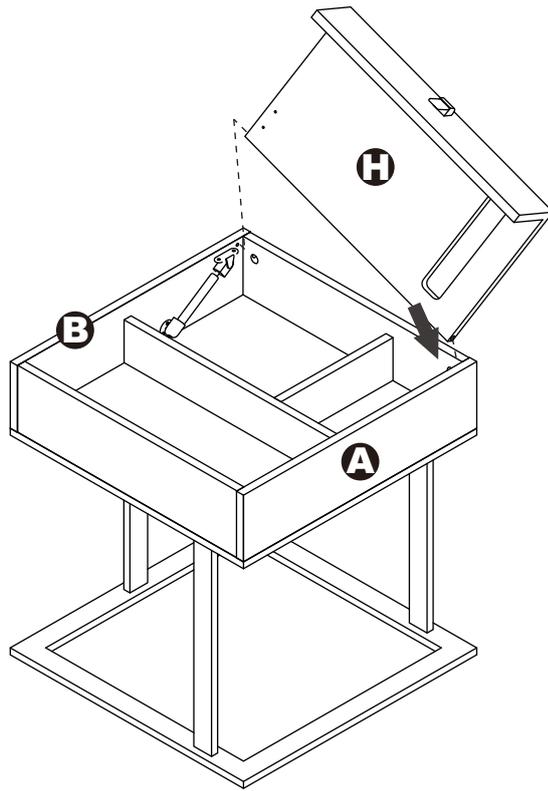

The function of this hinge is mainly to prevent fall bakward instead of seft closing.

## ASSEMBLY IS COMPLETED

Make sure the product is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts/screws are secured and properly tightened.