


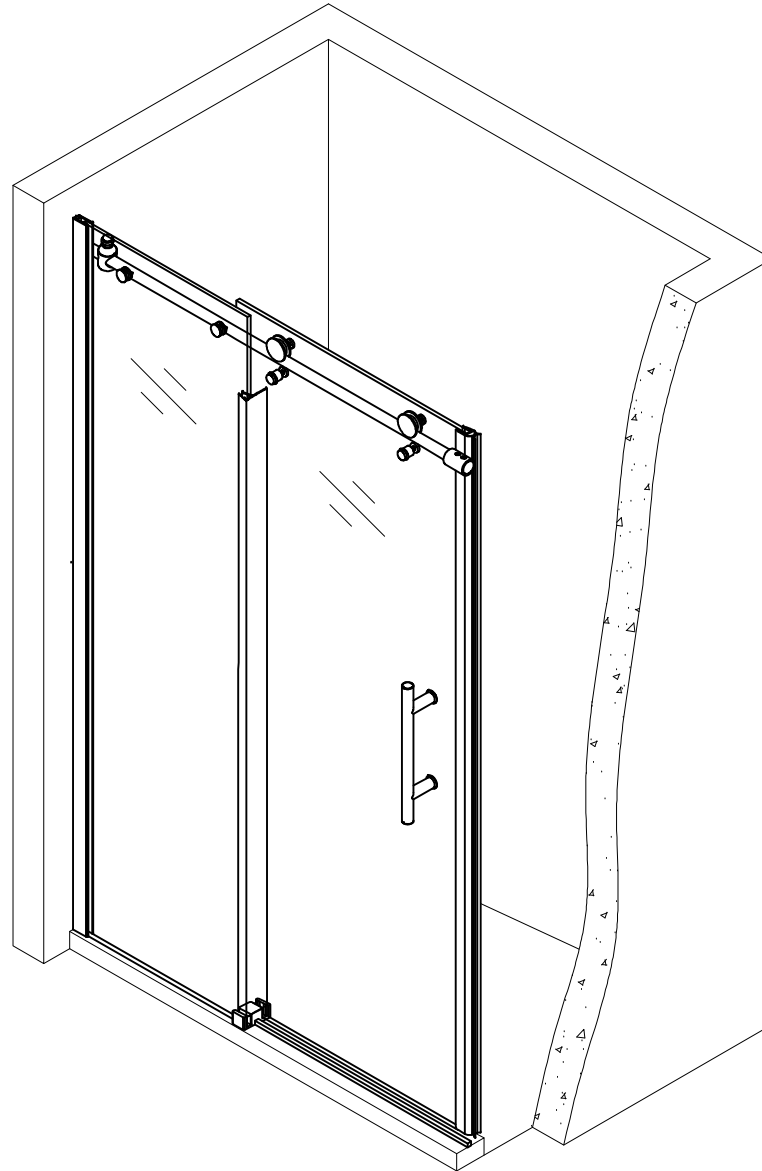
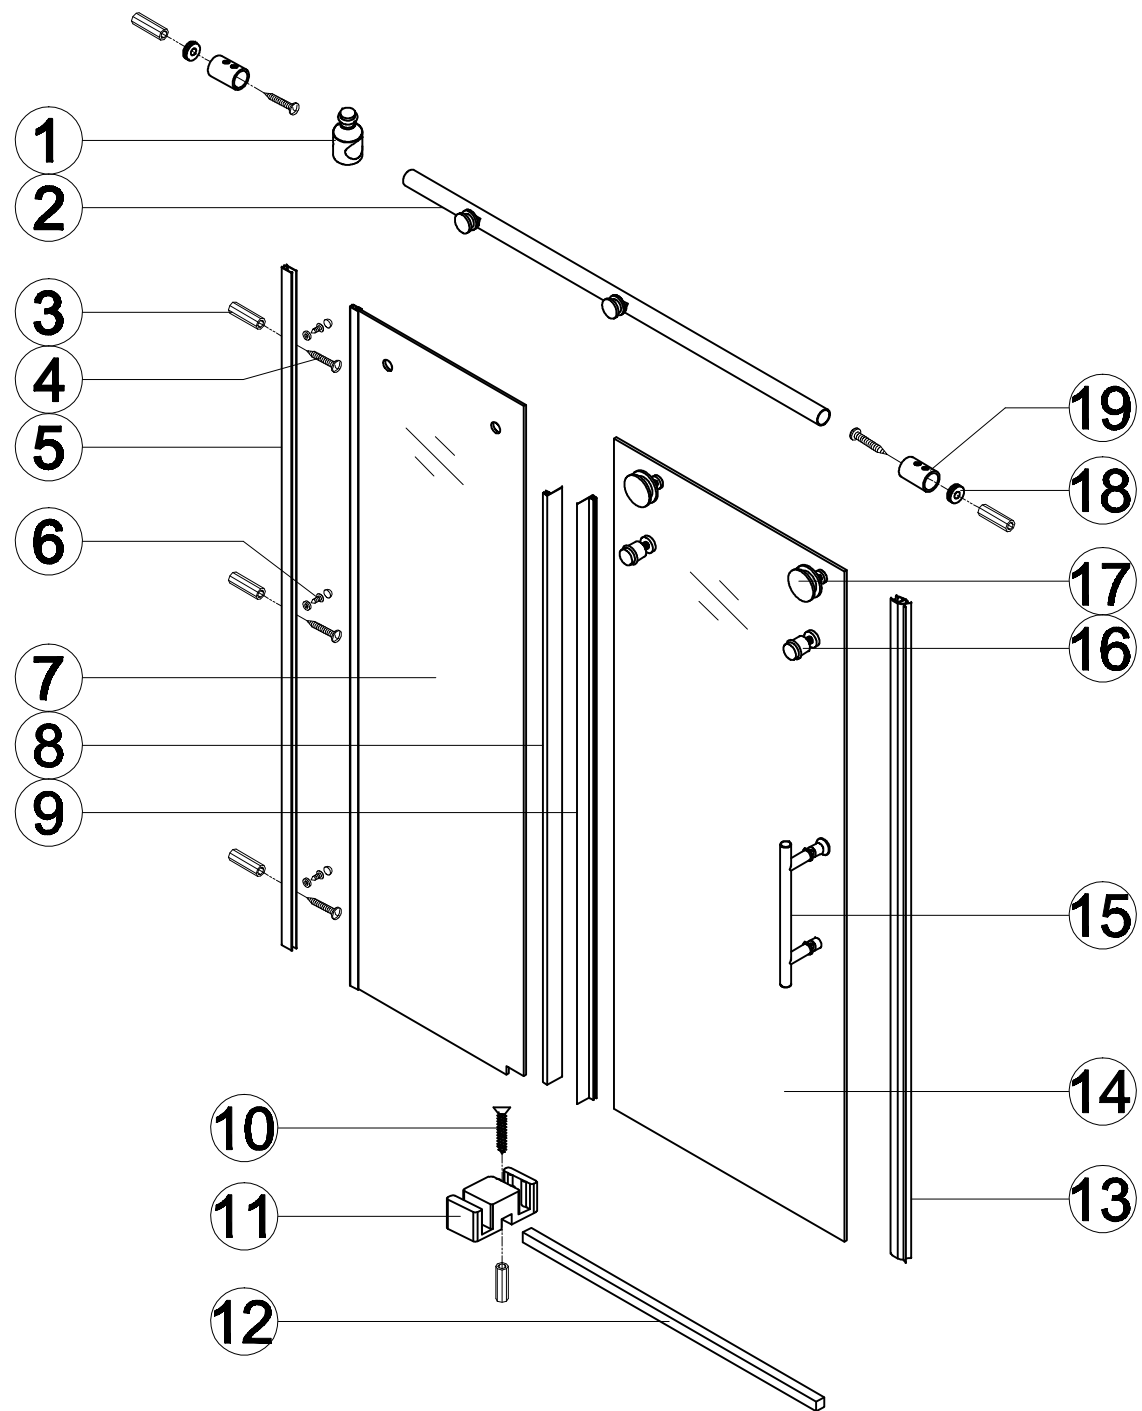
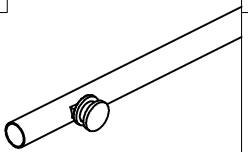






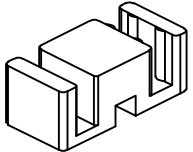
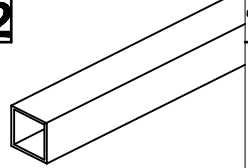




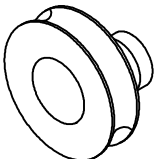


INSTALLATION MANUAL



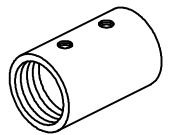

1  1Pc	2  1Pc	3  6Pcs	4 ST4X30  5Pcs	5  1Pc	6 ST4X12  3Pairs	7  1Pc
8 1795mm  1Pc	9 1810mm  1Pc	10 ST5X30  1Pc	11  1Pc	12  1Pc	13 1920mm  1Pc	14  1Pc
15  1Pc	16  2Pcs	17  2Pcs	18 + 19   2Pcs		Tools:	

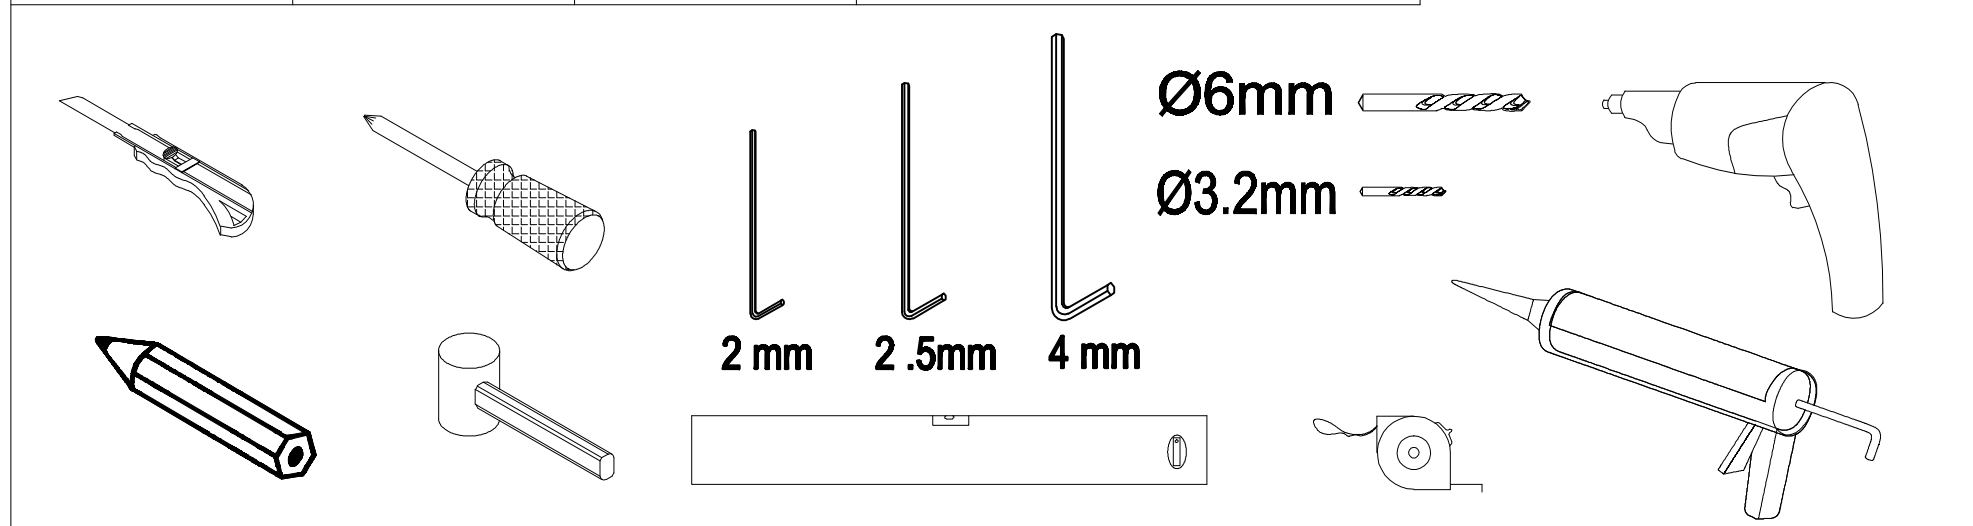

1

1219

L

1209 - 1219

1-1

⑤x1

1-2


Ø6X40mm

1-3


③x3

1-4

④x3

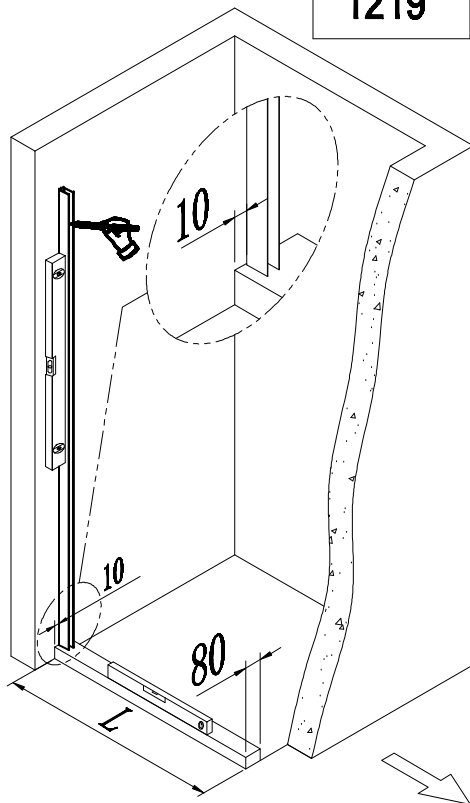

The top rail can be cut short according to the actual situation, when the installation space is less than 1209mm



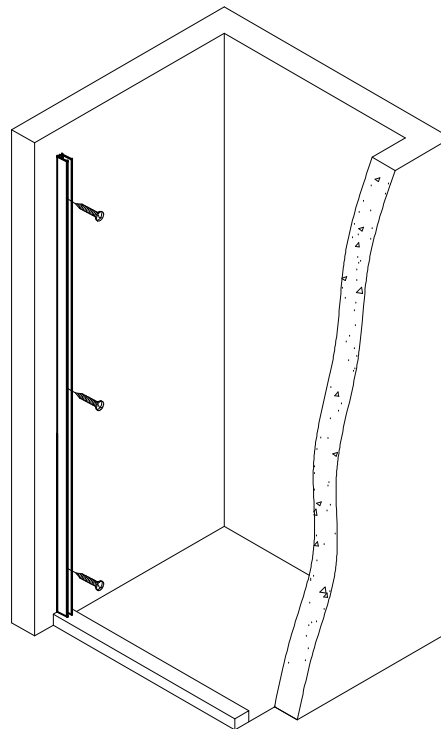


2




2-1

⑦x1


2-2

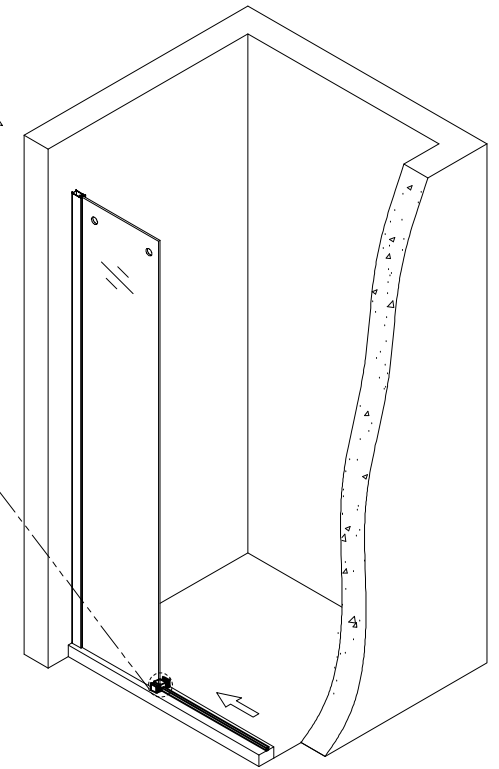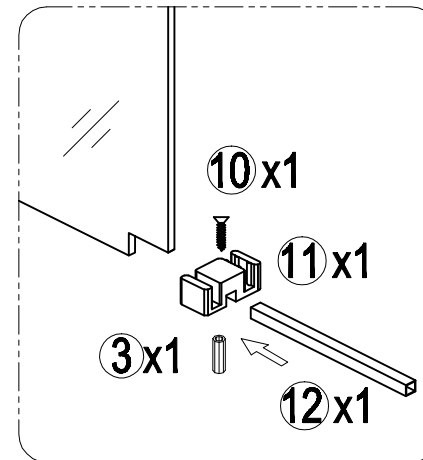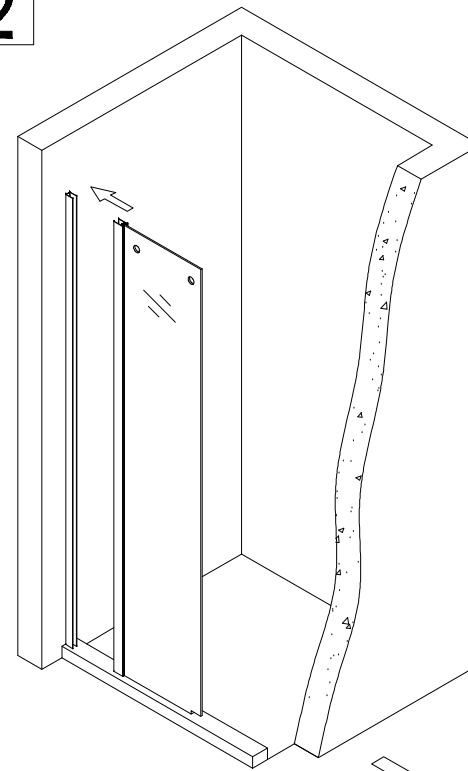


3

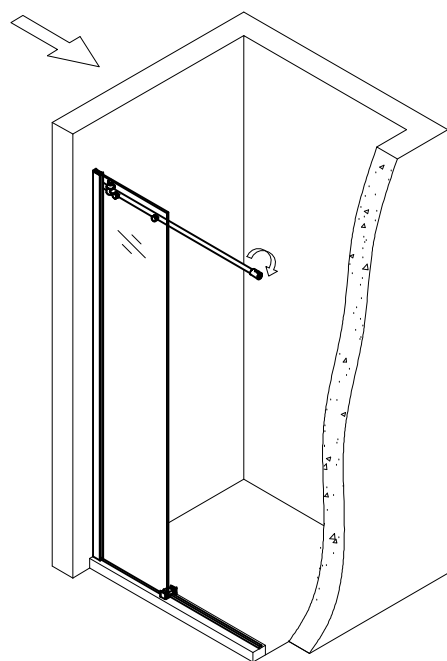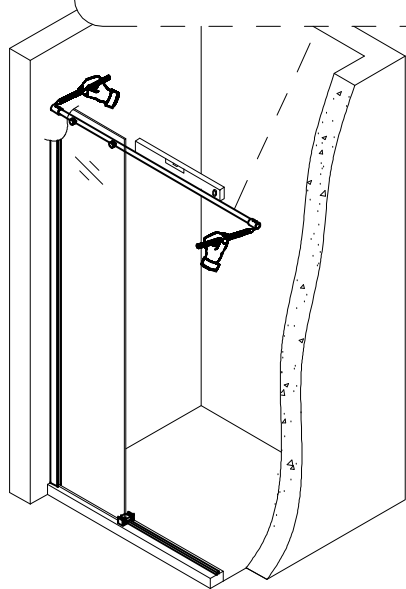


3-1 18+19x2

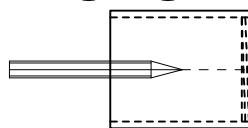


3-2

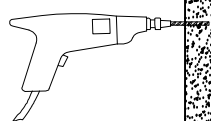


3-3

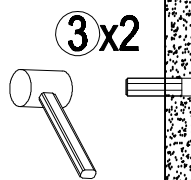


3-4

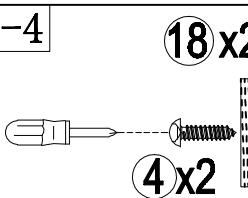


3-5

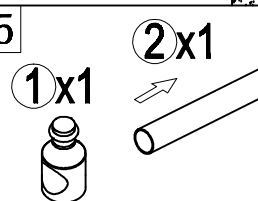


3-6

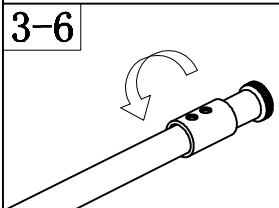


3-7

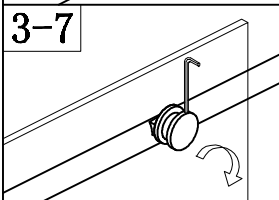


4

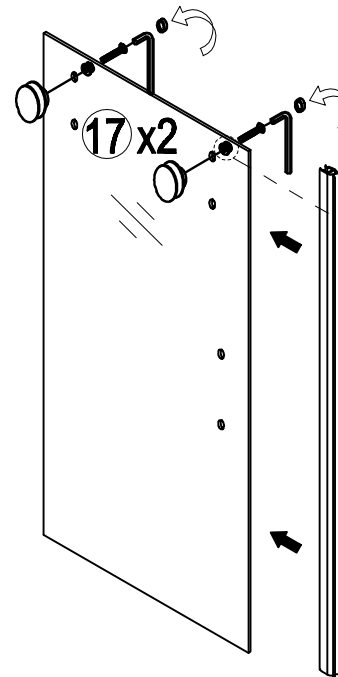


13x1

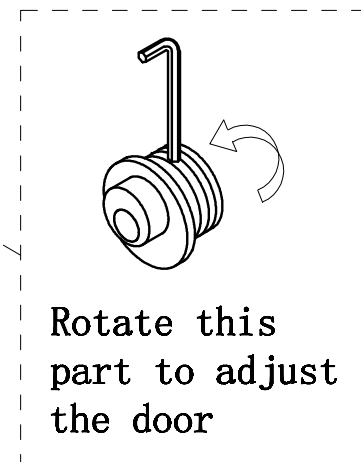



4-1

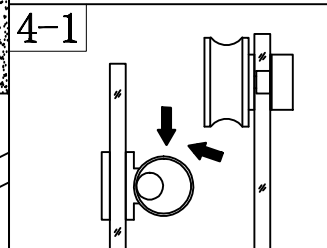


4-2

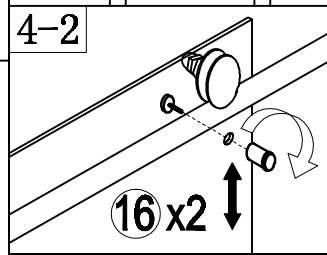


4-3

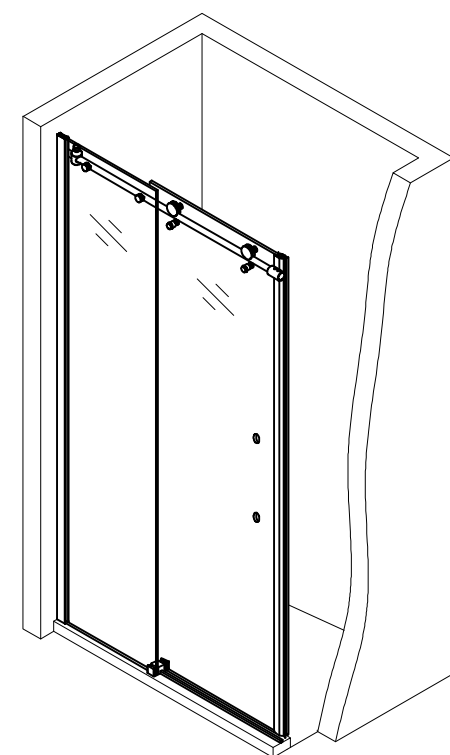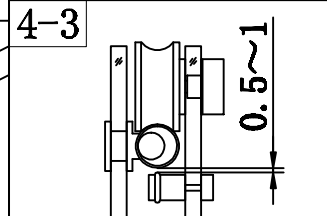


5

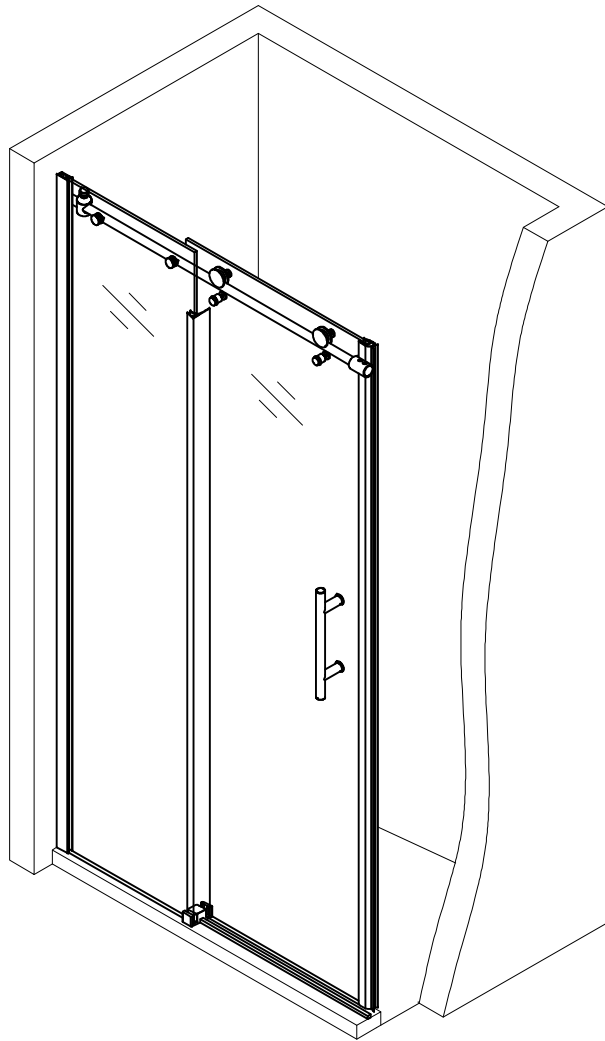


5-1 Ø3. 2mm

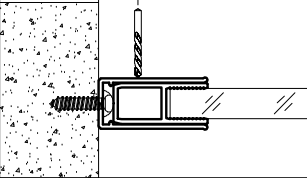


5-2

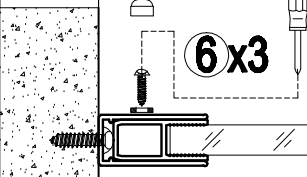


5-3

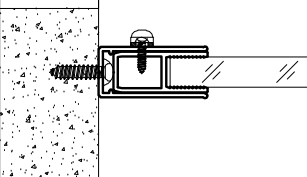


5-4

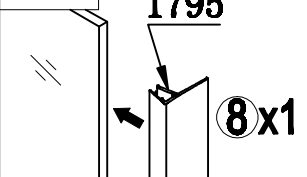

5-5

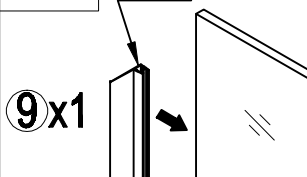

5-6

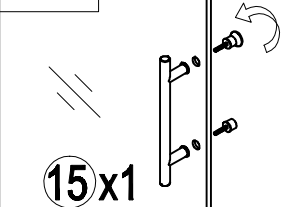

6

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly .
Do not use caustic cleaning products or abrasive material when cleaning your shower enclosure.

