#### CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

## SAFAVIEH OUTDOOR

#### NOTICE


- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

#### PIECE PICTURE QUANTITY DESCRIPTION Seat Frame 2X А Leg Frame 1X В Back frame 1X С Screw -1 6X D M7x70 Allen key 1X Е LG5

#### Part List and Hardware List

#### Model# PAT7031

#### Product Dimensions:50.39" W x 25.2" D x 25.59" H

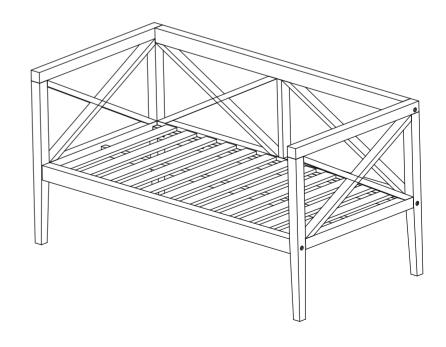


#### PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

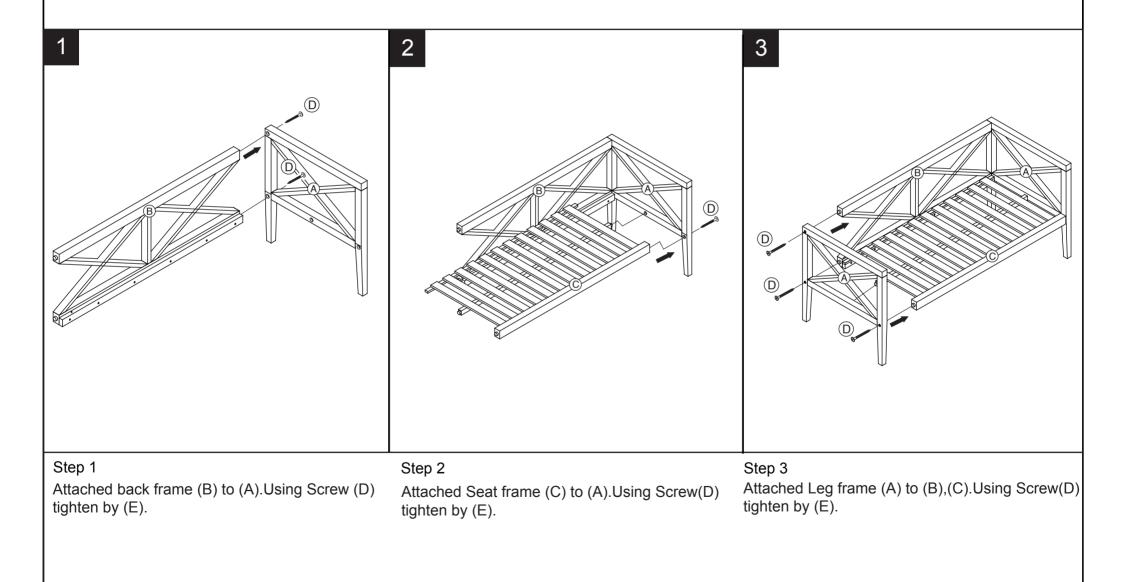

#### CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

## SAFAVIEH OUTDOOR

#### NOTICE


- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

#### Part List and Hardware List

| PIECE | DESCRIPTION | PICTURE    | QUANTITY |
|-------|-------------|------------|----------|
| А     | Leg Frame   |            | 2X       |
| В     | Back Frame  | Z          | 1X       |
| С     | Seat frame  | AMM.       | 1X       |
| D     | Screw       | Ø<br>M7x70 | 6X       |
| E     | Allen key   | LG5        | 1X       |

Model# PAT7031

Product Dimensions:46.85" W x 26.38" D x 32.48" H

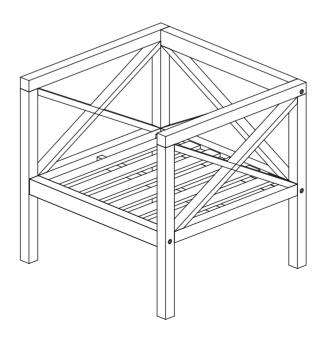


#### PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

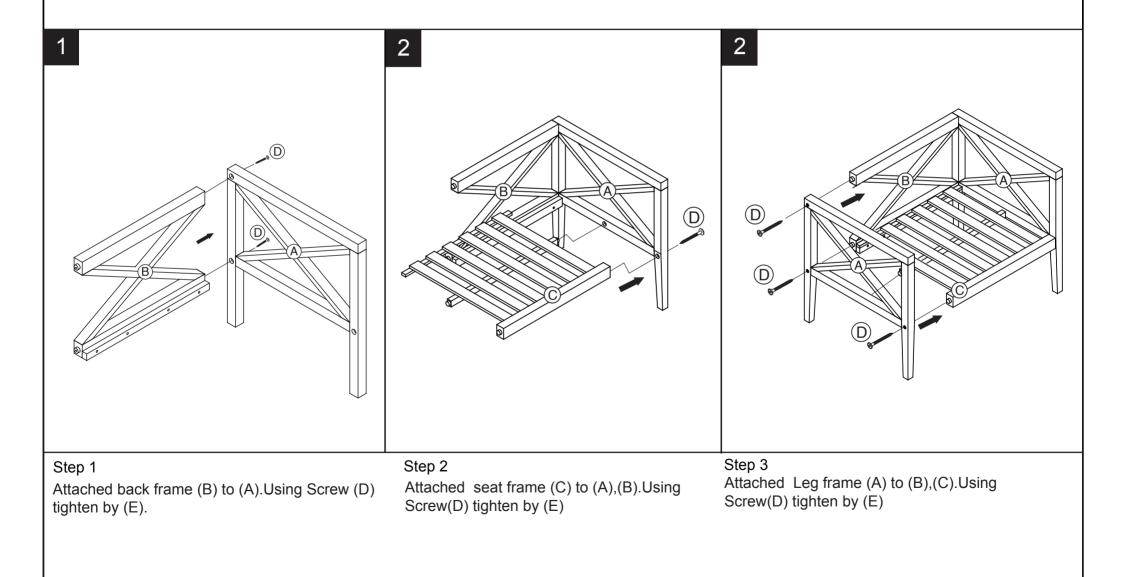

#### CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

# SAFAVIEH

#### NOTICE


- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

| PIECE | DESCRIPTION     | PICTURE                      | QUANTITY |  |  |
|-------|-----------------|------------------------------|----------|--|--|
| A     | Top Frame table |                              | 1X       |  |  |
| В     | Leg             |                              | 4X       |  |  |
| С     | Allen bolt L    | <u>ြားကားကားကား</u><br>M8X60 | 4X       |  |  |
| D     | Washer          | M8.5/20X2                    | 4X       |  |  |
| E     | Allen key       | LG4                          | 1X       |  |  |

#### Part List and Hardware List

Model# PAT7031

Product Dimensions:23,6" W x 39.37" D x 16.92" H

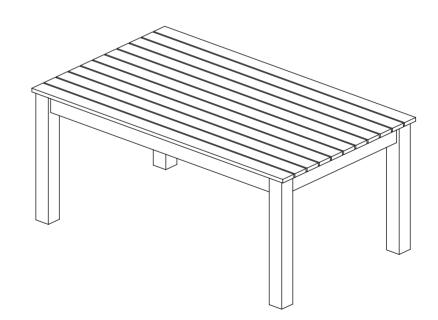


#### PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

1

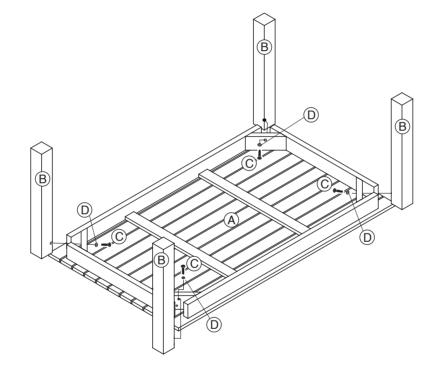

### Step 1

Attach legs (B) to top frame table (A).Using allen bolts (C) and insert washer (D) tighten with allen key (E).