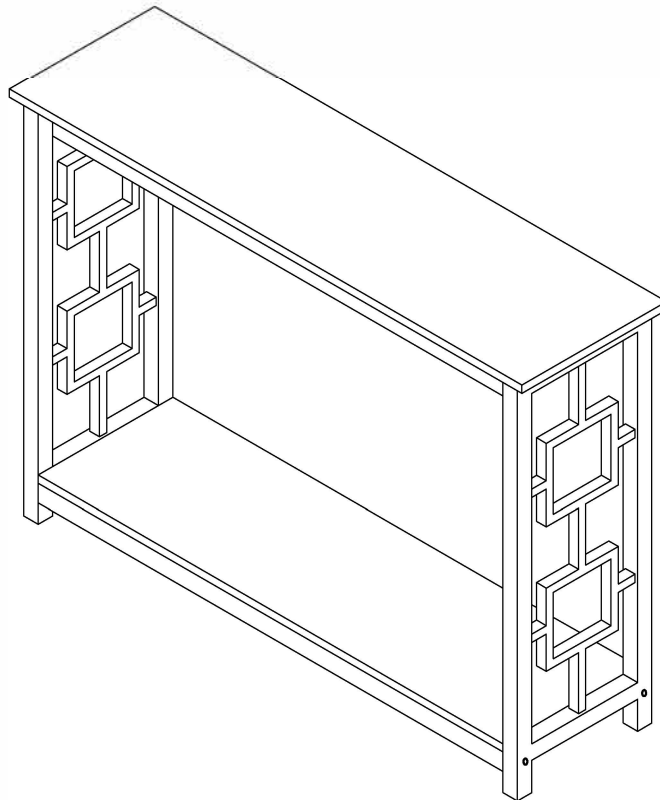


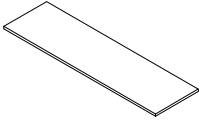



# ASSEMBLY INSTRUCTIONS









## NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

## Part List

A.	Quantity of 1	B.	Quantity of 4	C.	Quantity of 2	D.	Quantity of 1
							
Top Panel		Apron		Side Panel		Bottom Panel	

## Hardware List

(1)	Quantity of 8	(2)	Quantity of 8	(3)	Quantity of 8	(4)	Quantity of 12
							
Bolt		Nut		Wood Dowel		Screw	
(5)	Quantity of 8	(6)	Quantity of 1				
							
Wood Cap		Glue					

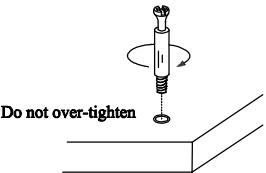

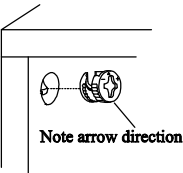
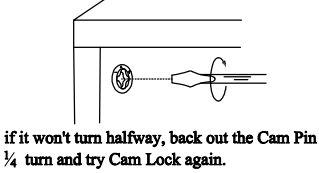
### Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.



### To use Dowels:

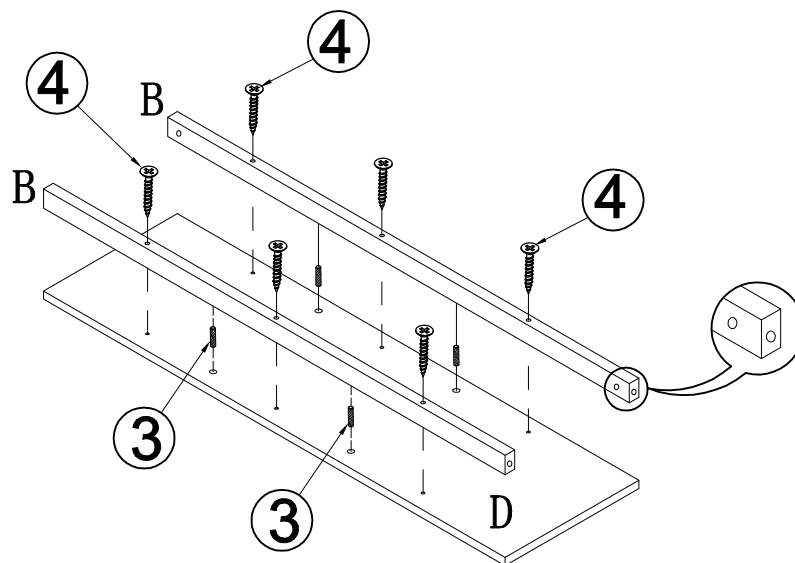
1. Add glue (about  $\frac{1}{4}$  full ) in the hole(s) of each board to be joined.
2. Insert the Dowel(s) and join boards.
3. Wipe excess glue with a damp paper towel.

### To use Cam Locks:

1. Insert Cam Pin until snug	2. Set boards together	3. Insert Cam Lock	4. Turn Cam Lock clockwise (half a turn)
			



## STEP 1

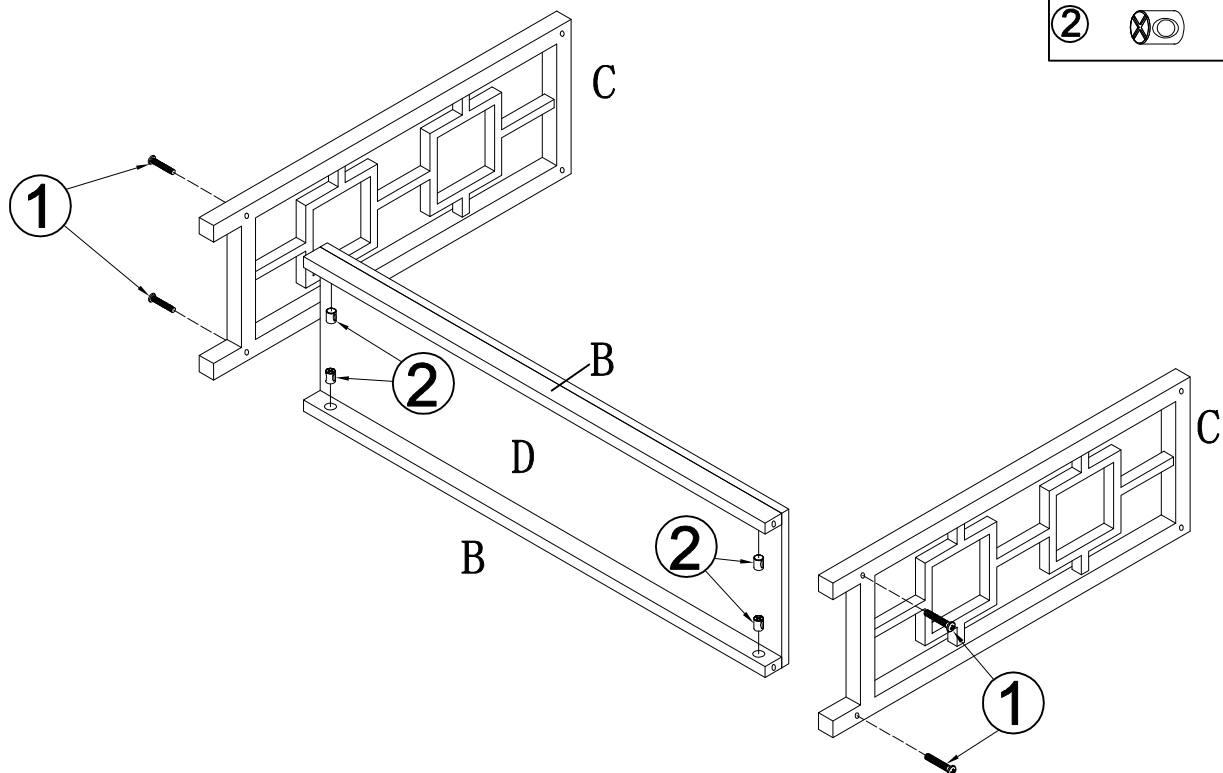
④		6pcs
③		4pcs



Assemble Aprons (B) to Bottom Panel (D) using Wood Dowels (3) and Screws (4).



## STEP 2

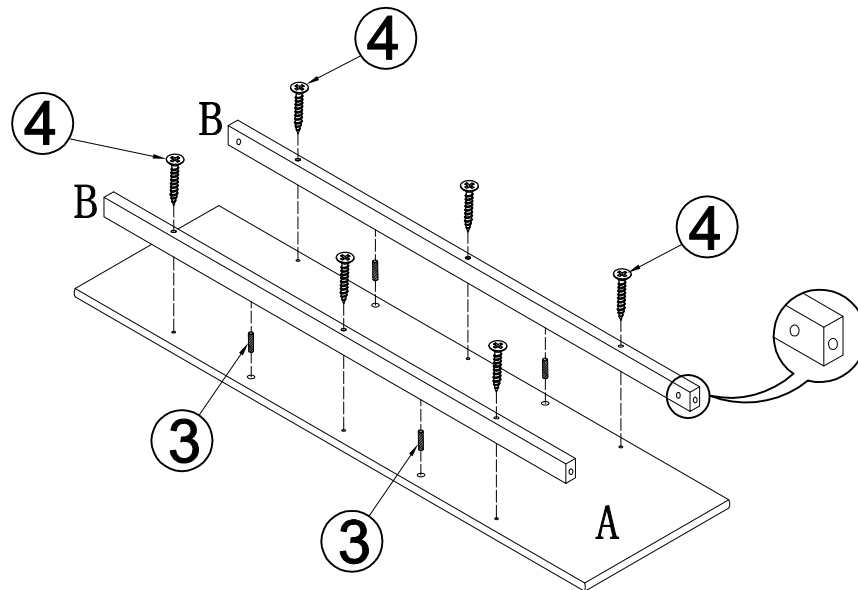
①		4pcs
②		4pcs



Assemble Side Panels (C) to Aprons (B) using Bolts (1) and Nuts (2).




## STEP 3

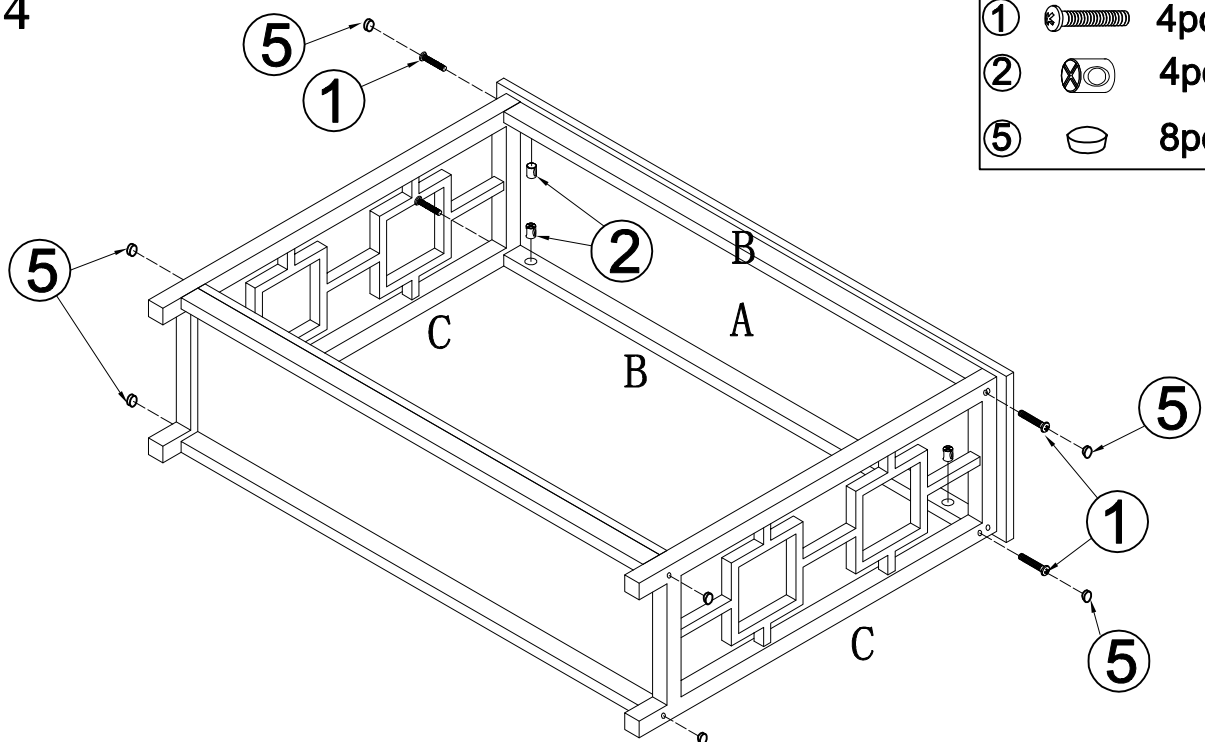
④		6pcs
③		4pcs



Assemble Aprons (B) to Top Panel (A) using Wood Dowels (3) and Screws (4).

## STEP 4

①		4pcs
②		4pcs
⑤		8pcs



Assemble Side Panels (C) to Aprons (B) using Bolts (1) and Nuts (2). Then insert Wood Caps (5) as above drawing shown.