




ASSEMBLY INSTRUCTIONS FOR ACME FURNITURE








MODEL#62202 SIDE CHAIR


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

*** Do not fully tighten screws until fully assembled ***

COMPONENT PARTS		
DESCRIPTION	PART NAME	Q'TY (PCS)
(A)	Back Frame 	1
(B)	Seat Frame 	1
(C)	Front Legs 	2

HARDWARE REQUIRED

①		BOLT	φ5/16***55mm	4	PCS
②		BOLT	φ5/16***75mm	4	PCS
③		LOCK WASHER	φ5/16***1mm	10	PCS
④		FLAT WASHER	φ5/16***19*2mm	10	PCS
⑤		ALLEN KEY	M4	1	PCS
⑥		Wood Dowel	φ10*30mm	1	PCS
⑦		BOLT	φ5/16***40mm	2	PCS

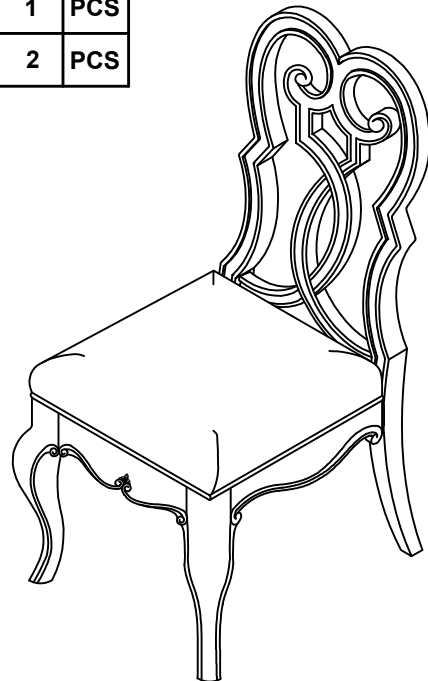


Attention


***Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

How to assemble:

STEP 1

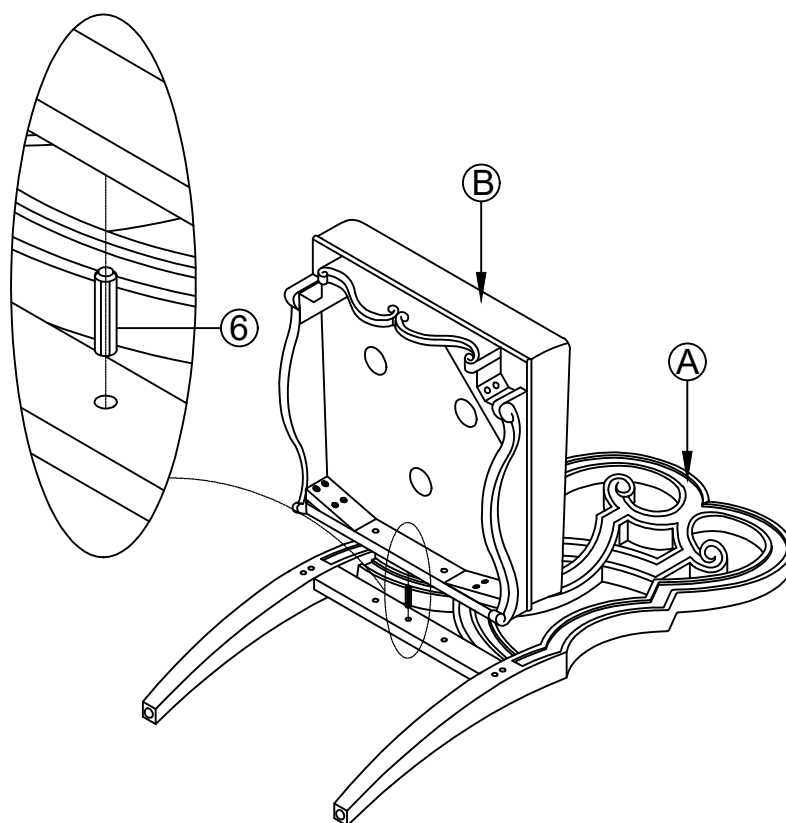


STEP 2

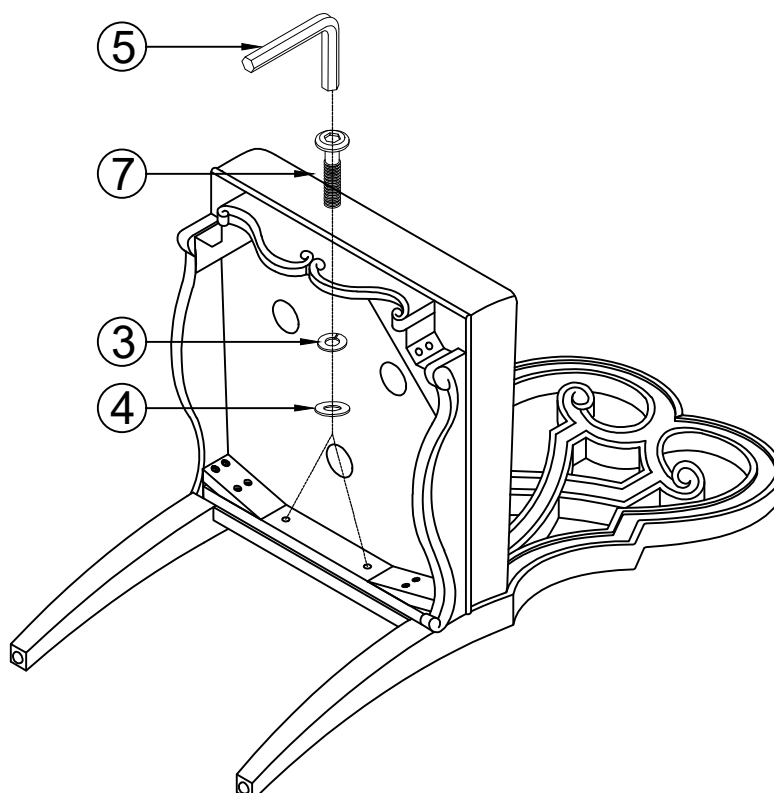

How to assemble:

STEP 3

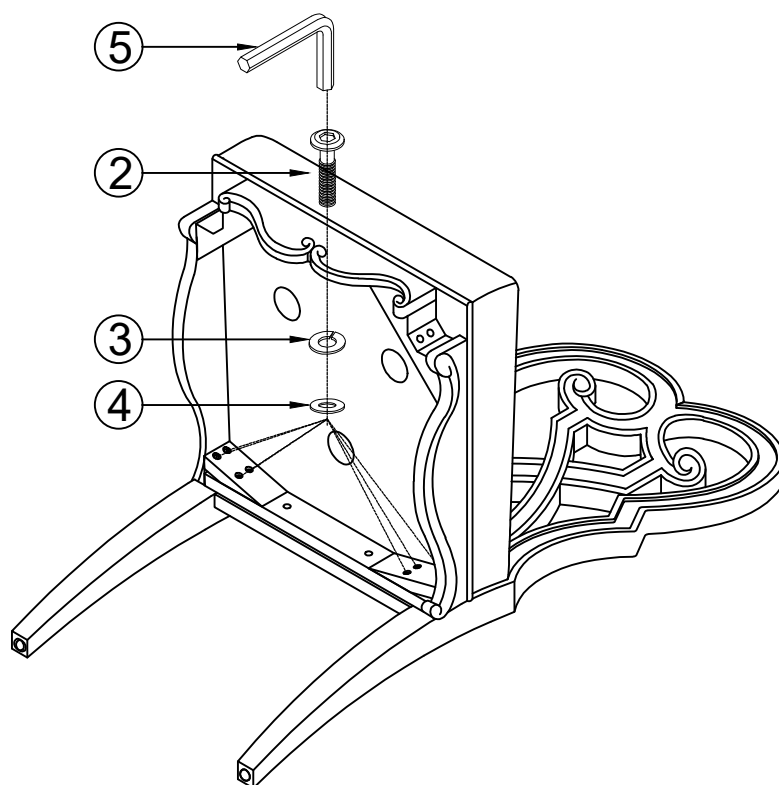

STEP 4

