










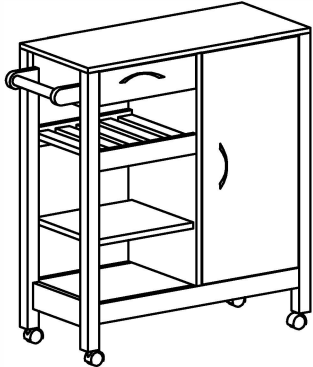



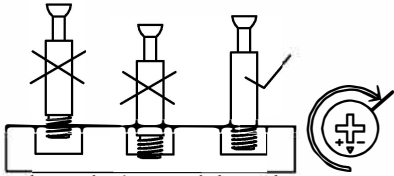

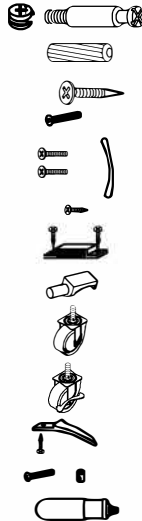





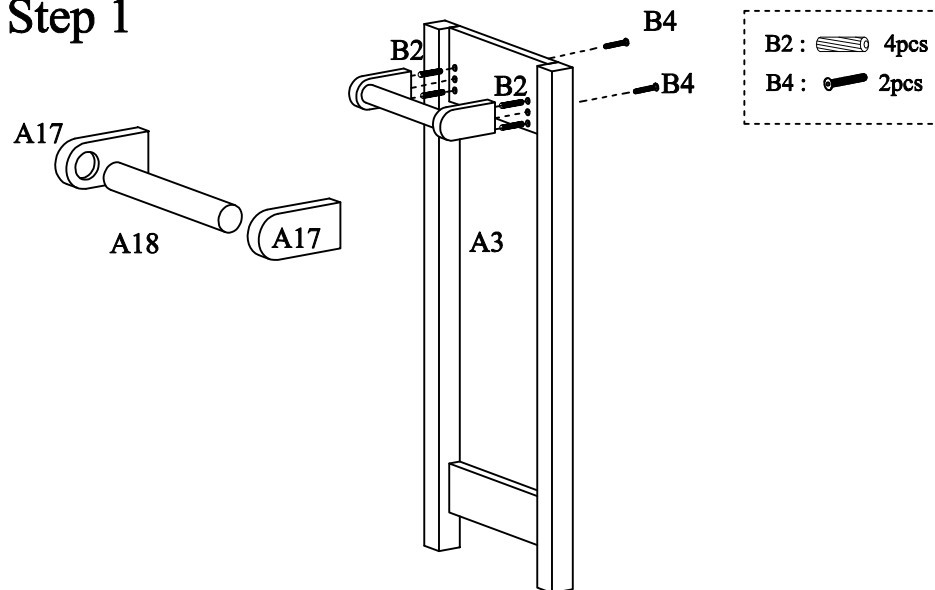


Assembly Instructions	Tools Required	Hardware Provided
 <p>It is recommended that this item should be assembled by two adults. Please read this assembly instruction carefully before assembly.</p>	 <p>Phillips screwdriver</p>   <p>Note: Please don't over tighten the cam screws . Assure the cam screw fits in the plastic threaded insert . Otherwise,the cam nut might not be able to catch the cam screws.</p>	 <p>       B1 10SETS        B2 27PCS        B3 10PCS        B4 2PCS        B5 2SETS        B6 4PCS        B7 1SET        B8 4PCS        B9 2PCS        B10 2PCS        B11 1SET        B12 5SETS        B13 1PC     </p> <p>Apply a little glue B13 into the wood dowel holes when inserting wood dowels.</p>

## Wooden Parts


 <p>A1 1Pc Top Panel</p>  <p>A2 1Pc Right Side Panel</p>	 <p>A3 1Pc Left Side Panel</p>  <p>A4 1Pc Divider</p>	 <p>A5 1Pc Bottom Panel</p>  <p>A6 1Pc Left side upper Shelf</p>  <p>A7 1Pc Drawer Front Panel</p>  <p>A8 2Pcs Drawer Side Panel</p>	 <p>A9 1Pc Drawer Back Panel</p>  <p>A10 1Pc Drawer Bottom Panel</p>  <p>A11 1Pc Adjustable Shelf Behind Door</p>  <p>A13 1Pc Left side lower Shelf</p>	 <p>A12 1Pc Door Panel</p>  <p>A14 1Pc Left side slat Shelf</p>	 <p>A15 1Pc Small Back Panel</p>  <p>A16 1Pc Big Back Panel</p>	 <p>A17 2Pcs Ear</p>  <p>A18 1PC Connector Bar</p>
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## Step 1




Attach both ears A17 to the connector bar A18 as shown above, then assemble the towel rail to the left side panel A3 using bolts B4 and wood dowels B2.

## Step 2

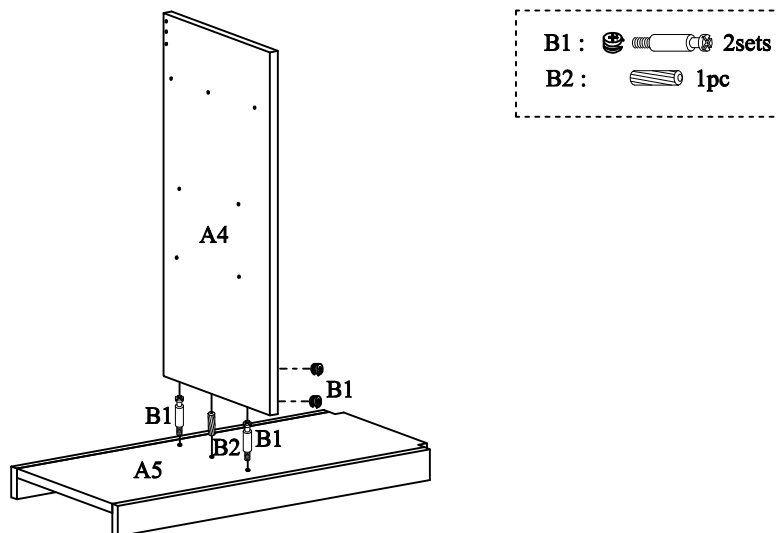


Assemble the divider A4 to bottom panel A5 using wood dowels B2 and camlocks B1.

## Step 3

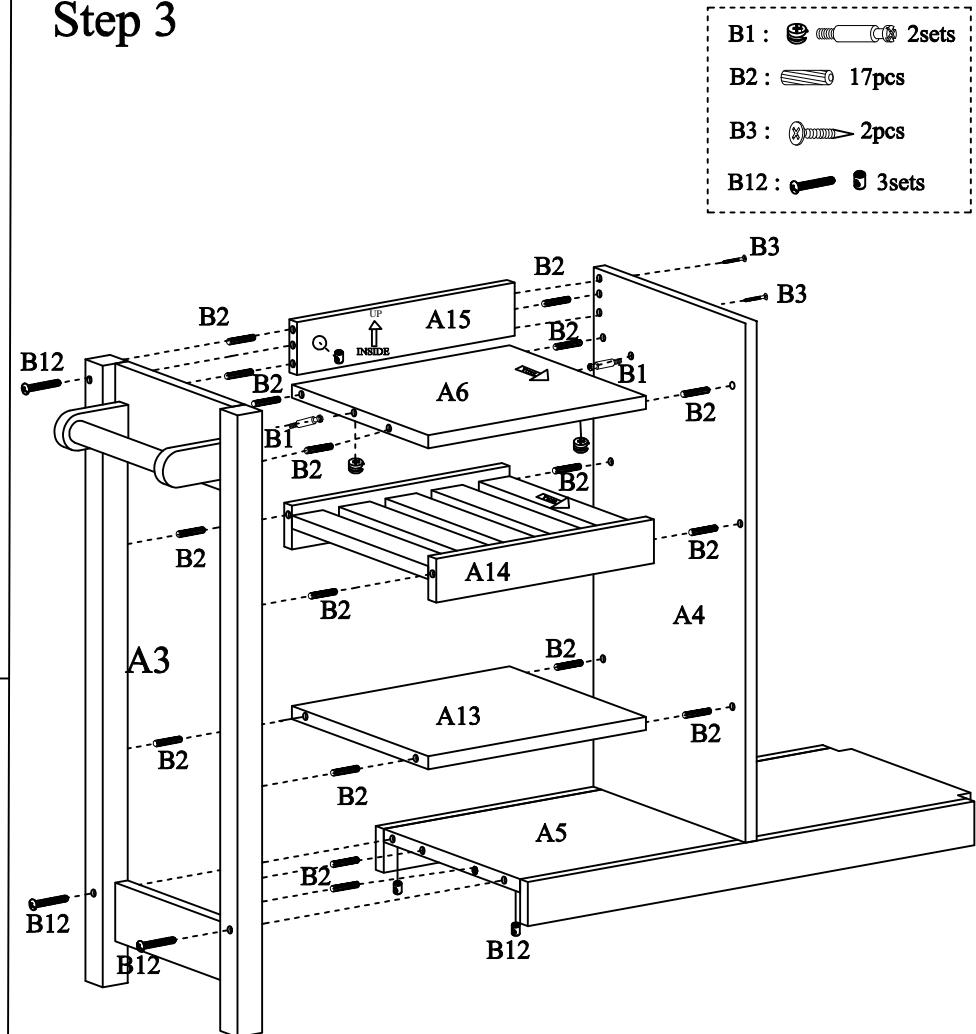


- 1). Assemble shelf A6 to divider A4 using wood dowels B2 and camlock B1, then assemble the small back panel A15 to divider A4 with screws B3 & wood dowels B2.
- 2). Attach the slat shelf A14 and shelf A13 to divider A4 using wood dowels B2.
- 3). Assemble the left side panel A3 to the small back panel A15, shelf A6, slat shelf A14, shelf A13 and bottom panel A5 using wood dowels B2, bolts & nuts B12 and camlock B1.

## Step 4

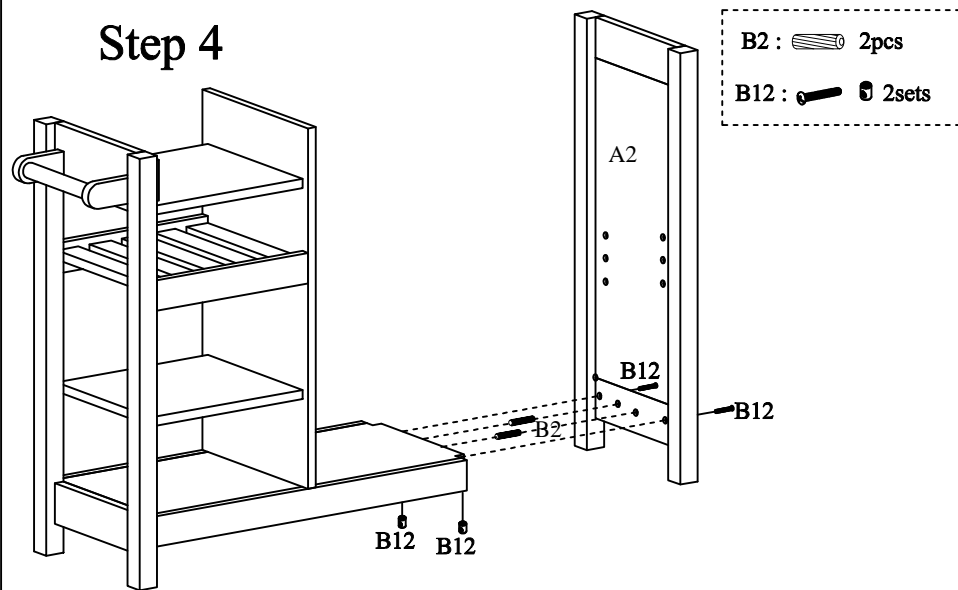



Assemble the right side panel A2 to bottom panel A5 using bolts & nuts B12 and wood dowels B2.

## Step 5

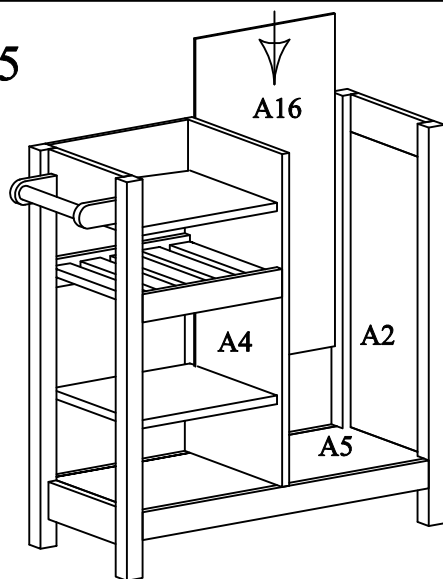


Insert the big back panel A16 into the grooves of right side panel A2 and divider A4 with bottom panel A5.

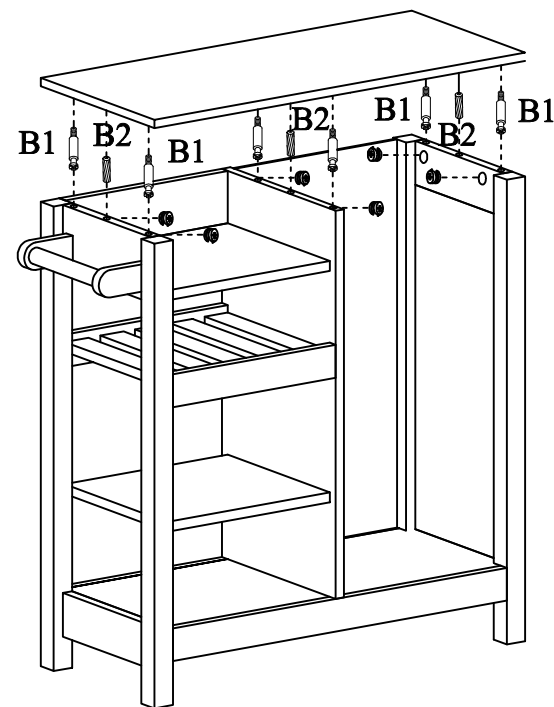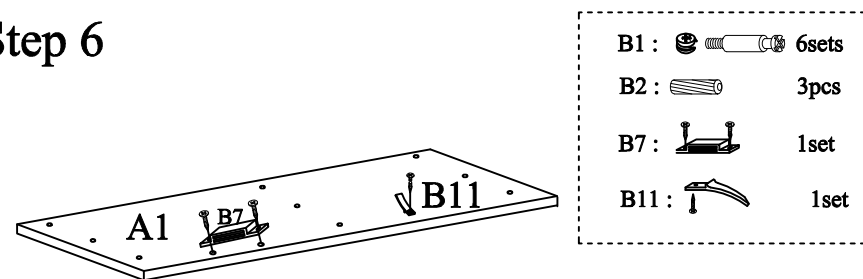

## Step 6



- 1). Assemble the magnet B7 and stopper B11 onto the bottom of top panel A1 using included screws.
- 2). Assemble the top panel A1 to the left side panel A3, right side panel A2 and divider A4 using wood dowels B2 & camlocks B1.

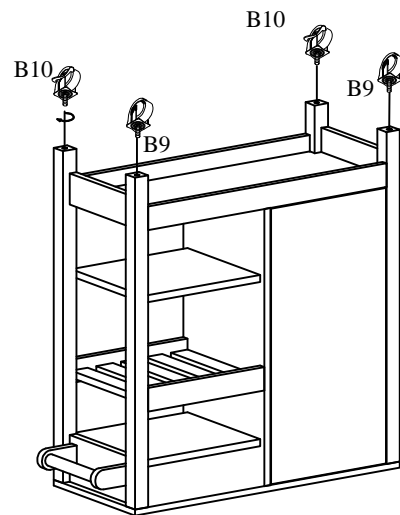
## Step 7





B9 :  2pcs  
B10 :  2pcs

Turn the locking & unlocking castors B9 & B10 into bottom of legs.

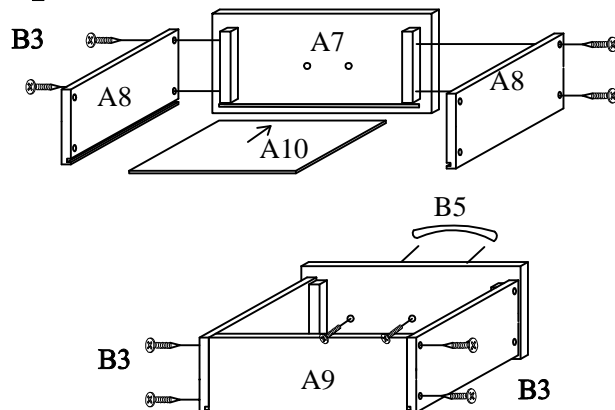


## Step 8




B3 :  8pcs  
B5 :  1set

- 1). Assemble the drawer side panels A8 to the drawer front panel A7 using screws B3.
- 2). Insert the bottom panel A10 .
- 3). Assemble the drawer back panel A9 to the side panels A8 with screws B3.
- 4). Assemble the drawer handle B5 to drawer front panel A7 with included bolts.

## Step 9

B5 :  1set  
B6 :  4pcs  
B8 :  4pcs

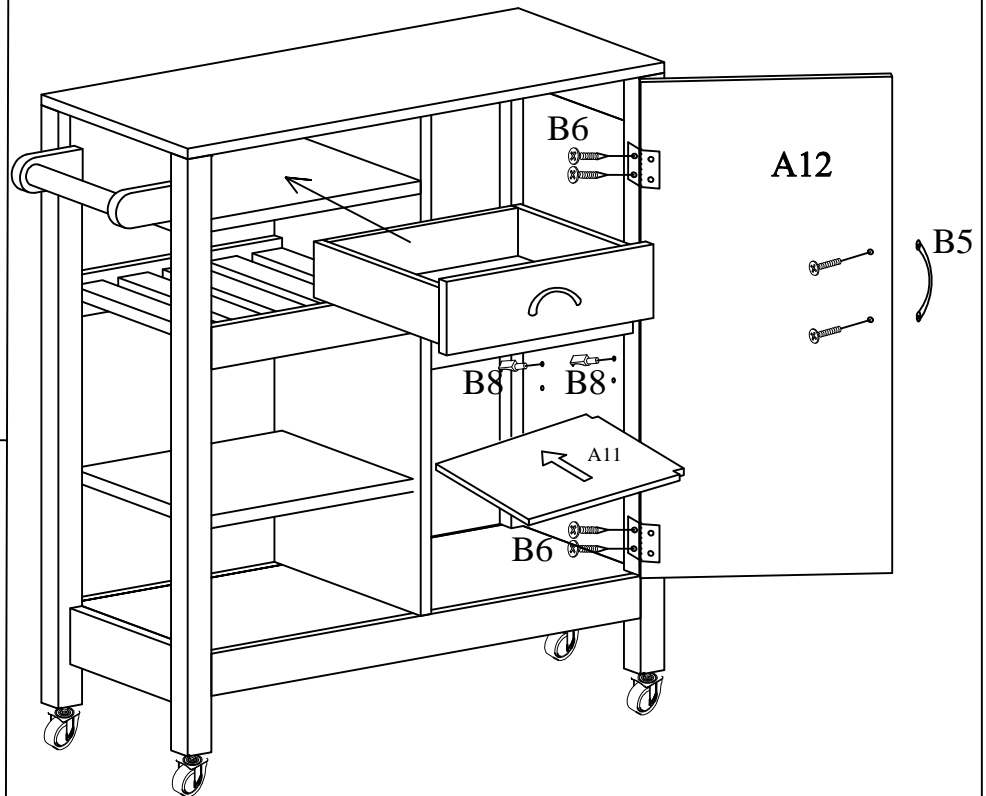

- 1). Attach the handle B5 to the door A12 using included screws. Assemble the door A12 to the right side panel A2 with screws B6.
- 2). Insert the shelf supports B8 into the holes of right side panel A2 and divider A4 ,then put the adjustable shelf A11 onto the shelf supports B8.
- 3). Put the drawer inside the left side upper cube.