


CHIC TEAK

Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325

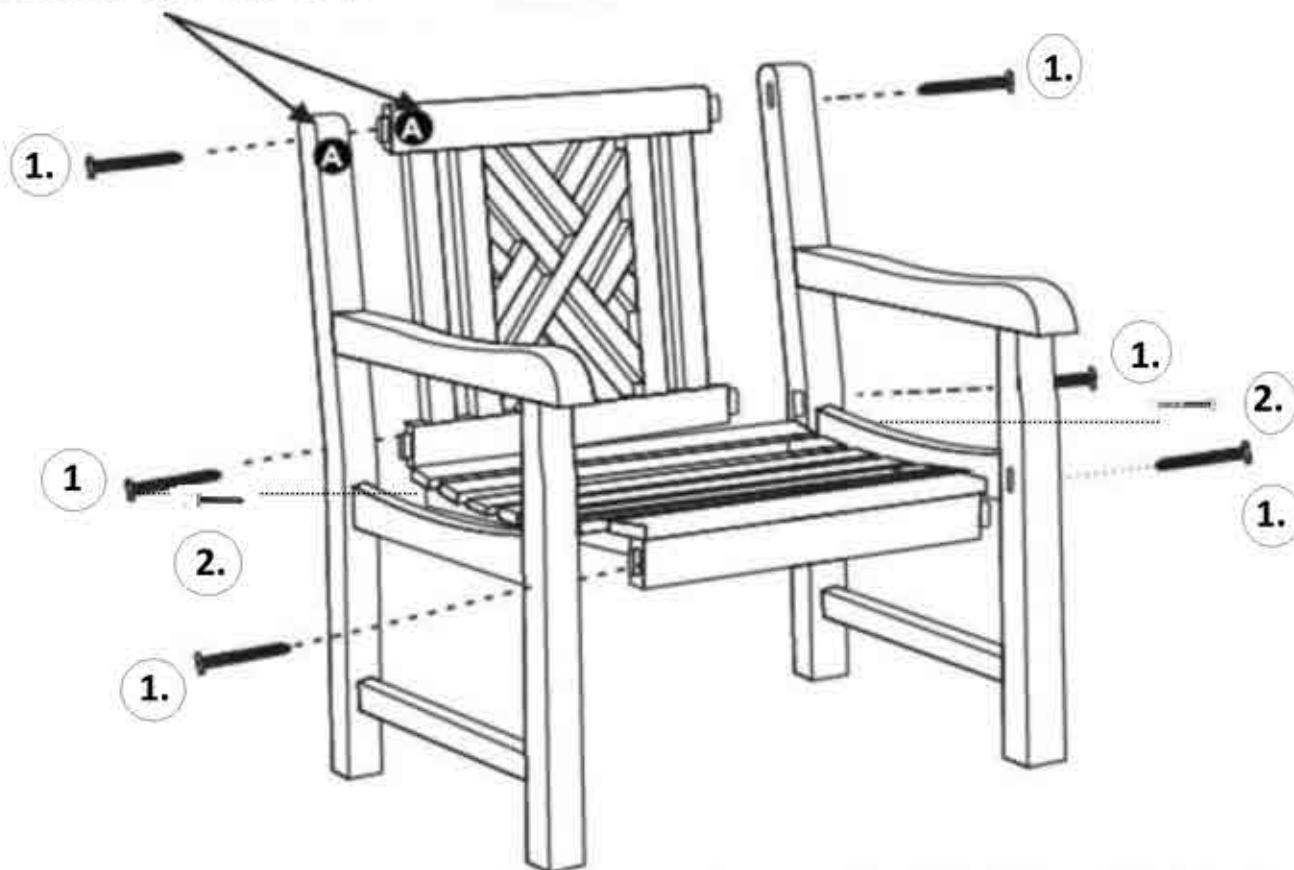

*Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly*

Code

WJ115

Hardware



- 1. F. BOLT 60mm (6 pcs)
- 2. SCREW 30mm (4 pcs)

Tool



Socket Wrench 4m/m Rt

Total Section

4 Section