

Connector Brackets


NOTE: For stability and safety, it is essential that all units be secured to each other using the supplied hardware.

Lay units to be connected on their sides or backs on a clean, flat surface, such as provided cardboard box or blanket, to protect the surfaces from scratches. Align the low profile insert nuts of two adjacent modules and connect them using the provided bracket and connecting bolts. Loosely tighten bolts and brackets. Repeat process for each module you wish to connect. Secure bolts tightly with the allen wrench. Return joined units to their upright standing position.


CONNECTING TWO OR MORE MODULAR UNITS

Each base module is equipped with two low profile insert nuts on each side (totaling 8 per base), 8 connector brackets and 16 connector bolts are included to connect ANY possible side of the base module. You may have more hardware than what is needed based on the configuration you have chosen.


MODULE CONNECTION

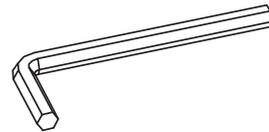

A Allen Wrench
Quantity: 1



B Connector Bolt
Quantity: 16

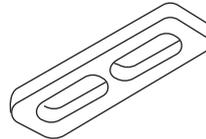


C Connector Bracket
Quantity: 8

CONNECTING HARDWARE FOR EACH MODULE

OXFORD *G* GARDEN®

Koral Modular

**ASSEMBLY
INSTRUCTIONS**

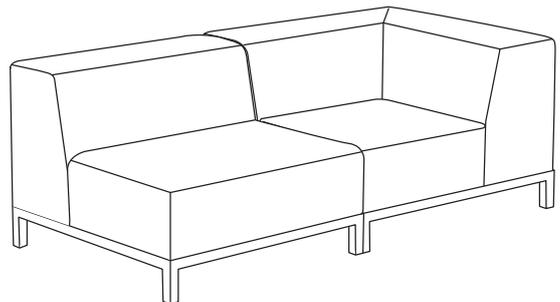

15 Kingbrook Parkway, Suite 100
Simpsonville, KY 40067



p. 877.866.3331 f. 502.719.8888

oxfordgarden.com

Ver. 2019.11.19


Thoughtful Design **MADE RIGHT**

BRACKET PLACEMENT

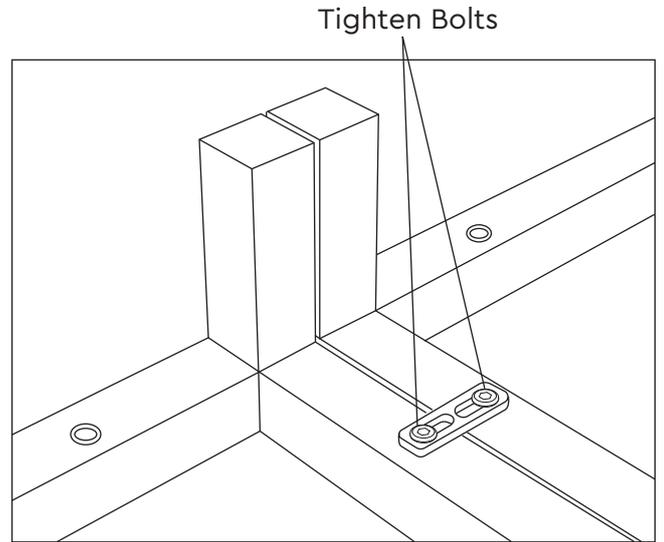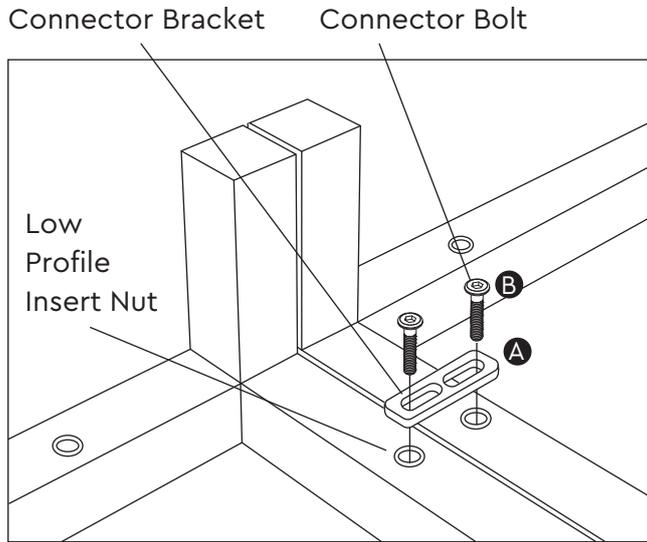


BASE MODULES


Corner Seat

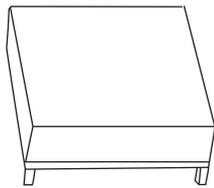

Side Chair

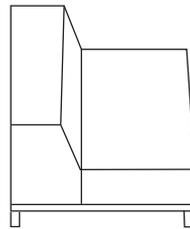

Ottoman

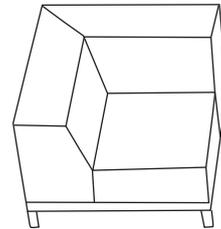

POSSIBLE CONFIGURATIONS

