


CHIC TEAK

Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325

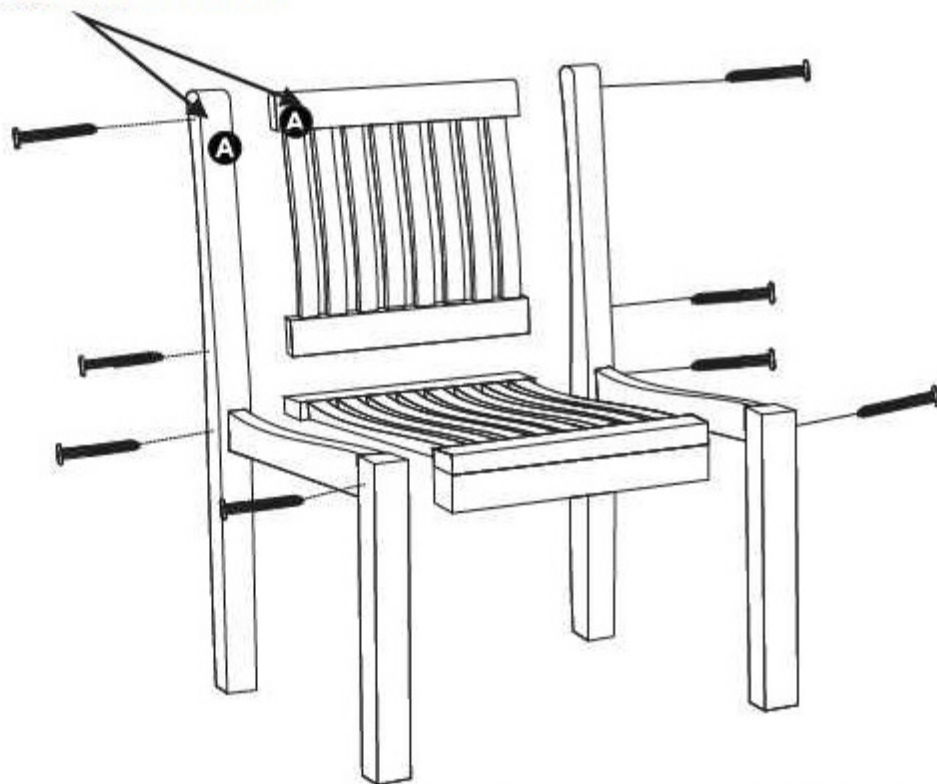

**Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly**

Code

AM166DC

Hardware



F-bolt (8 Pcs)

Tool



Socket Wrench 4mm Ht

Total Section

4 Section