
ASSEMBLY INSTRUCTIONS BATH VANITY-CABINET

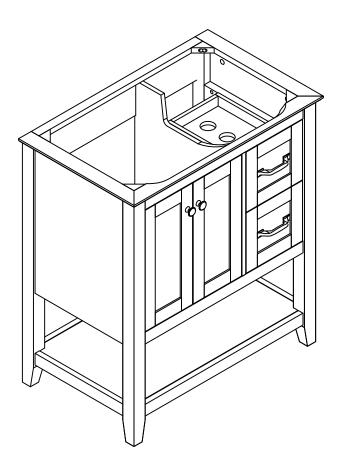

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"




* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!! * Please assemble on a clean soft surface to avoid damage.













IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Thank you for buying our products.

Please read the installation manual carefully before installation,

we need you to follow the instructions on the accessories and hardware

step by step assembly complete, our instructions are very detailed.

Products are environmentally friendly products,

Please rest assured that you do not soak in water, do not place very heavy items,

do not malicious push and pull,

if you have any problems in the process of assembly and use, please contact us.

Thank you again for your purchase of our products,

I wish you a happy life.

Detail View - CABINET (5) (11) (10))))

Identifying the Hardware-Identify the hardware using the illustrations below.

Part List - WF310865 2 1 Side Panel (L) - 1pc Side Panel (R) - 1pc 3 4 Panel Mid - 1pc Frame Top - 1pc 5 6 Front Crossbar Top - 1pc Rear Panel Top - 1pc 7 8 Rear Panel Bottom - 1pc Frame Mid - 1pc 9 10 Frame Bottom - 1pc Door Cabinet (L) - 1pc 11 12 Door Cabinet (R) - 1pc Drawer Face - 1pc 13 14 Drawer Panel Rear - 1pc Drawer Panel Side (A) - 2pcs


Part List - WF310865


Panel bottom (B) - 1pc


Drawer Panel Side (B) - 2pcs
Panel bottom (A) - 1pc


Hardware List - WF310865


Α	В	С
	ø14.5x12mm	
ø6x35mm		ø13x1/4"x28mm
Three in one bolts (19pcs)	Three in one lock (19pcs)	Hex-Head bolts (10pcs)
D	E	F
	210	(†)20000000>
ø1/4"x16x1mm		ø7xø3.5x15mm
Washer (10pcs)	Damping hinge (4pcs)	Flat head screw (24pcs)
G	H	I
		(†)20000000>
ø300x35mm	ø298x18mm	ø6xø3x12mm
Slide rails (4pcs)	Slide rails (4pcs)	Flat head screw (24pcs)
J	K	L
		ø5/32"x25mm
Handle (2pcs)	Handle (2pcs)	Handle screw (6pcs)
M	N	0
	Emmino>	(-)mmmmm>
	ø7xø3.5x12mm	ø8xø4x32mm
L-Bracket (1pc)	Round head screw (2pcs)	Round head screw (16pcs)
Р	Q	R
(S)100000000>	€]bannanan>	9////
ø8xø4x25mm	ø8xø4x19mm	ø6x30mm
Round head screw (2pcs)	Round head screw (2pcs)	Wood dowel (4pcs)
S	T	U
Ø8x30mm	4	
Wood dowel (24pcs)	4mm Allen key (1pc)	Anti fall hardware (1set)
v voou dowei (24pcs)	Allen key (Tpc)	And fall haldware (1881)

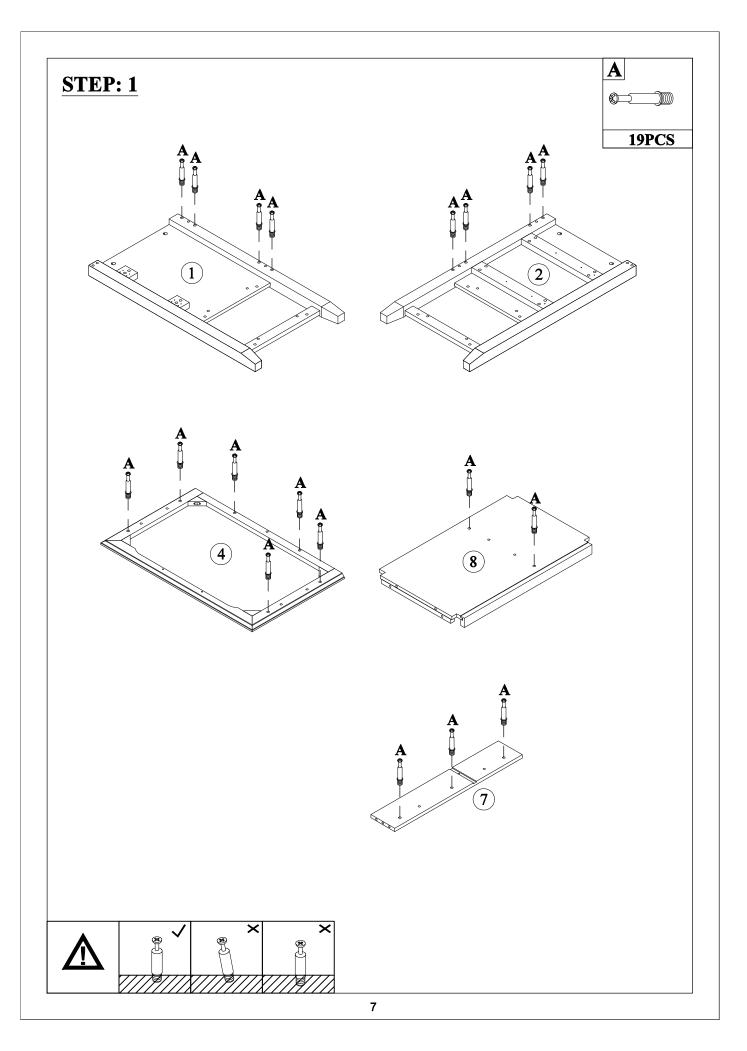


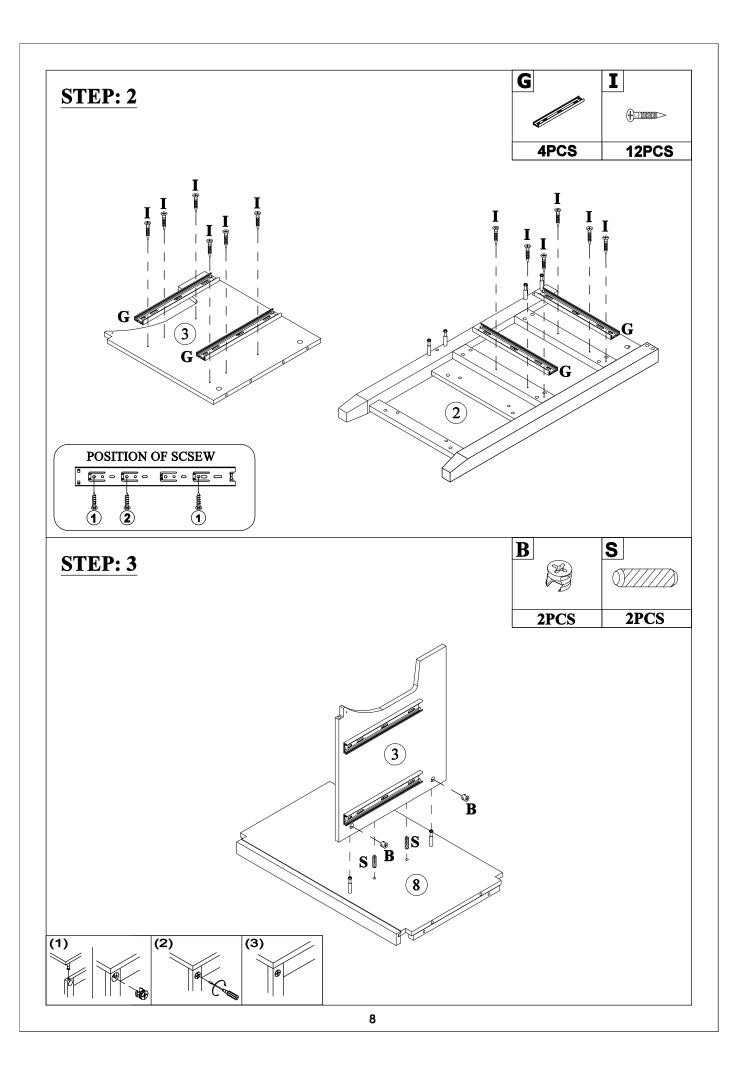


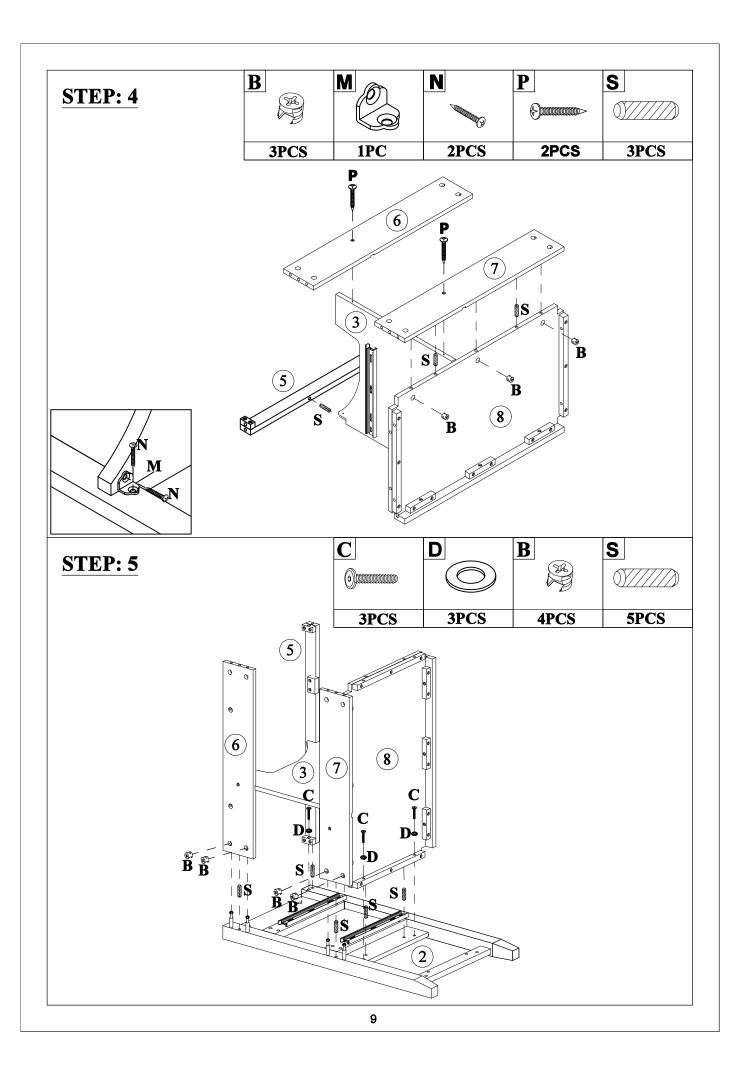

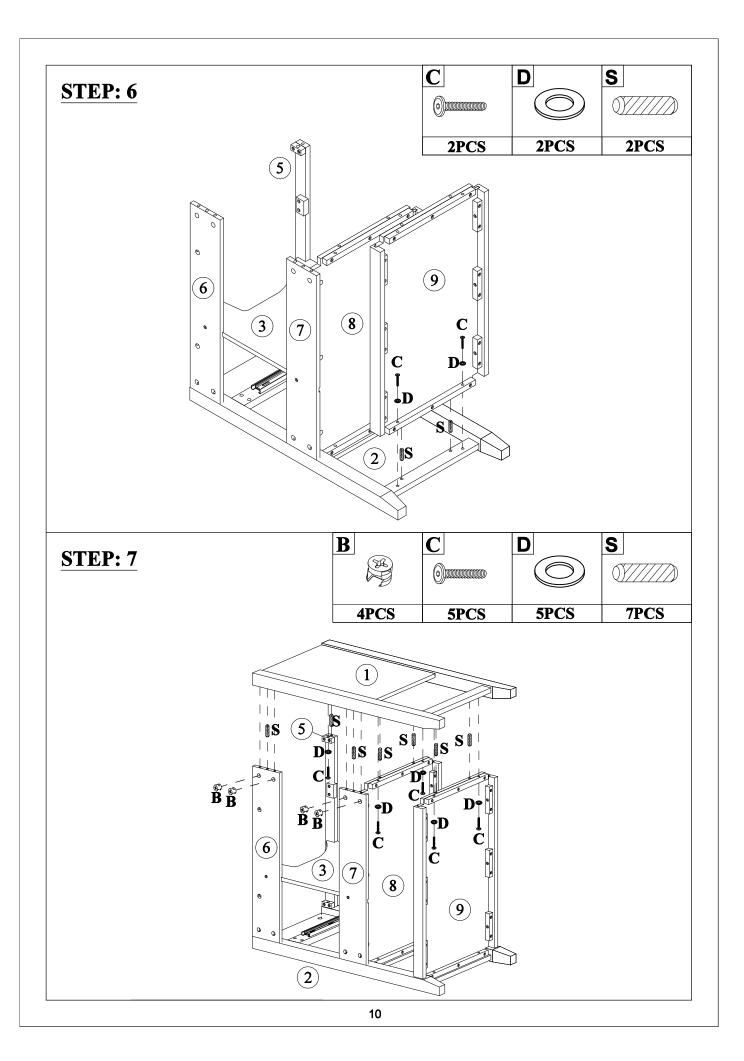

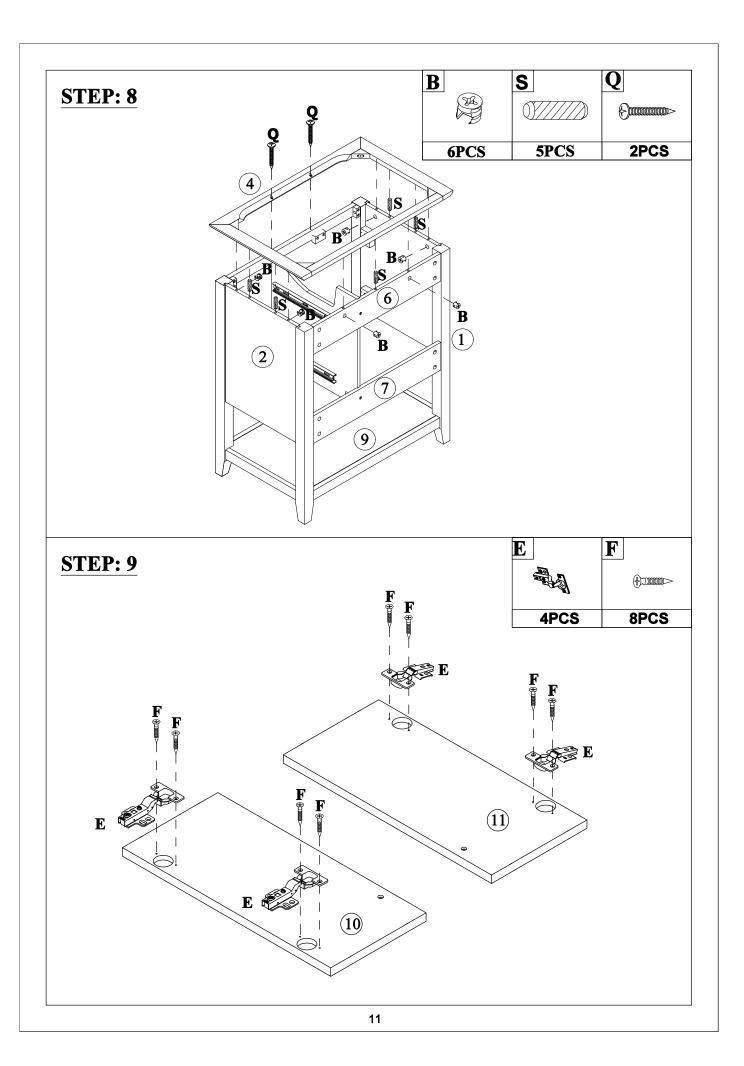


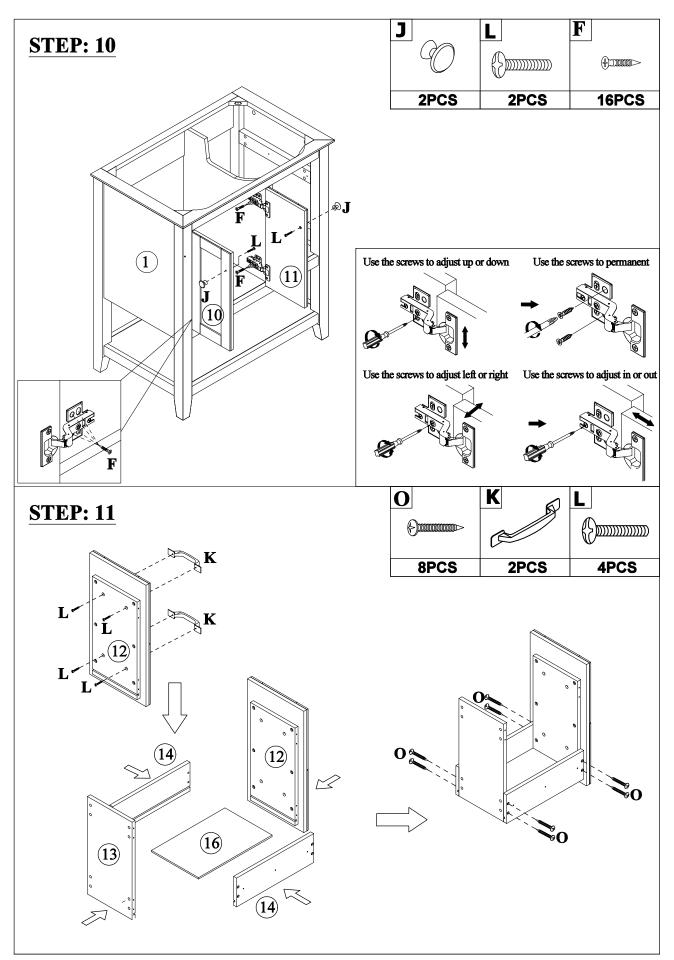

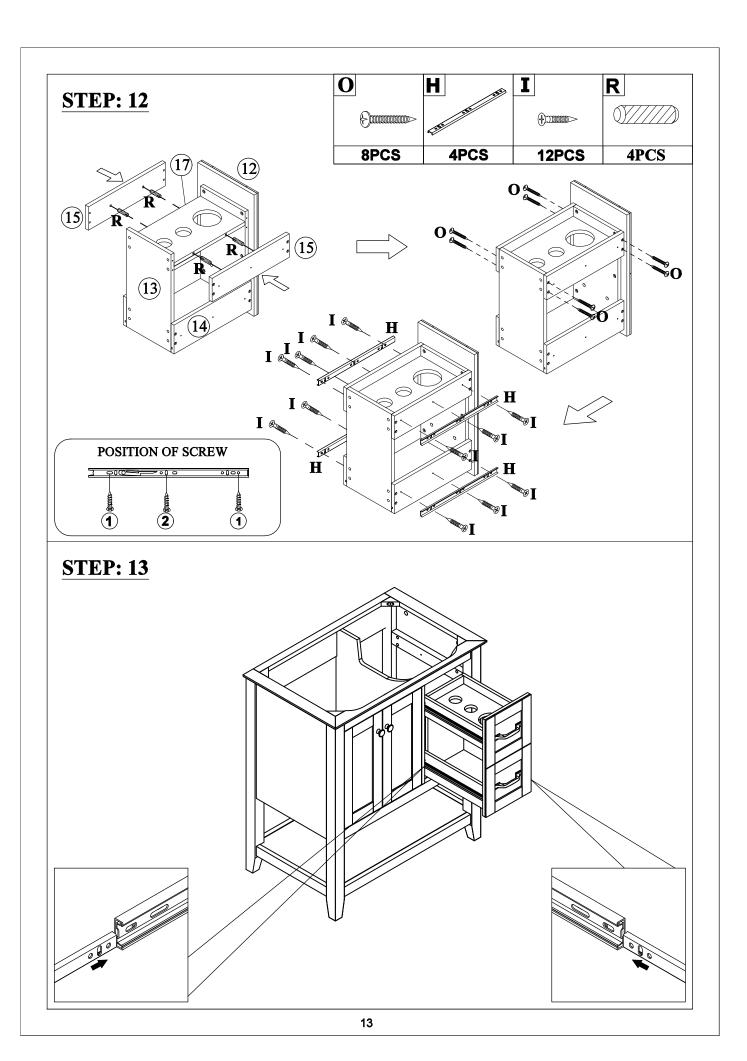







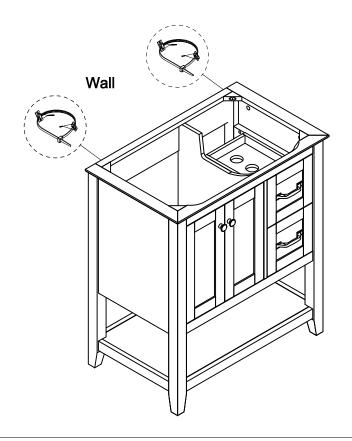

STEP: 15

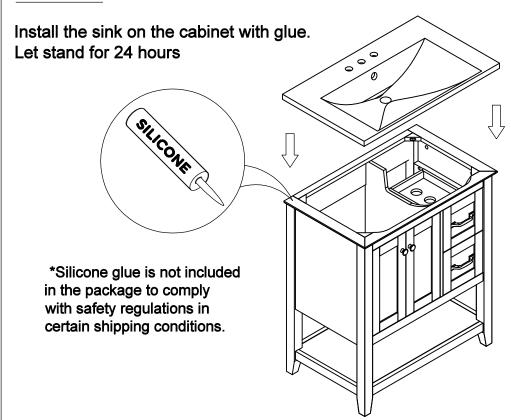


STEP: 16

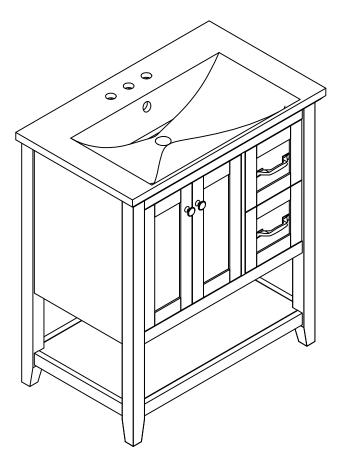




HINGE ADJUSTMENTS

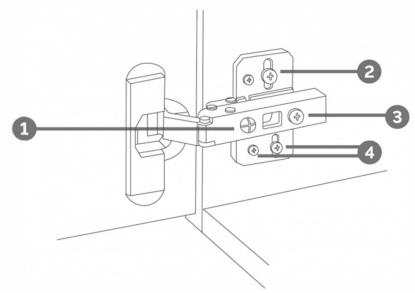

1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

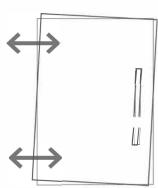

2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

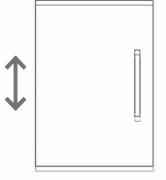

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

