


# CONVENIENCE CONCEPTS

## TV STAND WITH TWO CABINETS

36" MAXIMUM FLAT PANEL TELEVISION  
80 LB. MAXIMUM CAPACITY

**151165**

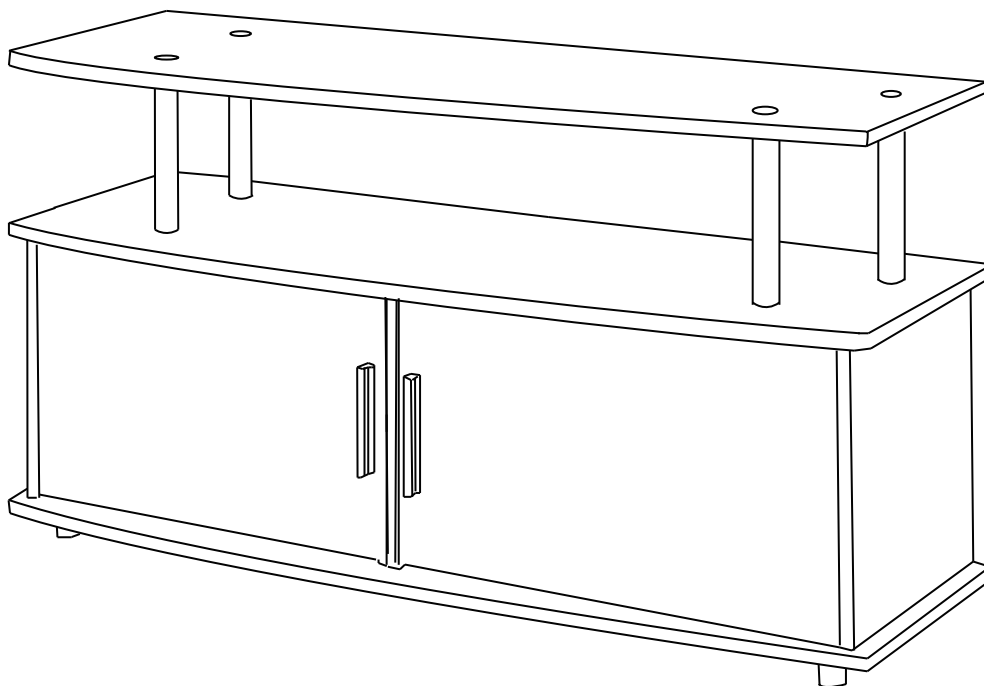

### ASSEMBLY INSTRUCTIONS

---

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .

---


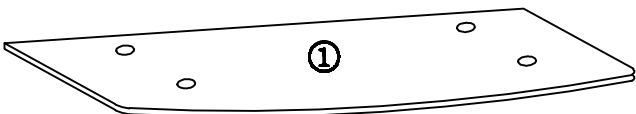

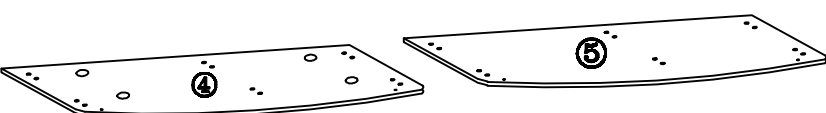
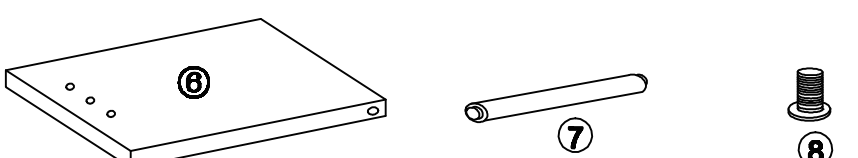
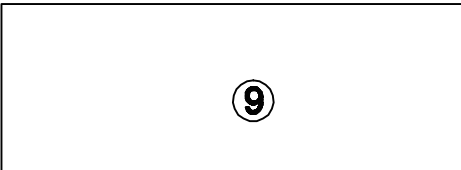










Please do not return to the store





Broken or missing parts?

Need help with assembly?

If you have any questions just call 1-800-468-6447 or email us at [parts@convenience-concepts.com](mailto:parts@convenience-concepts.com)


| Hardware List  | Panel List  |
|--|---|
| <p>(A) </p> <p><b>Cam Bolt(12pcs)</b></p>         |  <p><b>Top Panel (1pc)</b></p>  <p><b>Middle Divider (1pc)</b>      <b>Side Panel (2pcs)</b></p>  <p><b>Middle Panel (1pc)</b>      <b>Bottom Panel (1pc)</b></p>  <p><b>Doors (2pcs)</b>      <b>Metal Tubes (4pcs)</b>      <b>End Caps (8pcs)</b></p>  <p><b>Back Panel (1pc)</b></p> |
| <p>(B) </p> <p><b>Wood dowel (12pcs)</b></p>      |   |
| <p>(C) </p> <p><b>Handle (2pcs)</b></p>           |   |
| <p>(D) </p> <p><b>Door Inserts (4pcs)</b></p>     |   |
| <p>(E) </p> <p><b>Magnets (2pcs)</b></p>          |   |
| <p>(F) </p> <p><b>Metal Brackets (2pcs)</b></p> |   |
| <p>(G) </p> <p><b>Handle Screws (6pcs)</b></p>  |   |
| <p>(H) </p> <p><b>Nails (15pcs)</b></p>         |   |
| <p>(I) </p> <p><b>Glue (1pc)</b></p>            |   |

### Assembling the unit with camlocks and wood dowels.
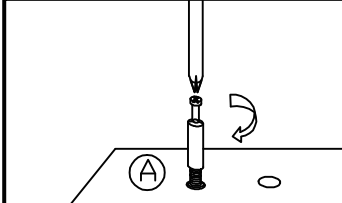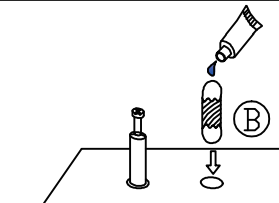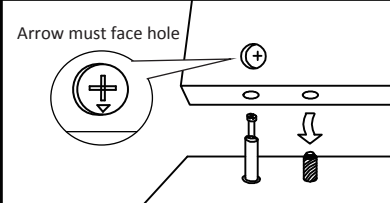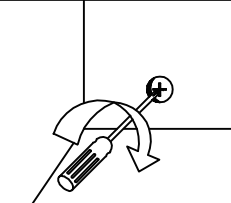
|   |   |  |   |
|---|---|--|---|
|  |  |  |  |
| Gently screw cam bolt into the threaded anchor.                                     | Lightly glue one end of the wood dowel and tap halfway into hole.                   | Lightly glue wood dowel and connect to second panel by inserting dowels into holes.  | Screw the camlock firmly into locked position.  |

## Step 1


- 1.Screw Cambolts (A) into Bottom Panel ⑤ .
- 2.Insert Wood Dowels (B) into Bottom Panel ⑤ .

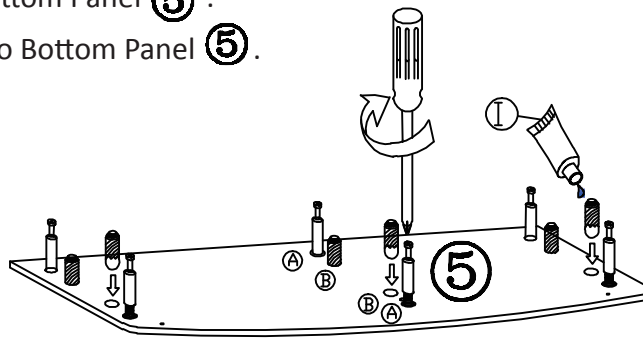

\* Refer to page 2 for dowel assembly


## Step 2

- 1.Connect Middle Divider Panel ② to Bottom Panel ⑤ by gently tightening camlocks already inserted into Panel ②.

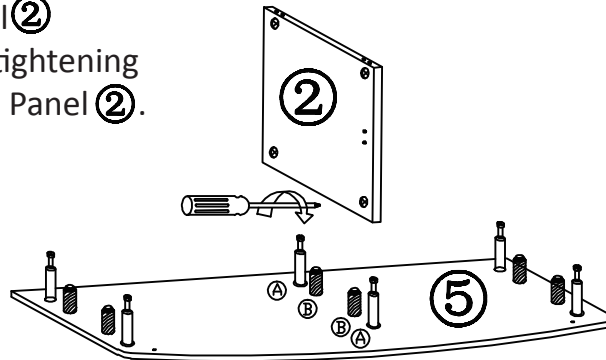


## Step 3

- 1.Connect side panels ③ to the unit by gently tightening camlocks already inserted into side panels ③

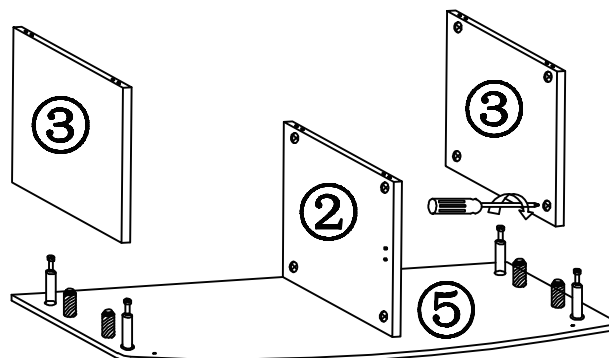

## Step 4


1. Screw Cambolts (A) into Middle Panel ④.
2. Insert Wood Dowels (B) into Middle Panel ④.

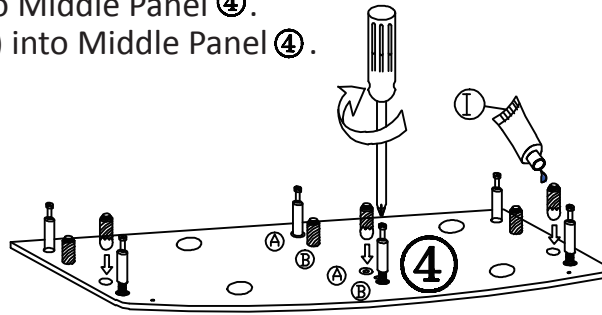

\* Refer to page 2 for dowel assembly


## Step 5

1. Connect the middle panel ④ to the unit by gently tightening camlocks in side Panels ③ and Middle Divider panel ②.

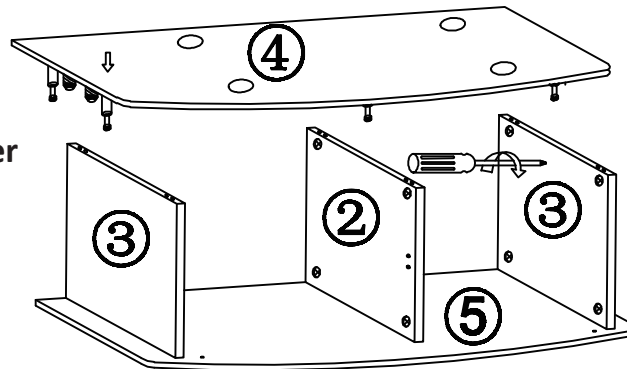

## Step 6


1. Attach end caps ⑧ to the metal tubes ⑦ by turning in a clockwise direction.

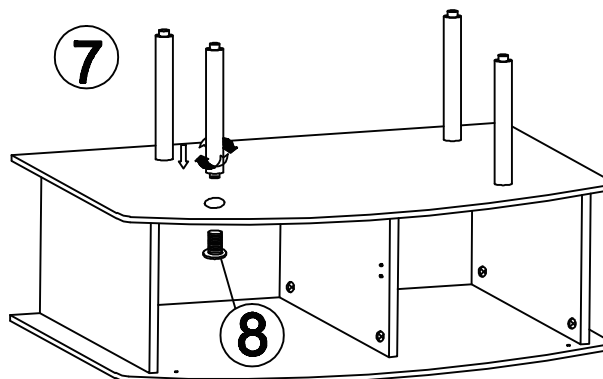

## Step 7


### step7

1. Place top panel ① onto poles.
2. Attach end caps ⑧ to unit by turning in a clockwise direction.

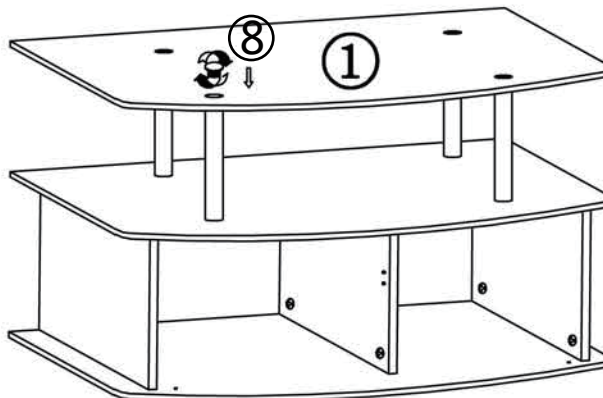


## Step 8

Turn unit around, and connect the back panel ⑨ to the unit using the nails ⑨.

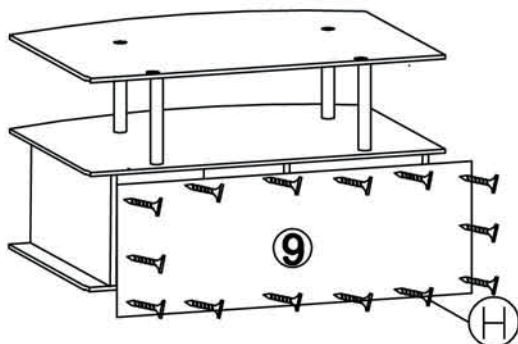


## Step 9

Door ⑥ assembly.

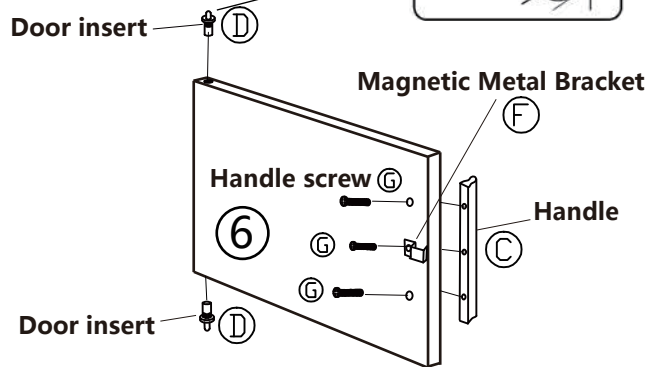

## Step 10

Attach magnets ⑦ to the middle divider by inserting into pre-drilled holes.

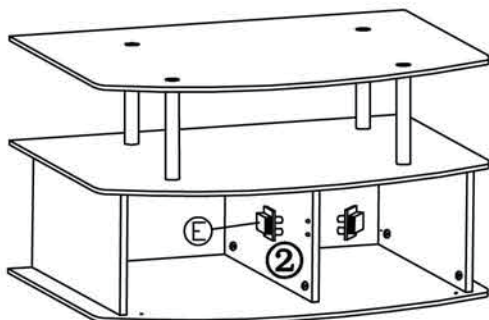

## Step 11

Attach doors ⑥ to unit.

