

WOOD MEDICINE CABINET INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions

Don't discard any of the packaging until you are sure that you have all of the parts and the fittings


IMPORTANT

1. DO NOT lay cabinet on tiled or concrete surface prior to installation
Cabinet must be on protected surface to prevent chipping of the corners
2. Care must be taken before drilling pilot holes to avoid any existing wiring or pipe work that may be concealed.

MAINTENANCE

Wipe clean with a soft damp cloth. Apply glass cleaner to cloth and do not apply directly to mirror


TOOLS REQUIRED




Claw hammer




Safety goggles




Phillips screwdriver

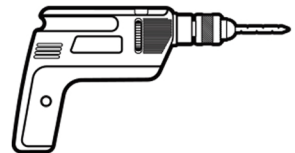

Power drill

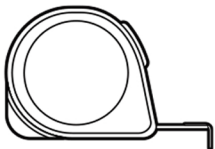

Measuring tape

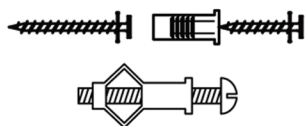

Wall hardware




Level

1 DETERMINACION DE LA UBICACION DE MONTAJE




NOTA: Antes de la instalacion, asegurese de que todas las piezas esten presentes. Compare las piezas con la lista Herraje incluido. Si falta alguna pieza o esta danada, no intente instalar el producto.

- Determine la ubicacion de montaje deseada y marque la pared donde se instalara la unidad.

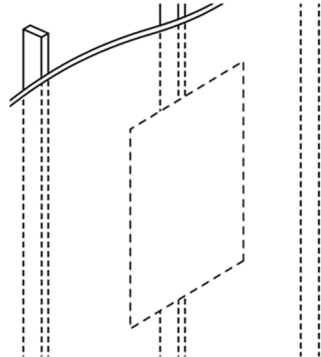


2 PERFORACION PREVIA DE LA PARTE TRASERA DEL GABINETE

- Taladre orificios de 1/8 de pulgada de diametro a traves del del panel posterior del gabinete en las cuatro esquinas.

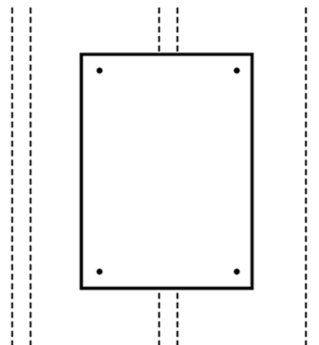

3 INSTALACION DEL GABINETE

- For wall stud installation, insert #12 x 3 in. screws with washers (not included) through the pre-drilled cabinet holes and into the stud locations.
- For drywall installation, drill holes at the appropriate locations and insert toggle bolts with washers (not included) through the pre-drilled cabinet holes and into the drywall.
- For concrete wall installation, drill 1/4 in. holes at the appropriate locations and insert #12 wall anchors (not included) into the holes. Then insert #12x3 in. screws, (not included) through the pre-drilled cabinet holes and into the anchors.


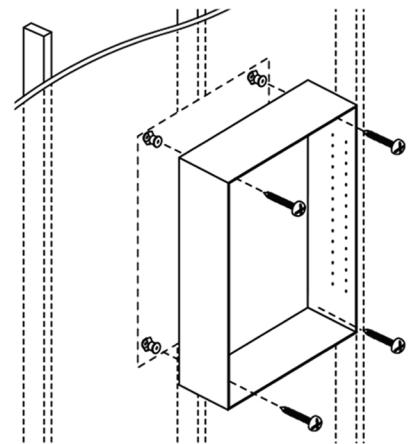


1 PREPARACION DEL LUGAR DE INSTALACION





NOTA: Antes de la instalacion, asegurese de que todas las piezas esten presentes. Compare las piezas con la lista Herraje incluido. Si falta alguna pieza o esta danada, no intente instalar el producto.

- Determine la ubicacion y marque una abertura de 1/2 de pulgada mas alta y mas ancha que el gabinete (1).
- Corte el travesano del centro de la pared (2).

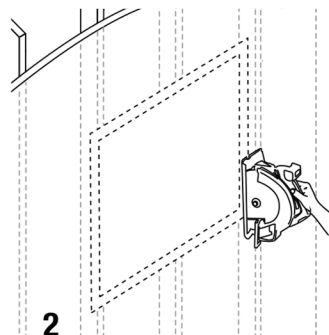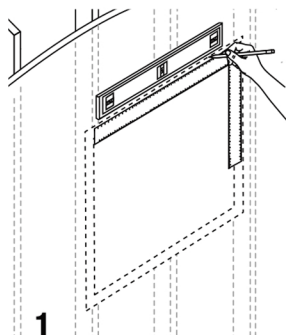


2 INSTALACION DEL GABINETE


- Asegure la placa solera y placa cabezal con clavos (1).
- Inserte el armario en la abertura (2).

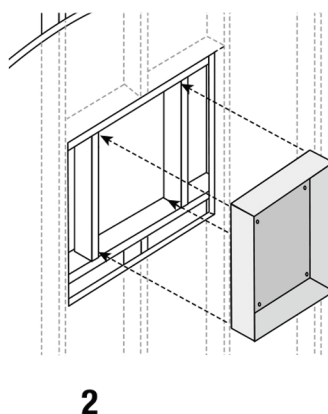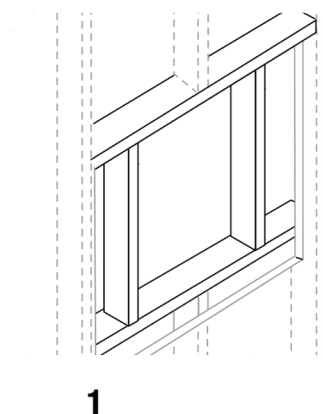


3 FIJACION DEL ARMARIO A LA PARED

- Fije el gabinete a la pared con tornillos de madera (no incluidos) a través de los lados.

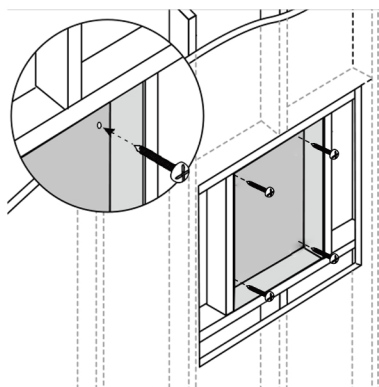


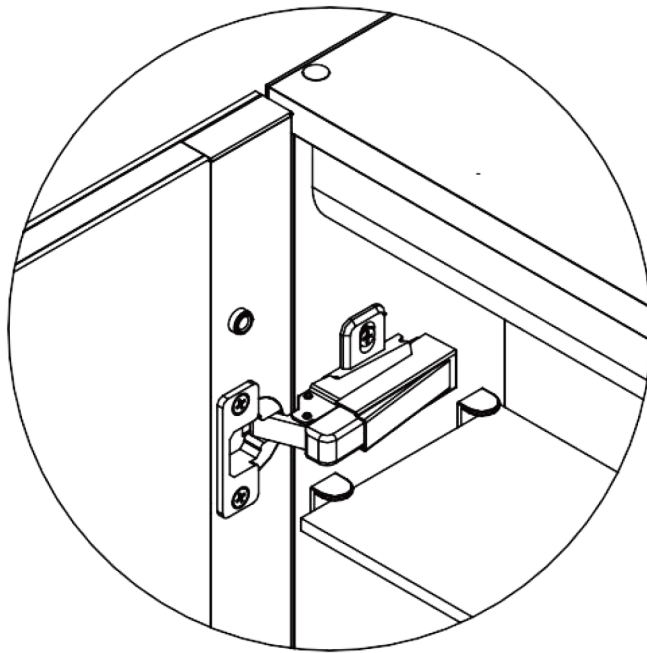

Mirror Cabinet
Door

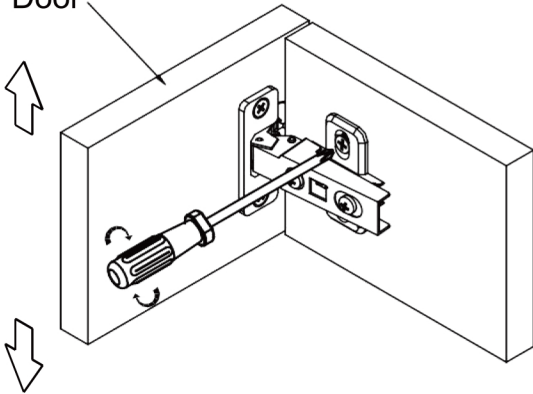

Mirror Cabinet
Door

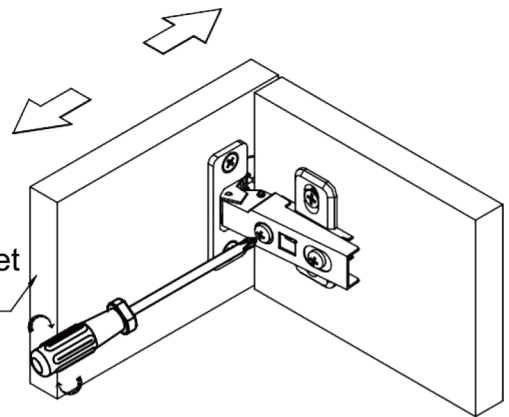

Mirror Cabinet
Door

